


USER'S MANUAL version 1.0


English




AEX-701 SIGNAL AMPLIFIER

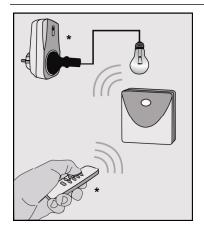

* Picture of the AC-1000 and the AYCT-102 (neither is included)

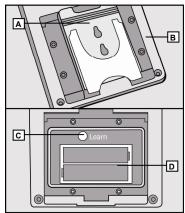


- A: Base plate with slots
 B: Battery cover
 C: Learn button
 D: Battery compartment

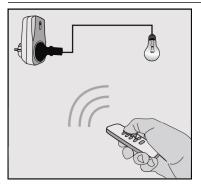


[1] Start situation: Your transmitter and receiver have been configured correctly but are not in range of each other.


 $ilde{\Delta}$ Temporarily place the transmitter and receiver next to each other and make sure you can actually control the receiver with the transmitter! $ilde{\Delta}$ Your transmitter and receiver may look different than those shown here!

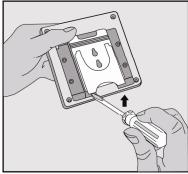


[2] Use a screwdriver to pry the base plate off of the back.

⚠ Do not place the screwdriver in the middle but rather under the left or right side. The recess in the centre is for the battery compartment (see [3])!

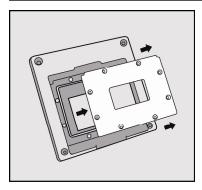


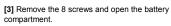

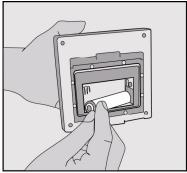



[4] Install 2 AA alkaline batteries. Make sure to install them with the correct polarity.



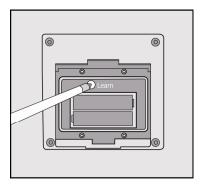


[5] Press the "Learn" button briefly to activate the search mode.

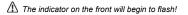

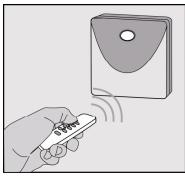


[6] Briefly press the 'on' button on the remote control (or send an 'on' signal from another type of transmitter).

 $\ensuremath{\widehat{\Lambda}}$ The indicator on the front will flash two times more slowly to confirm!

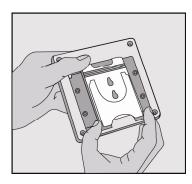


[7] Screw the battery cover back in place, and reattach the base plate.

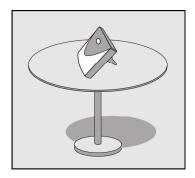


[8A] Fold out the foot to place the product on a horizontal surface.


⚠ The AEX-701 must be located within the wireless range of your remote control / transmitter! ⚠ Your transmitter must be located within the wireless range of the AEX-701!



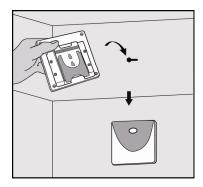

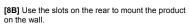

⚠ The AEX-701 must be located within the wireless range of your remote control / transmitter! ⚠ Your transmitter must be located within the wireless range of the AEX-701!

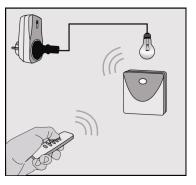

[9] With the assistance of the AEX-701 your receiver can now be controlled with the remote control/transmitter even if they are not within each others' direct range.



Remarks

⚠ Reminders

- This product is a so-called 'repeater' and is intended to repeat the wireless signal from your COCO transmitter (e.g. remote control). This allows you to control a receiver that would otherwise be outside the wireless range of the transmitter.
- This product must be used in combination with at least one COCO transmitter and one COCO receiver that have already been configured correctly.

 This product can <u>only</u> be used with on/off receivers! Do <u>not</u> use dimmer receivers!

 The wireless system can be indefinitely expanded with other COCO transmitters and/or receivers.

- Use only one AEX-701 in the same area.
- This product contains memory and can operate with a maximum of 6 different transmitter codes.
 Removal of one transmitter code from the memory of the AEX-701: (1) Briefly press the 'Learn' button.
 (2) Send an 'off' signal with the transmitter that you want to remove from the memory (in the case of a doorbell, press the doorbell button). (3) The indicator of the AEX-701 flashes twice to confirm.
- Removal of all the transmitter codes from the memory of the AEX-701: (1) Press 'Learn' for 6 seconds.
 (2) The indicator begins flashing quickly. (3) Briefly press the 'Learn' button again.
- This product is waterproof (IP56). To keep the product waterproof, make sure not to damage the rubber seal on the inside (under the battery cover).
- If the product does not work or does not work properly:
 Check the correct placement and/or operation of the batteries.
 - Check step by step whether the concerned transmitter(s) and receiver(s) are configured properly.
 - Make sure the AEX-701 is within the wireless range of the transmitter (max. approx. 30 metres).
 Make sure the receiver is within the wireless range of the AEX-701 (max. approx. 30 metres).

⚠ Safety instructions

- · Never use COCO products for life support systems or other applications in which equipment malfunctions can have life-threatening consequences.
- Do not attempt to repair this product. If the product is damaged or if you are in doubt about the proper operation, take the product back to the place of purchase.

AEX-701 SIGNAL AMPLIFIER



- Do not expose this product to excessive heat or direct sunlight.
- Remove the batteries from the product if the product will not be used for an extended period.

- If the indicator flashes continuously (every 3 seconds), the batteries are almost discharged. In that
 case, replace the batteries within a week (do not allow the batteries to discharge completely).
- Depending on use, the batteries last about 1 year.
- Only use 1.5 Volt alkaline batteries.
- Do not throw the batteries into an open fire.
 Respect the local regulations when disposing of batteries.

⚠ Wireless

- This product works using a radio signal that passes through walls, windows and doors. The range is maximum 75 metres in the open air. The range indoors is strongly influenced by local conditions such as concrete, glass and metals. On average, the indoor range is approximately 30 metres.
 New double glass often includes a thin metallic layer. This type of glazing ("HR glass") allows most visible light to pass through but has a negative impact on radio signals. If there is HR glass between
- the transmitter and receiver, you should expect a significant reduction of the range of the wireless
- signal.

 This product operates at a frequency of 433.92 MHz. It complies with the essential requirements and other conditions of R&TTE Directive 1999/5/EC and can be used in all EU countries.
- There may be restrictions on the use of this device outside the EU. If this device is used outside the EU, check whether the device complies with the local directives.



 $\zeta\xi$ This product complies with the essential requirements and other relevant provisions of the applicable European directives. The Declaration of Conformity (DoC) is available at www.coco-technology.com.





If possible, submit this product for recycling after use. Do not dispose of the product with household trash.

Warranty and copyright
This device is covered by a two-year warranty that begins on the day of purchase. Visit www.cocotechnology.com/warranty for additional information. Reprinting of (portions of) this manual without permission from Pan-Trade International B.V. is expressly prohibited.





PAN-TRADE INTERNATIONAL B.V.

P.O. BOX 126 4760 AC ZEVENBERGEN THE NETHERLANDS www.coco-technology.com

CE Declaration of Conformity

Pan-Trade International BV declares that the COCO product, model:

type designation item number

AEX-701 SIGNAL AMPLIFIER 74029

is in compliance with the essential requirements and other relevant provisions of directives R&TTE 1999/5/EC, EMC 2004/108/EC and LVD 2006/95/EC and is compatible with the standards EN 300 220-1/3, EN 55015, EN 301 489-1/3 and EN 60950.

Manufacturer / Authorised representative,

M.A. Hoekstra, managing director Zevenbergen, 2007-01-02