 
 
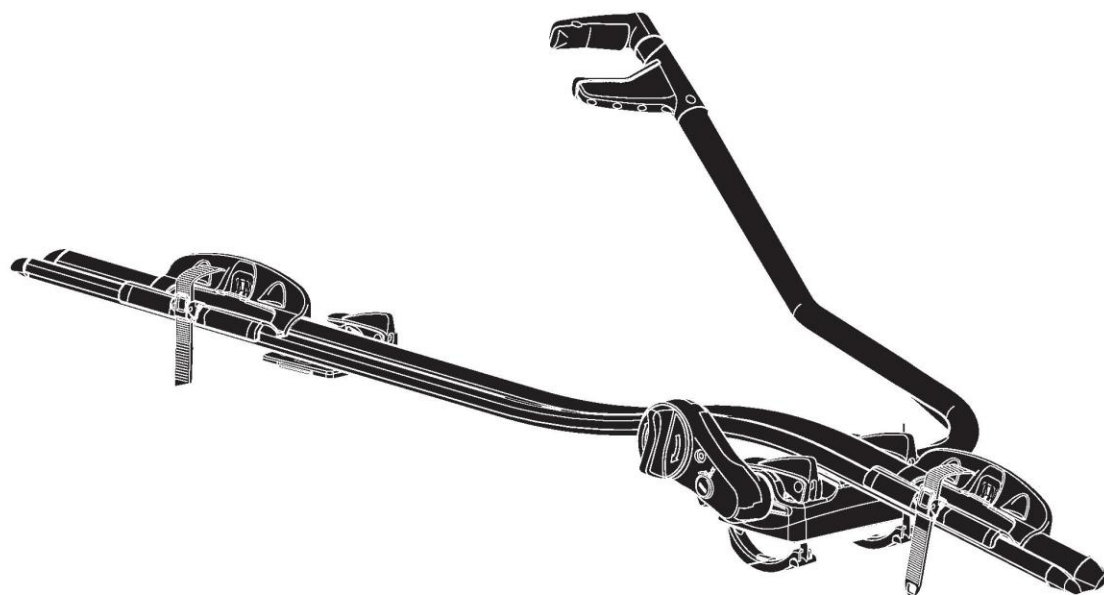 
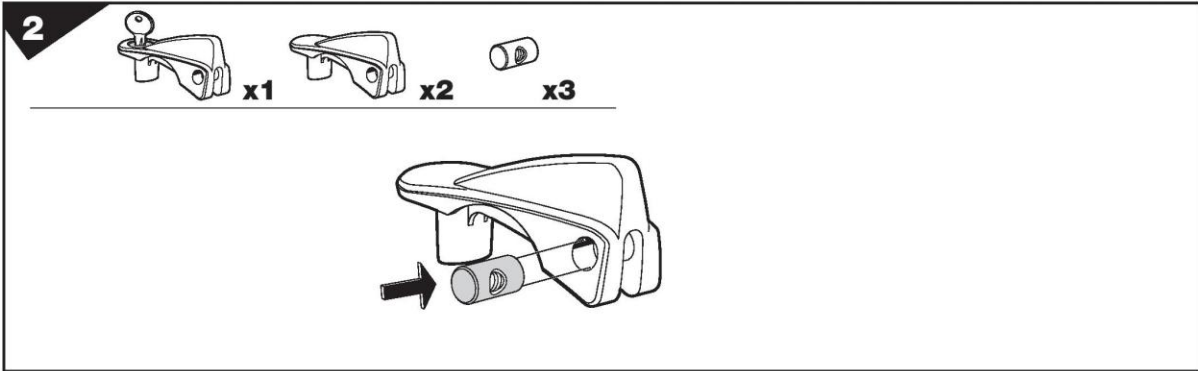 
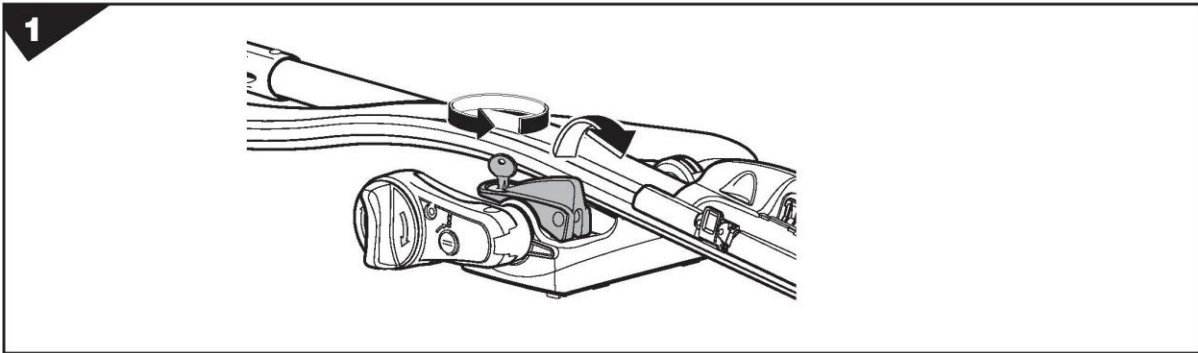 
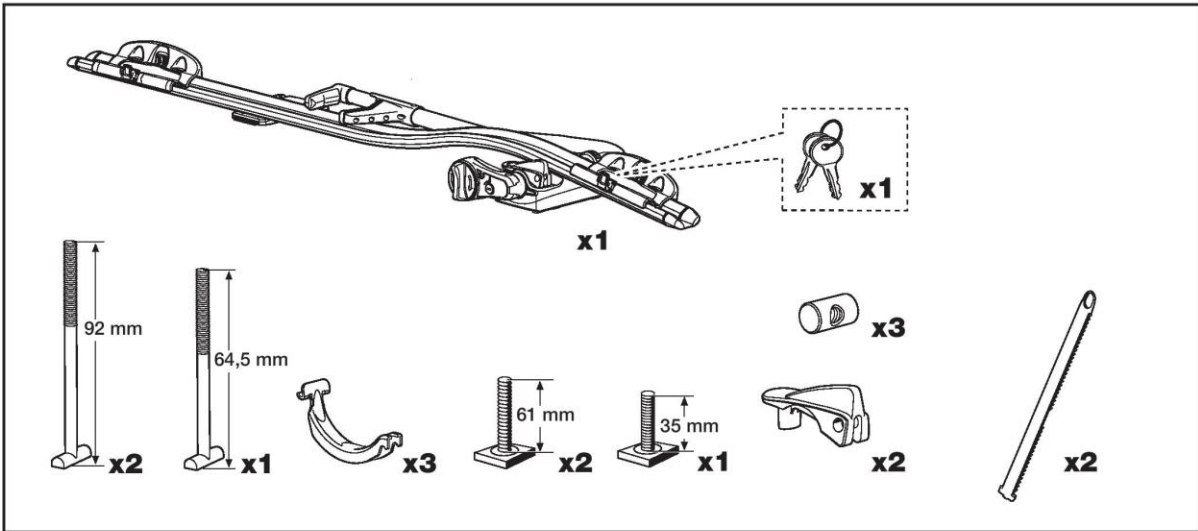 




Велокрепление Atlant Roof Rider



Инструкция по сборке и установке


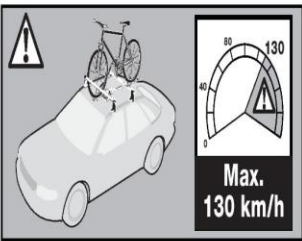


      CITY CRASH
Complies with bear DIN/ISO norm




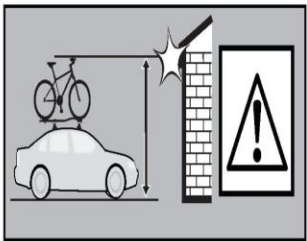


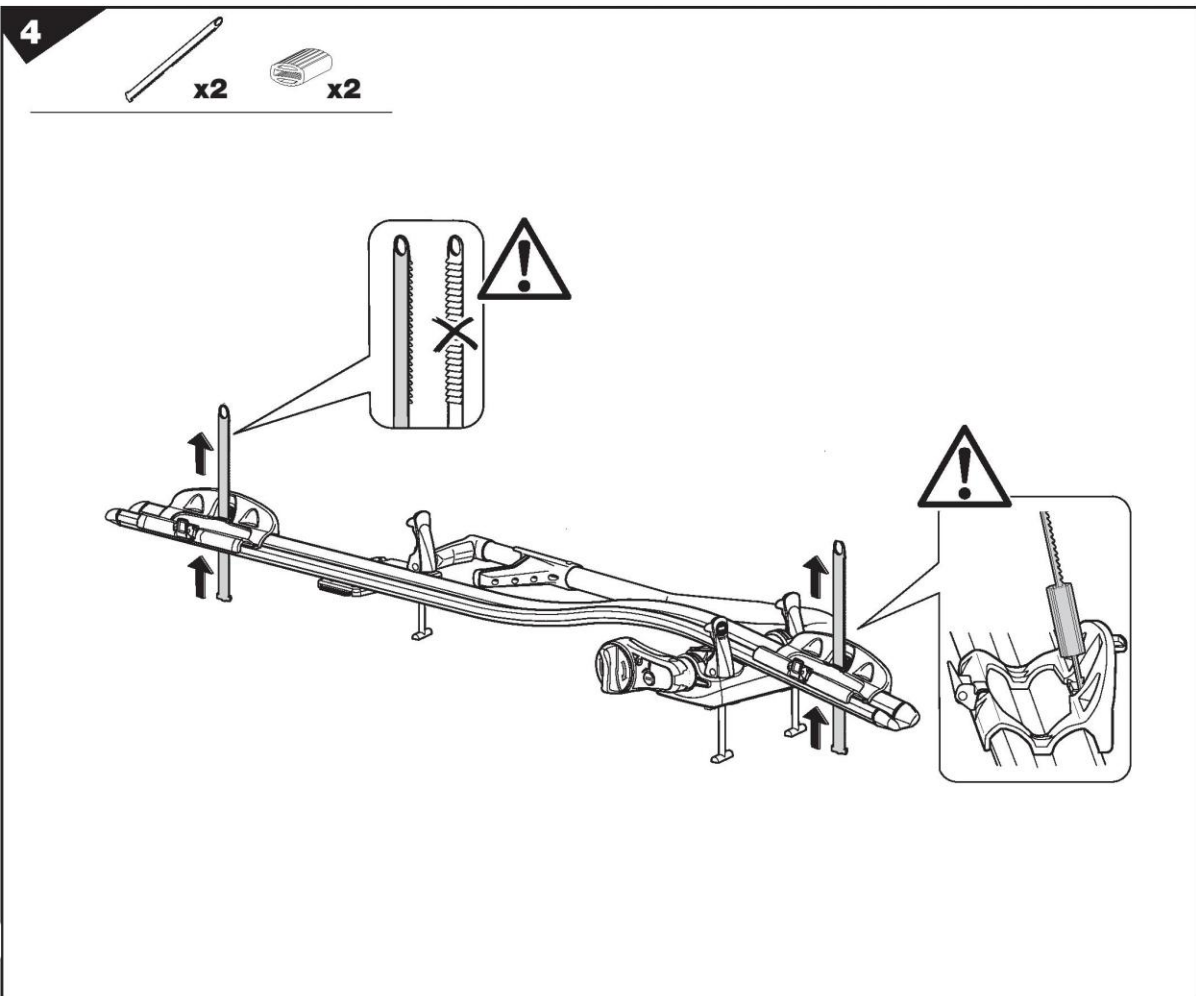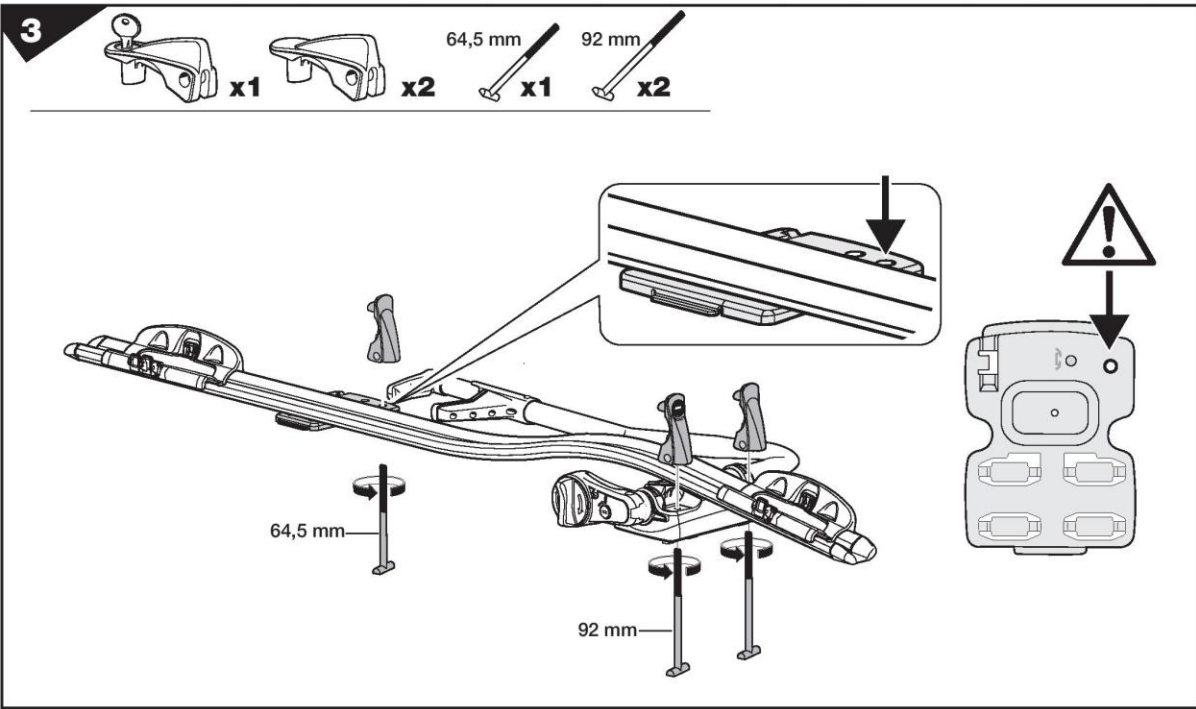



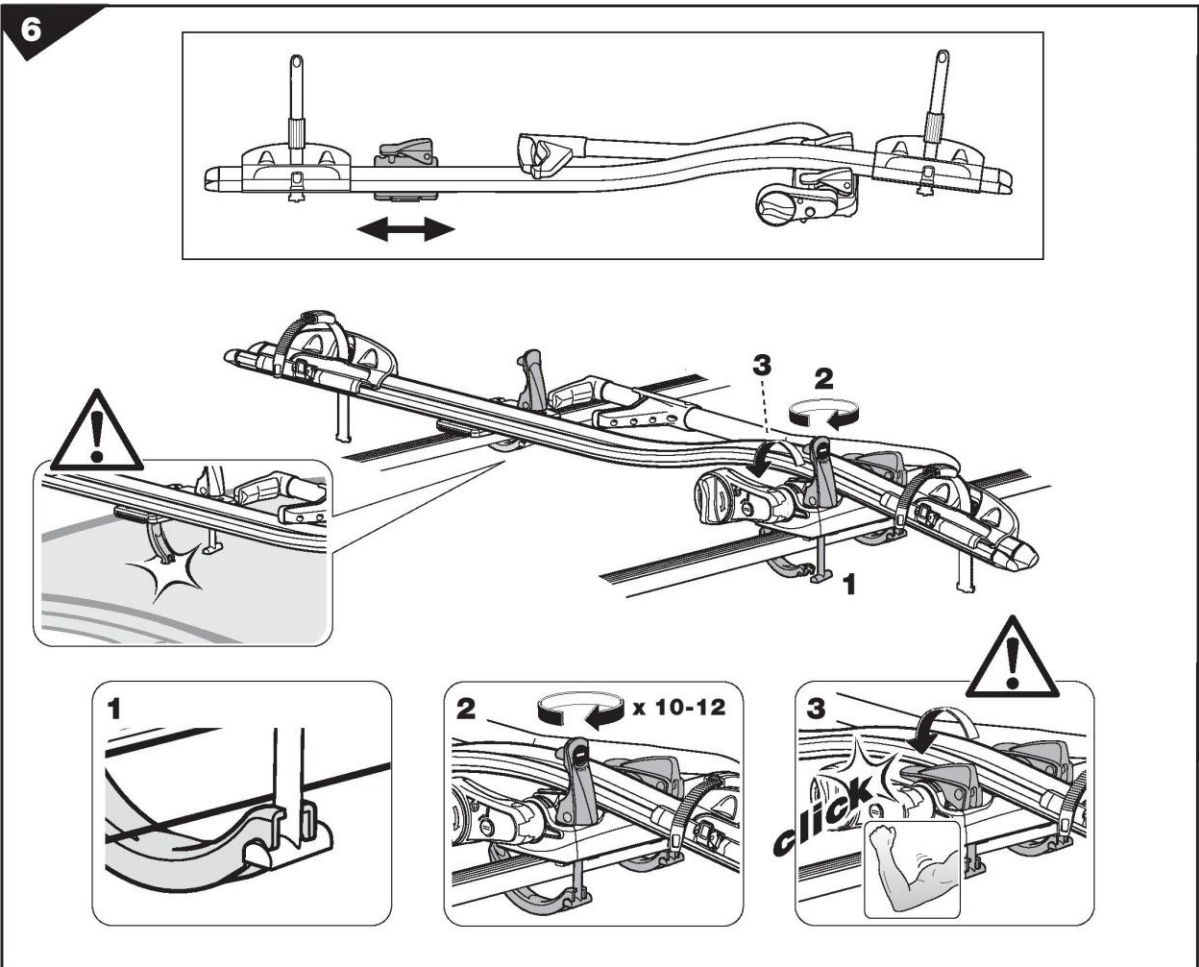
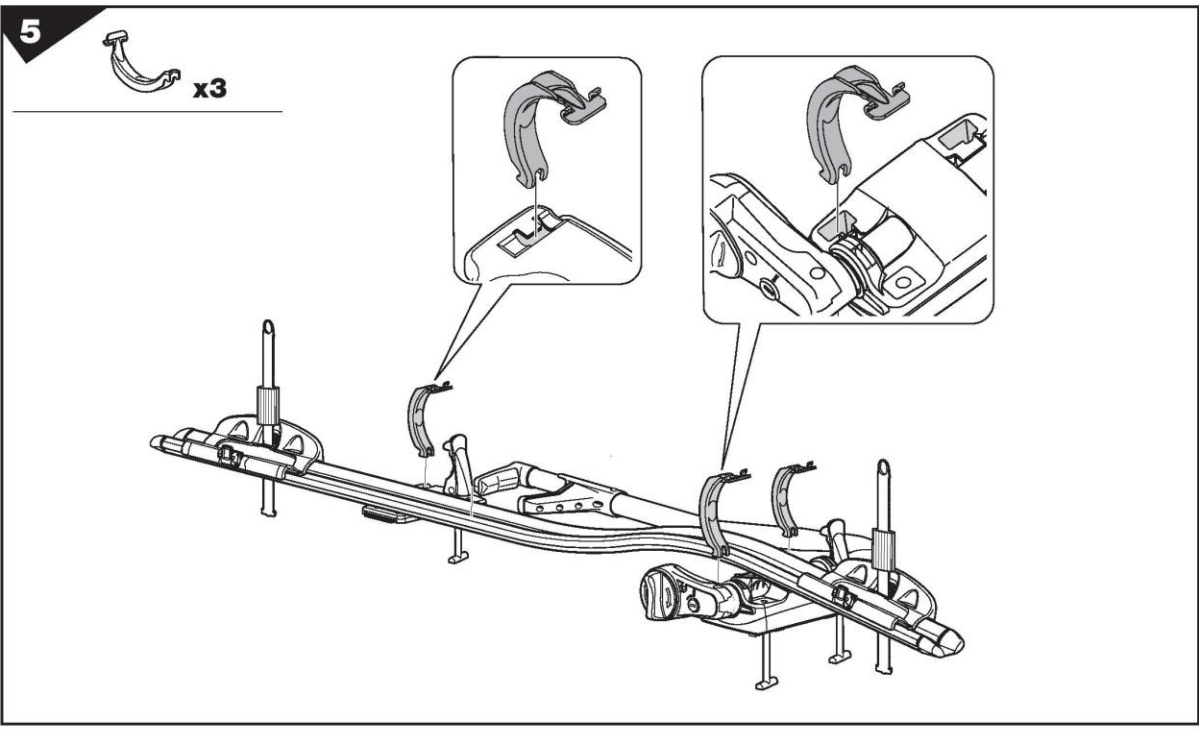


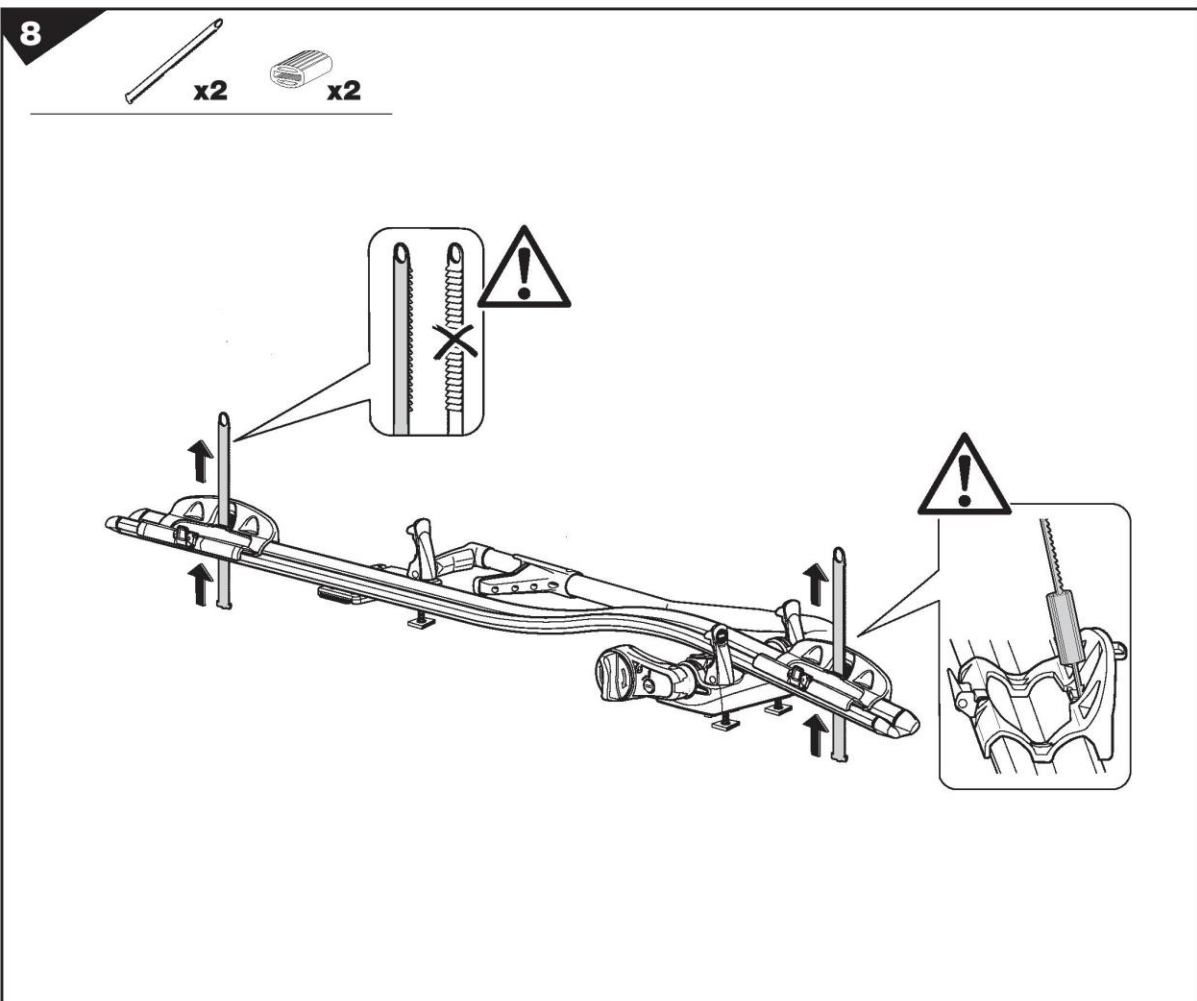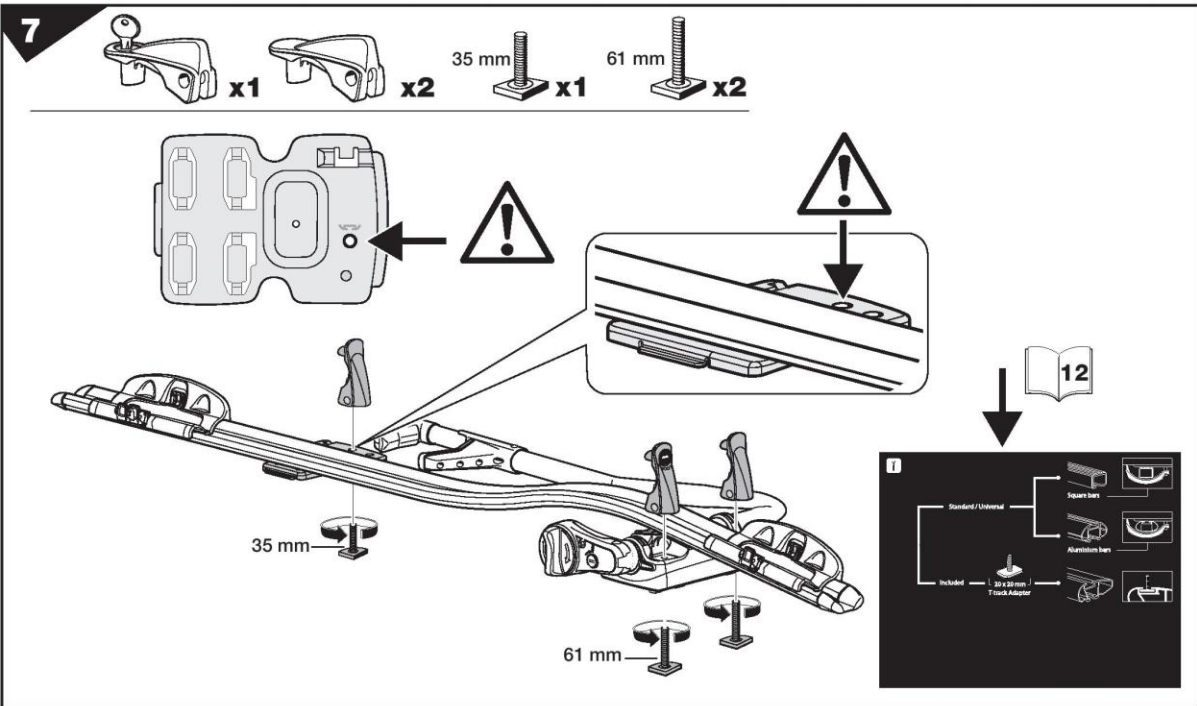










9

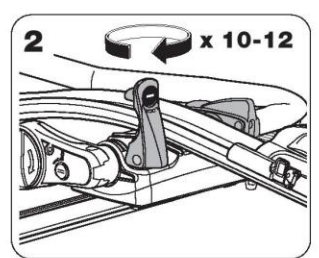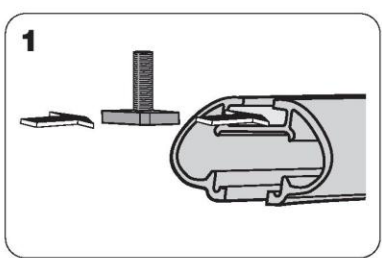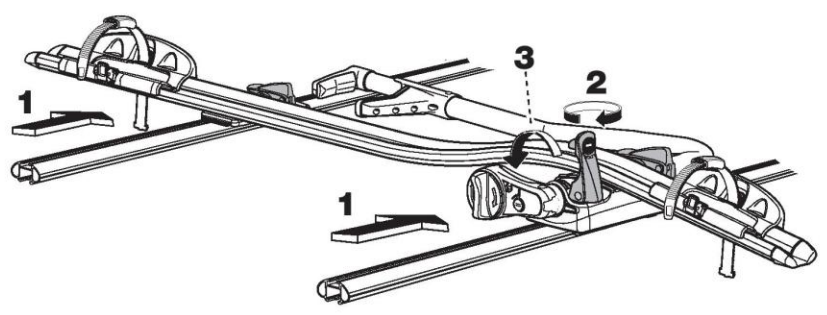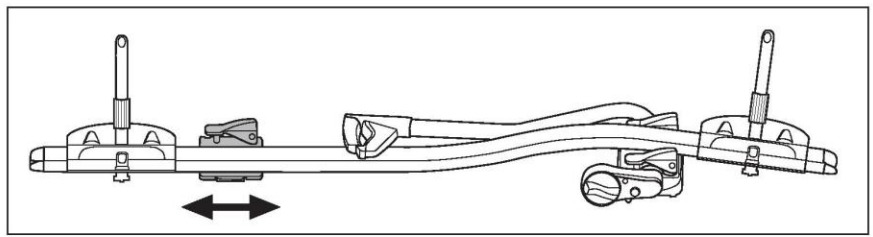    

10

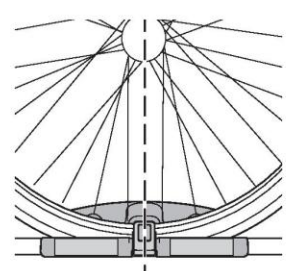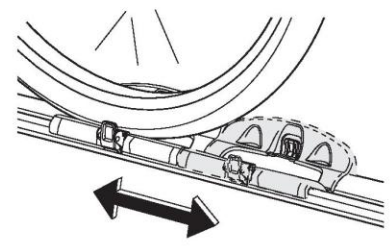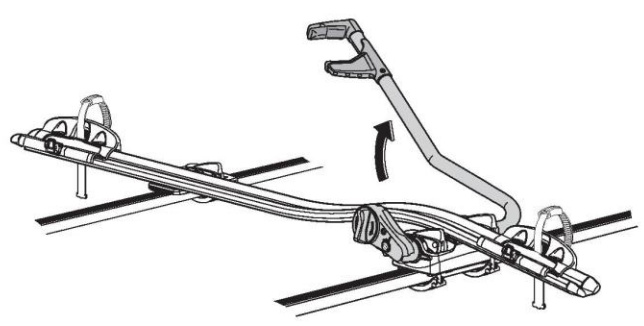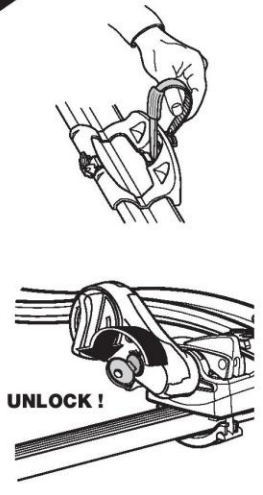    

11

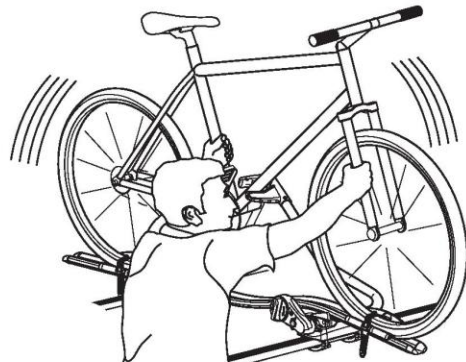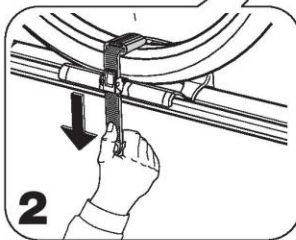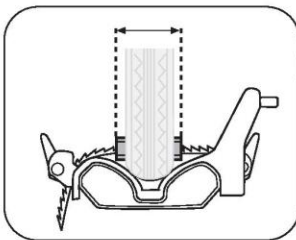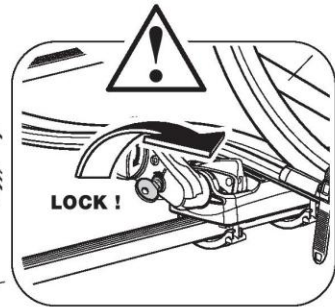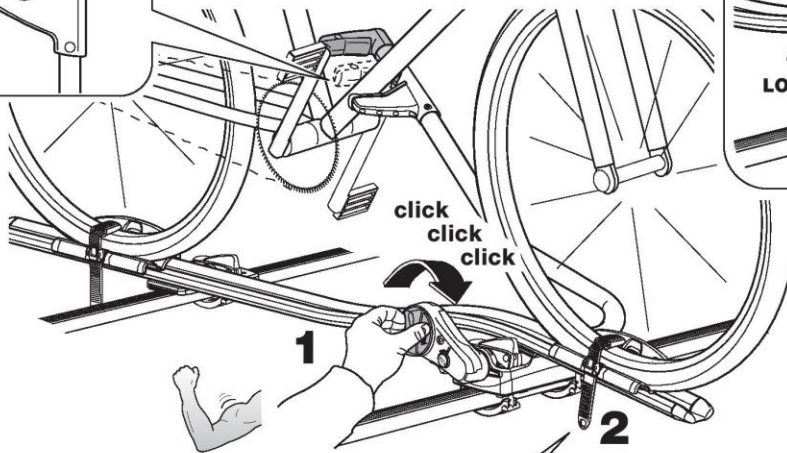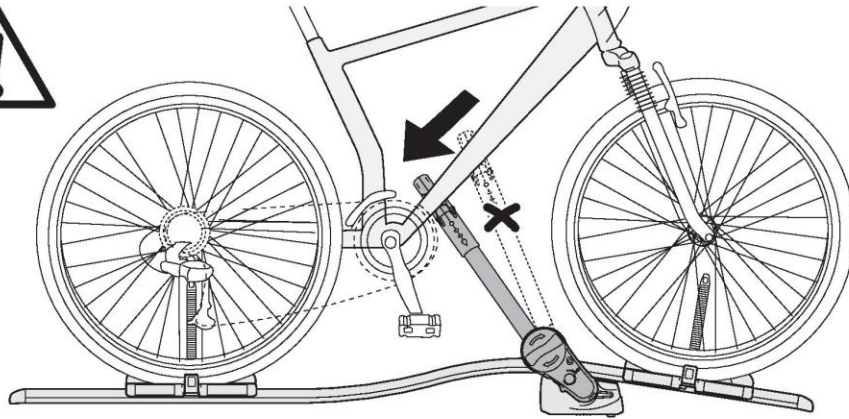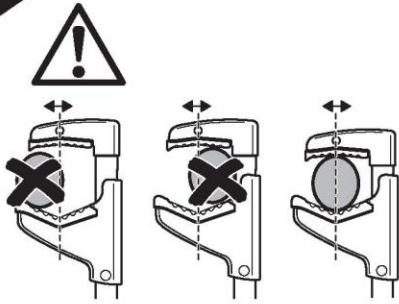         


GB Removal
D Demontieren
F Démontage
NL Demontage
I Rimozione
E Desmontaje
PT Remoção

S Demontering
FIN Irrotus
EST Eemaldamine
LAT Noņemsana
LIT Nuėmimas
PL Wymontowywanie
RU Снятие

CZ Odmontování
SK Demontáž
SLO Odstranjevanje
HR Uklanjanje
HU Leszerelés
GR Αφαίρεση
TR Sökme

 中文 拆除
 日本語 取り外し
 한국어 분리
 ไทย การถอด

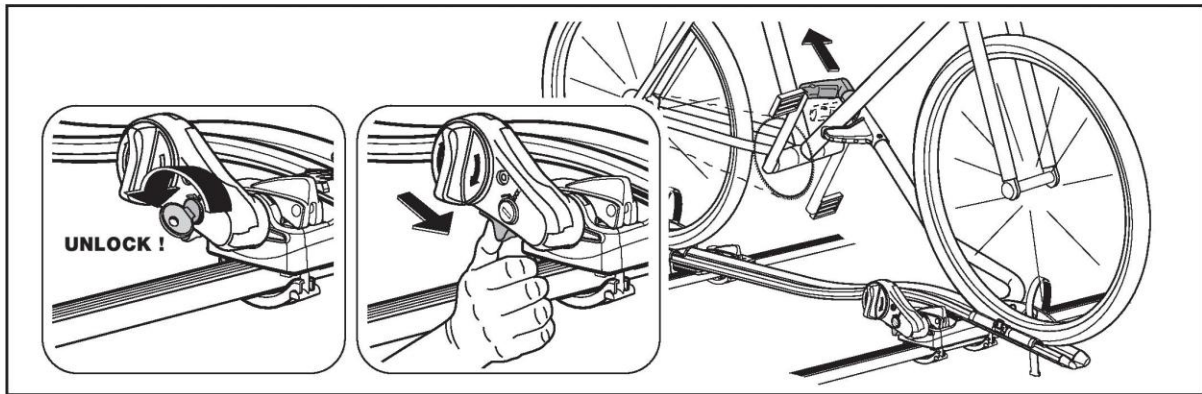


Fit tips!

GB Adjust the tightening torque
D Den vorschriftsmäßigen Anzug kontrollieren
F Resserrer
NL Draai alles nogmaals aan
I Regolare la coppia di serraggio
E Ajuste el apriete
PT Ajuste o torque do aperto
S Justera åtdragningen

FIN Säädä kireyttä
EST Reguleerige pingutusmomenti
LAT Ieregulējiet griezes momentu
LIT Nustatykite reikiama uPvėrimo padėti
PL Ustaw właściwą siłę zacisku
RU Отрегулируйте момент затяжки гайки
CZ Pøekontrolujte pøitaPení

SK Nastavte správný doťahovací moment
SLO Prilagodite čeljust vilicam kolesa.
HR Podešavanje priteznog momenta
HU A rögzítőnyomaték beállításá
GR Προσαρμόστε τη ροπή σφιξίματος

 TR Sıkma torkunu ayarlayın
 中文 調整緊固扭矩
 한국어 조임 토크 조정
 日本語 締め付けトルクを調節してください。
 ไทย ปรับประแจปอนด์

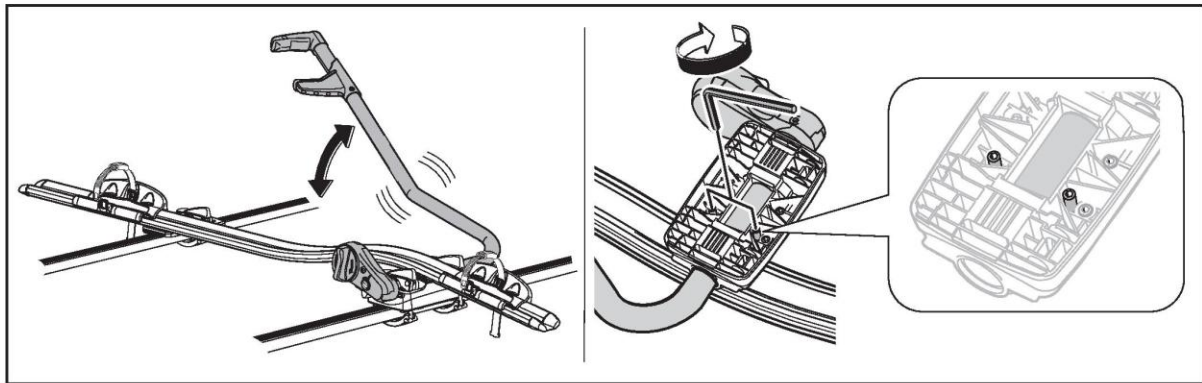

Fit tips!

