

AP Function Instruction

Step1. Connect the IP camera with power supply

Original configuration Power connect the IP camera

Step2. Find the AP signal on Lan Wlan and connect it on PC or Mobile phone

AP signal SSID begin CAMXXXXXX (six number from camera ID)

The default password are 123456789



Step3. Use the Search Tool find the IP camera and set wireless

Install the IP Camera Search Tool or app E-View7 first --- login it and go wireless settings --- set the suitable wireless SSID --- exit .

Step4. Reconnect the PC and Mobile phone network

Go Lan Wlan --- set the same network for PC and Mobile phone --- exit .

Step5. Accessing the IP camera on PC or Mobile phone directly

AP signal connection succeed , the IP camera can be viewed and controlled on Lan and remotely .