



Relays

Work relays - 4 Terminals - Mini

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
160652	6	20	•			
160155	12	15	•		•	
160080	12	30	•			
160282	12	40	•			
160311	12	40	•			
160929	12	40	•	•		
160931	12	50	•			
160239	12	70	•			
160468	12	70	•			•
160941	12	70	•	•		
160946	12	100	•			
160926	24	15	•		•	
160082	24	20	•			
160307	24	20	•			
160890	24	20	•	•		
160935	24	22	•			•
160947	24	30	•	•		
160979	24	30	•	•		
160240	24	40	•			
160473	24	30	•		•	
160937	24	40	•			
160978	24	40	•			
160977	24	50	•			•
160272	24	70	•			•
160769	24	70	•			
160975	24	70	•			

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
160477	12	100	•			
160922	12	140	•			
160923	12	200	•			
160478	24	60	•			

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
160720	12	120	•			
160721	24	100	•			

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
160083	12	30	•			
160982	12	40	•	•		
160215	24	20	•			

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
161035	24	70	•			•

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
160984	12	300	•			
160985	24	200	•			

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
160983	12	30	•			

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
160480	12	30	•			

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
160945	12	20	•			

Work relay - Twin - Mini

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
160267	12	2x40	•			

Change over relays - 5 Terminals - Mini

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
160308	12	20/10				
160081	12	30/20	•			
160270	12	30/20	•	•		
160403	12	40/15	•			•
160932	12	40/15	•			•
160942	12	40/15	•	•		
160974	12	70/40	•			
160216	24	20/10	•			
160271	24	20/10	•	•		
160337	24	22/10	•			
160976	24	50/30	•			
160394	24	60/40	•			•

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
160316	12	40/15	•			•
160944	24	10/20	•			
160981	24	10/20	•			
160317	24	22/10	•			
160980	24	30/40	•			

Work relays - 5 Terminals 87b - Mini

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
160934	12	2x20	•	•		
160902	12	2x15	•			
160168	12	2x20	•			
160933	12	2x20	•			•
160169	24	2x10	•			
160938	24	2x10	•			•
160939	24	2x10	•	•		

Work relays - 5 Terminals 2x87 - Mini

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
160265	12	30	•			
160903	12	40	•			
161009	12	40	•	•		
160266	24	20	•			

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
160940	12	40	•			
160921	12	40	•			
160936	24	22	•			

Work relays - 4 Terminals (1-2-3-5) - Micro

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
160364	12	25		•		
160918	12	25				•
160363	12	30				

Change over relays - 5 Terminals (1-2-3-4-5) - Micro

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
160920	12	15/25		•		
160919	12	20/10				•
160365	12	30/20				
160366	12	30/20		•		
160367	12	30/20				•
160368	24	20/10				
160521	24	20/10		•		
161010	24	20/10				•

Change over relays - 5 Terminals - Micro

CAR GO	Voltage	Ampere	Bracket	Diode	Fuse	Resistor
161020	24	15/10		•		

