

Handheld Steady Gimbal

FY-G4 QD version is suitable for the sport camera with the height of 33mm-46mm and it also can be compatible with LCD backpack



Beginner Guide

Attention! Please install the suitable camera first before power on the Gimbal.





Install The Camera

Install the sport camera by the special Thumb Screw, And make sure it is fixed well.

Power On Confirm the camera is installed well, then press the power button to turn on the Gimbal.



Mode Switching

When the Gimbal is working, you can press the function button to switch among the three working modes and a special working condition freely.

(Details of working modes please refer to the instructions of working modes)

3 Working Mode Instructions

- Function Button 0 Identify the working mode via switch to different status of the indicator light. Use for switching working modes.
 - Working Mode Instructions
 - Heading Follow Mode : Camera Pitch and Roll Angles remain constant, heading follows the handheld position.
 Heading And Pitch Follow Mode : Camera Roll Angle remains constant.
 - Heading and Pitch follow the handheld position. 3. Heading Lock Mode: Heading, Pitch and Roll are all locked to point at one position.

Special Working Condition (Inversion Mode) When in any working mode, press the function button for three times in succession, the Gimbal enter into the inversion mode and switch to the Heading following mode automatically. Invert the Gimbal to capture more excited scenes easily by switching mode combination. When in inversion working condition press the function button for three times in succession to reset the Gimbal back to the original state.

Hand Pulling Locking The pitching can be adjust by hand pulling after start the gimbal 8 seconds. During the Heading Follow and Heading Lock Mode pulling the pitching to the desired angle and stay 0.5 second it will lock in the current angle.

Standby Mode Press function button for 3 seconds, the motor stop working and the LED of the function button will light on constantly this will indicate that gimbal enter the standby mode. Single press the function button the gimbal will be awaken immediately.

Item	LED Status	Function Explanation	Item	LED Status	Explanation
Single Press	Single Flashes	Heading Follow Mode	Long Press For 1 Second	On Constantly	Heading Lock Mode
Double Press	Double Flashes	Heading And Pitch Follow Mode	Long Press For 3 Second	On Constantly	Standby Mode
Three Press	Single Flashes	Inversion Mode			

4 Filming Skill

Smooth And Steady Filming: Handheld the Gimbal, keep stable for movement, keep light and steady for walking.

How To Adjust The Pitching Angle: Double press the function button to enter into "Heading And Pitch Follow Mode" Hold the Gimbal at the desired angle, then press the button once to reengage "Heading Follow Mode" in order to lock the angle of desired pitch.

Selfie: Turn the Gimbal 180° so the function interface is facing you. Then, simply adjust the angle of pitch to the desired anale by utilizing the "Heading And Pitch Follow Mode" which described above and then switch back to "Heading Follow Mode" . Once complete you can film yourself with ease.

Flexible Use Of Inversion Mode: Press the function button for three times in succession, the Gimbal switch to the inversion mode and help to captured low angle view more easily. If filming with moving forward at a high speed, keep the handle roughly parallel with the ground will be helpful.

5 Standard And Optional Accessories



Thumb Screw



connect the USB cable to the computer with the USB connector, otherwise the interface of the computer will be damaged). Please refer to the instructions of the function interface for pecific details.

Optional Accessories

Name	Function Description	
Remote Control	Ample buttons can realize the adjustment of heading & pitch angle, mode switching etc.	
Battery Extender	Extend the capacity space for battery to make the runtime longer.	
Extension Bar	Spiral design of the extension bar can be perfect combination with G4 power switch; Extended length is optional, it will help to enjoy a different visual easily.	
Camera Charging Cable	The Gimbal can be charge the sport camera which with standard MiNi USB 10 pin charging port.	
Video Output Cable	Support the sport camera which output the analog video signal, and output the analog video signal via the Gimbal function interface. Please connect the analog monitor for displaying	



If any comments or suggestions please do not hesitate to e-mail us directly : service@feiyu-tech.com

Indicator Indicator Explanation

	LED Status	Explain	
	Blue light flashes three times	Full Power	
	Blue light flashes twice	Enough Power	
	Blue light flashes once	Low Power	
	Rhug light koops		

Blue light keeps No Power flashing

The indicator flashes in red light when in working, it will prompt the Gimbal at fault.

Ð ⊕ e Θ

 \bigcirc

Standard Accessories

 \bigcirc

Power Adapter

Charger Battery Type: 16340/18350

Type: 18350 Input: DC 5V Min 800mA Output: DC 4.2V



European Standard USB Connector Connector

Correct Method For Using USB Data Cable USB Cable

Extension Knurled



Please refer to following method to proper

usage, otherwise it may cause damage to

6 Function Interface Instructions



Firmware Upgrade Instruction

Please visit the official website of Feiyu Tech: <u>www.feiyu-tech.com</u> to download the USB driver, firmware upgrade software and the latest firmware then unzip the RAR file.Remove the batteries and refer to the connection diagram to connect the gimbal with the computer. Please refer to the manual of update operation to upgrading otherwise the Gimbal will be abnormal.

Attention : Please be sure to connect the computer with the USB connector.

Parameters Configuration

The heading following speed can be configurate through parameter setting software. User can adjust to the desired following speed mode according to the requirements of filming scene. Three modes for optional: "SLOW" mode, "NORMAL" mode, "FAST" mode. Default setting is "NORMAL" mode.

Attention : Please be sure to connect the computer with the USB connector.

Gimbal Calibration

The Gimbal attitude can be calibrate through parameter setting software. User can adjust the pitch and roll in a small angle to achieve more accuracy filming scene. Please insert the batteries then refer to the connection diagram to connect the gimbal with the computer for caliration. Attention : Please be sure to connect the computer with the USB connector.



350mm





Extension Bar Diagram

8 Video And Camera Charging Interface

Initialize The FY-G4 Gimbal

Initialization Instructions

- 1. Install the camera properly.
- 2. Gimbal placed on stationary flat and keep motionless.
- 3. Power on the Gimbal.
- 4. The Gimbal is activate and it will initialize
- automatically. Pick up the Gimbal to work normally.

FY-G4 needs to be initialized whenever the following situations appear after power on

- 1. After power on, the angle of pitch is not level with the horizon line.
- 2. After power on, the angle of roll is not parallel with the horizon line.
- 3. When the gimbal is in heading lock, the angle of heading moves frequently (heading is not stationary).

video signal.

10 Specification

Items	Min	Standard	Max	Remarks
Working Voltage	6.0V	8.4V	17.0V	
Pitch Angle	-160 (Down)	0 (Horizontal)	+160 (Up)	Handheld In Horizontal
Roll Angle	-50	0 (Horizontal)	+50	
Heading Angle	-160 (Left)		+160	Handheld In Vertical
Heading Angle	-50		+50	Handheld In Horizontal
Pitch Following Rate	2°/Sec		75°/Sec	
Heading Following Rate	3°/Sec		150°/Sec	
Static Attitude Tracking Accuracy	0.01	0.02	0.05	Gimbal In Static Mode
Motion Attitude Tracking Accuracy	0.1	0.2	0.5	Motor Overload < 2G
Overload Current Protection		800mA		
Weight		265g		Without Batteries & Camera

Attention

DISCLAIMER

ΨZ3mr

The series of FY-G4 handheld aimbal is an excellent camera stabilizer, lightweight and portable

Prohibit any user for any illegal purpose. Users will be responsible for all behavior of purchase and use products.

The Guilin Feivu Electronic Technology Co. and our associates are not responsible for any damages or liabilities caused by the use of this product.

For any unknown sources or using, we will not be any service.

Feiyu Tech reserves the right to amend this manual and the terms and conditions of use the gimbal at any time.



to get related information: www.feiyu-tech.com

Please visit the official website of Feiyu Tech

Please correct assemble the gimbal according

Please upgrading firmware and configurate parameters with the standard configuration

Please battery charging with the standard

Please install the camera well before power

Motionless Flat Surface

ATTENTION

to the diagram.

USB date cable.

on the Gimbal.

configuration charger.

This interface can be output 5 voltage for camera charging or input analog

Connect FY-G4 camera charging cable, it can be charge the sport camera

Connect FY-G4 video output cable, it will support the sport camera which

output the analog video signal. The analog video signal will output vig the

Note: The FY-G4 camera charging cable and the video output cable

doesn't includes in the standard package, it's a optional item.

which with standard MiNi USB 10 pin charging port.

function interface on the aimbal.