

# Sgranatoio manuale

Manual Shelling Machine

Manuelle Entkernungsmaschine


Egreoir a main

Desgranadora manual



MADE IN ITALY

Istruzioni di montaggio Assembly instructions Notice d'utilisation  
Montageanleitung Instructions de montage Manual de instrucciones

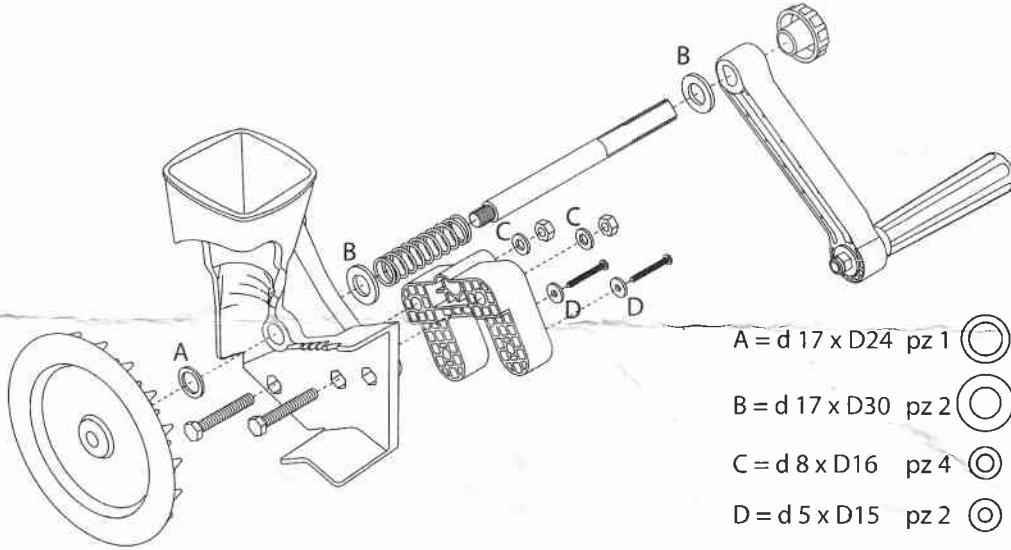


A = d 17 x D24 pz 1

B = d 17 x D30 pz 2

C = d 8 x D16 pz 4

D = d 5 x D15 pz 2

Fissaggio Fastening Befestigung Fixation Fijación

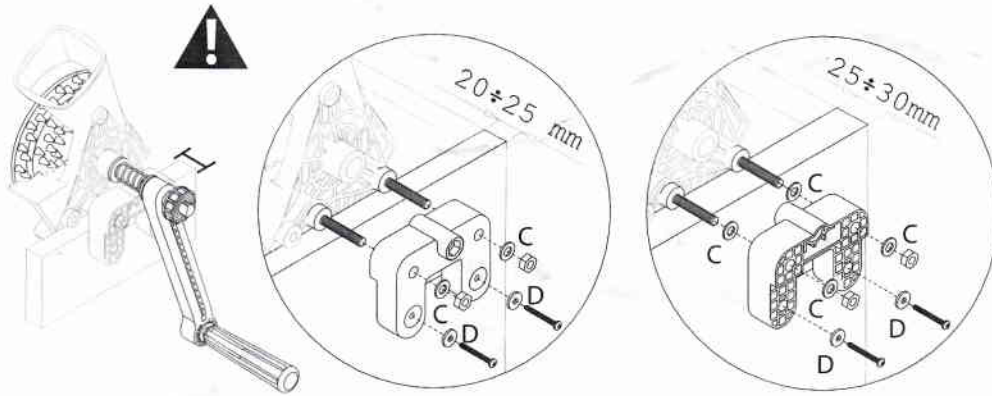

[www.novital.it](http://www.novital.it)

# Sgranatoio manuale

Manual Shelling Machine


Manuelle Entkernungsmaschine

Egreoir a main

Desgranadora manual



MADE IN ITALY

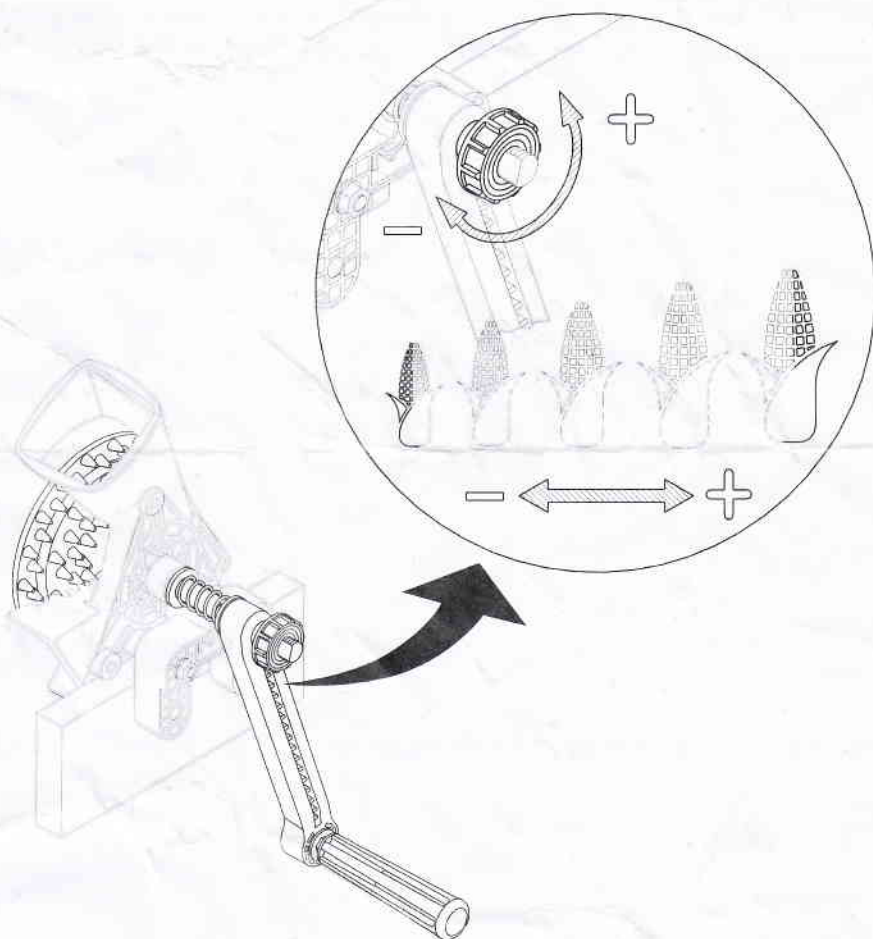

IT - La tensione della molla è regolabile per adattarsi alle diverse dimensioni delle pannocchie

EN - Spring tension is adjustable to suit different sizes of cobs

DE - Die Federspannung ist einstellbar verschiedene Größen von Cobs anzupassen

FR - La tension du ressort est réglable pour s'adapter à différentes tailles de cobs

ES - La tensión del resorte es ajustable para adaptarse a diferentes tamaños de mazorcas

[www.novital.it](http://www.novital.it)