

PARTS LIST No. D58743 01004

部 品 表  
**PARTS LIST**

型 式  
MODEL **DCW-480ESW**

 **デンヨー株式会社**  
**Denyo Co., Ltd.**

適用製造番号  
SERIAL No. 5717852~

## HOW TO USE THE PARTS LIST

1. This parts list covers the parts for Engine Welder/Generator Model DCW-480ESW.
2. When placing orders, specify the following details;
  - 1) Model Number and Serial Number.
  - 2) Parts Number and Parts Name.
  - 3) Quantity required.
3. The parts listed with a serial number are new parts.  
Please place an order with us after confirmation of serial number for machine at your side.
4. The sequence of this parts list is by machine structure. Each group of parts has an illustration on the first page of the parts list. Parts can be identified on the parts list, using the key number on the illustration. These key number, on the illustration, are also shown on the left-hand column in the parts list.
5. The parts number are shown as 10 digits and alphabet. The parts number of the parts makers are shown in the remark column.
6. The parts marked with an asterisk and the parts not listed are not available as a single part, and orders must be placed for them as an assembly.
7. This parts list uses the following abbreviations and symbols:

All	:Some parts differ from unit to unit	p.	:Page
Ass'y	:Assembly	Re.	:Rear
Fr.	:Front	R.H.	:Right
L.H.	:Left	STD	:Standard
No.	:Number	→	:Indication of the page where the modified or additional parts are listed.
O.P.	:Optional Parts		


Each symbol 「A」 「B」 「C」 listed in a part of Q'ty shows the appropriate parts number for the unit you purchased. The meaning of the symbol 「A」 「B」 「C」 is listed on the first top place of each assembly group.

Please check the specification of the unit such as frequency, voltage, model No. etc. before placing orders.


8. Left (L.H.) and Right (R.H.) used in this parts list show the direction when you look at the engine from the generator side.
9. For the engine parts not listed in this parts list, refer to "KUBOTA Corporation V1505 Diesel Engine Parts Catalogue".

I N D E X

N a m e	Page
Engine-Driven DC Welder/Generator Set.....	1 - 1
Generator Ass'y.....	2 - 1
Control Panel Ass'y.....	3 - 1
Electric Parts Ass'y (Part 1).....	4 - 1
Electric Parts Ass'y (Part 2).....	5 - 1
Engine & Radiator Ass'y.....	6 - 1
Battery Ass'y.....	7 - 1
Muffler Ass'y.....	8 - 1
Fuel Tank Ass'y.....	9 - 1
Bonnet Ass'y (Part 1).....	10 - 1
Bonnet Ass'y (Part 2).....	11 - 1
Name Plate Ass'y.....	12 - 1

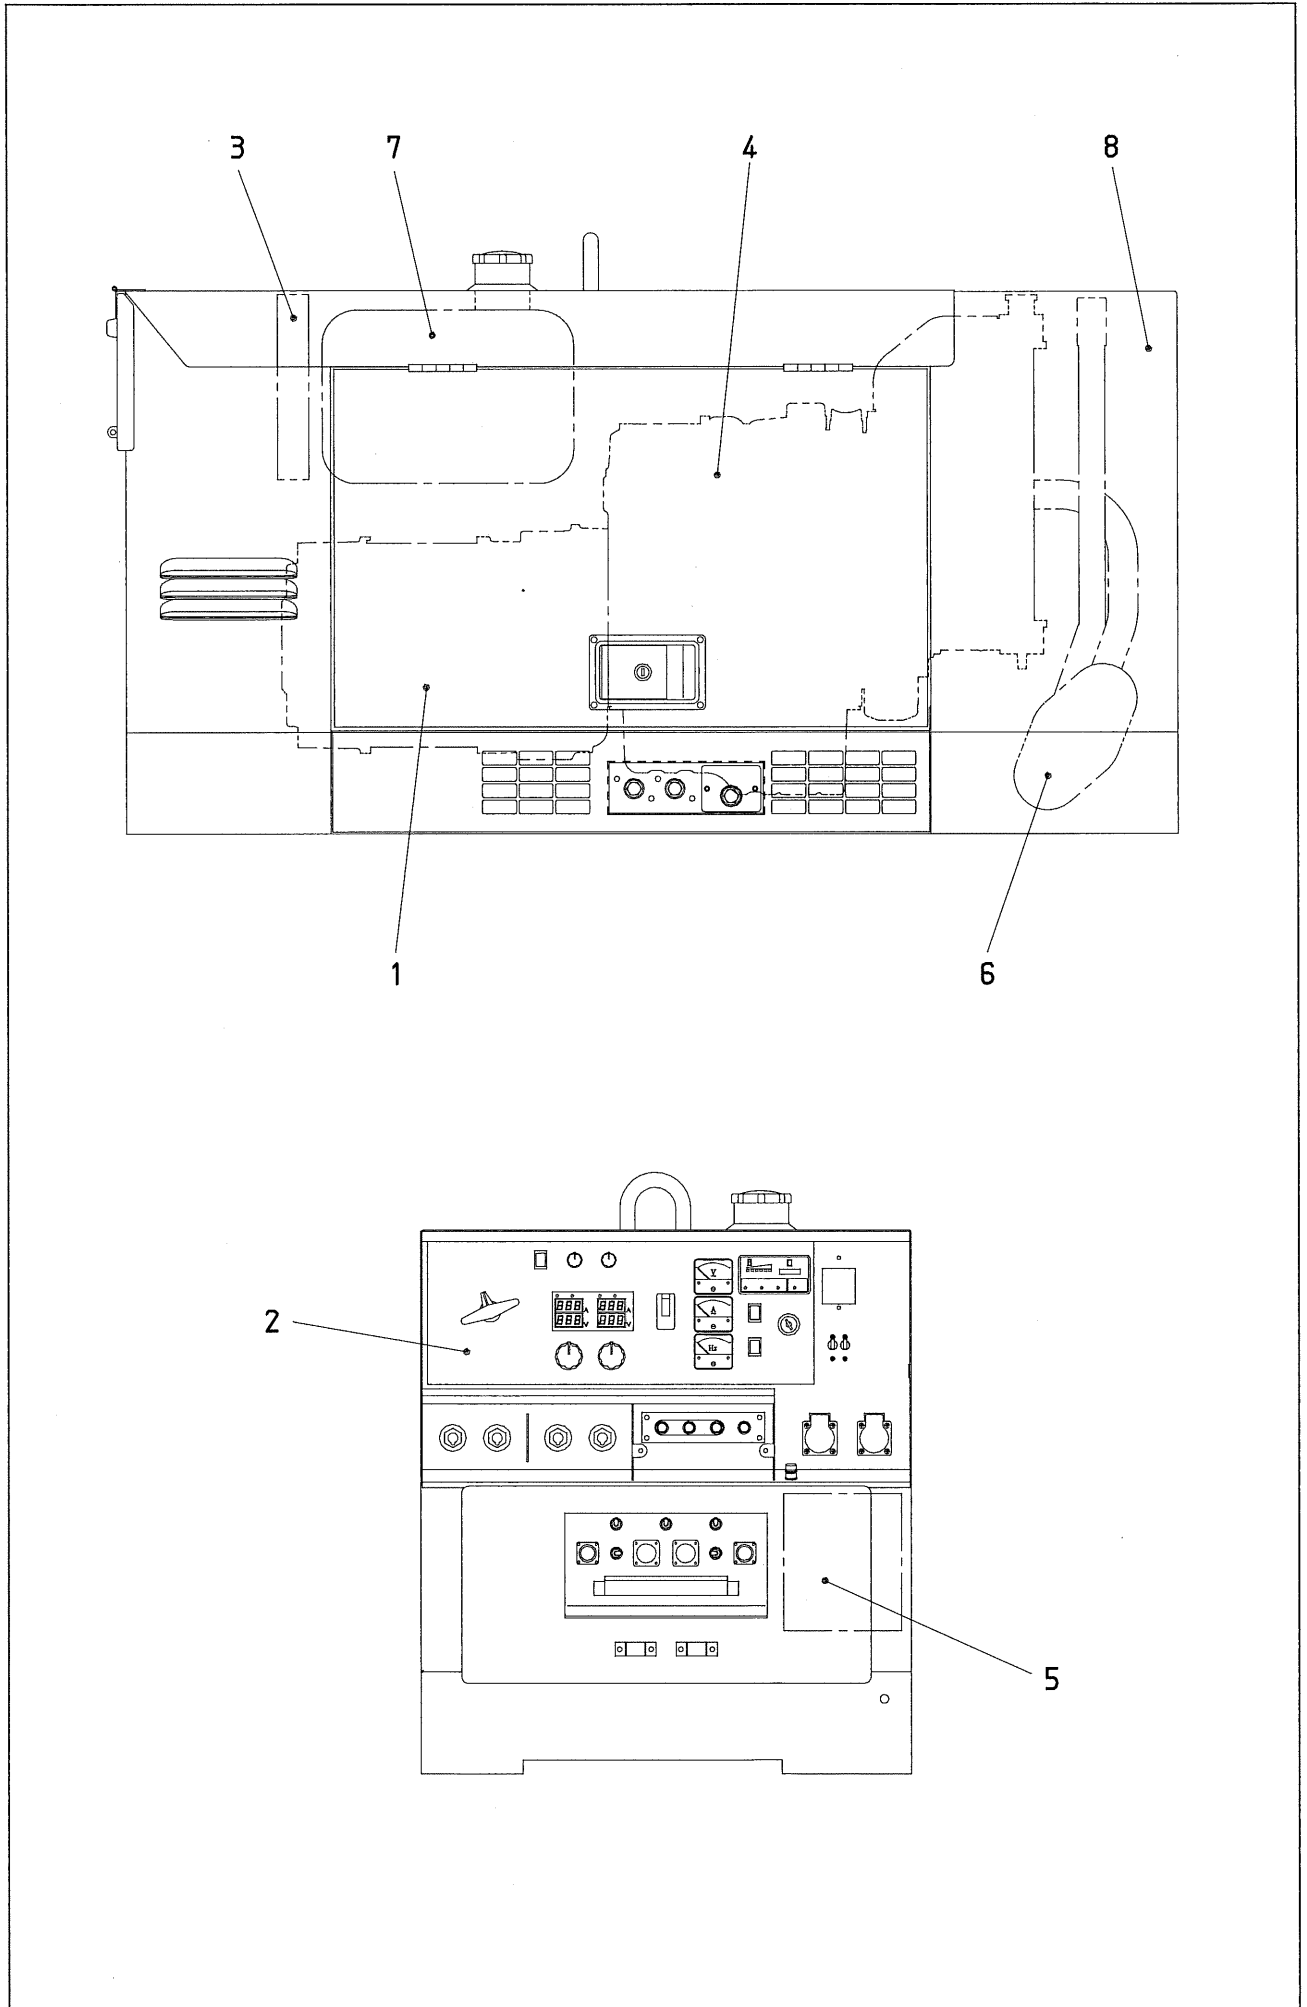


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1		Generator Ass'y	Refer to p.2-1						
2		Control Panel Ass'y	Refer to p.3-1,3-2						
3		Electric Parts Ass'y(Part 1)	Refer to p.4-1						
		Electric Parts Ass'y(Part 2)	Refer to p.5-1						
4		Engine & Radiator Ass'y	Refer to p.6-1						
5		Battery Ass'y	Refer to p.7-1						
6		Muffler Ass'y	Refer to p.8-1						
7		Fuel Tank Ass'y	Refer to p.9-1						
8		Bonnet Ass'y(Part 1)	Refer to p.10-1						
		Bonnet Ass'y(Part 2)	Refer to p.11-1						
		Name Plate Ass'y	Refer to p.12-1					~5725312	
		Name Plate Ass'y	Refer to p.12-1-1					5725313~	
	D 62411 02002	Generator Wiring Diagram(Japanese)							
	D 68140 01403	Generator Wiring Diagram(English)							
	D 63580 00903	Engine Wiring Diagram(Japanese)							
	D 68141 00703	Engine Wiring Diagram(English)							
	D 68443 00404	Instruction Manual							

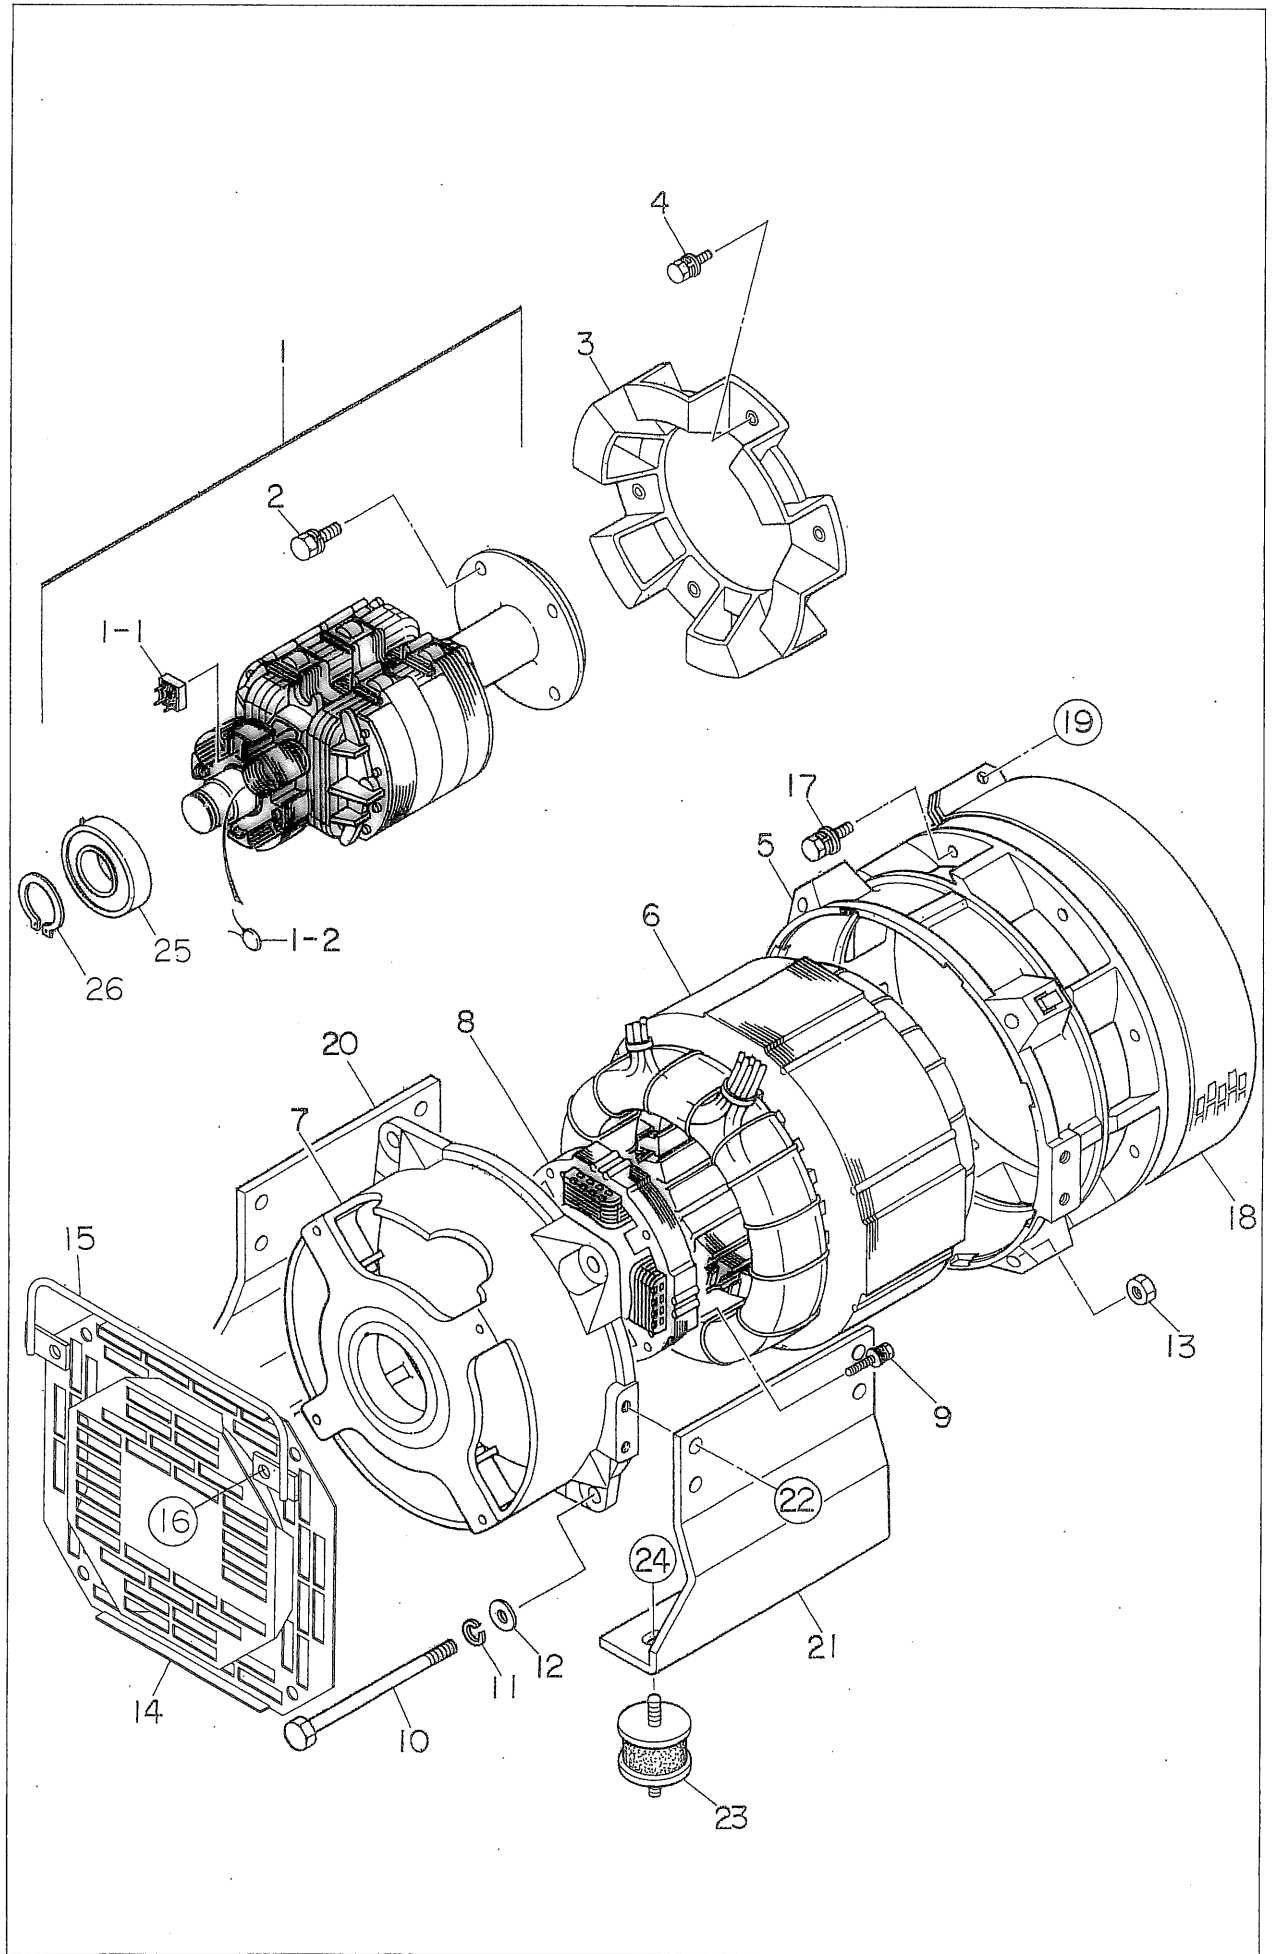


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 41100 00403	Rotor Ass'y		1					
1- 1	Y 06018 20037	Rectifier	S10VB60	(1)					
1- 2	Y 06018 22638	Surge Absorber	TNR15G 431K	(1)					
2	Y 00124 10030	Hex. Head Bolt		4					
3	D 41111 00103	Fan		1					
4	Y 00171 08025	Hex. Head Bolt		6					
5	W 78113 15102	End Bracket		1					
6	D 61350 00703	Armature Ass'y		1					
7	D 41530 00202	End Bracket		1					
8	D 41390 00003	Field Ass'y, exciter		1					
9	Y 00171 05035	Hex. Head Bolt		4					
10	D 41315 00004	Set Bolt		4					
11	Y 00400 12000	Spring Washer		4					
12	Y 00412 12000	Plain Washer		4					
13	Y 00300 12000	Hex. Nut		4					
14	D 51544 00003	Cover		1					
15	D 41853 00004	Bracket		1					
16	Y 00171 08035	Hex. Head Bolt		4					
17	Y 00124 10025	Hex. Head Bolt		8					
18	D 41554 00104	Cover, fan		1					
19	Y 03404 06040	Hex. Head Bolt		1					
	Y 00379 06000	U Nut		1					
	Y 00412 06000	Plain Washer		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
20	D 51321 00103	Generator Foot		1					
21	D 51321 00003	Generator Foot		1					
22	Y 00123 10025	Hex. Head Bolt		8					
23	W 76054 19004	Rubber Suspension		2					
24	Y 02070 10000	Hex. Nut		2					
25	Y 00712 06307	Bearing	6307DDU C3	1					
26	Y 00800 00035	Snap Ring		1					



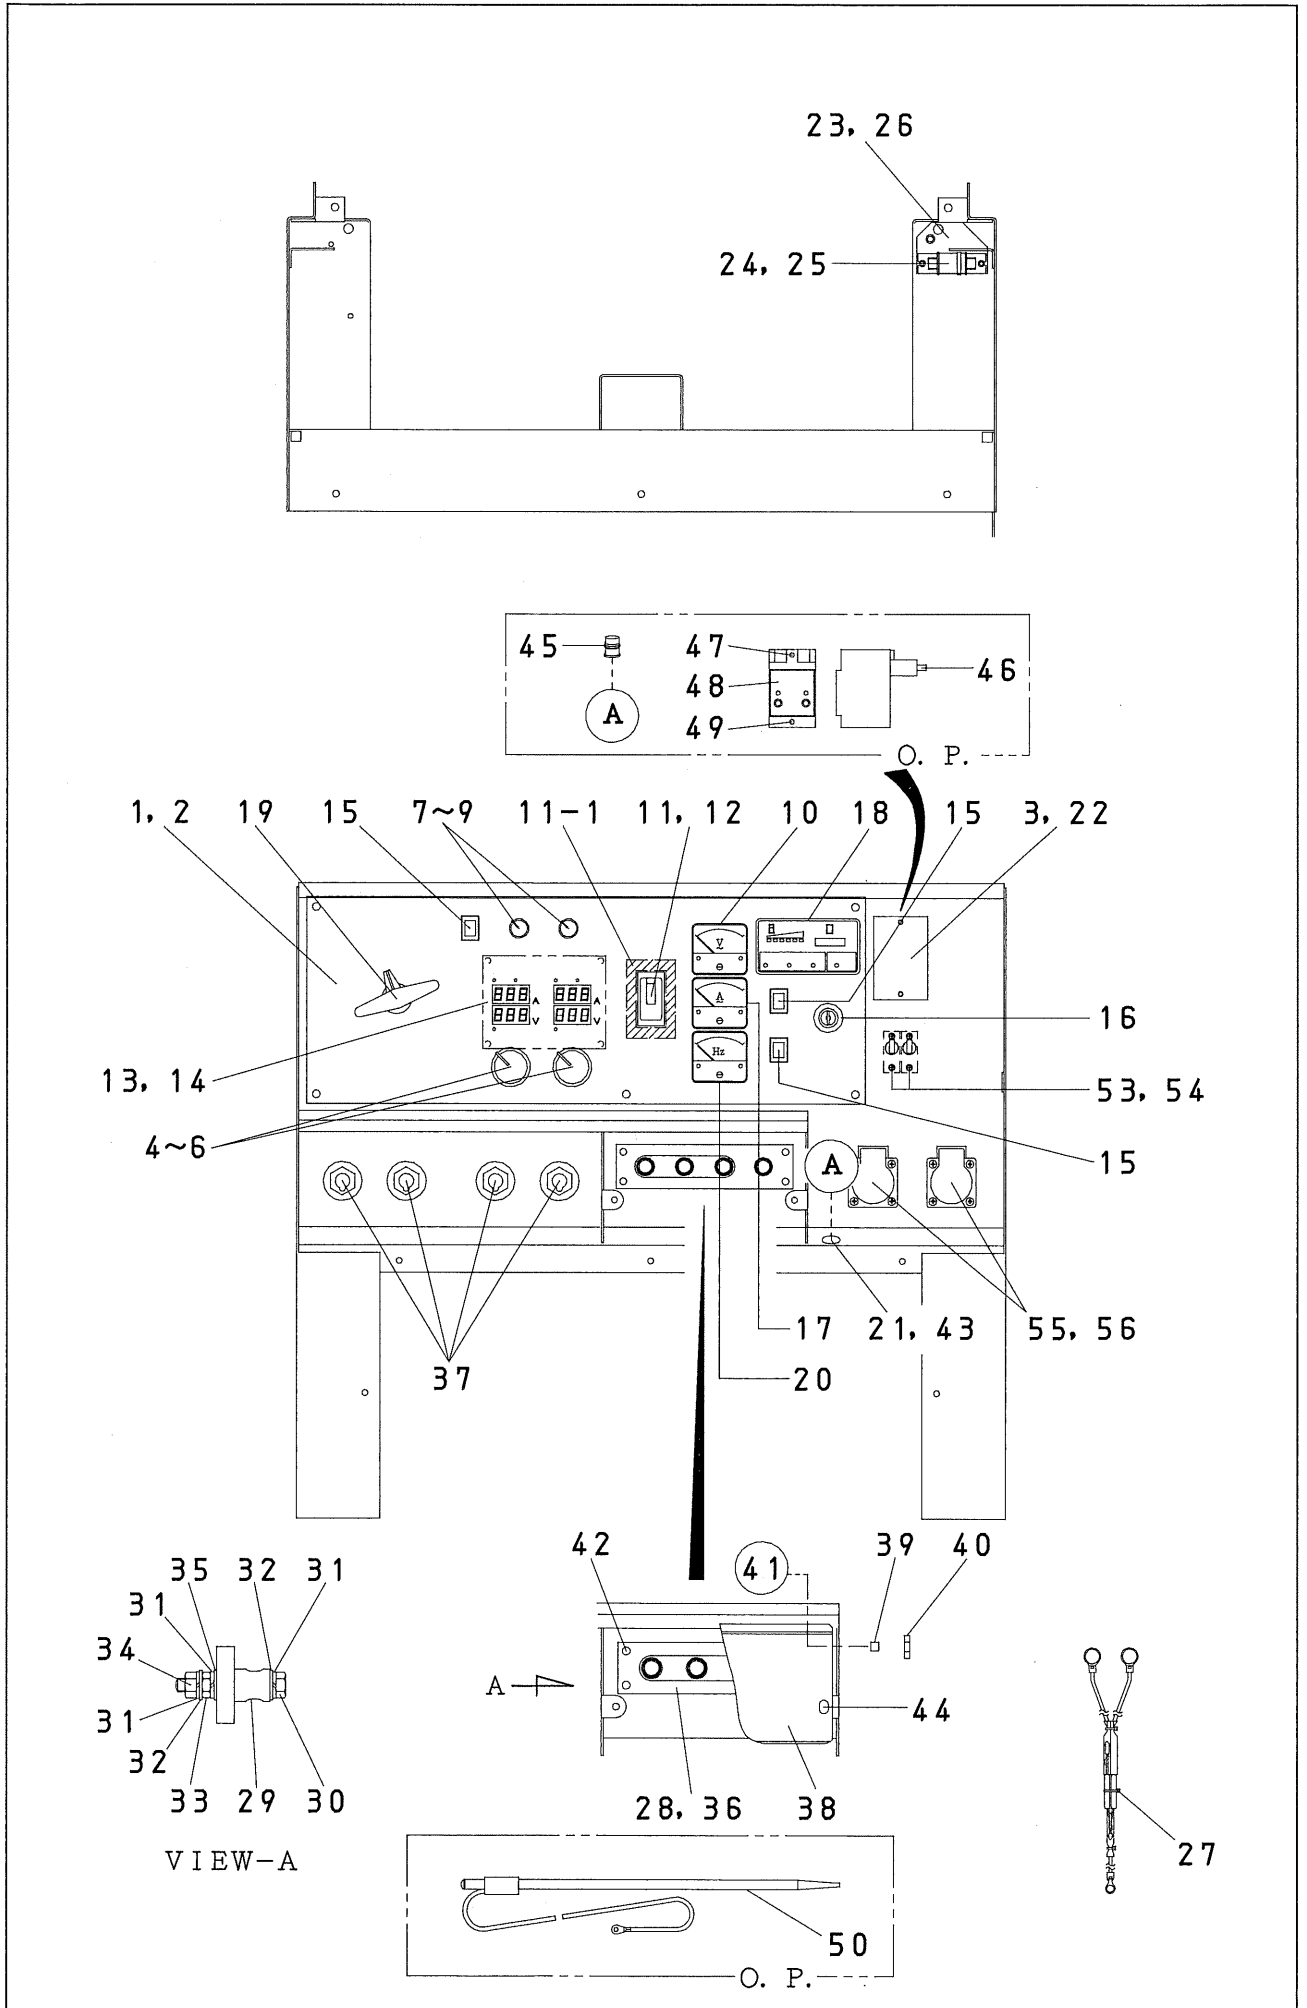

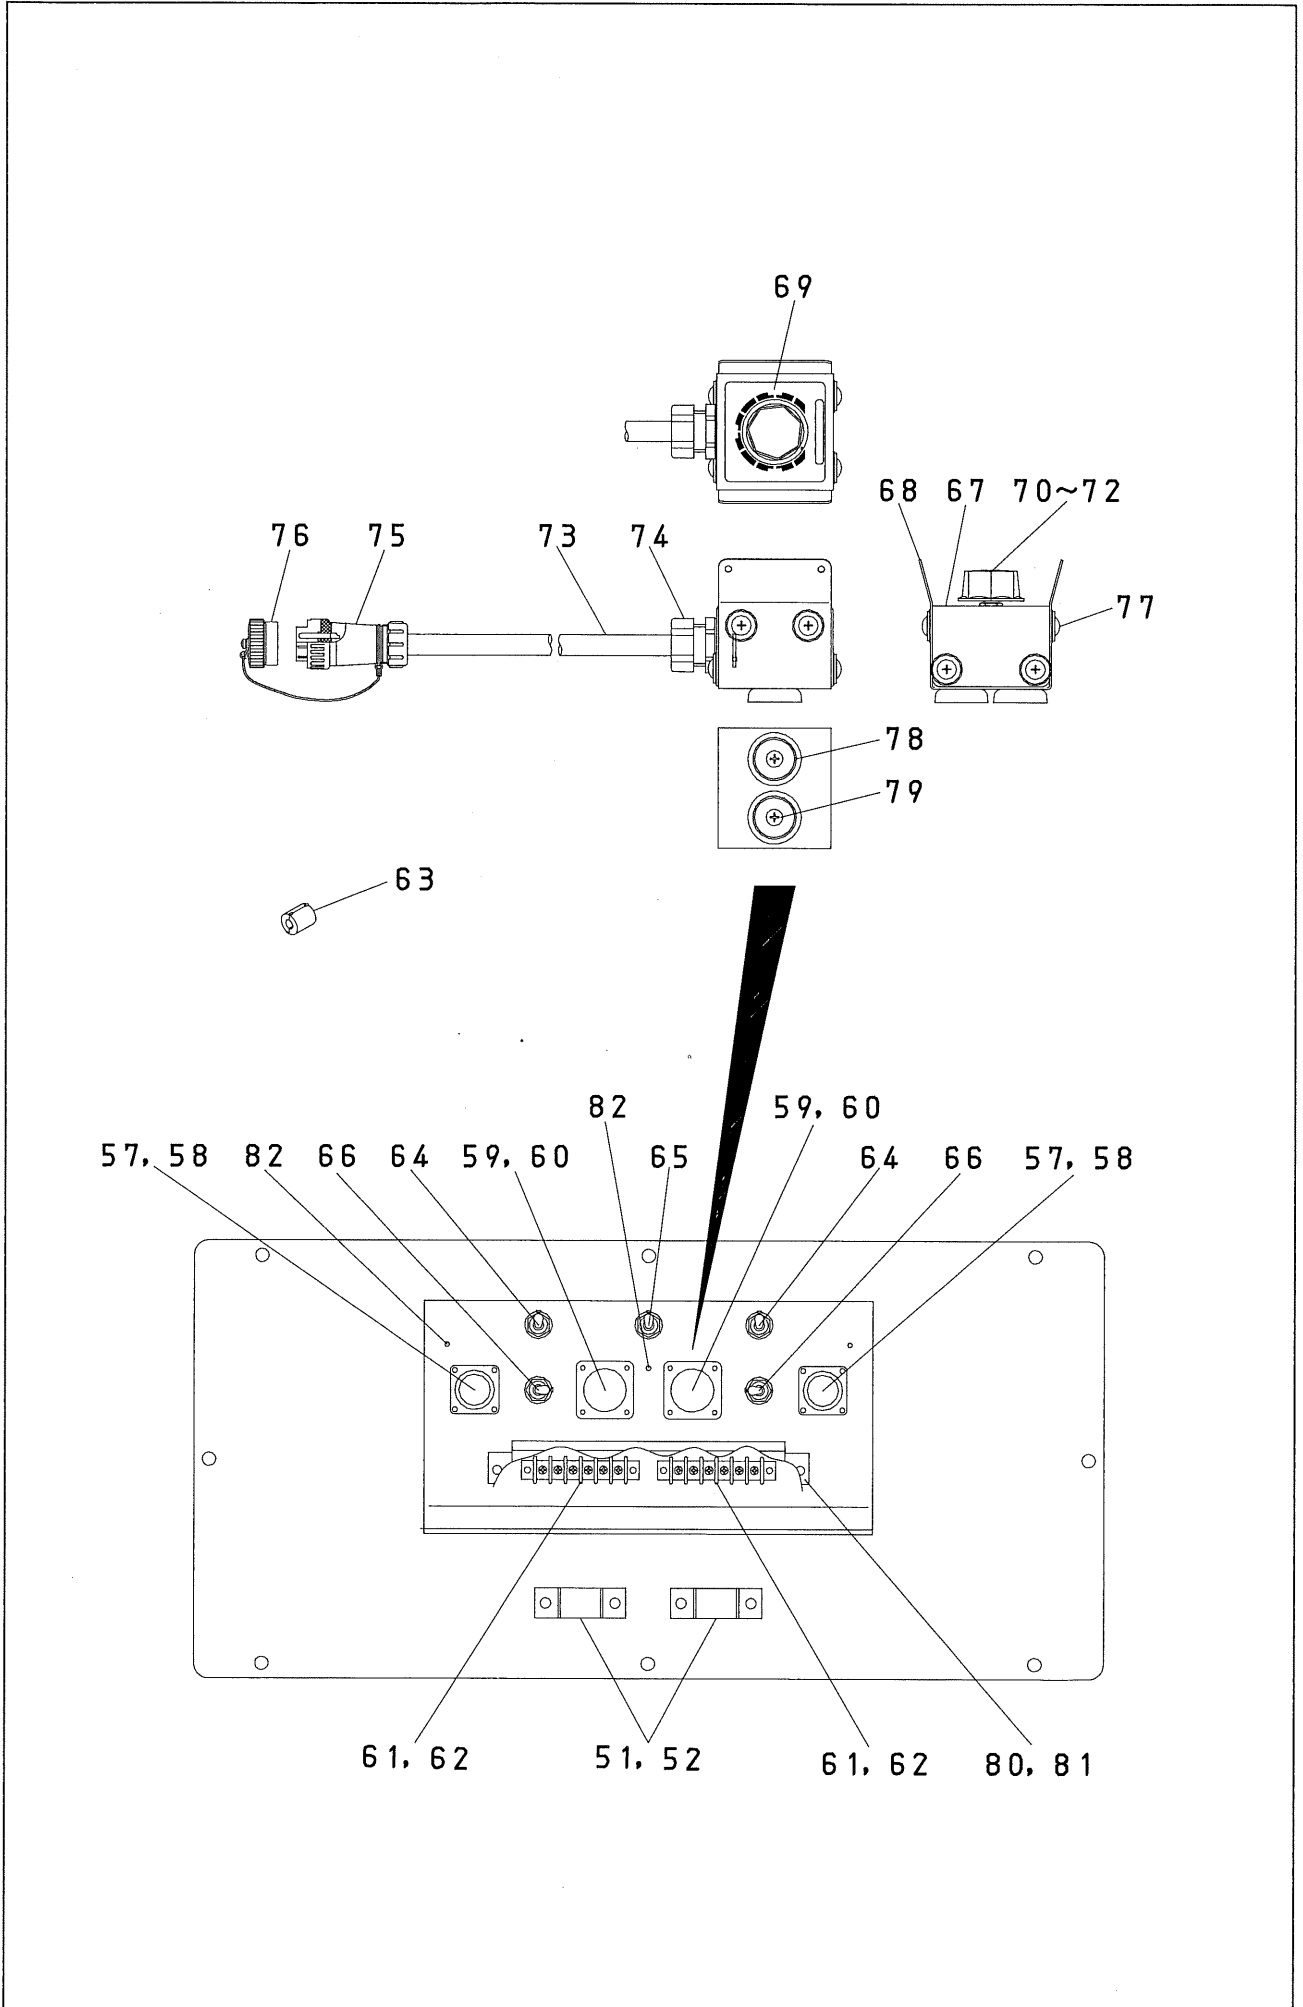


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
		A=STD B=O.P.							
1	D 65113 01502	Control Panel	D62240 00303	1					
2	Y 00218 06030	Machine Screw		6					
3	W 08418 05804	Cover			1				
4	Y 06018 40028	Rheostat (Current/Voltage Regulator)	RV24YN20SB 500 Ω	2			VR1A, B		
5	Y 06018 40103	Knob	K-2195	2					
6	W 08018 83003	Insulator		2					
7	Y 06018 40095	Rheostat (Arc Force Regulator)	RV24YN20SB 2k Ω	2			VR2A, B		
8	Y 06018 40170	Knob	K-2195	2					
9	W 08018 83003	Insulator		2					
10	Y 06018 00285	AC Voltmeter	SCF-5 0-600V	1			V		
11	Y 06018 71790	Circuit Breaker	XE-50NB 3P 23A		1		CB1		
	Y 06018 71791	Circuit Breaker	XE-50NB 3P 23A			1	CB1		
11- 1	B 34914 00004	Rubber Seal		1					
12	Y 00271 04035	Machine Screw		2					
13	D 99248 00154	Digital Monitor	DM-50A	1			DM		
14	Y 00271 03006	Machine Screw		4					
15	Y 06018 31600	Rocker Switch	JW-M11RKK	3			SW2~4		
16	Y 06021 00059	Starter Switch	KUBOTA 37410-59113	1					
17	Y 06018 05749	AC Ammeter	ACF-5 0-30A	1			A		
18	Y 06021 15042	Engine Monitor	MT-15	1					
	D 43537 00004	Cover		1					
19	Y 06018 03076	Change-Over Switch	SK-2532 MSA-2	1			SW1		

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
20	Y 06018 00455	Frequency Meter	FCF-5 240V	1				F	
21	Y 00169 08020	Hex. Head Bolt			1				
22	Y 00218 04012	Machine Screw			2				
23	D 52618 00104	Bracket		1					
24	Y 06018 04211	Current Transformer	MCT-100Y	1				CT	
25	Y 00271 04010	Machine Screw		2					
26	Y 00169 06015	Hex. Head Bolt		1					
27	D 42683 04704	Noise Filter		2				NF1A, B	
28	W 87018 60004	Set Board, output terminal		1					
29	W 78118 61004	Output Terminal		4					
30	W 08018 30604	Hex. Head Bolt		4					
31	Y 00400 08000	Spring Washer		12					
32	Y 00414 08000	Plain Washer		8					
33	Y 00395 08000	Hex. Nut		4					
34	Y 00300 08000	Hex. Nut		4					
35	Y 00412 08000	Plain Washer		4					
36	W 87018 64004	Rubber Seal		1					
37	Y 06018 15191	Output Terminal, welding		4					
38	D 62371 00003	Cover, output terminal		1					
	D 62374 00004	Rubber Seal		1					
39	W 08218 00014	Collar		2					
40	D 93112 00004	Stay Rubber		1					
41	Y 00169 06020	Hex. Head Bolt		2					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	Y 02070 06000	Hex. Nut		2					
42	Y 00169 06030	Hex. Head Bolt		4					
43	Y 02070 08000	Hex. Nut			1				
44	Y 00169 06015	Hex. Head Bolt		2					
45	Y 06018 15109	Terminal	T-381			1			
46	Y 06018 20119	Condenser	45FAEN 205UJ			1	C10		
47	Y 00210 04065	Machine Screw				1			
	Y 02070 04000	Hex. Nut				1			
48	Y 06018 22416	Earth Leakage Relay	NV-ZE DC12V 30mA			1	22		
49	Y 00210 04025	Machine Screw				1			
50	Y 06008 01001	Earth rod				1			
51	D 62616 01504	Cable Clamper		2					
	D 62618 00804	Insulator Rubber		2					
52	Y 00171 05012	Hex. Head Bolt		4					
53	Y 06018 06047	AC Circuit Breaker	CP31PM 15A	2			CB2, 3		
54	Y 00210 03005	Machine Screw		4					
55	Y 06018 11059	Receptacle	1461-000 250V, 16A	2			CON1, 2		
56	Y 00271 04020	Machine Screw		8					
57	Y 06018 12913	Remote Socket	NJW-243-RF	2			MR1A, B		
	Y 06018 11428	Cap	NJW-24-RCA	2					
58	Y 00210 03012	Machine Screw		8					
	Y 02070 03000	Hex. Nut		8					
59	Y 06018 12931	Remote Socket	MS3102A20-27SX	2			MR2A, B		

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	Y 06018 11431	Cap	MS25043-20DA	2					
60	Y 00210 03012	Machine Screw		8					
	Y 02070 03000	Hex. Nut		8					
61	Y 06018 16218	Terminal Board	TBK-16T 6P	2					
62	Y 00271 03012	Machine Screw		4					
63	Y 06018 25130	Noise Filter	TDK ZCAT3035-1330	3			NF2A, B NF3		
	Y 06018 29032	Condenser	0.1 $\mu$ F 250V	9			C7~9A, B 11~13		
64	Y 06018 31365	Switch, remote selector	M-2011 L/B	2			SW5A, B		
65	Y 06018 31365	Switch	M-2011 L/B	1			SW8		
66	Y 06018 31368	Switch, remote control selector	M-2012 L/B	2			SW7A, B		
67	D 62673 02304	Remote Control Box		1					
68	D 62673 02404	Remote Control Box		1					
69	D 65510 01204	Decal;Remote Control Box	D6510 0120	1					
70	Y 06018 40259	Rheostat	RA25Y20SB501 500 $\Omega$	1					
71	Y 06018 40108	Knob	K-2901-L	1					
72	W 08018 83003	Insulator		1					
73	D 62628 00404	Cable		1					
74	Y 06018 51516	Adapter	SCL-B14A	1					
75	Y 06018 13307	Plug	NJW-243-PM13	1					
76	Y 06018 11440	Cap	NJW-24-PCA	1					
77	Y 00219 05012	Machine Screw		8					
	Y 00470 05018	Plain Washer		8					
	B 93115 00604	Plain Washer		8					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
78	Y 06050 10452	Cap	A32	2					
79	Y 00211 05015	Machine Screw		2					
80	D 64448 00004	Cover, terminal board		1					
	Y 03149 00175	Rubber Seal		1					
81	Y 00171 05012	Hex. Head Bolt		2					
82	Y 00271 03010	Machine Screw		3					

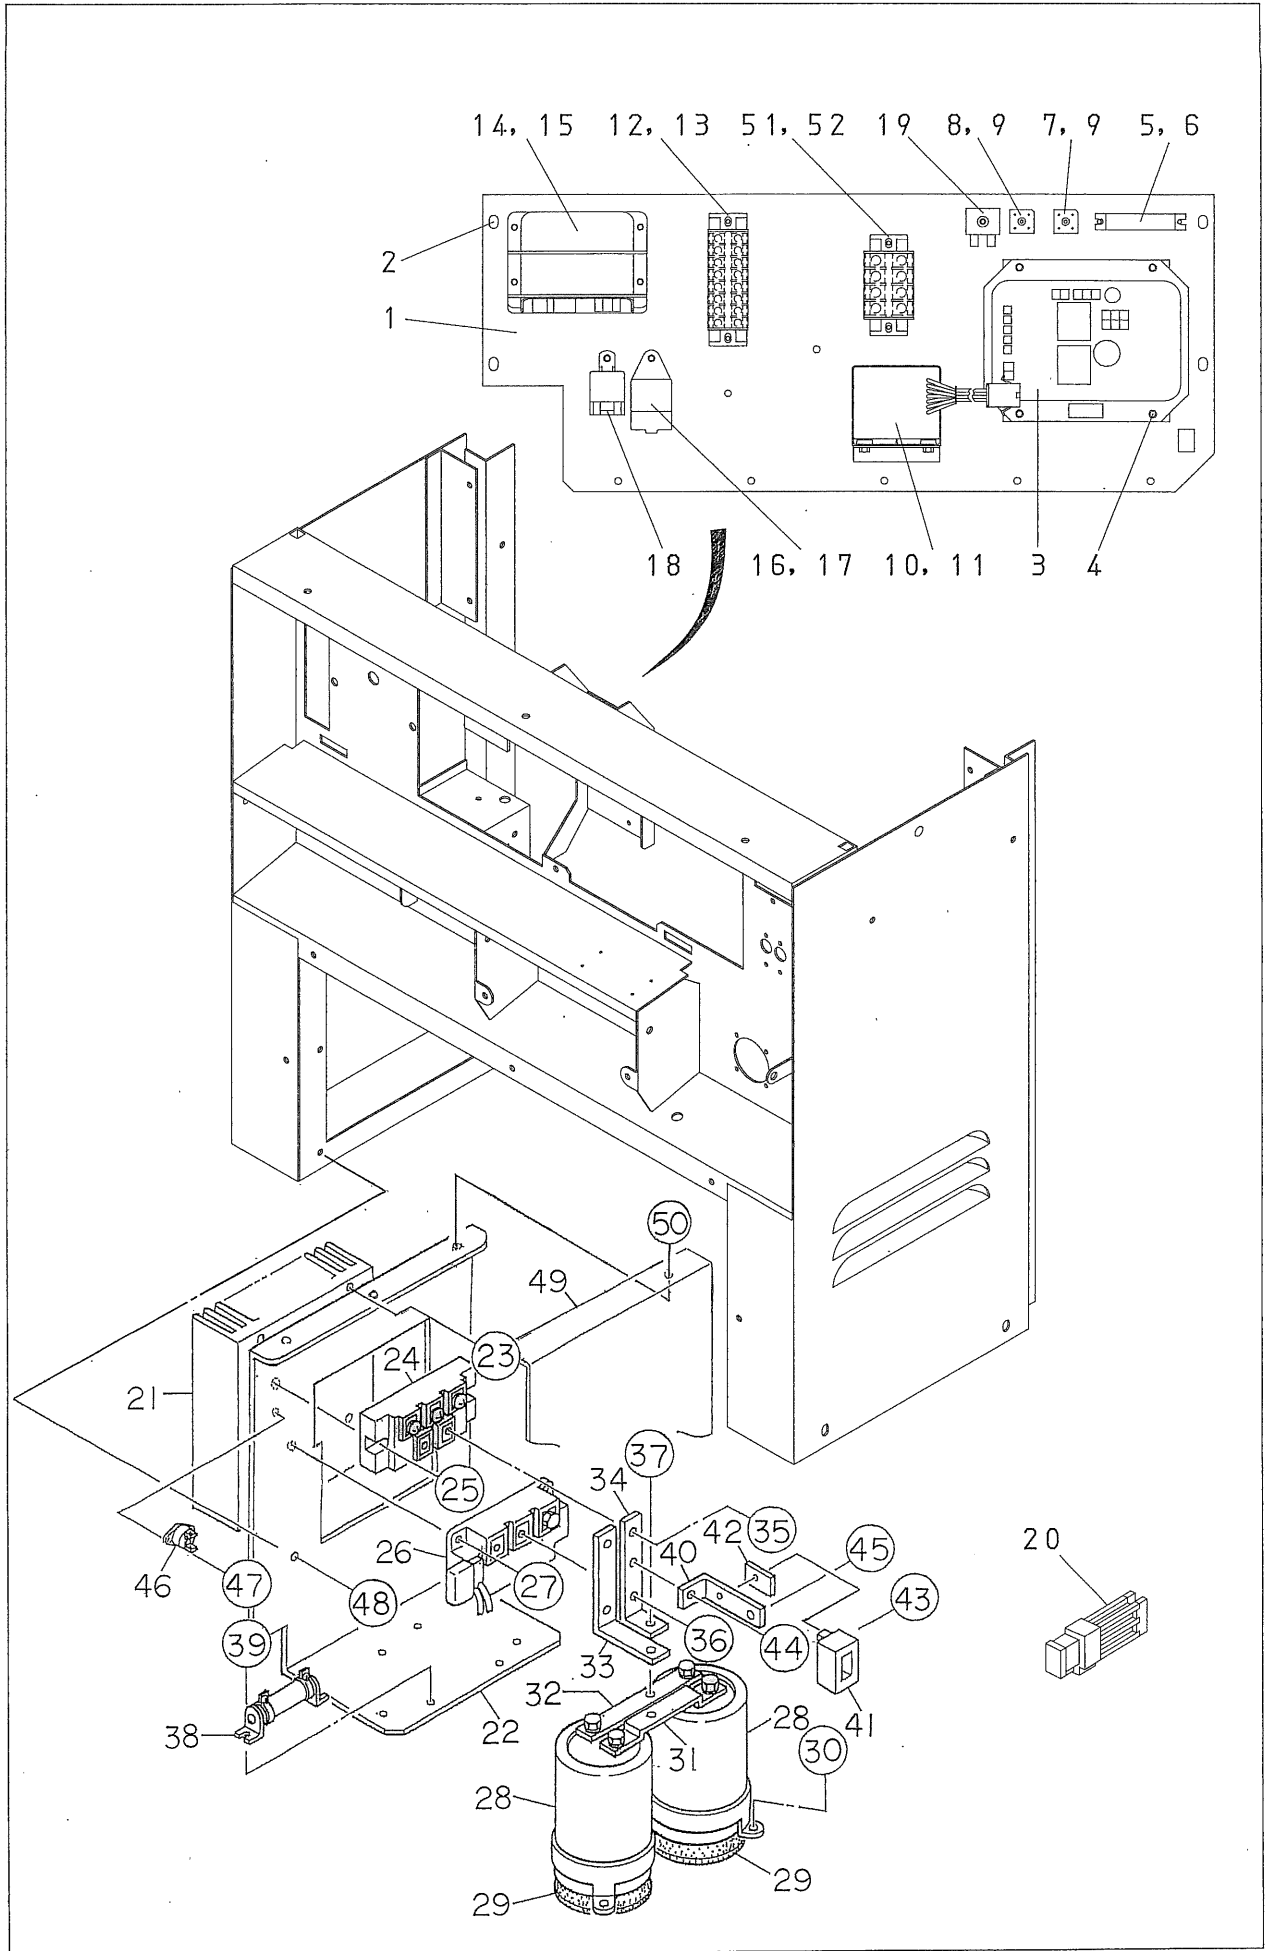




Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 62615 00503	Set Panel, electric parts		1					
	Y 03149 00660	Rubber Seal		1					
2	Y 00169 06015	Hex. Head Bolt		4					
3	Y 06018 20666	Automatic Voltage Regulator	AN-5W-203B	1				AVR	
4	Y 00171 05015	Hex. Head Bolt		4					
5	Y 06018 42347	Resistor	GG20W 30Ω	1				R2	
6	Y 00271 04015	Machine Screw		2					
7	Y 06018 20037	Rectifier	S10VB60	1				Re2	
8	Y 06018 23204	Rectifier	S5VB60	1				Re3	
9	Y 00271 03015	Machine Screw		2					
10	Y 06018 23857	Slow Down Unit	NC-73	1				RC	
11	Y 00271 05015	Machine Screw		2					
12	Y 06018 15422	Terminal Board	KT20 8P	1					
13	Y 00271 04020	Machine Screw		2					
14	Y 06022 00475	Emergency Unit	KUBOTA 17472-60605	1					
15	Y 00271 05025	Machine Screw		4					
16	Y 06022 01273	Lamp Timer	KUBOTA 15694-65992	1					
17	Y 00271 05015	Machine Screw		1					
18	Y 06018 24525	Relay	ACA2213-5.6 DC12V	1				Ry	
	Y 00271 05010	Machine Screw		1					
19	Y 06018 23240	Rectifier	DE45 300V SA9905-6	1				Re4	
	Y 00271 04015	Machine Screw		1					
20	Y 06018 06640	Fuse	65A	1					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
21	D 62673 02504	Cooling Fin		2					
22	D 62616 00904	Bracket		2					
23	Y 00169 06015	Hex. Head Bolt		8					
24	Y 06018 23256	Rectifier	DF-200BA-80	2			Re1A, B		
25	Y 00271 05015	Machine Screw		4					
26	D 42680 00403	IGBT Mudule Ass'y		2					
27	Y 00271 05015	Machine Screw		8					
28	Y 06018 26144	Condenser	LNT2C153MSM 160V 15000 $\mu$ F	4			C1A, B C2A, B		
29	D 42628 00704	Insulator Rubber		4				~5722624	
	D 62618 00904	Insulator Rubber		4				5722625~	
30	Y 00271 04010	Machine Screw		8					
31	D 42683 04204	Connection Plate		2					
32	D 62673 02804	Connection Plate		2					
33	D 62673 02604	Connection Plate		2					
34	D 62673 02704	Connection Plate		2					
35	Y 00271 05015	Machine Screw		4					
36	Y 00178 06014	Hex. Head Bolt		6					
37	Y 00171 06020	Hex. Head Bolt		4					
	Y 02072 06000	Hex. Nut		4					
38	Y 06018 42262	Resistor	GG20W 1k $\Omega$	2			R1A, B		
39	Y 00271 04010	Machine Screw		4					
40	D 32673 00604	Connection Plate		2					
41	Y 06018 04202	DC Current Transformer	200A4V L03S200D15	2			DCCTA, B		

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
42	D 42354 00004	Insulator		2					
43	Y 00271 04020	Machine Screw		2					
44	Y 00190 08016	Hex. Head Bolt		2					
	Y 00400 08000	Spring Washer		2					
	Y 00427 08000	Plain Washer		2					
45	Y 00190 08016	Hex. Head Bolt		2					
	Y 00400 08000	Spring Washer		2					
	Y 00427 08000	Plain Washer		2					
46	Y 06018 31056	Thermal Switch	US-602SYTFAS 90°C	2			THA, B		
47	Y 00210 03010	Machine Screw		4					
48	Y 00169 06015	Hex. Head Bolt		14					
49	D 62617 00004	Cover, electric parts		2					
50	Y 06050 11412	Rivet		8					
51	Y 06018 15731	Terminal Board	KT30 4P	1					
52	Y 00271 04020	Machine Screw		2					

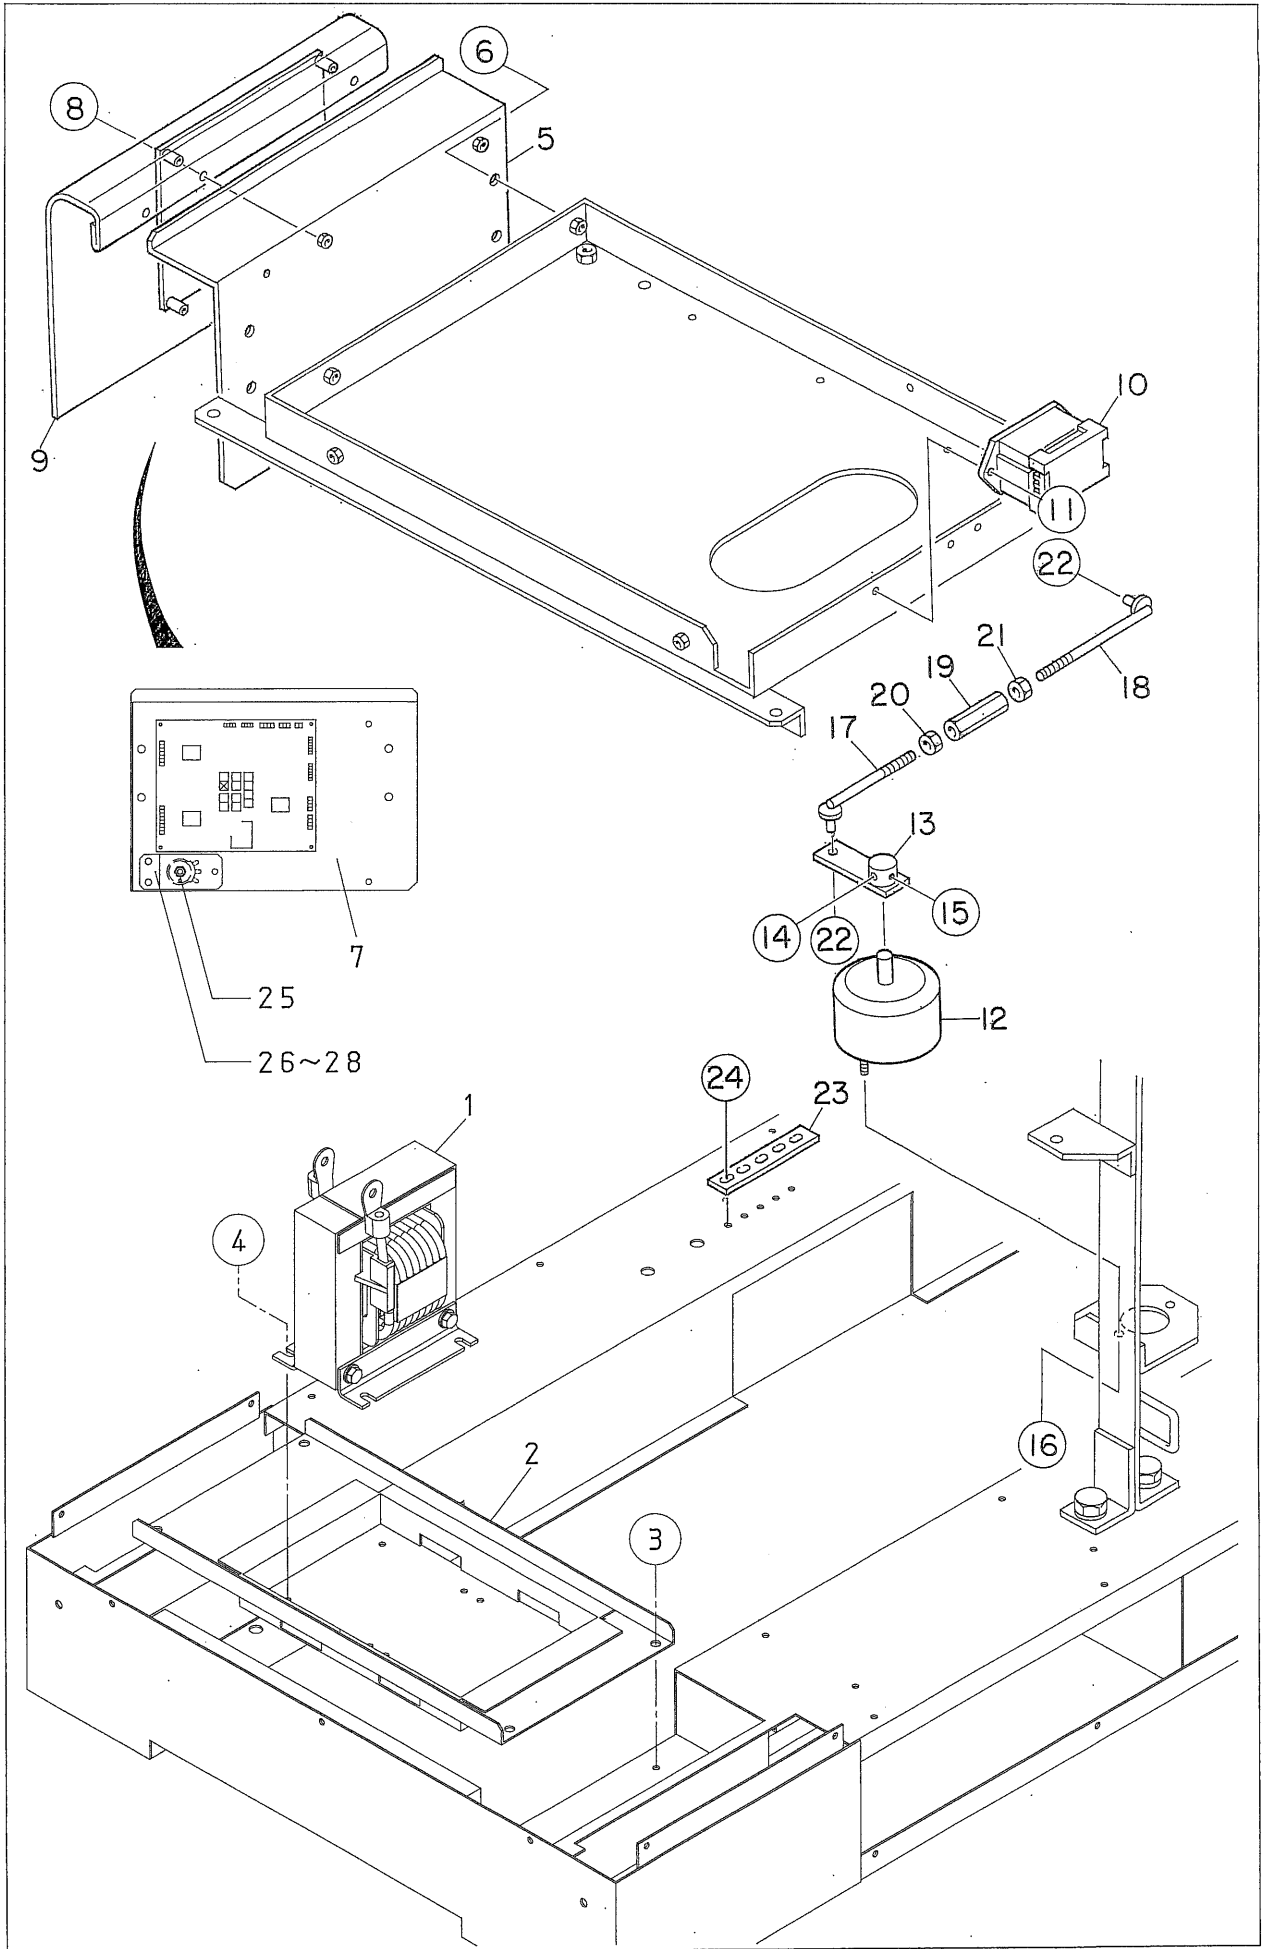

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 42635 04403	DC Reactor		2				LA, B	
2	D 62616 01003	Bracket, reactor		1					~5722624
	D 62616 01013	Bracket, reactor		1					5722625~
	D 64940 00303	Lining		1					
3	Y 00169 06015	Hex. Head Bolt		4					
4	Y 00169 06015	Hex. Head Bolt		8					
5	D 52140 00203	Control Box		1					
6	Y 00169 06015	Hex. Head Bolt		4					
7	D 99248 00354	Control Unit	CV-15	1				IC	
8	Y 00271 03025	Machine Screw		4					
9	D 52617 00304	Cover, electric parts		1					
10	B 03525 00104	Fuse Box	FB-6PS	1					
	Y 06018 06642	Fuse	5A	(4)				F2~4	
	Y 06018 06643	Fuse	15A	(2)				F5	
	Y 06018 06644	Fuse	30A	(2)				F1	
	W 87006 25504	Decal; Fuse Box	S-4936	(1)					
11	Y 00169 05015	Hex. Head Bolt		2					
12	W 67226 35003	Rotary Solenoid Ass'y		1				S	
	W 17901 50203	Rotary Solenoid		(1)					
13	W 67226 31004	Arm, solenoid		(1)					
14	Y 00101 06020	Hex. Head Bolt		(1)					
	Y 00300 06000	Hex. Nut		(1)					
15	Y 00504 03020	Spring Pin		(1)					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
16	Y 02070 06000	Hex. Nut		2					
17	D 53553 00104	Governor Rod		1					
18	D 13563 00004	Governor Rod		1					
19	W 15521 54004	Screw Joint		1					
20	Y 00310 08000	Hex. Nut		1					
21	Y 00365 08000	Hex. Nut		1					
22	Y 00412 08000	Plain Washer		2					
	Y 06050 10503	Snap Pin	SSP-8	2					
23	W 85118 64604	Plate		1					
24	Y 00169 06015	Hex. Head Bolt		5					
25	Y 06018 40076	Rheostat	RV24YN20SB 1K $\Omega$	1			VR3		
26	D 52616 01204	Bracket		1					
27	Y 00169 06015	Hex. Head Bolt		2					
28	W 08018 83003	Insulator		1					

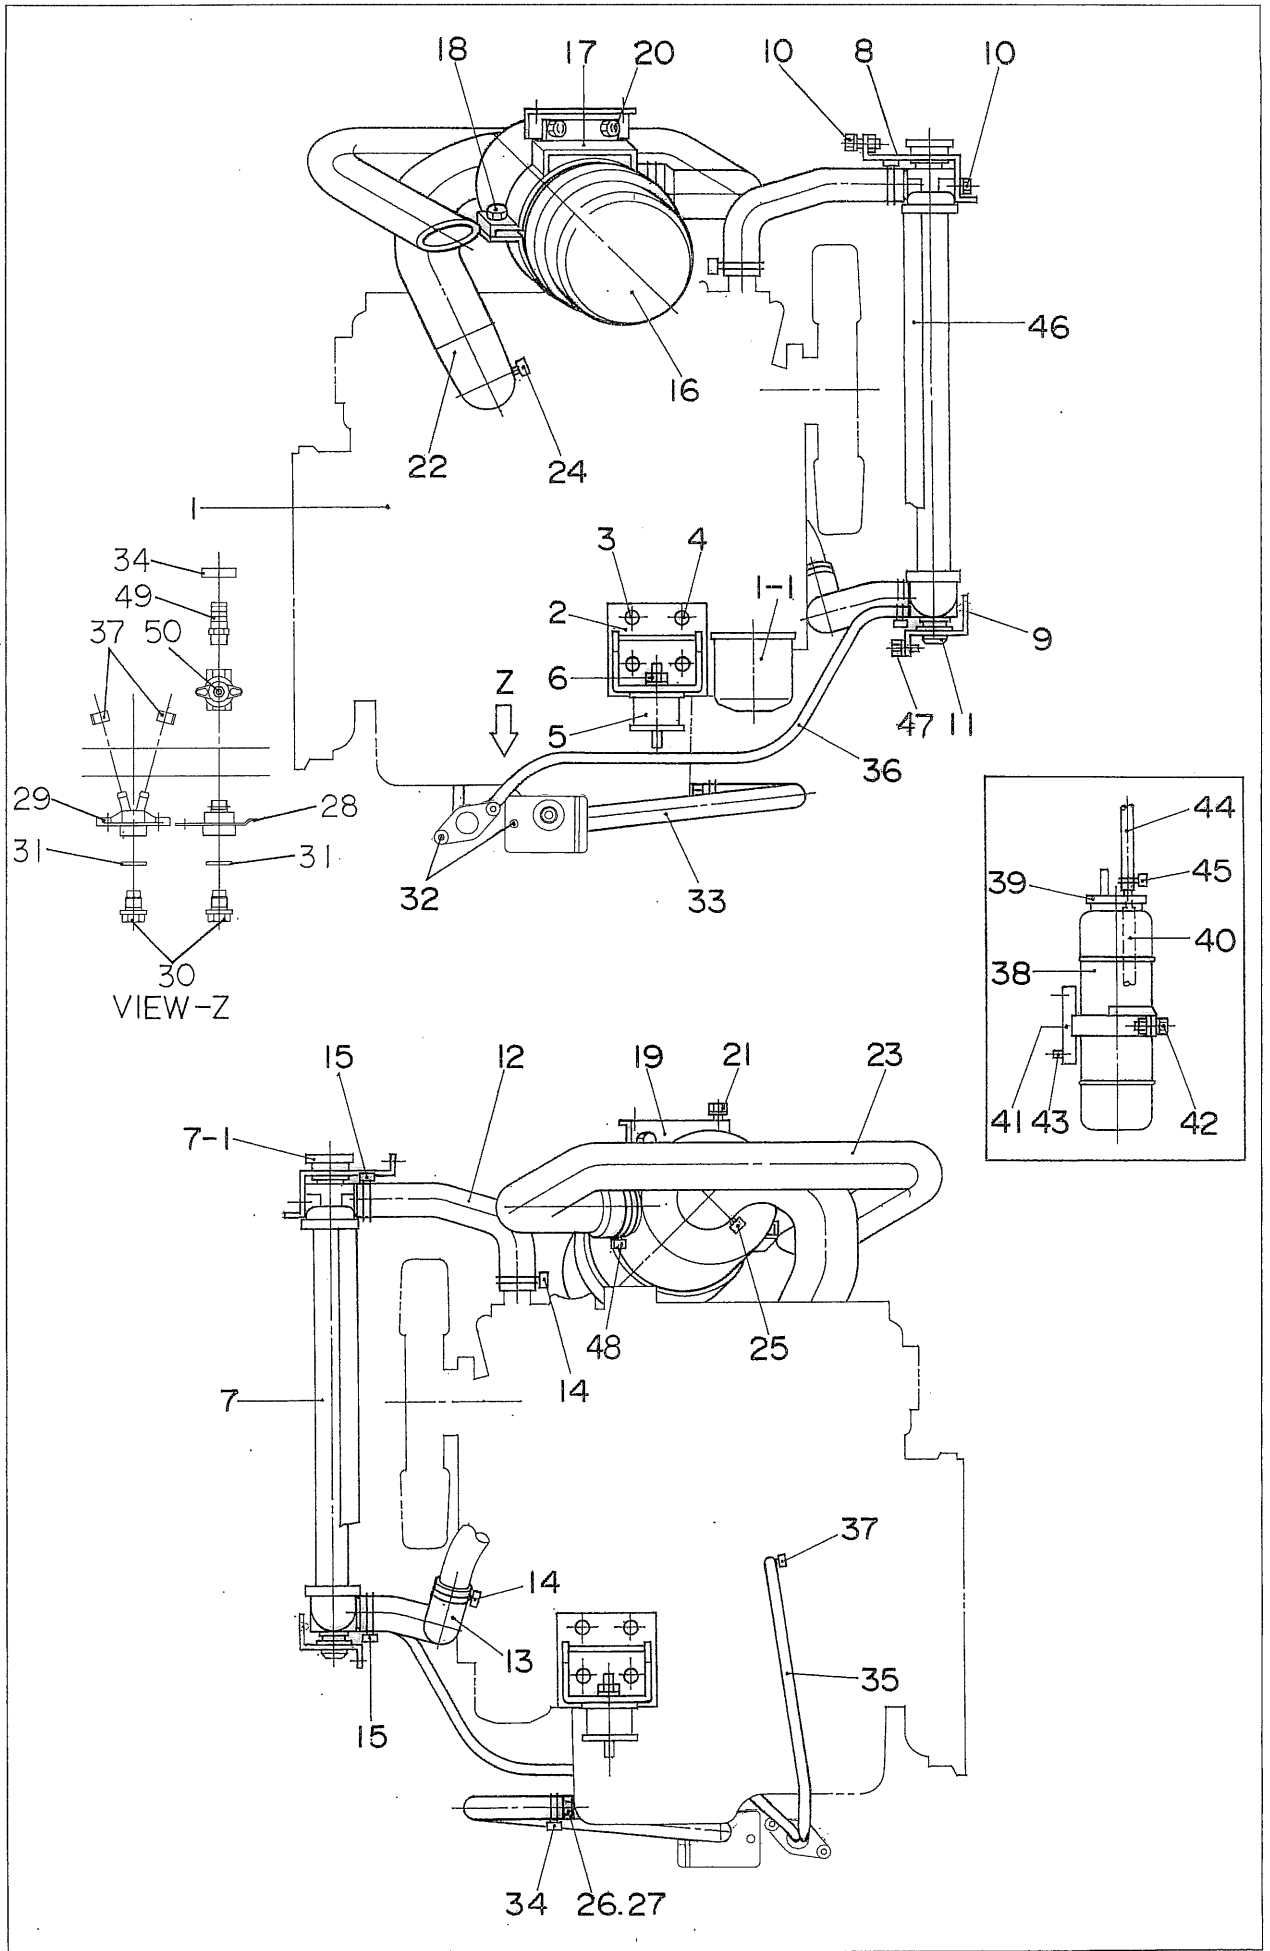


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 69242 00064	Engine	KUBOTA V1505	1					
	Y 06020 15262	Fan Belt	KUBOTA 16241-97011	(1)					
1- 1	Y 06020 41174	Cartridge, oil filter	KUBOTA 16271-32093	(1)					
2	D 53042 00304	Engine Foot		2					
3	Y 00107 10020	Hex. Head Bolt		6					
4	Y 00107 10020	Hex. Head Bolt		2					
	Y 00424 10000	Plain Washer		2					
5	W 76054 19004	Rubber Suspension		2					
6	Y 02070 10000	Hex. Nut		2					
7	Y 06020 12793	Radiator	2951-349-0000	1					
7- 1	Y 06020 11079	Cap, radiator	6713-092-0901	(1)					
8	D 63111 00204	Bracket, radiator		1					
9	B 03111 00404	Bracket, radiator		1					
10	Y 00169 06015	Hex. Head Bolt		5					
11	B 13126 00004	Rubber Mount		2					
12	D 63115 00203	Radiator Hose		1					
13	D 43125 01003	Radiator Hose		1					
14	Y 06055 15112	Hose Band	$\phi$ 37	2					
15	Y 06055 15134	Hose Band	HS16	2					
16	Y 06020 46531	Air Cleaner	EPG058505	1					
	Y 06020 46611	Element, air cleaner	P82-1575	(1)					
17	D 53742 00203	Band, air cleaner		1					
18	Y 00169 08025	Hex. Head Bolt		1					




Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
19	D 53742 00104	Bracket		1					
20	Y 00169 06015	Hex. Head Bolt		2					
21	Y 00173 06015	Hex. Head Bolt		2					
22	D 43751 01303	Hose, air cleaner		1					
23	B 13751 00613	Hose, air cleaner		1					
24	Y 06055 15139	Hose Band	HS32	1					
25	Y 06055 15027	Hose Band	φ 65	1					
26	W 79620 54004	Drain Joint, oil		1					
27	Y 06020 21191	Packing	SW-12	1					
28	D 43213 00003	Drain Joint, oil		1				~5722624	
	D 23213 00003	Drain Joint, oil		1				5722625~	
29	W 16220 14103	Drain Joint, water		1					
30	W 08020 11104	Plug		2					
31	Y 01500 00018	O Ring	A P18	2					
32	Y 00169 06015	Hex. Head Bolt		4				~5722624	
	Y 00169 06015	Hex. Head Bolt		3				5722625~	
33	D 63211 00203	Drain Hose		1					
34	Y 06055 15132	Hose Band	HS-8	2					
35	Y 01999 01000	Drain Hose		1					
36	Y 01999 00700	Drain Hose		1					
37	Y 06055 15094	Hose Band	φ 12	4					
38	W 08020 81403	Reserve Tank		1					
39	W 08020 81104	Cap, reserve tank		1					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
40	Y 01991 00215	Hose		1					
41	W 87020 82004	Bracket, reserve tank		1					
42	Y 00169 06015	Hex. Head Bolt		1					
43	Y 00169 06015	Hex. Head Bolt		2					
44	Y 01999 00480	Hose		1					
45	Y 06055 15094	Hose Band	$\phi 12$	2					
46	Y 02203 00400	Rubber Seal		2					
47	Y 00169 08020	Hex. Head Bolt		3					
48	Y 06055 15010	Hose Band	$\phi 63$	1					
49	Y 06020 22292	Hose Joint	HN-1316	1					
50	Y 06033 25013	Valve	BBS-77-10 3/8	1					

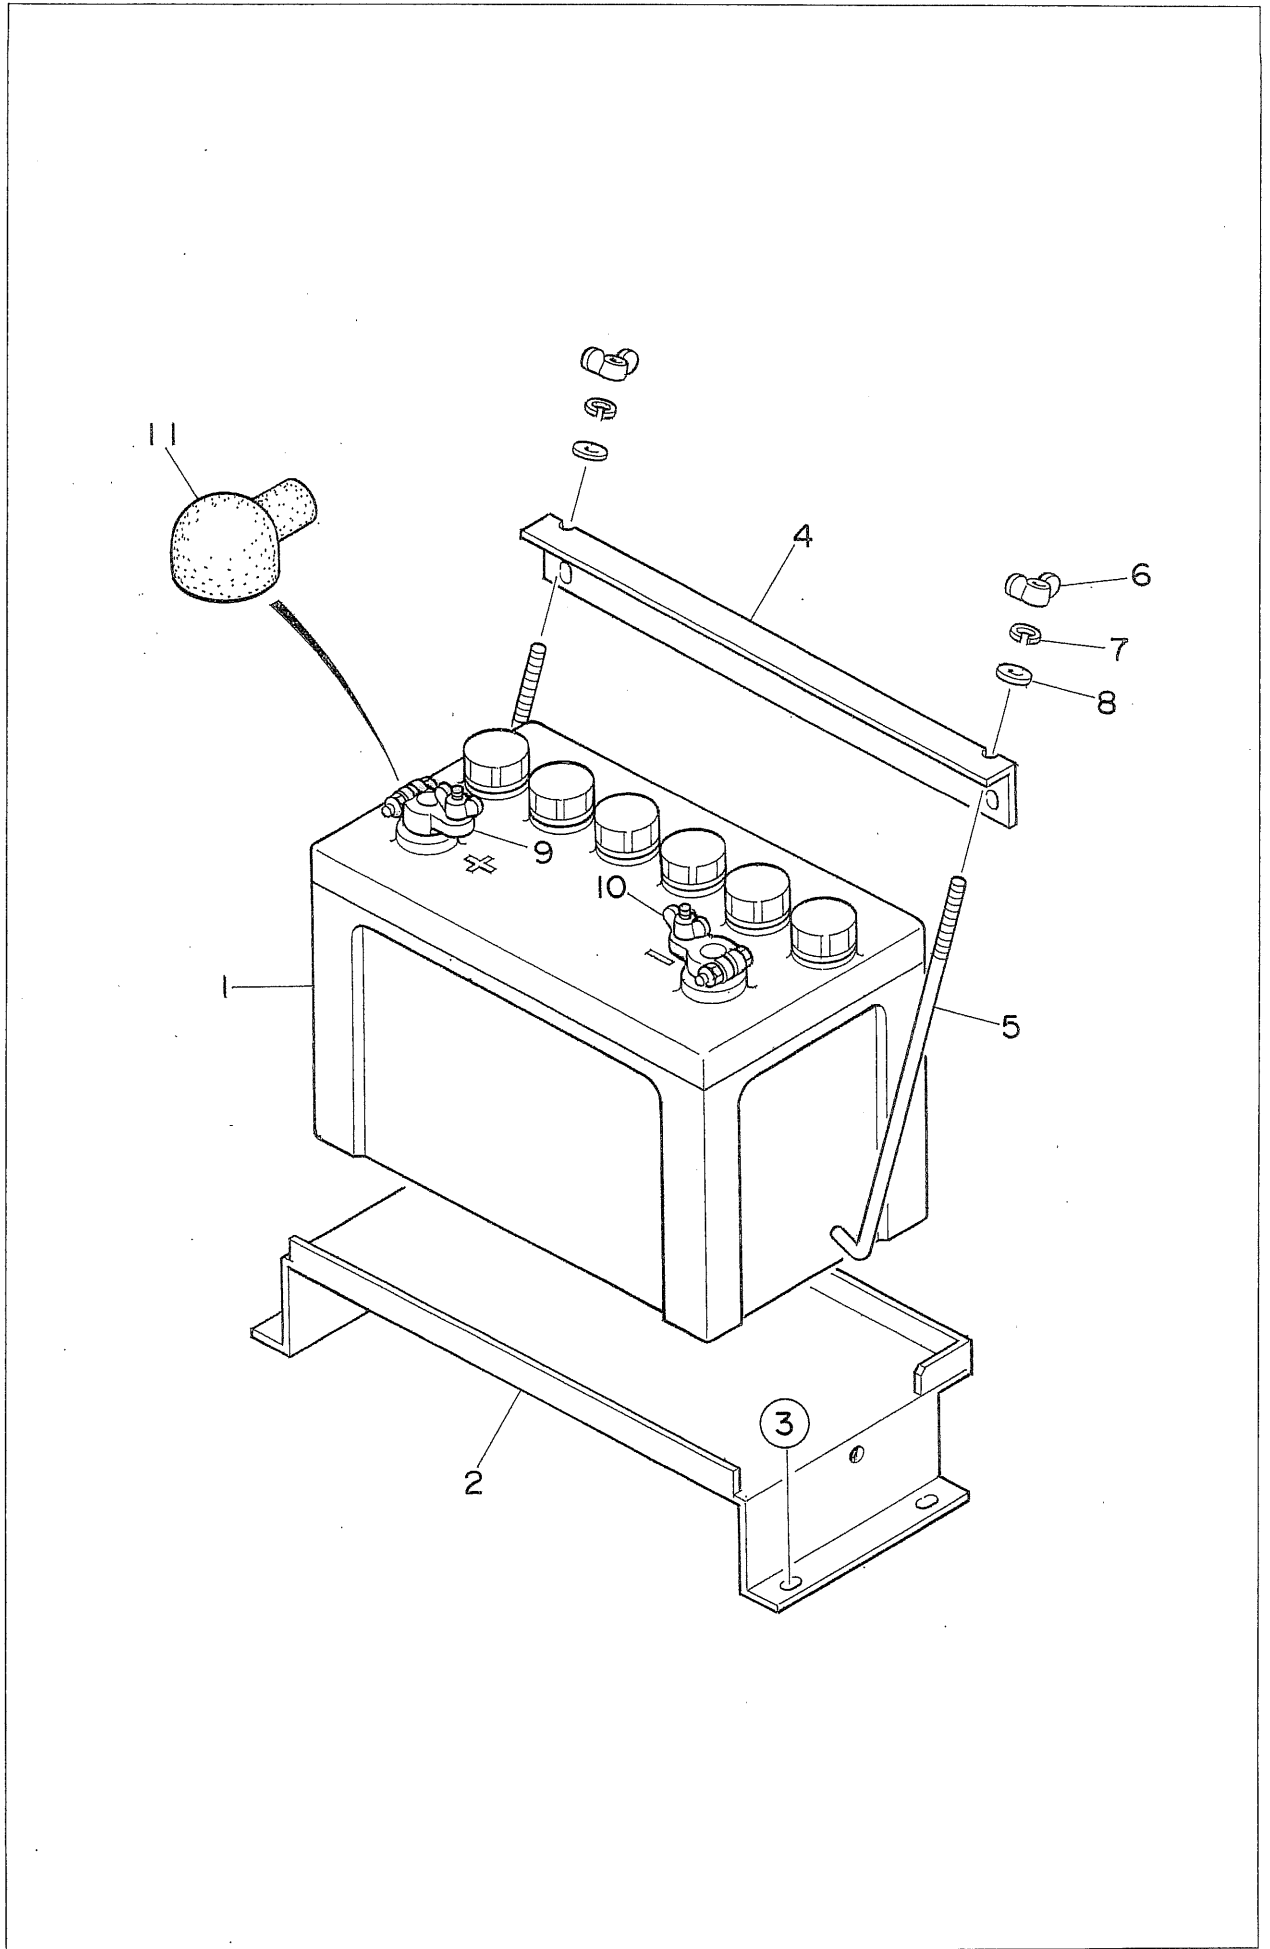

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	Y 01653 08026	Battery	80D26R	1					
2	D 53442 00104	Battery Frame		1					
3	Y 00169 06015	Hex. Head Bolt		4					
4	B 13452 00114	Battery Band		1					
5	W 08050 02904	Battery Bolt		2					
6	Y 00378 08000	Wing Nut		2					
7	Y 00400 08000	Spring Washer		2					
8	Y 00412 08000	Plain Washer		2					
9	Y 06022 20310	Terminal Ass'y	No. 9P	1					
10	Y 06022 20311	Terminal Ass'y	No. 9N	1					
11	W 08450 40414	Terminal Cap		1					

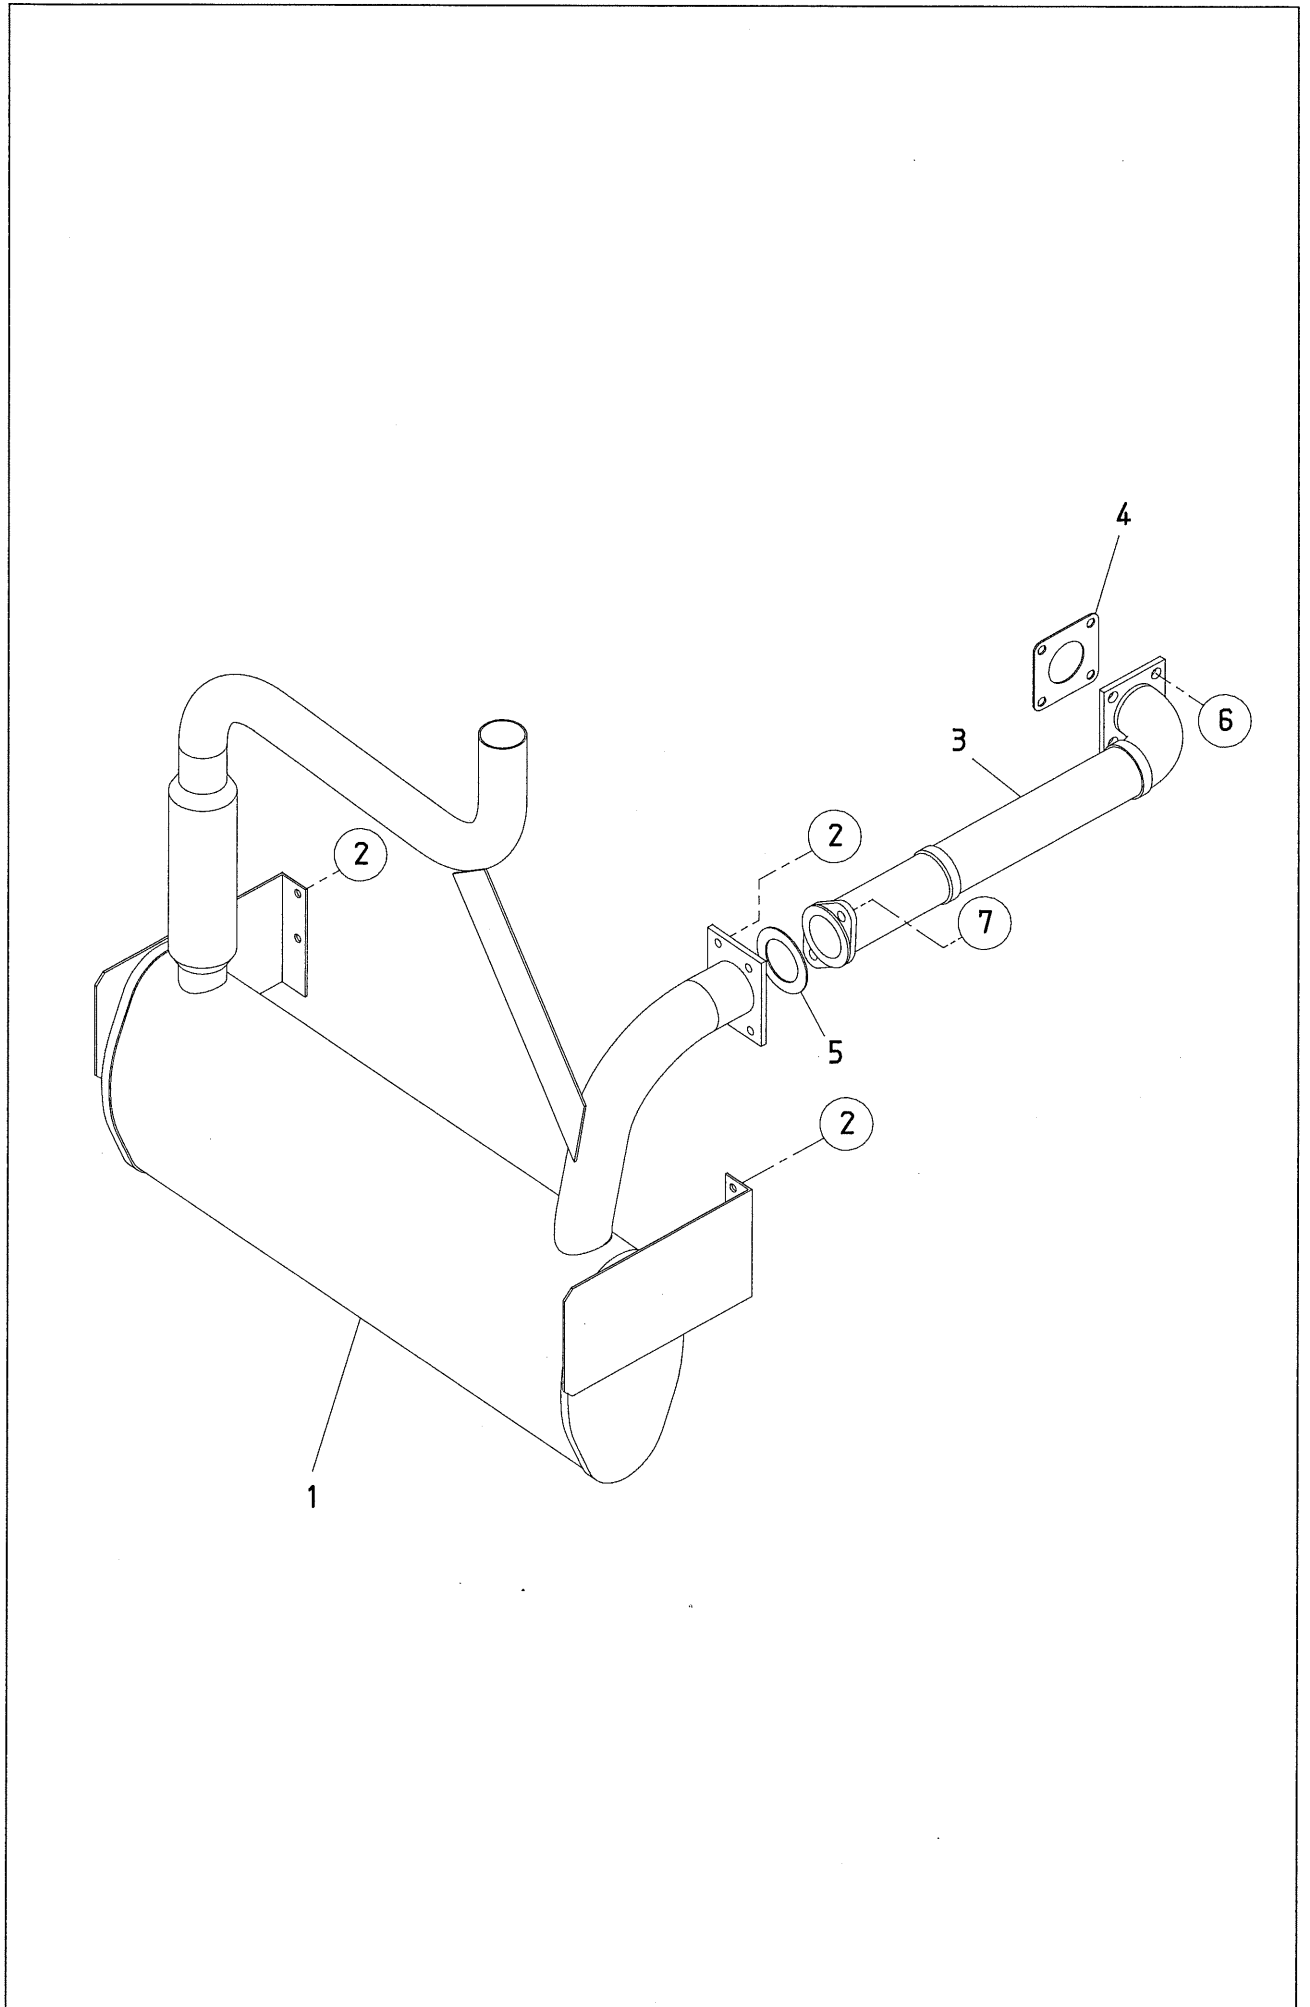


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 63311 00203	Muffler		1					
2	Y 00169 08020	Hex. Head Bolt		6					
3	D 53340 00103	Exhaust Pipe		1					
4	Y 06023 20153	Gasket	KUBOTA 15263-12371	1					
5	D 93040 00004	Gasket		1					
6	Y 02070 08000	Hex. Nut		4					
7	Y 00169 08030	Hex. Head Bolt		2					

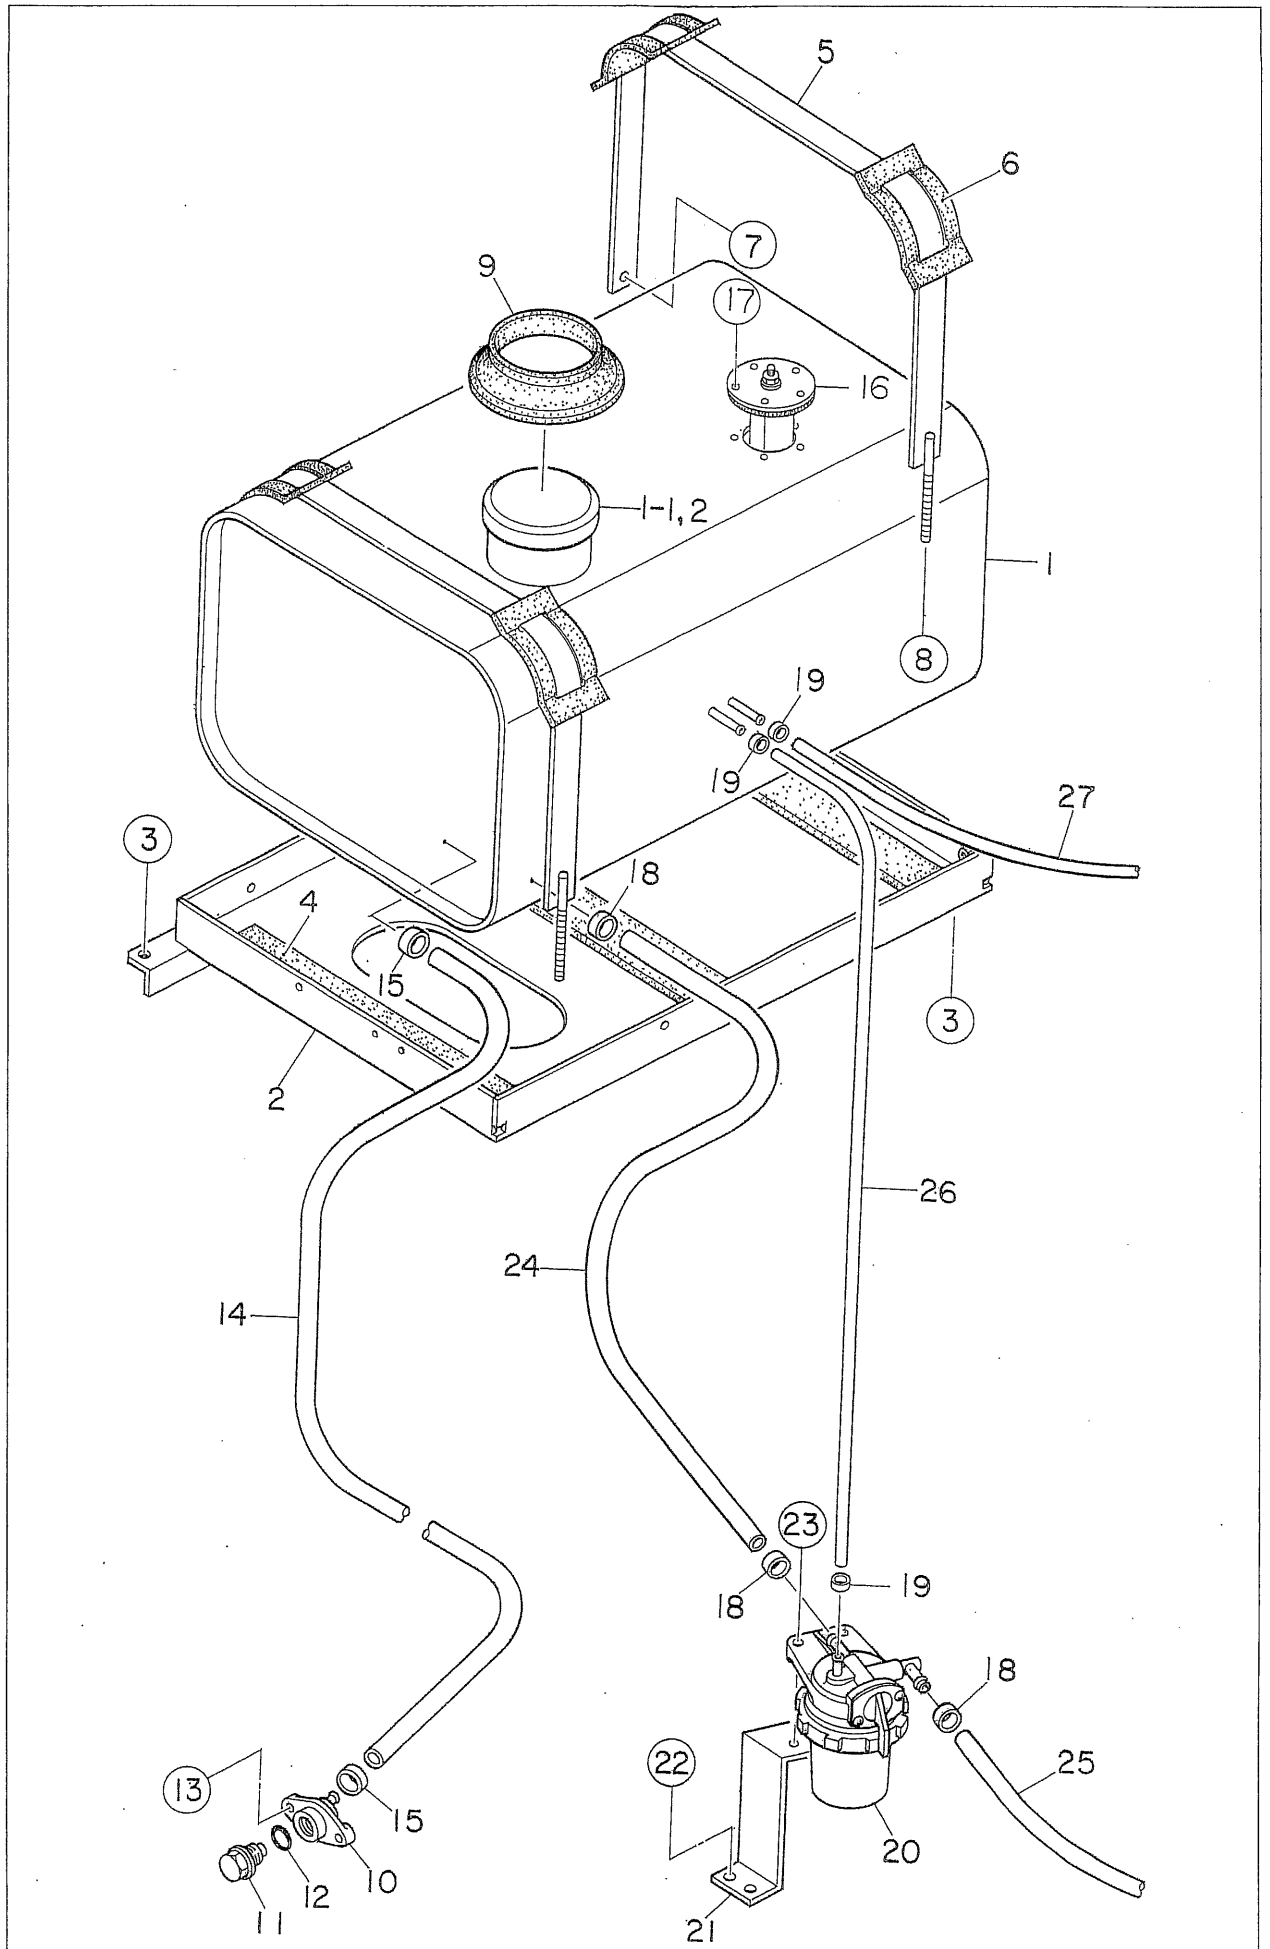

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 63640 00203	Fuel Tank		1					
1- 1	A 99248 00024	Cap Ass'y, fuel tank		1					
	W 08101 05800	Cap, fuel tank		(1)					
	W 08101 05900	Fuel Filter		(1)					
2	D 64340 00003	Bracket, fuel tank		1					
3	Y 00169 08020	Hex. Head Bolt		4					
4	Y 02233 00330	Tank Sheet		3					
5	D 63642 00004	Tank Band		2					
6	D 63653 00504	Pad, tank band		4					
7	Y 00169 08015	Hex. Head Bolt		2					
8	Y 00379 08000	Hex. Nut		2					
9	B 93124 00004	Rubber Seal		1					
10	W 78120 14003	Drain Joint		1					
11	W 08020 11104	Plug		1					
12	Y 01500 00018	O Ring	AP18	1					
13	Y 00169 06015	Hex. Head Bolt		2					
14	Y 03706 00850	Drain Hose		1					
15	Y 06055 15094	Hose Band	$\phi$ 12	2					
16	E 29243 00244	Sender, fuel gauge	I-208	1					
	E 19243 00184	Gasket		1					
17	Y 00229 05015	Machine Screw		5					
18	Y 06055 15094	Hose Band	$\phi$ 12	4					
19	Y 06055 15200	Hose Band	$\phi$ 8	4					




Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
20	Y 06020 42463	Fuel Filter	KUBOTA 15521-43017	1					
	Y 06020 42174	Element, fuel filter	KUBOTA 15521-43161	(1)					
21	D 43687 00604	Bracket, fuel filter		1					
22	Y 00169 06015	Hex. Head Bolt		2					
23	Y 00169 08025	Hex. Head Bolt		2					
24	Y 03706 00420	Suction Hose		1					
25	Y 03706 00750	Suction Hose		1					
26	Y 03707 00550	Return Hose		1					
27	Y 03707 00210	Return Hose		1					

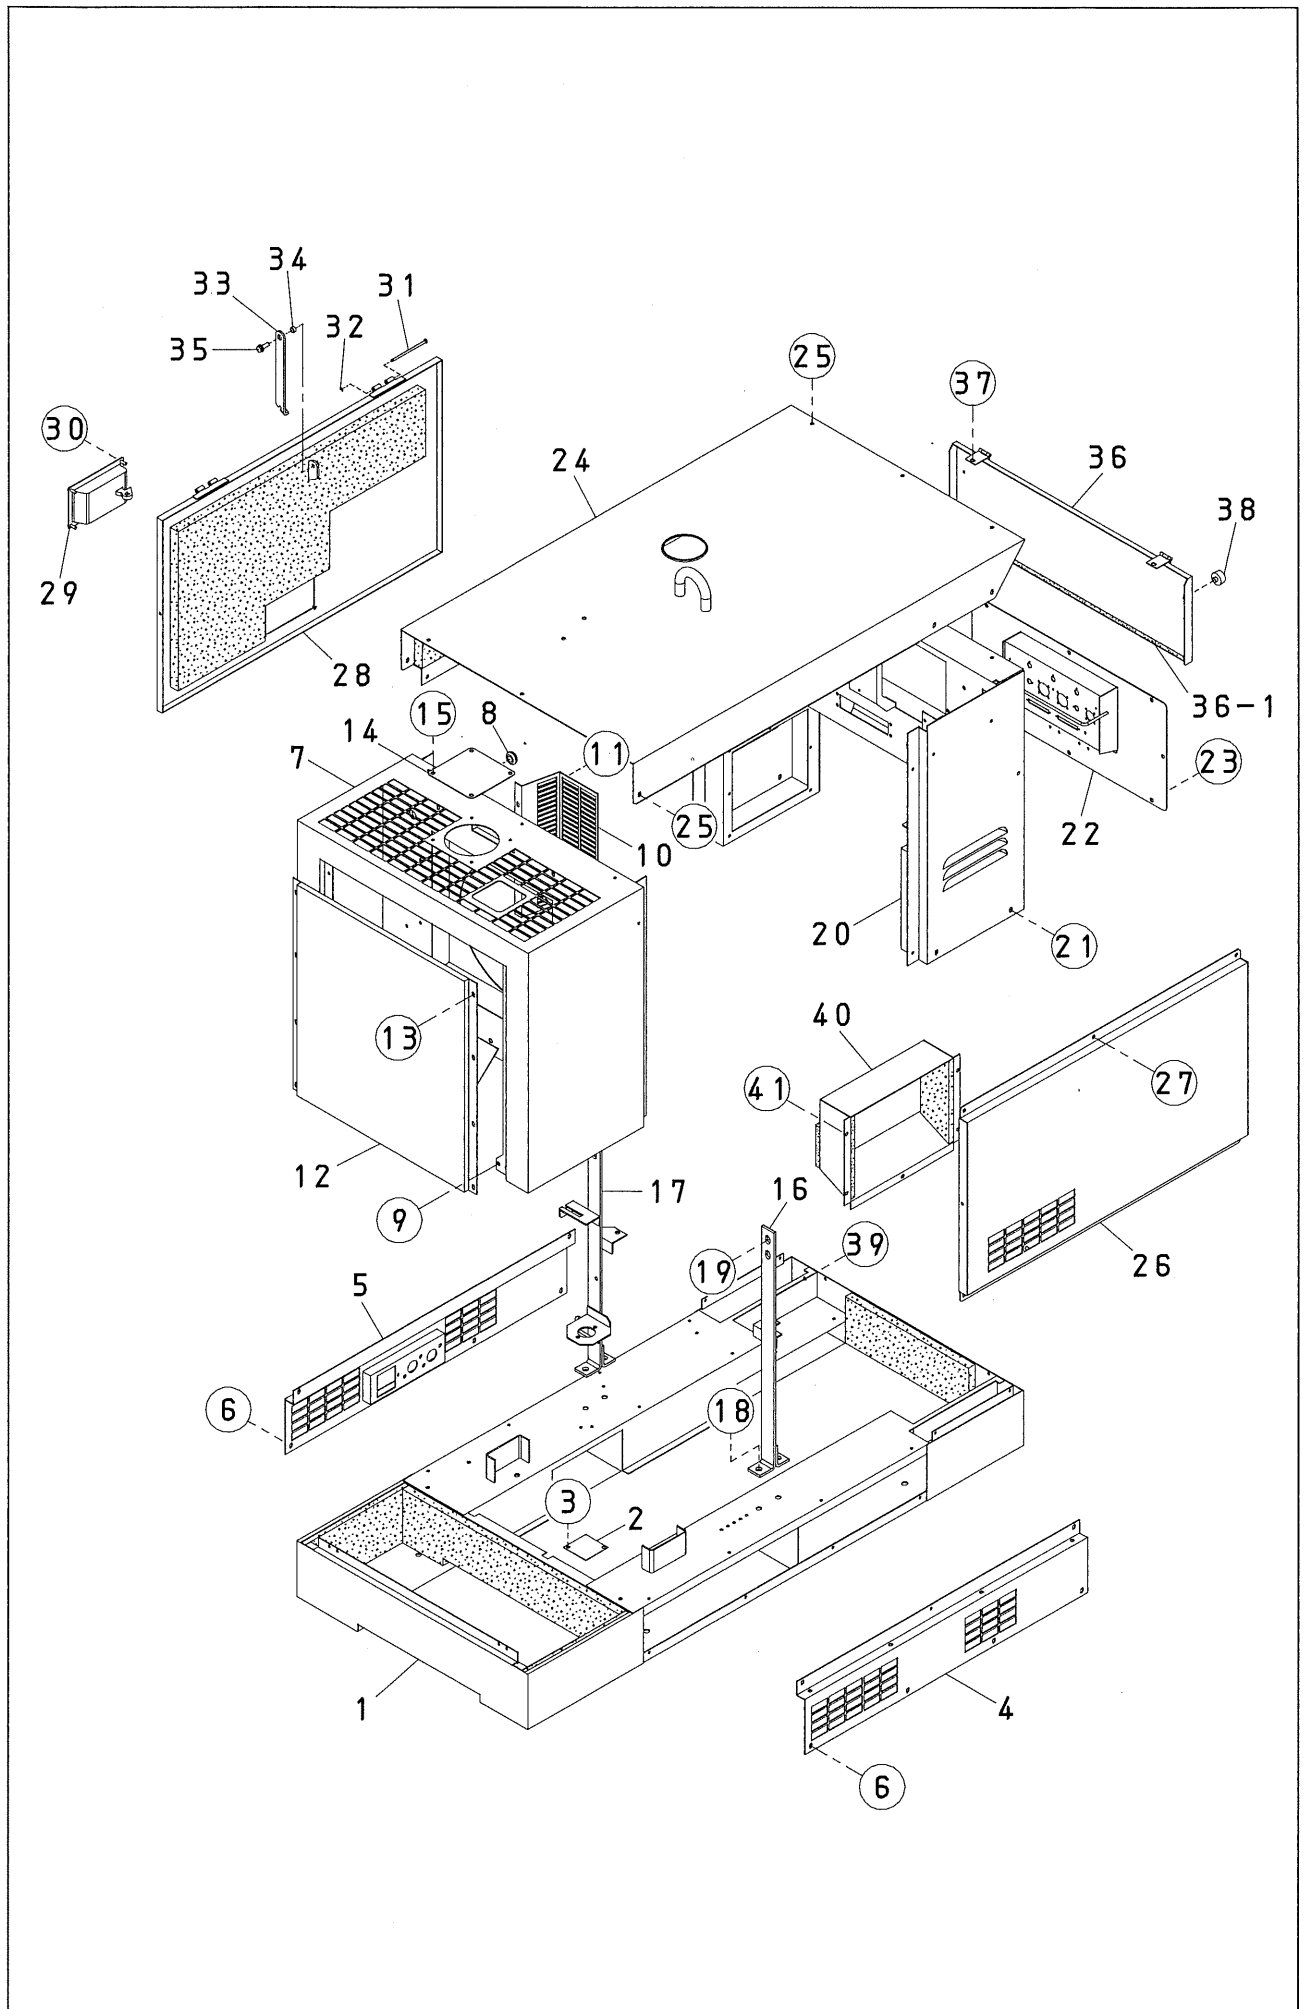


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 64140 00202	Base		1					
	D 64940 00303	Lining		1					
2	D 34148 00104	Floor Panel		1					
3	Y 00169 06015	Hex. Head Bolt		2					
4	D 64143 00103	Splasher Panel		1					
5	D 64143 00203	Splasher Panel		1				~5722624	
	D 64143 00213	Splasher Panel		1				5722625~	
6	Y 00169 06015	Hex. Head Bolt		16					
7	D 64240 00302	Front Frame		1					
	D 64941 00203	Lining		1					
8	Y 06018 50239	Grommet	C-30-BW-14-2	1					
9	Y 00169 06015	Hex. Head Bolt		2					
10	D 63112 00103	Fan Guard		1					
11	Y 00169 06015	Hex. Head Bolt		2					
12	D 64242 00303	Cover, front frame		1					
	D 64941 00304	Lining		1					
13	Y 00169 06015	Hex. Head Bolt		8					
14	D 44252 00804	Cover, radiator cap		1					
15	Y 00169 06015	Hex. Head Bolt		4					
16	D 64343 00303	Hanger		1					
17	D 64343 00213	Hanger		1					
18	Y 00123 12030	Hex. Head Bolt		4					
19	Y 00123 12030	Hex. Head Bolt		4					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
20	D 64440 01202	Rear Frame		1					
	D 64943 00304	Lining		1					
21	Y 00169 06015	Hex. Head Bolt		4					
22	D 64443 00513	Cover, rear frame		1					
23	Y 00169 06015	Hex. Head Bolt		8					
24	D 64640 00302	Roof Panel		1					
	D 54945 00304	Lining		1					
25	Y 00169 06015	Hex. Head Bolt		12					
26	D 64541 00003	Side Panel		1					
	D 64944 00304	Lining		1					
27	Y 00169 06015	Hex. Head Bolt		6					
28	D 54540 00813	Side Door		1					
	D 54944 00614	Lining		1					
29	Y 06050 10239	Door Handle	A-838-A-1DA	1					
	Y 06018 50519	Key	R200	(1)					
30	Y 02070 06000	Hex. Nut		4					
31	W 08100 14704	Pin		2					
32	Y 00802 00004	Snap Ring		2					
33	W 78351 86014	Door Stay		1					
34	W 78350 88004	Collar		1					
35	Y 00169 08030	Hex. Head Bolt		1					
36	D 64442 00203	Rear Door		1					
36- 1	Y 02269 00720	Rubber Seal		1					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
37	Y 00169 06015	Hex. Head Bolt		2					
38	Y 06018 51613	Stopper	CP-30-FF-15A	2					
39	Y 00169 08020	Hex. Head Bolt		2					
40	D 64543 00003	Duct		1					
	D 64944 00404	Lining		1					
41	Y 02070 06000	Hex. Nut		5					

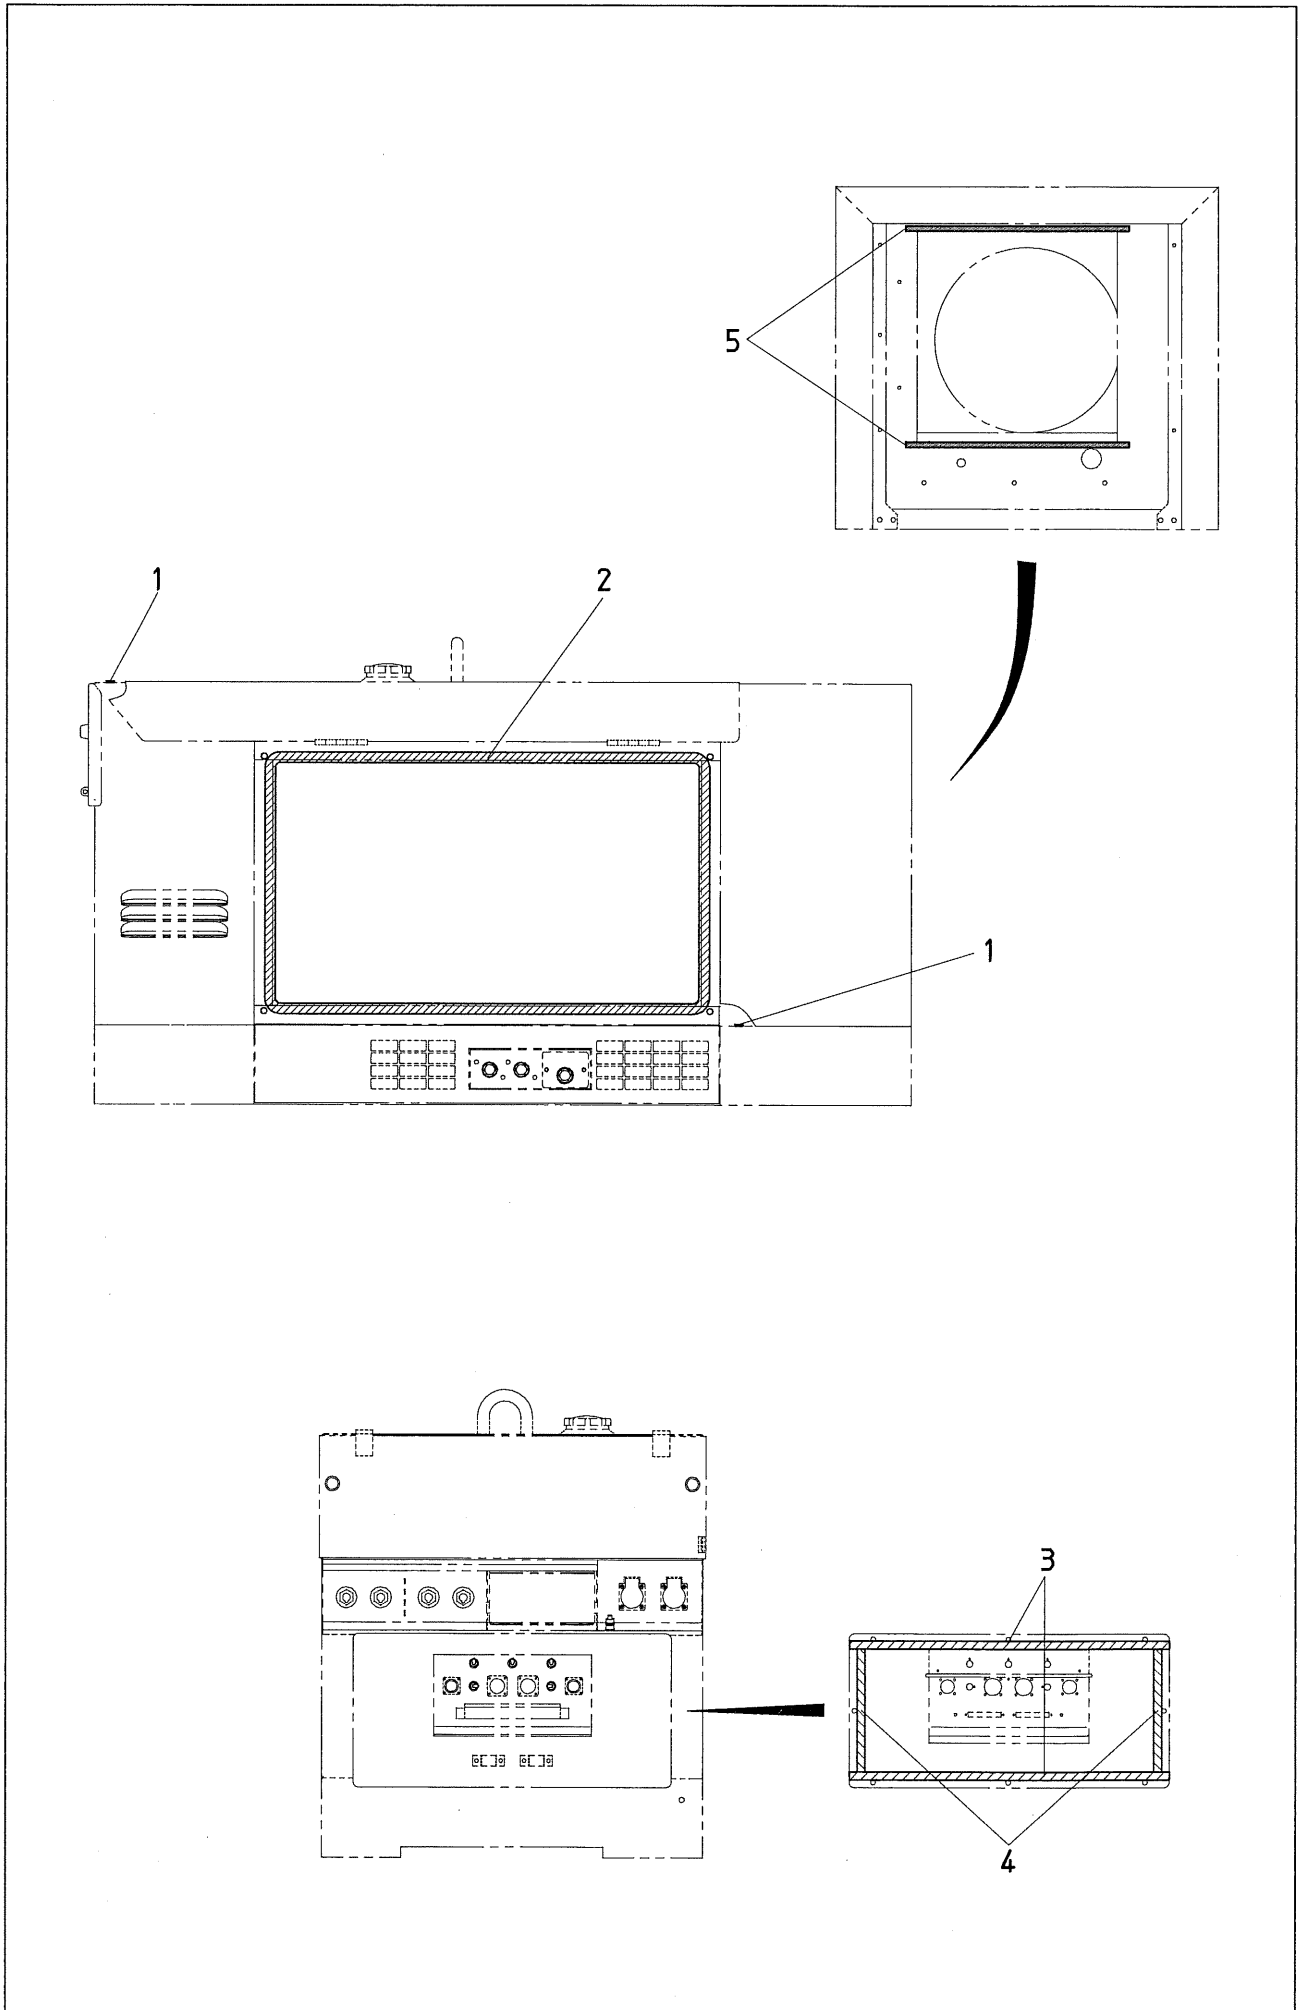

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	Y 03149 00715	Rubber Seal		2					
2	Y 03146 02550	Rubber Seal		1					
3	Y 03149 00600	Rubber Seal		2					
4	Y 03149 00230	Rubber Seal		2					
5	Y 03179 00420	Rubber Seal		2					

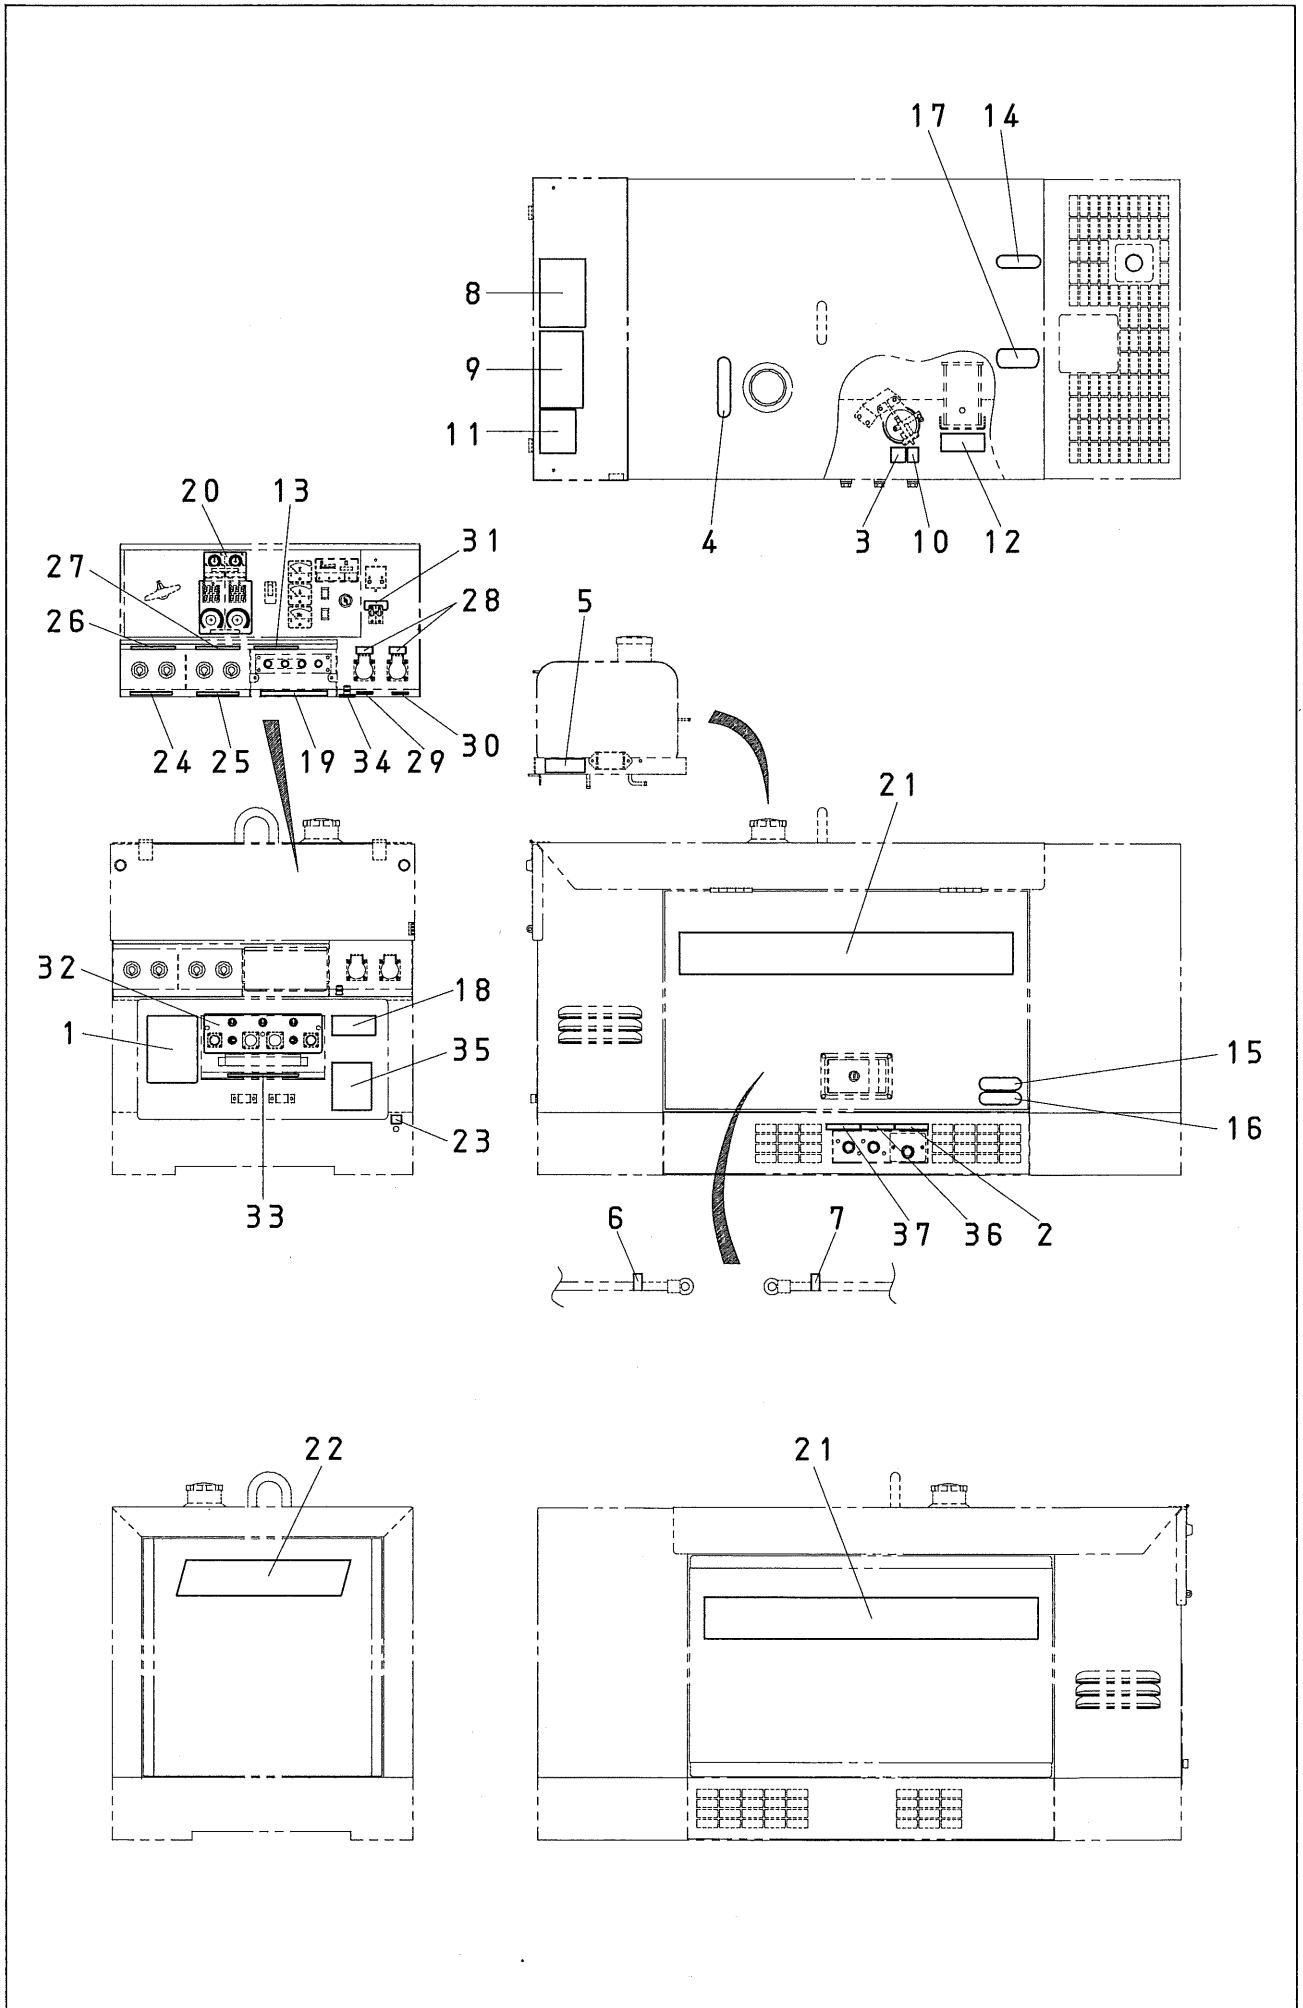



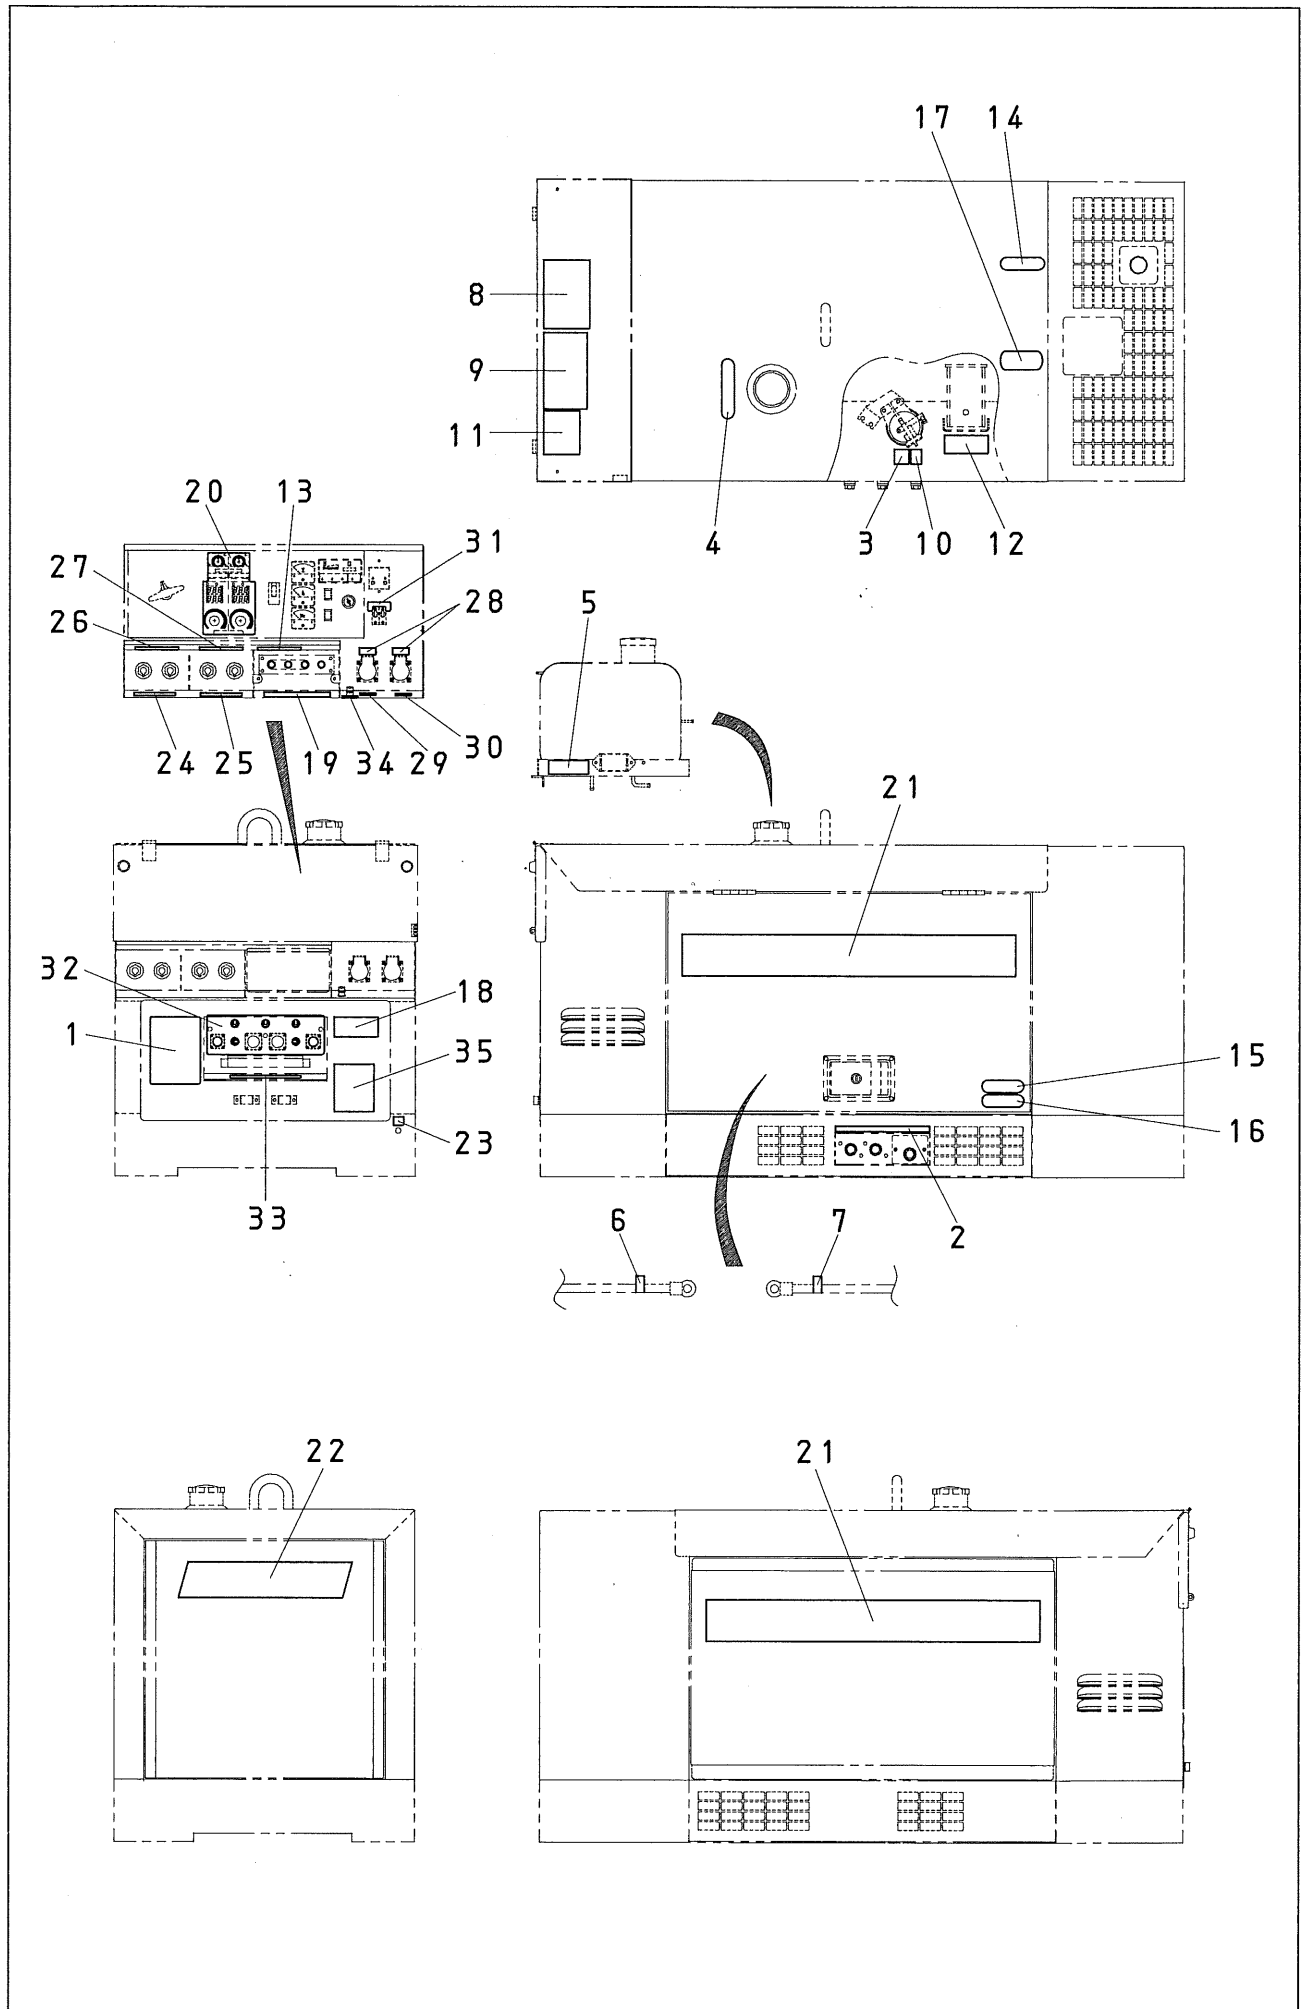

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
		A=STD B=O. P.							
1	D 65311 00903	Decal:Specification	D6311 0090A	1				~5725312	
	D 65311 01003	Decal:Specification	D6311 0100	1				5725313~	
2	W 16306 45004	Decal:Oil Drain	S-1403	1				~5725312	
	D 65510 02504	Decal:Drain	D6510 0250	1				5725313~	
3	W 16306 10404	Decal:Caution	S-1406	1					
4	B 95055 00704	Decal:Diesel Fuel	B9055 0070A	1					
5	W 08206 50604	Decal:Danger Explosive Gases		1					
6	W 08006 89404	Decal:+	S-2090	1					
7	W 08006 89504	Decal:-	S-2091	1					
8	D 45520 04503	Decal:Important "Check Daily"	D4520 0450	1					
9	D 45520 04603	Decal:Warning	D4520 0460	1					
10	W 19806 80004	Decal:Fuel Cock	S-3704	1					
11	D 95121 00404	Decal:Safety instructions	D9121 0040A	1					
12	B 95050 00304	Decal:Caution	B9050 0030	1					
13	D 95221 00304	Decal:Danger High Voltage	D9221 0030	1					
14	D 95022 00004	Decal:Warning	D9022 0000	1					
15	B 95052 00204	Decal:Caution Hot Parts	B9052 0020	1					
16	B 95050 00504	Decal:Warning Moving Parts	B9050 0050	1					
17	B 95051 00304	Decal:Warning Hot Coolant	B9051 0030	1					
18	B 95111 00304	Decal:Warning	B9111 0030	1					
19	W 08006 53104	Decal:3-Phase Output Terminal	S-1429	1				~5725312	
	D 65510 01904	Decal:3-Phase Output Terminal	D6510 0190	1				5725313~	

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
20	D 65510 00602	Decal;Control Panel		1					
21	D 65610 00003	Decal;Model Name		2					
22	E 95112 01203	Decal;Denyo		1					
23	W 08406 23704	Decal;Ground for Bonnet	S-2954	1				~5725312	
	D 65510 02004	Decal;Ground for Bonnet	D6510 0200	1				5725313~	
24	D 55510 02104	Decal;Welding Output Terminal	D5510 0210	1				~5725312	
	D 65510 02304	Decal;Welding Output Terminal	D6510 0230	1				5725313~	
25	D 55510 02204	Decal;Welding Output Terminal	D5510 0220	1				~5725312	
	D 65510 02404	Decal;Welding Output Terminal	D6510 0240	1				5725313~	
26	D 55510 01904	Decal;Welding Output Terminal	D5510 0190	1				~5725312	
	D 65510 02104	Decal;Welding Output Terminal	D6510 0210	1				5725313~	
27	D 55510 02004	Decal;Welding Output Terminal	D5510 0200	1				~5725312	
	D 65510 02204	Decal;Welding Output Terminal	D6510 0220	1				5725313~	
28	W 08006 62204	Decal;AC 220V	S-867	2					
29	D 95210 01104	Decal;Receptacle, 1-Phase power	D9210 0110	1					
30	D 95210 01204	Decal;Receptacle, 1-Phase power	D9210 0120	1					
31	D 65510 00304	Decal;AC Circuit Breaker	D6510 0030	1				~5725312	
	D 65510 02804	Decal;AC Circuit Breaker	D6510 0280	1				5725313~	
32	D 65510 00403	Decal;Remote	D6510 0040	1				~5718014	
	D 65510 01803	Decal;Remote	D6510 0180	1				5718015~	
33	D 65510 00504	Decal;Terminal Board	D6510 0050	1				~5718014	
	D 65510 01704	Decal;Terminal Board	D6510 0170	1				5718015~	
34	W 85006 13104	Decal;Ground for Earth Leakage Relay	S-4738			1		~5725312	

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	D 65510 02904	Decal;Ground for ELR	D6510 0290			1		5725313~	
35	W 85006 13304	Decal;Caution Earth Leakage Relay	S-4741A			1			
36	W 16306 47004	Decal;Coolant Drain	S-1404	1				~5725312	
37	W 78106 80104	Decal;Fuel Drain	S-3060	1				~5725312	