

PHANTOM 4



In the Box


Check that all of the following items are in your package. If any item is missing, please contact DJI or your local dealer.

Essentials


Aircraft Body x1




Remote Controller x1

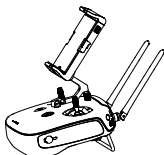


Propeller Pairs x4

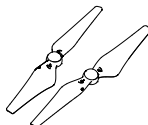

Intelligent Flight Battery x1

 

Battery Charger x1

 

Power Cable x1



Manuals



In the Box

Disclaimer and Safety Guidelines

Intelligent Flight Battery Safety Guidelines

 
Quick Start Guide

Accessories*

Gimbal Clamp x1



USB OTG Cable x1




Micro USB Cable x1



Micro SD Card x1
(16GB)



 Carrying Case x1



* Accessories are not covered by warranty.