

**FOR PUBLIC  
RELEASE**

Инструкция пользователя

Bluetooth колонка СТЕРЕО, радио FM, с аккумулятором + пульт, для использования в помещении

Артикул: DE-SRB53-N

Спасибо за совершенную покупку в нашем магазине


**FOR PUBLIC  
RELEASE**

## Welcome to use our bamboo bluetooth speaker!

This bamboo bluetooth speaker made of real natural bamboo wood. It is ideal for those who like to listen to music in style - at home, while cooking, at work, in the park, party, camping, bathroom - just everywhere. The lovely wooden speaker fits perfectly into any modern, stylish home.


## Panel Instruction

1. Power / Volume button
2. Last song / Volume -
3. Play / Pause (when play Radio, the button as a search key)
4. Next song / Volume +
5. Mode switch
6. Aux input
7. L-in: Charge port
8. Charge indicator light
9. USB input port
10. Remote control receiving window
11. LED display
12. TF card port

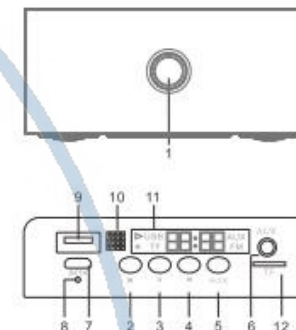

## Remote Controller Instructions

1. On / off button
2. L-in, USB, TF and FM switch
3. MUTE
4. Play / Pause
5. PREV / NEXT song
6. Standard / pop / Rock / Jazz / Classical / Country switch
7. Volume + or volume -
8. Repeat button; TF card and USB switch
9. 0~9 key, you can pre number key to select songs and radio stations.

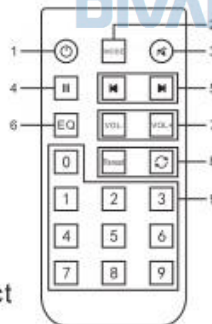

## How to use: Take SZ-33 for example

1. power-on: use the round silver twist switch to power on the speaker and control the sound volume
2. Connecting bluetooth match: Searching in the bluetooth device bamboo-SZ33 on your cellphone or laptop after speaker power on, choose bamboo-SZ33 and connect, then you can play music on your phone or laptop with this speaker.

### Attention:

- A. Please make sure your bluetooth device is stereo before connecting it.
- B. Not all the bluetooth device is the same, so read your bluetooth device Instructions carefully before connecting.
- C. If the bluetooth is not in the match state, please reboot speaker. And connect bluetooth on the device again.

**FOR PUBLIC  
RELEASE**

3. USB mode: put the USB in USB port , the LCD show USB, tstart to play music on the USB disk, choose next song or last one with remote control or ◀/V- ▶/V+ buttons on the speaker. Or ▶| pause.

4. SD/TF card mode:put the SD/TF card into the SD port, the LCD will show SD,then start to play music on the SD/TF card one by one

5. FM mode:when power on,Press mode button, choose FM Radio mode. LCD display shows FM and number of programs and radio frequency, use press ▶| button into automatic station search,Use ◀/V- or ▶/V+ to change the FM frequency.

4. Charge:suggest use DC 5V/1A to charge the speaker, there is a USB chargeable cable which together with the machine when you buy it.

## Battery user guide:

1.One 18650 1800mAh rechargeable battery Include, after 3~4 years use(depends on the charge times) , please change new 18650 battery.

2. When charge, the charging indicator lamp will on red, when charge Battery is full of electricity, the charging indicator lamp will off, please stop charge when the battery is full, do not charge it all the time.

3. When the charger is 5V/2A, charge time need 2~3 hours.

4. Play time is differ from the loudness of the sound, about 6~12hours on one charge.

5. When you use FM Radio mode, please do not charge,Because it will affect the FM reception.

## Caution

1.Please do not use the speaker under the high humidity and high temperature environment for long time.

2. Please turn off the speaker and take out the battery if long time not to use

3. Please charge on time when LCD Show half battery or suddenly no sound or power off. Do not leave speaker without electricity long time, it will damage the battery.

## Troubleshooting:

Problem	Possible cause	Solution
Can not play music	1.Battery power out or damage 2.Bluetooth disconnect 3.USB or TF card not well put	1.check battery condition 2. Check input device work well or not
Can not use FM Radio or not play well	1.Bad signal 2.Antenna broken or environmental interference 3. Speaker broken	1.change a place to use FM Radio 2. Check if there is a interference
Automatically jump line or pause when playing audio	1 audio in input device file false. 2.speaker can not read audio file from input.	1.change or delete the false audio file
Sudden stop work	Power out	Turn down the voice can play longer or charge now

**FOR PUBLIC  
RELEASE**

### Specification :

Bluetooth Version: 4.2

Material: bamboo wood + metal+ABS

Battery: 3.7V/1800mAh

Charging Time: 2-3 Hours

Play Time: Up to 6-12 Hours

Peak Output: 6W (3W x 2 Drivers)

Frequency Range: 10m/33ft

What's in the box: 1×Speaker (Include 1×18650 Li-ion battery),  
1×user guide, 1×usb charger cable, 1×audio cable

**FOR PUBLIC  
RELEASE**

---

Наслаждайтесь использованием.

**FOR PUBLIC  
RELEASE**