 


User Guide

Alarm CLock FM Radio

DE-WALC-2

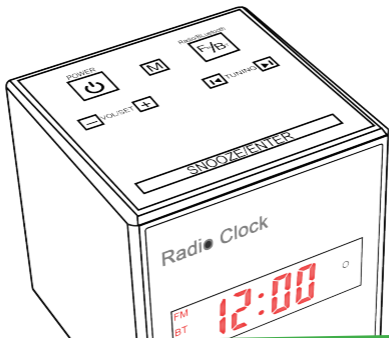 


 
**FOR PUBLIC
RELEASE**

Feature:


- Cube alarm clock radio with Wi-Fi hidden camera
- 5-in-1 Multifunction: WiFi security camera, alarm clock, FM radio, wireless speaker, USB charger
- Support memory card max up to 128GB (Not included)
- Receive push notifications if anything moves
- Easy setup with 2.4G internet Wi-Fi network
- Data and time stamp on actual videos
- See up to 10 meters (32ft) in total darkness
- Clock support 12 and 24 hour formats
- Excellent design with aluminum body
- Support snooze function
- Adjustable brightness control for LED display
- Overwrite function available
- P2P/Local Wi-Fi enable
- Completely covert device

1.Product Structure

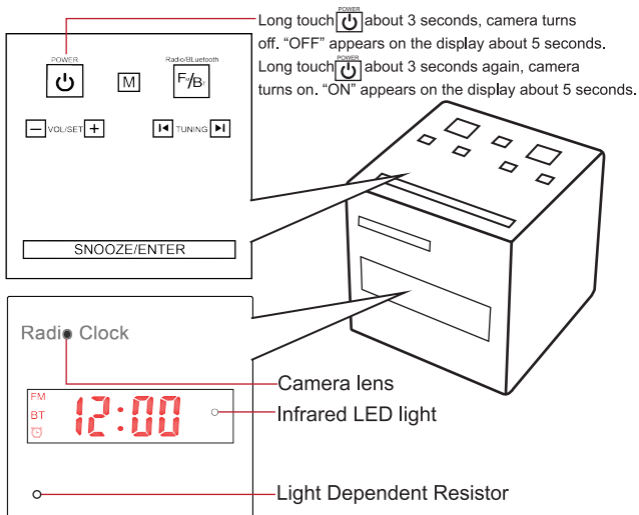

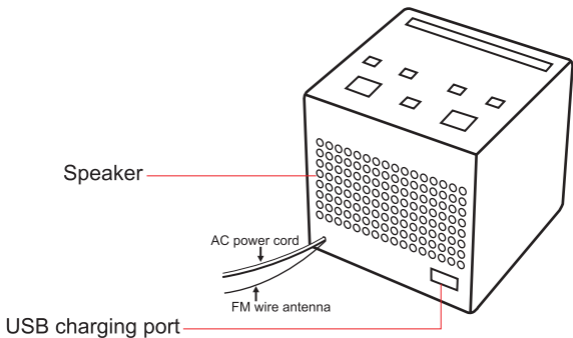

**FOR PUBLIC
RELEASE**

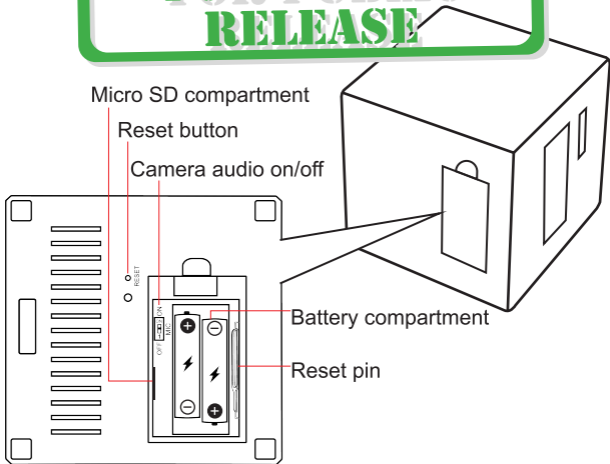 

2.Package Content



Main device



Device
User Guide



Wi-Fi
Quick Guide




Card Reader

3.Getting Started


- 1) This unit support AA battery as a back up power source to keep the clock operating during a power interruption (AA battery not included).Installing battery as follows:

**FOR PUBLIC
RELEASE**

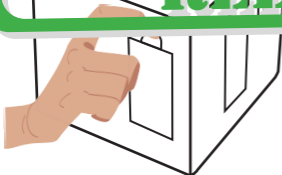


Step 1

Take off the cover on the bottom of unit

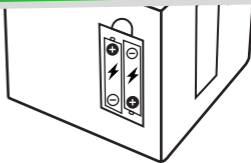

Step 2

 Insert new battery into battery compartment with the correct \ominus \oplus pole.

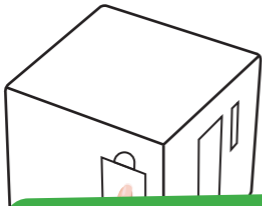

Step 3

Attach the cover of clock radio

 
**FOR PUBLIC
RELEASE**

Note:

 
- a. When you replace the battery, do not disconnect the AC plug from the wall outlet. Otherwise, the current date, current time and alarm will be erased.
- b. If the unit will be left unplugged for a long time, remove the battery to avoid any damage that may be caused by leakage or corrosion.
- c. Please replace the battery, if a power interruption occurs while the battery is discharged, the current time and alarm will be erased.

2). Extend the FM wire antenna fully to increase reception sensitivity.

Do not operate the unit over a steel desk or metal surface, as this may lead to interference.

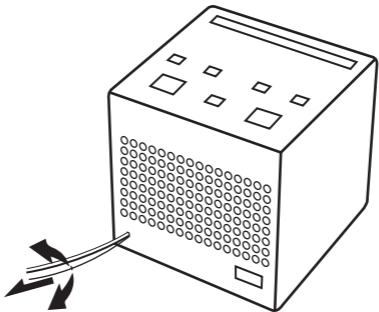


 
3). Connect the AC power cord to a wall outlet.

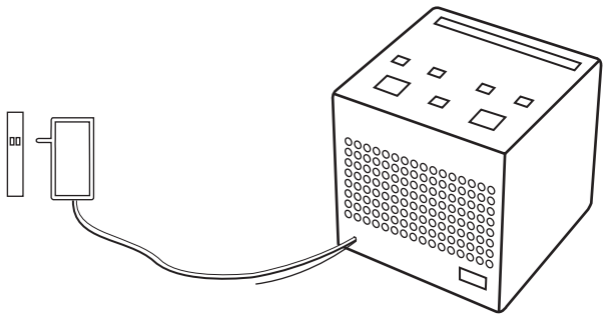

4. Setting the clock manually

This unit is preset to the current date and time at the factory, and is powered by the back-up battery. To change the clock setting manually, operate the unit as follows.







 
- Long touch **M** about 3 seconds.
- Touch **- VOL/SET +** + or - to select 12 and 24 hours formats.

- c. Touch , then press  + or – to select the hour.
- d. Repeat step c to set minute.
- e. Touch **SNOOZE/ENTER**.

Note

If you do not press any button for about 8 seconds, while setting the clock, clock setting mode will be canceled.

5. Setting the alarm

- a. First repeat a-d step as “Setting the clock manually”.
- b. Touch , the alarm time appears for a few seconds and then  appears on the display.
- c. Press  + or – to set the desired time while the alarm time appears on the display. While setting the alarm time, “” flashes on the display.
- d. When the alarm time setting operation is complete, “” changes from flashing to fully lit.
- e. Touch , press  + or – to select your desired alarm sound with 3 ringtones for option.
- f. Touch **SNOOZE/ENTER**.

Note

If you do not press any button for about 8 seconds, while setting the clock and alarm, The clock and alarm setting will be canceled.


1) To stop alarm


Press any button to stop alarm, except **SNOOZE/ENTER**.
The alarm will sound again at the same time the next day.

2) Snooze function .To doze for a few more minutes

Touch **SNOOZE/ENTER**, the sound turns off, but will automatically come on again after about 9 minutes as default.

3)To Deactivate/Activate the alarm

Long press **SNOOZE/ENTER** about 3 seconds, " " disappears from the display to deactivate the alarm.

Long press **SNOOZE/ENTER** 3 seconds again to activate the alarm, and " " will appear on the display.

6. Wireless speaker


 
1) Touch , then press  to select "BT"(Bluetooth). While choose "BT" mode, " BT " flashes on the display.


2).Enter Setting on the phone, select Bluetooth,then search and connect "KT-V100".When connected,"BT"changes from flashing to fully lit.






3). Press  VOL/SET  + or -to adjust volume.

4).Press  TUNING   or  to play the previous or next song.

7. Playing the Radio

1).Touch , then press  to select "FM"(Radio). While choose "FM" mode, " FM " will show on display with solid red.

2).Long touch  about 3 seconds to search and channel automatically, max up to 20 radio channels can be stored.

3).Touch ,support change channel, or press  TUNING   or  to play the previous or next channel.

8. USB charging

The device support charging for your phone with DC 5V 1.5A (USB cable and mobile phone not included) .



FOR PUBLIC RELEASE

9. Setting the brightness of the display

Three levels of brightness are available. Press **SNOOZE/ENTER**. Each time you press **SNOOZE/ENTER**, the brightness of the display changes as follows:



Note

When the alarm is sounding or the snooze function is active, the brightness of the display cannot be changed.

10.Specification

Clock Radio	
FM	Frequency: 87.5 MHz – 108 MHz
Speaker	Approx.5cm dia 3W,8Ω
Power	110V,240V AC
Dimensions	Approx. 101 mm * 102 mm *101 mm (w/h/d)
Weight	Approx. 520 g
Color	Black
Material	Aluminum Body
Plug type	EU/USA
Wi-Fi Security Camera	
Built-in image sensor	1/3" progressive CMOS sensor
Sensor resolution	1280*960
Sensor sensitivity	0.01 lux low illumination
Focal Length	3.7mm
Angle of View	90°
Algorithm	H.264, JPEG
File Format	MOV, JPG
Video recording mode	Manual/Motion Detection/Schedule
Frame rate	Up to 30 fps
Recording Capability	HD,VGA
WIFI	Built-in WiFi Module (IEEE 802.11b/g/n)
Audio	Microphone
Memory type	Micro SD Card (Max128GB, Not Included)
Night Vision	Up to 10 meters(32ft)
Push alarm notification	Motion detected alarm