


HELLA

Installation, maintenance and operation instructions

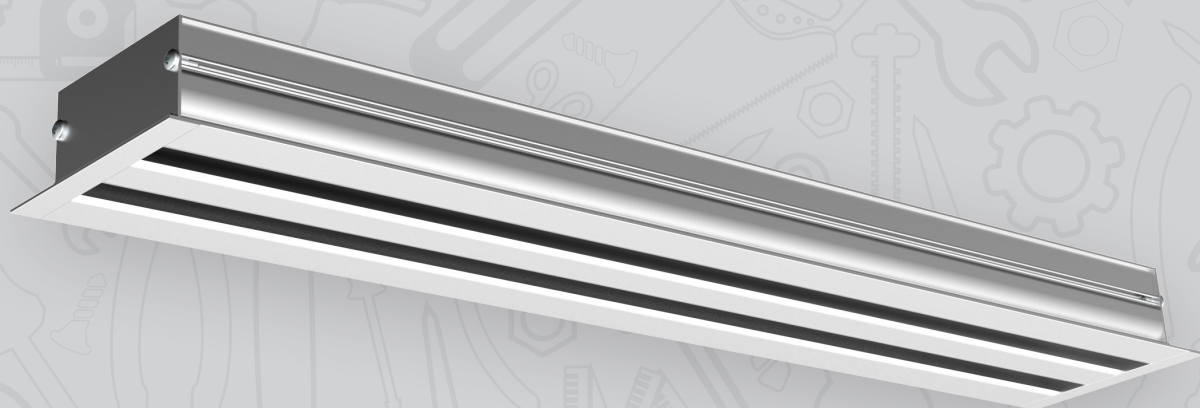





HELLA




HELLA-CE

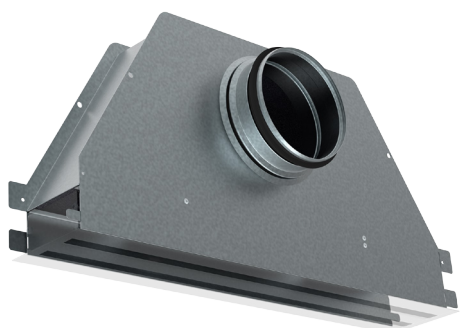


PB-HELLA

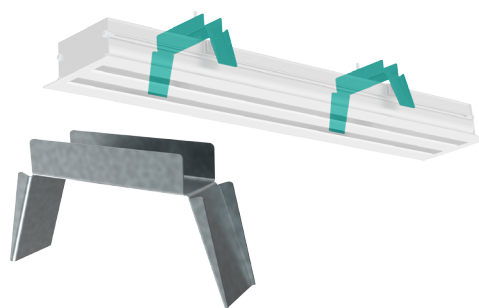


MB-HELLA

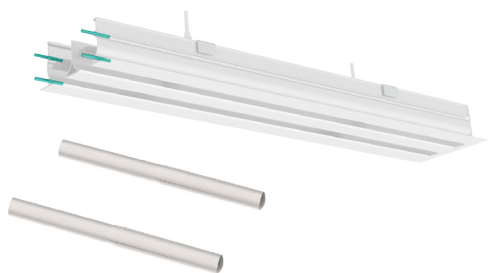

CP-HELLA

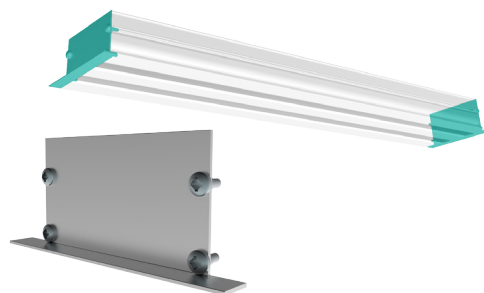


EC-HELLA

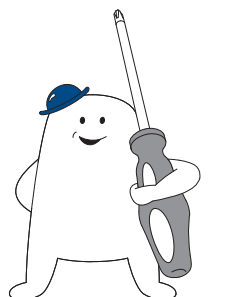




HELLA

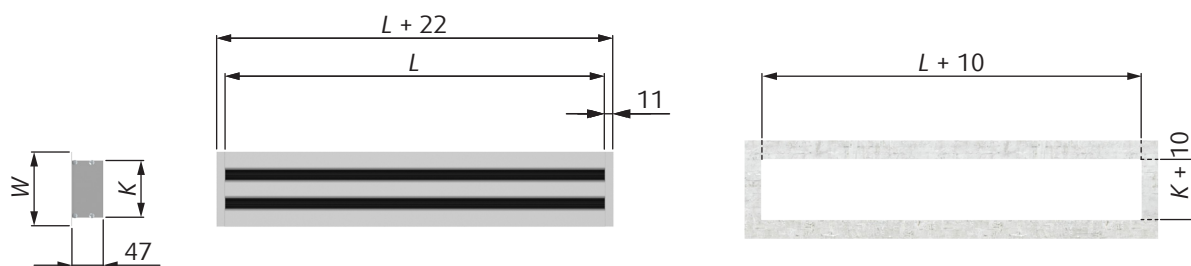

L	HELLA-1		HELLA-2		HELLA-3		HELLA-4	
	W	K	W	K	W	K	W	K
(mm)								
500	60	41	97	77	134	114	171	151
600								
700								
800								
900								
1000								
1100								
1200								
1300								
1400								
1500								




HELLA-CE

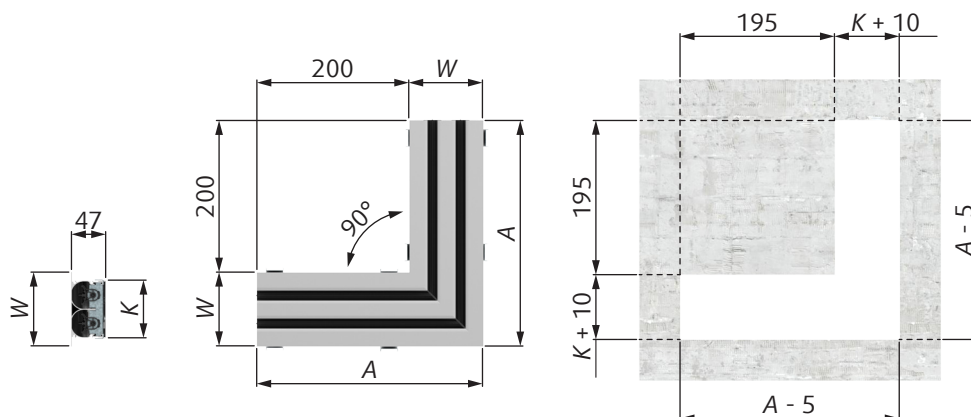

HELLA-CE-1			HELLA-CE-2			HELLA-CE-3			HELLA-CE-4		
A	W	K	A	W	K	A	W	K	A	W	K
(mm)											
260	60	41	297	97	77	334	134	114	371	171	151



PB-HELLA

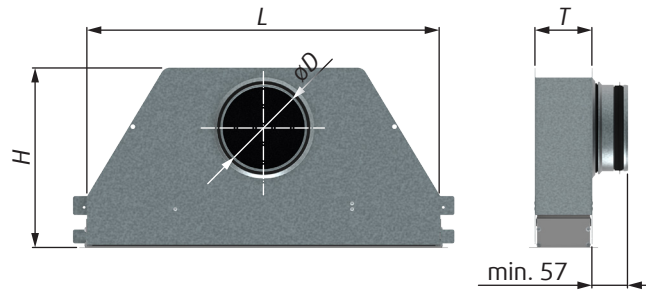

		PB-HELLA-1										
L	(mm)	500	600	700	800	900	1000	1100	1200	1300	1400	1500
H		214										
T		44										
øD		100					125					





		PB-HELLA-2										
L	(mm)	500	600	700	800	900	1000	1100	1200	1300	1400	1500
H		250										
T		81										
øD		125					160					

		PB-HELLA-3										
L	(mm)	500	600	700	800	900	1000	1100	1200	1300	1400	1500
H		282										
T		118										
øD		160					200					

		PB-HELLA-4										
L	(mm)	500	600	700	800	900	1000	1100	1200	1300	1400	1500
H		337										
T		155										
øD		200					250					















HELLA + PB-HELLA

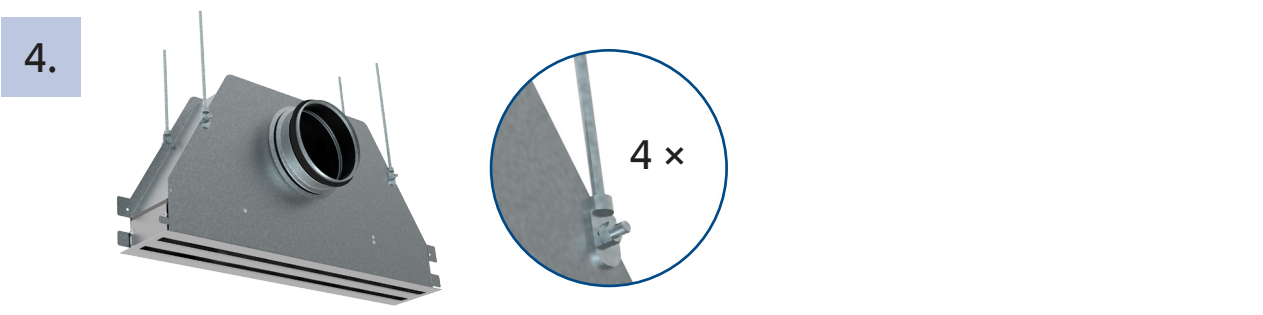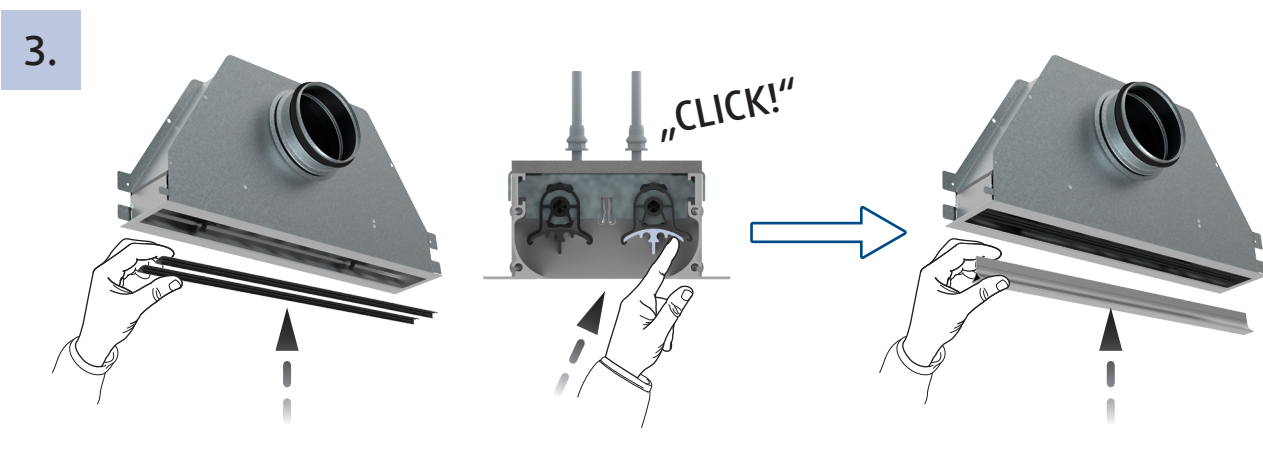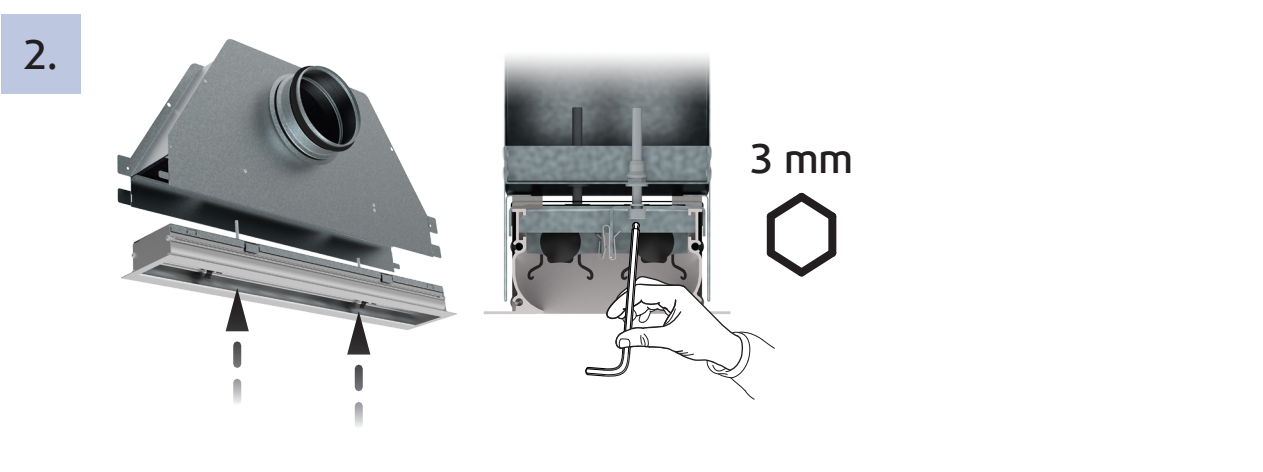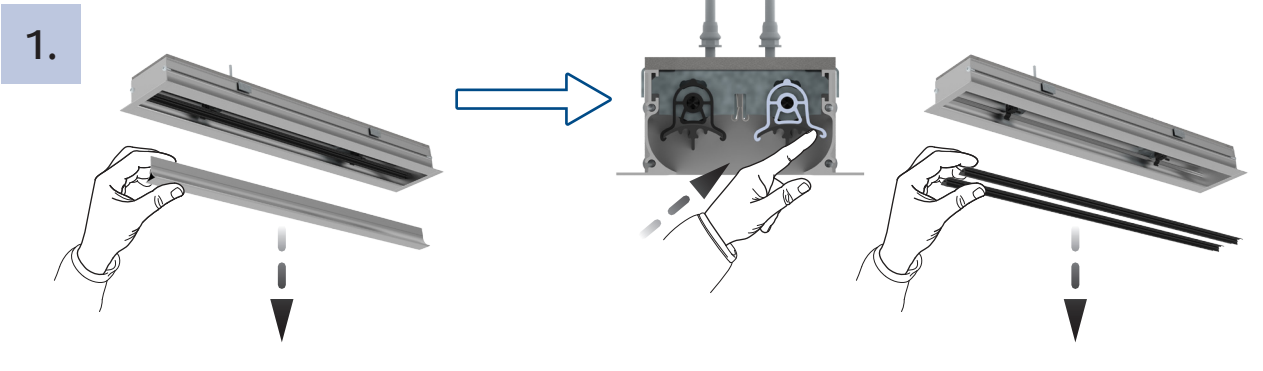




HELLA + MB-HELLA

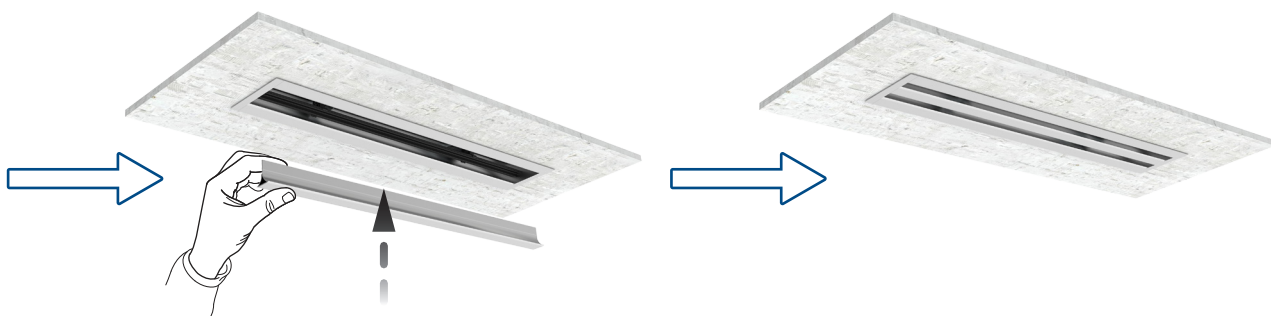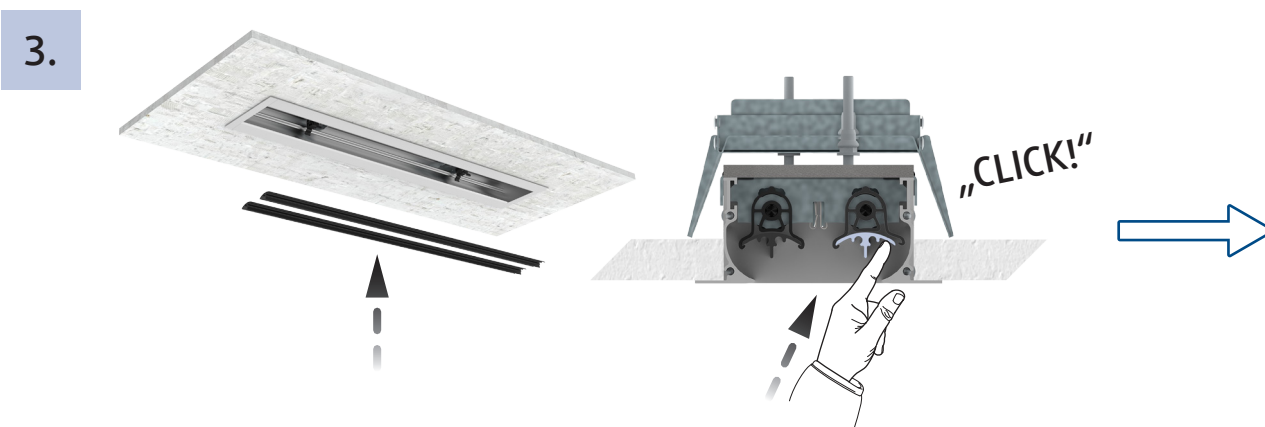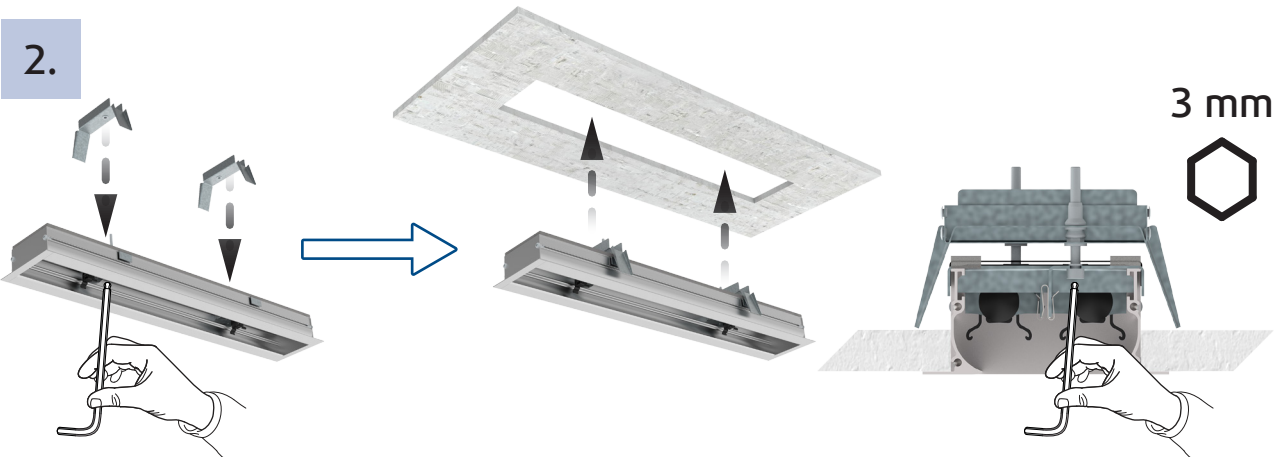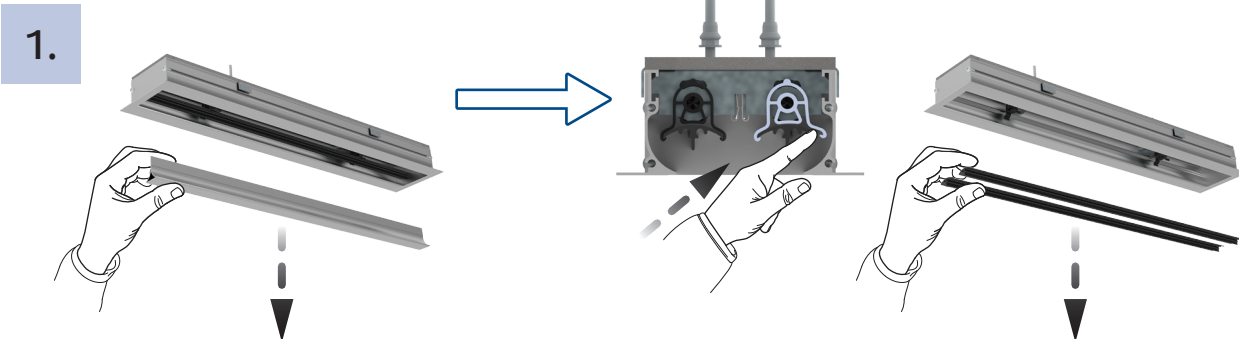

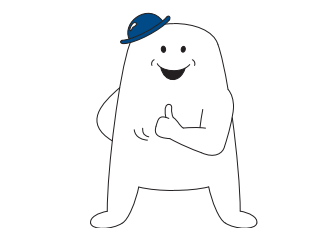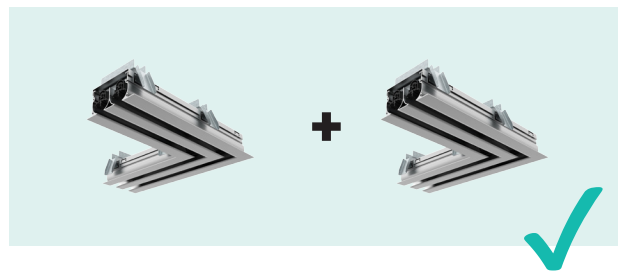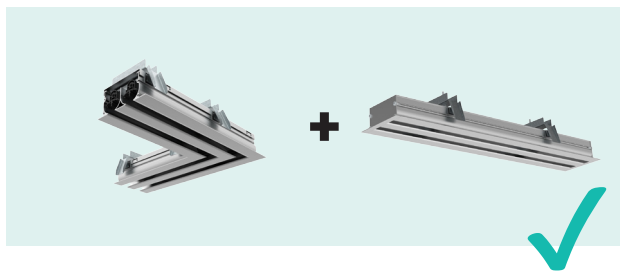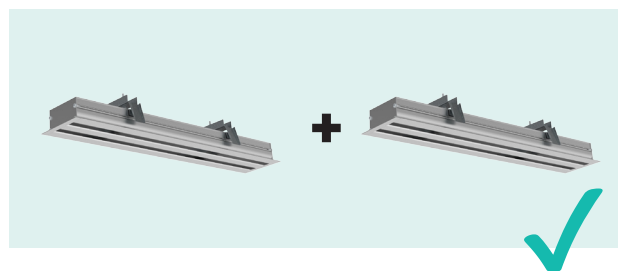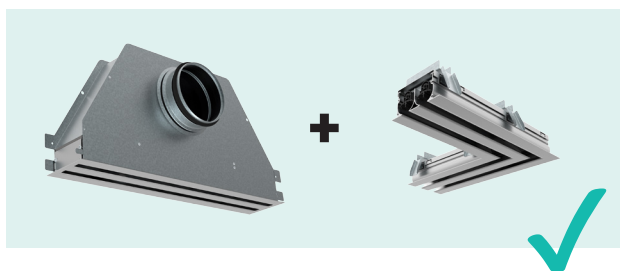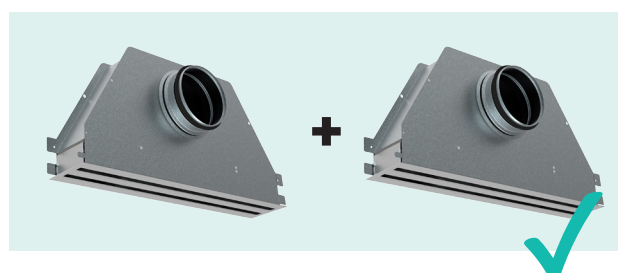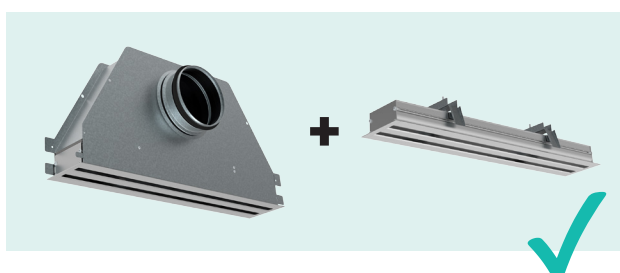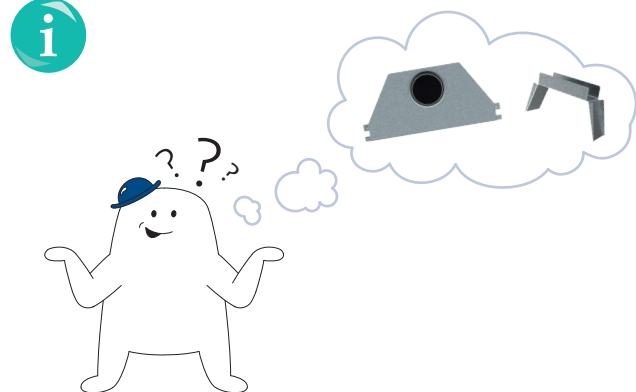


PB-HELLA
(HELLA)

1.

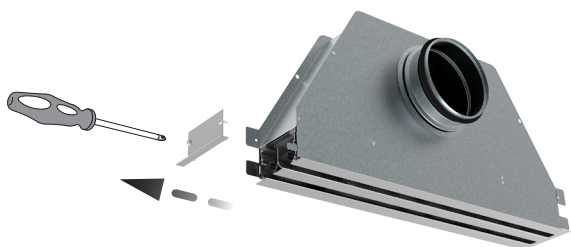


2.

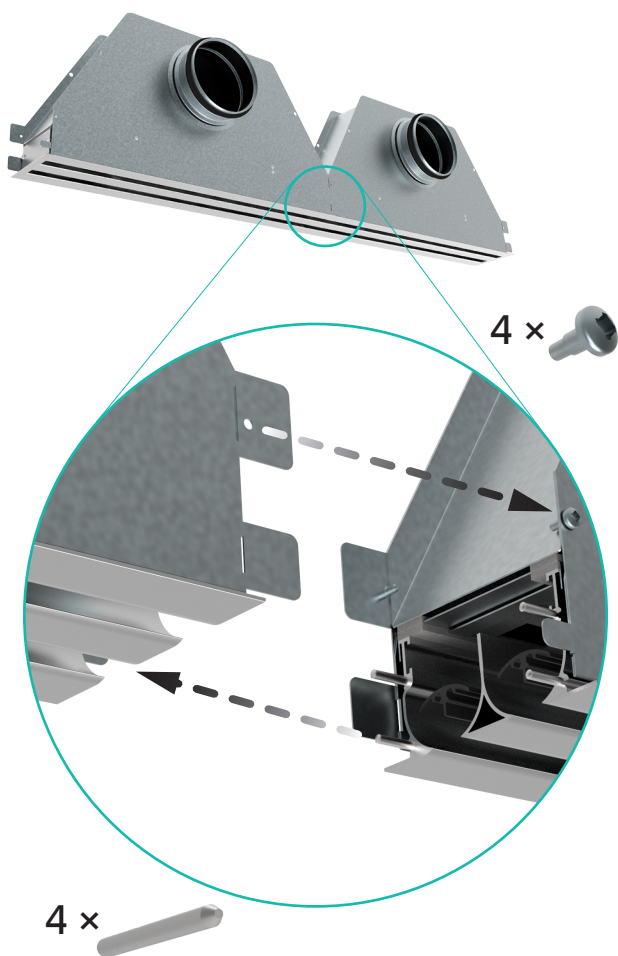


MB-HELLA
(HELLA, HELLA-CE)

1.

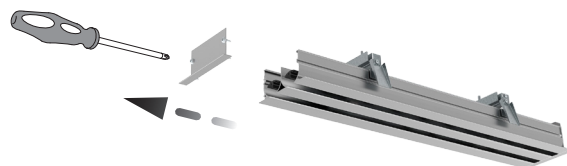


2.

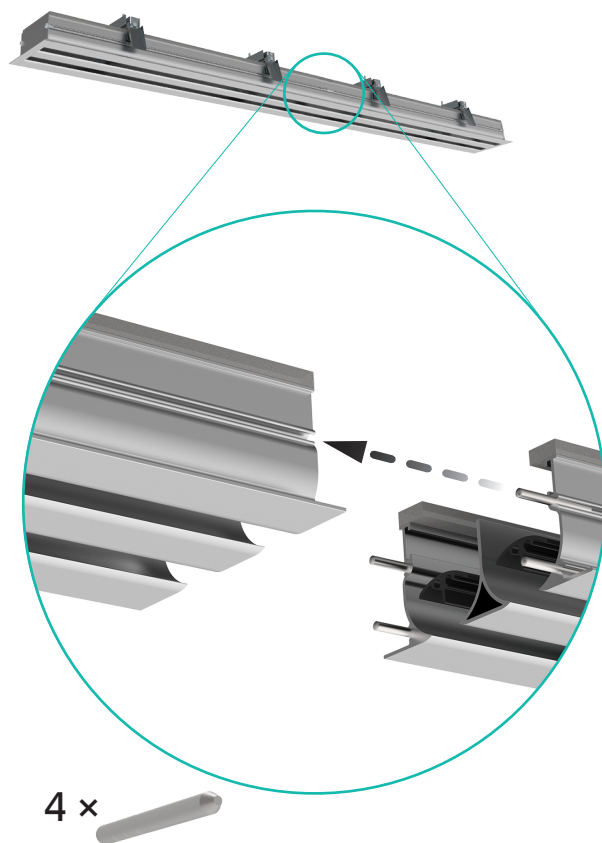




1.

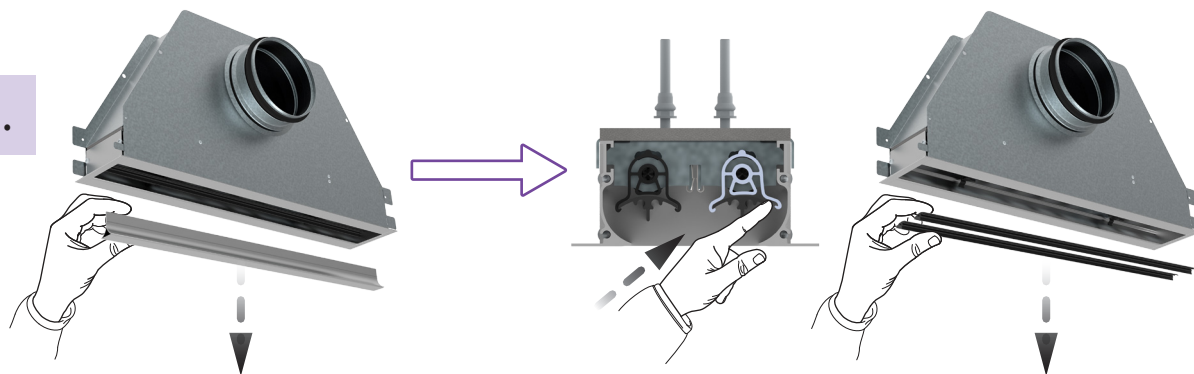

2.

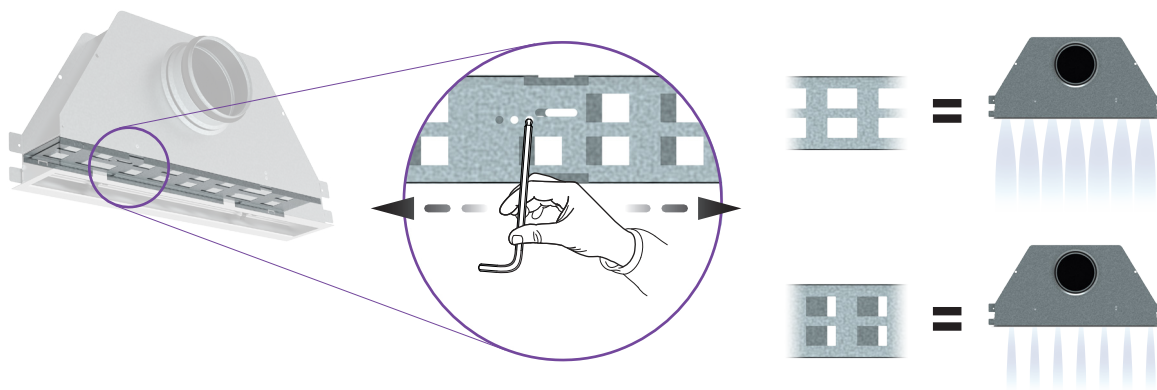

3.

