

User Manual Version: Oct, 2019

enginee

Артикул: DE-WAI-IP035





Size: 112x40x43mm



Overview:

This stylish designed tiny clock, time and local temperature info is auto-sync from internet once connected with Wi-Fi; The most important, it is integrated with a powerful 1080p smart invisible Wi-Fi camera comes with 6 meters powerful night vision.

First, it can be used for watching live streaming video day and night , or taking photo and video by APP in smart-phone remotely after Wi-Fi connected; Also, it supports Point to Point (P2P) function, easily connected for local live video without Wi-Fi.

Second, it also support motion detect alarm function, cycle recording and work when charging.

Usages: Nanny camera, Home/ Shop/ Office/ Warehouse surveillance camera.....

Warning: " illegal use is not allowed! Or, there will be consequences to bear! "

In the box:

1 x Camera Unit 1 x 5V2A power adapter 1 x Micro SD Card Reader

1 x USB Cable 1 x User Manual

Product structure :



Camera
 Display

3

Invisible night vision leds (Turn ON/OFF Automatically) Device UID & QR code



(5) USB port (6) Micro SD card slot (7) ON/OFF Key (8) Reset Key (9) Power indicator (10) Wi-Fi indicator (11) Charging indicator

Clock part of Tiny Clock:

- S Time/Alarm set
- P Hour/Month set / 12 vs 24Hour
- P Minute/Day set / 12 vs 24Hour
 - Alarm on/off

3

Turn off/on display

Wi-Fi Camera Connection Setting

Step1: Download and install APP

Scan below QR code or search and download free APP named

rectronic narket.

sing the

le vou ar

<TinyCam> and install it






Step 2: Take off back cover and pull out the battery insulator --> Insert micro SD card --> Press back ON/OFF switch for 2 seconds , wait for 1 minute (Power indicator and Wi-Fi indicator is solid green.);

Tips: After above operation, please put on back cover and plug power adapter for long time use.

Step 3:Connect Wi-Fi

 Open smartphone settings, search and connect the device's wireless signal named"HCAM......",wait Wi-Fi connected, and phone status bar appear Wi-Fi symbol.

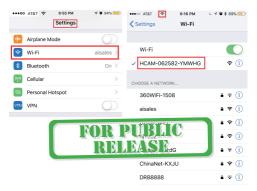

 Enter APP, press right corner " Q," icon --> LAN search device --> Press Add --> Camera Online then;



2. This step = P2P mode, can check video locally when without Wi-Fi.

3.Press 𝔅 icon on the right corner of camera →> WiFi Config →>Select local Wi-Fi (SSID) →> Input password →> Press Confirm;



••••• AT&T *	6:21 PM Setting	L -7 🗑 🕇 69% 💻)	•••• AT&T *	6:21 PM € ∛ ¥ Wi-FiConfig	\$ 69% 💻
ID	PPRT-062	582-YMWHG >	SSID	aisales	>
Device Name		>	Password	Please input Wi-Fi pas	sword >
Password		>	IP address	192.168.234.1	>
Share		>	Subnet mask	255.255.255.0	>
Wi-Fi Config		>	Gateway	192.168.234.1	>
Alarm Config		>	DNS	192.168.31.1	>
IO alar Micro Card Co Chang ^J assword	-	DR P REL	UBI EASI		
Other C					
Re	move devic	e		Confirm	

 Quit APP, wait 30 seconds (device restart automatically)and connected with set Wi-Fi(Wi-Fi indicator flash regularly);
 Enter APP and check live video locally or remotely anywhere.

Set camera name and private code

Set name: Press the & after the camera, select Device name --> Input needed name or select sample names like Office... Set new password: Press the & after the camera, select Change

SSW	R.I	UBLIC	L 7 8 8 69%
Setting	REL	BASE Passwo	rd Confirr
Device	1	Und Passwurd	
Password	>	Change Password	
Share	>	Confirm Password	
Wi-Fi Config	>		
Alarm Config	>		
Micro SD Card Config	>		
Change Password	>		
Other Config	>		
Remove device			

APP introduction:



Tips: 1. Please confirm phone setting has allowed TinyCam App to access the location services;

2. A TF card(Micro SD card) must be inserted for saving alerts pictures.



••••⊙ AT&T		73% 🛑 🗲	 Share camera with others by QR code 			
ID PPRT-062551-URWRZ >			Wi-Fi Config: Set camera to connect to local Wi-Fi			
Device Name >			③ Alarm Config: Set motion			
Password		>	detection sensitivity /Alarm interval			
Share	1	>	(4) Micro SD Card Record Config: Set SD card record mode / Resolution /File length (5) Change password: Set camera			
Wi-Fi Config	2	>				
Alarm Config	3	>	(5) Change password: Set camera new password			
Micro SD Card Config	4	>	6 Other Config: Time Config,			
Change Password	5	>	Device reset, FTP or Mail setting			
Other Config						
RELEASE						
Remove device						

Watch by PC in LAN network

Once camera connected well with Wi-Fi, press the \Im after the camera, Wi-Fi Config --> find out IP address --> Input this IP address info into browser.

User name: admin Password: your set password (default 888888)

Watch by PC remotely (WAN) Once a mera c R PUBLIC wilload ^PC driver from Below R code. Input U D, User name and the ASB: your set r, ssword (default



Specification

Resolution	1 Mega CMOS	
Video pixel in phone	Max 1920*1080	
Video pixel in card	1080*720	
Frames	Max 25fps	
Compressed format	H.264	
View angle	120 Degree	
Type of memory card	TF card>=Class 4/10 and HC marked	
Maximum capacity of memory card	128GB	
PC operation system	Windows 7, 8 / Mac OS X	
Play software	VLCPlayer/SMPlayer	
Mobile phone operation system	Android/iOS	
Web browser	IE7 and above, chrome, firefox	
Power consumption	300MA/3.7V	
Battery Capacity	Rechargeable 3000 mA	
Recording	1 minute/ around 20MB	
Working time in day time	Around 8 hours	
Working time in night time	Around 3 hours	
Charging time	3-4 hours	
Power adapter	5V / 2A	

FAQ

- 1. Q: Time display is not stable, always blinking? A: It's with low battery, please charge it.
- Q: Can't get device Wi-Fi signal?
 A:Press reset key for 10 seconds and wait 1 minute.



- Q: Live video not smooth ACCOUNT of the real time network A: Select suitable resolution according to the real time network environment.
- 4. Q: Motion detect set and alarm?
 - A: 1). Set motion detect sensitivity in Alarm Config, and press right corner Confirm to save the setting;

2). When motion detected, camera will push a alarm message to your phone and take one picture for checking in the APP [Page 16 - Alert notification]. (A micro sd card MUST be inserted for saving alarm pictures)

- 5. Q: Micro SD card instruction?
 - A: 1). Format card before inserting;

 When backside switch is on, every time you insert micro SD card, it will record automatically;

3). Once connected, can set SD management in app [Micro SD Card Record Config].

4). If Micro SD card detected and recording the Wi-Fi

indicator w Trash source DITRUC

6. Q: How to play

- A: 1). Use a card reader to read and play;
 - 2). Use APP to play back [Page 15 TF card recorded files];

RELEASE

- 3). Play back in good speed network.
- Q: Forget camera password, or item goes abnormal?
 A: Turn on camera and wait for 1 minute, press reset key around 10 seconds till back indicators off to restore factory default. Camera restarts and get ready again in 1 minute.
- Q: Any operation video demo of the camera for setting up?
 A: Please contact local dealer for video guide.



The end!