

Инструкция пользователя

SMALODY SL-50S Bluetooth колонка СТЕРЕО, радио FM, с аккумулятором для использования в помещении

Артикул: SMALODY SL-50S/ SL-90

Спасибо за совершенную покупку в нашем магазине

**FOR PUBLIC
RELEASE**


Smalody

SL-90 /SL-50S

使用说明书
User's Manual
 取扱説明書



Button Function Of Control Panel:

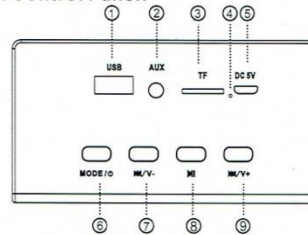

- ① U-disk Interface
- ② AUX
- ③ TF Card Interface
- ④ LED Indicator: the blue light is on for power/ the red light is on for charging
- ⑤ DC/5V Charge
- ⑥ Mode Key/ Switch: long press 3 seconds for switch; short press to switch mode
- ⑦ Previous Key/ Volume Reduction: short press for the previous song; long press to reduce the volume
- ⑧ Pause/ Play : short press to pause/play;

- ⑨ Next Key/ Volume up : short press for the next song; long press to volume up

Operating Instruction:

- ① Turn On/ Off: turn on after long press the "MODE/O" button for 3 seconds, and turn off after long press the "MODE/O" button for 3 seconds.
- ② Wireless Mode: when the speaker is turned on and no other devices are connected, the wireless mode will be entered by default, and the blue light will flicker and enter the search and pairing state. At this time, the wireless search device will be turned on, and the pairing will be completed by clicking the connection.
- ③ USB/ TF Card/ AUX Mode: when the USB/ TF card/ AUX is inserted, the sound box will automatically play the audio files in the USB/ TF card/ AUX, and adjust the volume by clicking "M/V-" or "M/V+" button.
- ④ Volume +/-: Long press the "M/V-" button to reduce the volume; long press "M/V+" to increase the volume; when the speaker prompts "Didi" sounds has reached the maximum volume.
- ⑤ Charging: Use 5V/1A-2A power adapter to charge the power. The red light will be on during charging and the red light will be off when fully charged.

Function Parameter:

SL-50S	<ul style="list-style-type: none"> ① Wireless Specifications: BQB 5.0 ② Wireless Transmission Range: 10m ③ Battery Specification: 3.7V/1500mAh ④ Speaker Specifications: 2"x2 / 4Ω 10W ⑤ Frequency Response: 200Hz-20KHz ⑥ Charging Voltage: 5V/ 1A
SL-90	<ul style="list-style-type: none"> ① Wireless Specifications: BQB 5.0 ② Wireless Transmission Range: 10m ③ Battery Specification: 7.4V/ 1200mAh ④ Speaker Specifications: 2"x4 / 4Ω 20W ⑤ Frequency Response: 200Hz-20KHz ⑥ Charging Voltage: 5V/ 1A- 2A

One-to-two Connection Method:

Method 1: After turning on two speakers, the two units are in the wireless mode. Press and hold the "M" button to switch the TWS series to wait for the speaker to sound and then release it. At this time, the speaker indicator light flashes quickly into the search pairing mode, waiting for 5 seconds, the two speakers will be connected successfully, and the blue indicator light is on. At this time, use the mobile phone to search for the wireless device name. Click on the pairing connection to connect two speakers in series.

Method 2: After turning on a wireless speaker, the default is wireless mode, the mobile phone searches for the wireless device name, clicks the pair to connect to the wireless device; after the connection is successful, another wireless speaker of the same model is turned on, in the wireless mode, simultaneously press the "M" button of two wireless speakers. The TWS series switch waits for the speaker to sound and then release it. At this time, the speaker prompt light flashes quickly into the search pairing mode, waiting for 7 seconds to connect the two speakers successfully, the speaker blue indication light is on, you can connect two speakers in series.

**FOR PUBLIC
 RELEASE**

Наслаждайтесь пользованием.