




# HITACHI

## SERVICE MANUAL

### TECHNICAL INFORMATION

### FOR SERVICE PERSONNEL ONLY

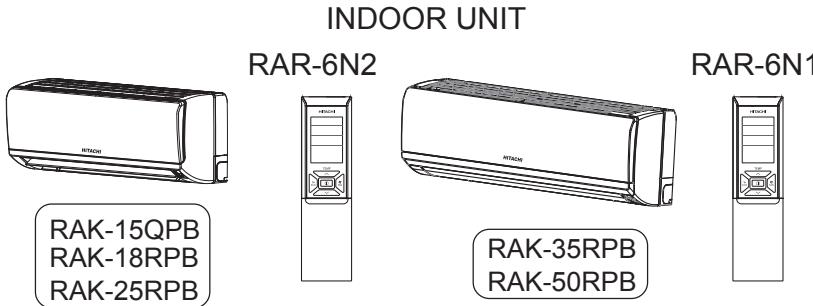

This manual describes only points that differ from  
 RAM-33NP2B (PM NO.0581E)  
 RAM-40NP2B (PM NO.0582E)  
 RAM-53NP2B,RAM-53NP3B (PM NO.0583E)  
 RAM-68NP3B (PM NO.0584E)  
 RAM-70NP4B (PM NO.0585E)  
 RAM-90NP5B (PM NO.0586E)  
 RAM-110NP6B(PM NO.0587E)  
 RAC-18WPB,RAC-25WPB,RAC-35WPB , RAC-50WPB (HHAW NO.0080E)  
 for items not described in this manual.

**HHAW**
**NO.0089E-1**
**RAK-15QPB      RAK-35RPB**  
**RAK-18RPB      RAK-50RPB**  
**RAK-25RPB**

### REFER TO THE FOUNDATION MANUAL

#### CONTENTS

SPECIFICATIONS -----	6
HOW TO USE -----	10
CONSTRUCTION AND DIMENSIONAL DIAGRAM -----	44
MAIN PARTS COMPONENT -----	46
WIRING DIAGRAM -----	47
CIRCUIT DIAGRAM -----	49
BLOCK DIAGRAM -----	51
BASIC MODE -----	52
REFRIGERATING CYCLE DIAGRAM -----	64
PROCEDURE FOR DISASSEMBLY AND REASSEMBLY-----	66
DESCRIPTION OF MAIN CIRCUIT OPERATION -----	68
SERVICE CALL Q & A -----	77
VARIOUS SETTINGS -----	87
PARTS LIST AND DIAGRAM -----	105

Indoor unit	RAK-15QPB	RAK-18RPB	RAK-25RPB	RAK-35RPB	RAK-50RPB
Single outdoor unit	-	RAC-18WPB	RAC-25WPB	RAC-35WPB	RAC-50WPB
Multi outdoor unit	RAM-33NP2B	0	0	0	-
	RAM-40NP2B	0	0	0	-
	RAM-53NP2B	0	0	0	0
	RAM-53NP3B	0	0	0	0
	RAM-68NP3B	0	0	0	0
	RAM-70NP4B	0	0	0	0
	RAM-90NP5B	0	0	0	0
	RAM-110NP6B	0	0	0	0

### SPECIFICATIONS

TYPE	DC INVERTER							
	INDOOR UNIT	OUTDOOR UNIT						
MODEL	RAK-18RPB	RAC-18WPB	RAK-25RPB	RAC-25WPB	RAK-35RPB	RAC-35WPB	RAK-50RPB	RAC-50WPB
POWER SOURCE	1 PHASE,50HZ,220-230V		1 PHASE,50HZ,220-230V		1 PHASE,50HZ,220-230V		1 PHASE,50HZ,220-230V	
COOLING	TOTAL INPUT (W)	550 (250~1010 )		700 (250~1,290)		1,090 (250~1,460)		1,560 (500~2,100)
	TOTAL AMPERES (A)	3.12-2.97		3.75-3.59		4.87-4.66		7.30-6.98
	(KW)	2.00 (0.90~2.50)		2.50 (0.90~3.10)		3.50 (0.90~4.00)		5.00 (1.90~5.20)
HEATING	(B.T.U./h)	8,530 (3,070~10,920)		8,530 (3,070~10,580)		11,940 (3,070~13,650)		17,060 (6,480~17,740)
	TOTAL INPUT (W)	580 (250~970)		880 (250~1,250)		1,100 (250~1,700)		1,660 (500~2,750)
	TOTAL AMPERES (A)	3.49-3.34		4.56-4.36		5.51-5.27		7.93-7.59
DIMENSIONS (mm)	(KW)	2.50 (0.90~3.20)		3.40 (0.90~4.40)		4.20 (0.90~5.00)		6.00 (2.20~7.30)
	(B.T.U./h)	11,600 (3,070~15,010)		11,600 (3,070~15,010)		14,330 (3,070~17,060)		20,470 (7,510~24,910)
	W	780	660(+60)※	780	660(+60)※	900	750(+65)※	900
NET WEIGHT	H	280	530	280	530	295	548	295
	D	218	278(+35)※	218	278(+35)※	230	288(+27.5)※	230
(Kg)		7.5	27.5	7.5	27.5	10	34	10
40								

※ After installation

**SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT**


## ROOM AIR CONDITIONER

### INDOOR UNIT

**Hitachi Household Appliances(Wuhu) Co., Ltd.**

## SAFETY DURING REPAIR WORK

1. In order to disassemble and repair the unit in question, be sure to disconnect the power cord plug from the power outlet before starting the work.

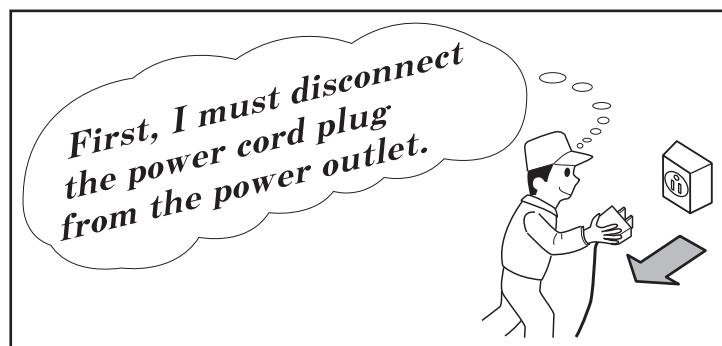

2. If it is necessary to replace any parts, they should be replaced with respective genuine parts for the unit, and the replacement must be effected in correct manner according to the instructions in the Service Manual of the unit.

If the contacts of electrical parts are defective, replace the electrical parts without trying to repair them



3. After completion of repairs, the initial state should be restored.
4. Lead wires should be connected and laid as in the initial state.
5. Modification of the unit by the user himself should absolutely be prohibited.
6. Tools and measuring instruments for use in repairs or inspection should be accurately calibrated in advance.
7. In installing the unit having been repaired, be careful to prevent the occurrence of any accident such as electrical shock, leak of current, or bodily injury due to the drop of any part.
8. To check the insulation of the unit, measure the insulation resistance between the power cord plug and grounding terminal of the unit.  
The insulation resistance should be  $1M\Omega$  or more as measured by a 500V DC megger.
9. The initial location of installation such as window, floor or the other should be checked for being safe enough to support the repaired unit again.  
If it is found not so strong and safe, the unit should be installed at the initial location after reinforced or at a new location.
10. Any inflammable object must not be placed about the location of installation.
11. Check the grounding to see whether it is proper or not, and if it is found improper, connect the grounding terminal to the earth.



# WORKING STANDARDS FOR PREVENTING BREAKAGE OF SEMICONDUCTORS

## 1. Scope


The standards provide for items to be generally observed in carrying and handling semiconductors in relative manufactures during maintenance and handling thereof. (They apply the same to handling of abnormal goods such as rejected goods being returned.)

## 2. Object parts

- (1) Microcomputer
- (2) Integrated circuits (I.C.)
- (3) Field effective transistor (F.E.T.)
- (4) P.C. boards or the like to which the parts mentioned in (1) and (2) of this paragraph are equipped.


## 3. Items to be observed in handling

- (1) Use a conductive container for carrying and storing of parts. (Even rejected goods should be handled in the same way.)

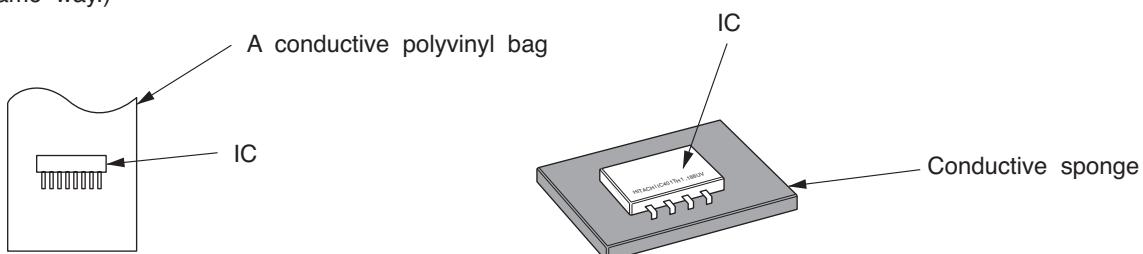


**Fig. 1 Conductive container**

- (2) When any part is handled uncovered (in counting, packing and the like), the handling person must always use himself as a body earth. (Make yourself a body earth by passing one M ohm earth resistance through a ring or bracelet.)
- (3) Be careful not to touch the parts with your clothing when you hold a part even if a body earth is being taken.
- (4) Be sure to place a part on a metal plate with grounding.
- (5) Be careful not to fail to turn off power when you repair the printed circuit board. At the same time, try to repair the printed circuit board on a grounded metal plate.

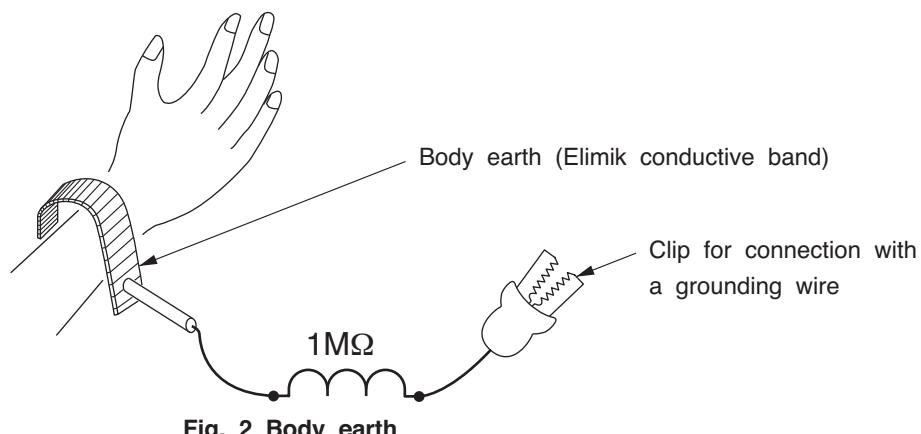


**Fig. 2 Body earth**

(6) Use a three wire type soldering iron including a grounding wire.

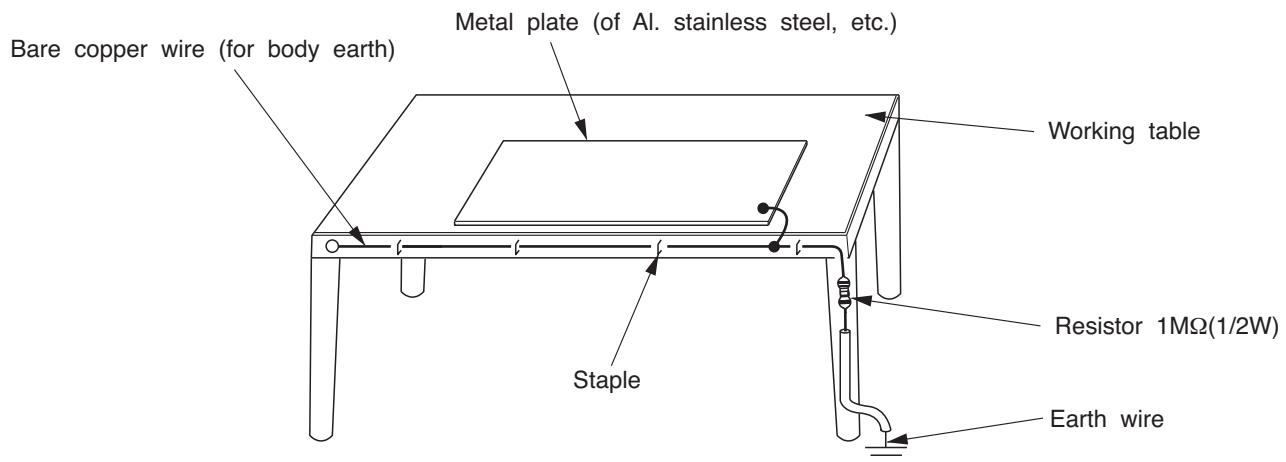

**Fig.3 Grounding of the working table**

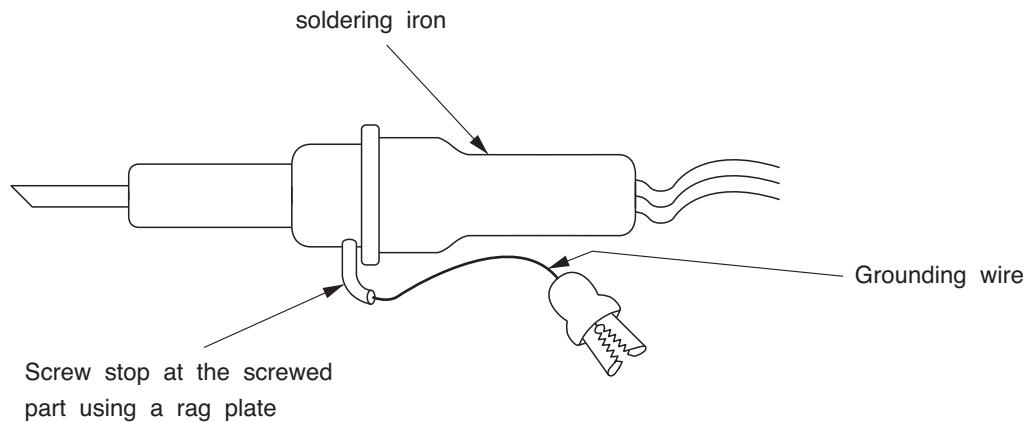

**Fig.4 Grounding a solder iron**

Use a high insulation mode (100V, 10MΩ or higher) when ordinary iron is to be used.

(7) In checking circuits for maintenance, inspection, or some others, be careful not to have the test probes of the measuring instrument short circuit a load circuit or the like.

**⚠ CAUTION**

1. In quiet or stop operation, slight flowing noise of refrigerant in the refrigerating cycle is heard occasionally, but this noise is not abnormal for the operation.
2. When it thunders near by, it is recommend to stop the operation and turn off the circuit breaker for safety.
3. In the event of power failure, the room air conditioner will restart automatically in the previously selected mode once the power is restored. In the event of power failure during TIMER operation, the room air conditioner will not start automatically. Re-press ON/OFF button after 3 minutes from when the unit off or power recovery.
4. If the room air conditioner is stopped by adjusting thermostat, or missoperation, and re-start in a moment, there is occasion that the cooling and heating operation does not start for 3 minutes, it is not abnormal and this is the result of the operation of IC delay circuit. This IC delay circuit ensures that there is no danger of blowing fuse or damaging parts even if operation is restarted accidentally.
5. This room air conditioner should not be used at the cooling operation when the outside temperature is below -10°C (14°F).
6. This room air conditioner (the reverse cycle) should not be used when the outside temperature is below -15°C (5°F).  
If the reverse cycle is used under this condition, the outside heat exchanger is frosted and efficiency falls.
7. When the outside heat exchanger is frosted, the frost is melted by operating the hot gas system, it is not trouble that at this time fan stops and the vapour may rise from the outside heat exchanger.

## SPECIFICATIONS

MODEL	RAK-15QPB, RAK-18RPB, RAK-25RPB, RAK-35RPB, RAK-50RPB	
FAN MOTOR	30W (DC325 V)	
FAN MOTOR CAPACITOR	NO	
FAN MOTOR PROTECTOR	NO	
COMPRESSOR	—	
COMPRESSOR MOTOR CAPACITOR	NO	
OVERLOAD PROTECTOR	NO	
OVERHEAT PROTECTOR	NO	
FUSE (for MICROPROCESSOR)	3.15A	
POWER RELAY	NO	
POWER SWITCH	NO	
TEMPORARY SWITCH	YES	
SERVICE SWITCH	NO	
TRANSFORMER	YES	
VARISTOR	450NR	
NOISE SUPPRESSOR	NO	
THERMOSTAT	YES(IC)	
REMOTE CONTROL SWITCH (LIQUID CRYSTAL)	YES	
REFRIGERANT CHARGING VOLUME (Refrigerant R410A)	PIPES	WITHOUT REFRIGERANT BECAUSE COUPLING IS FLARE TYPE.

Figure showing the installation of Indoor unit

MODEL RAK-15QPB  
RAK-18RPB  
RAK-25RPB


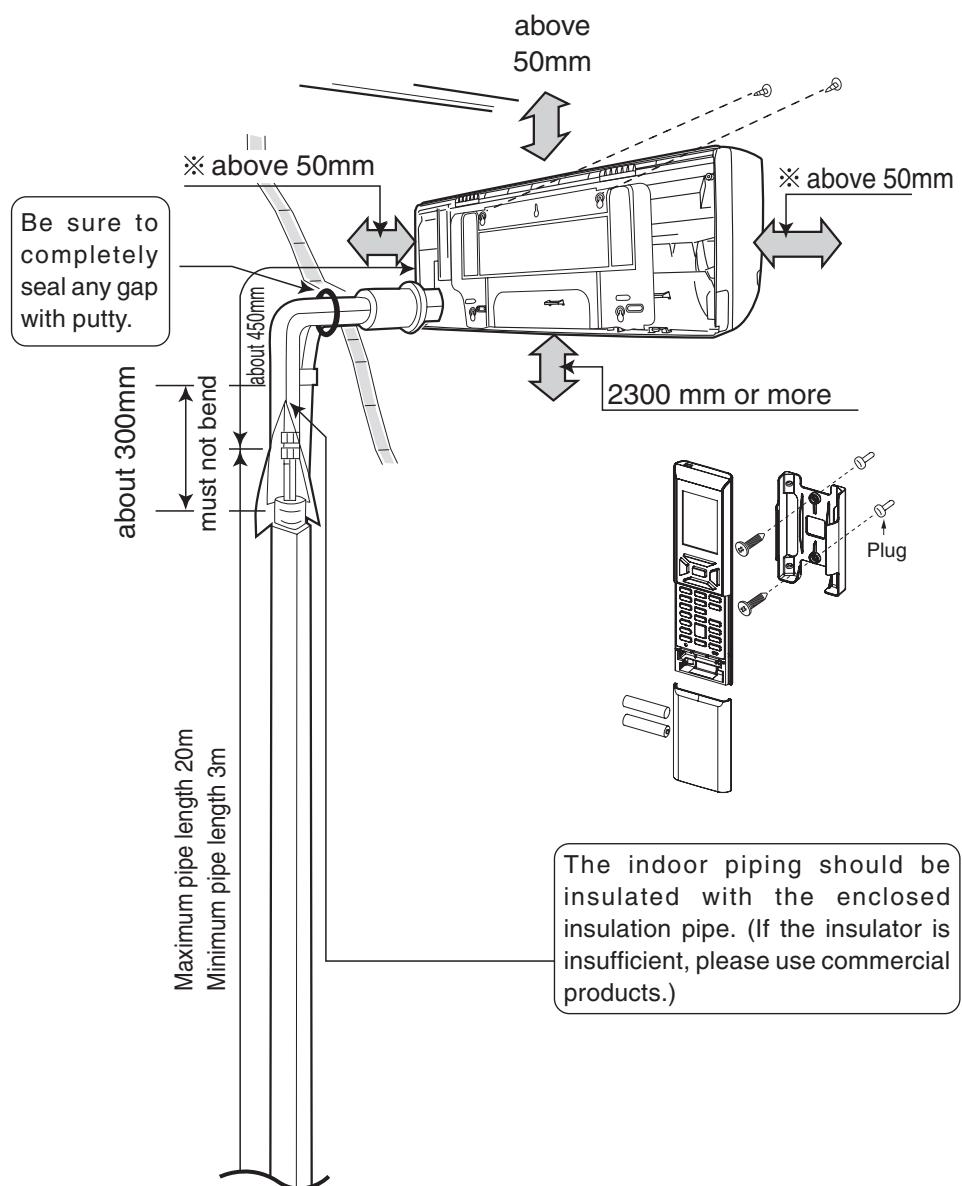


Figure showing the installation of Indoor unit

MODEL RAK-35RPB  
RAK-50RPB




## SWITCH SETTING TO SELECT 1.5kW OR 1.0kW CAPACITY

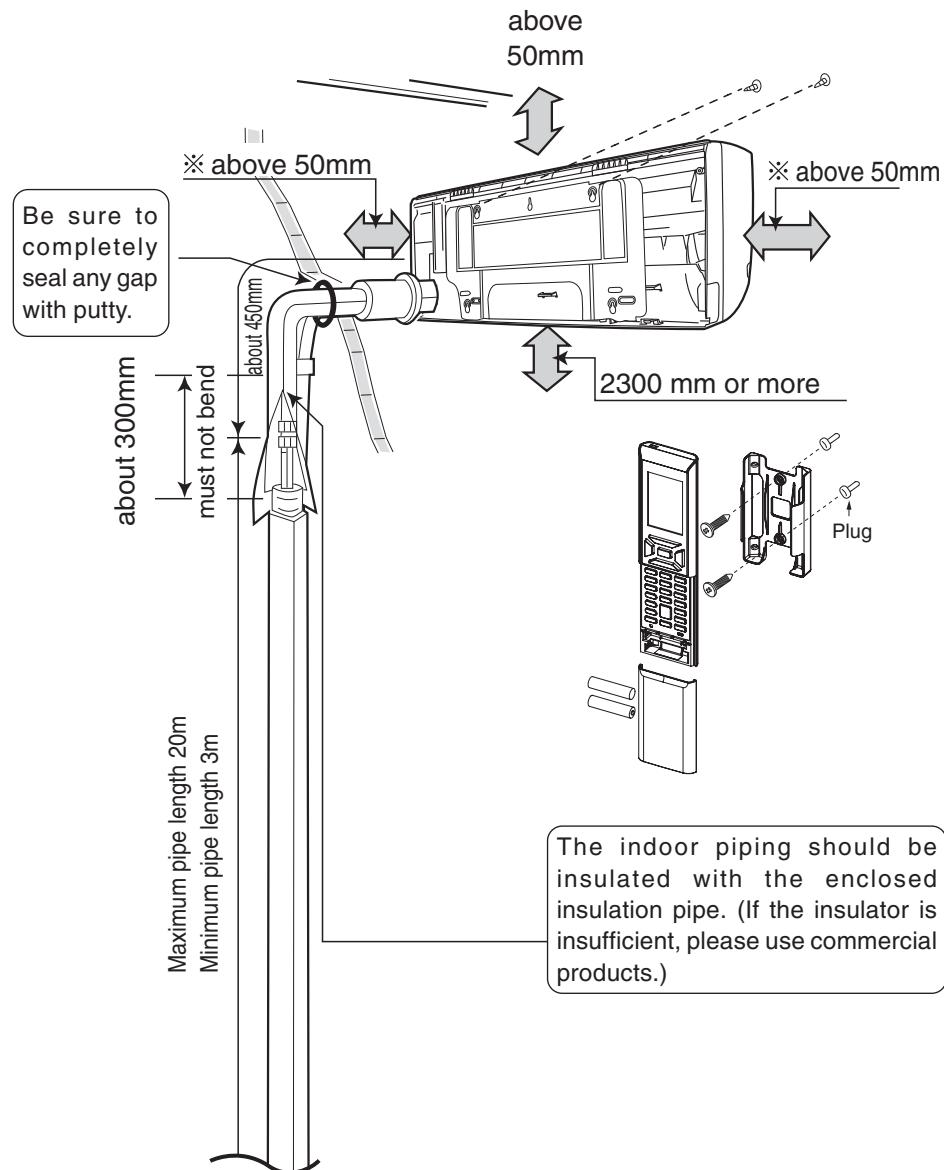

### CAUTION

Before setting the switch, make sure to turn OFF power supply and then set the position of the switch otherwise will cause damage to the Main PCB.

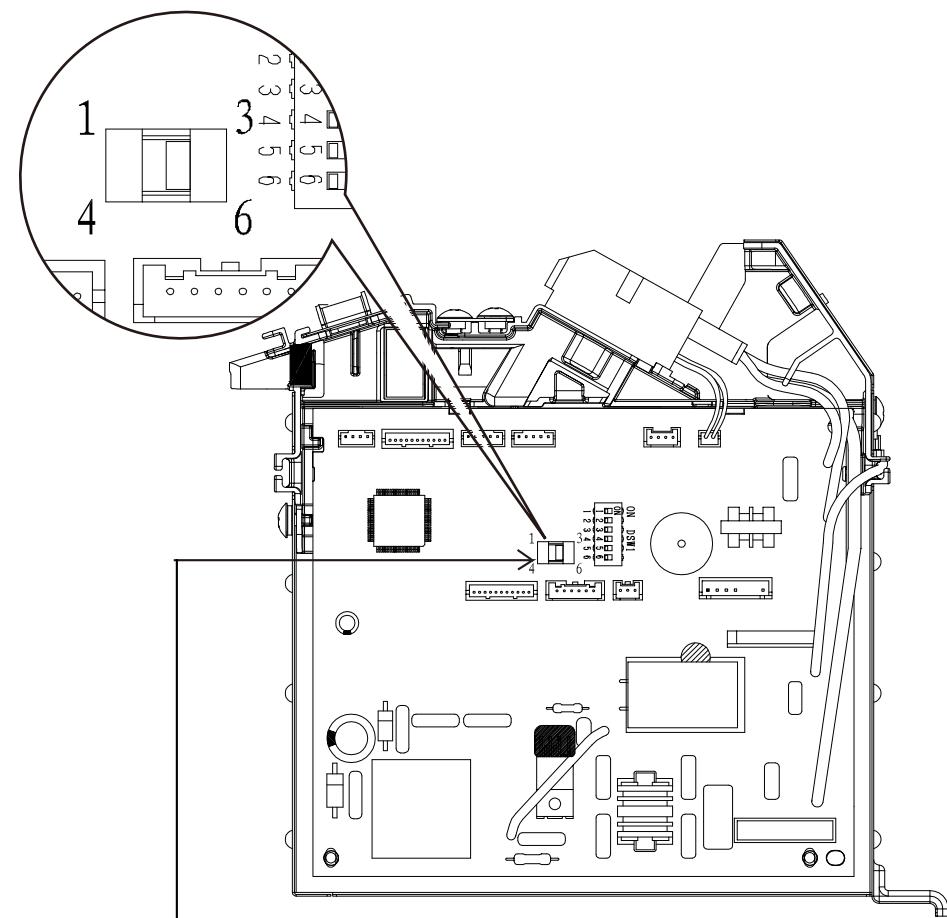

SWITCH POSITION	CAPACITY SELECTION
1.0kW	1.5kW
1.0kW	1.0kW

#### NOTE:


FACTORY default setting is at 1.5kW capacity.

This setting is applicable for RAK-15QPB only.




## PREPARATION BEFORE OPERATION

### ■ To install the batteries

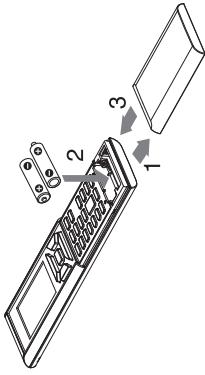


1. Slide the cover to take it off.
2. Install two dry batteries AAA/LR03 (alkaline).  
The direction of the batteries should match the marks in the case.
3. Replace the cover at its original position.

### ■ To fix the remote controller holder to the wall

 

Remote controller

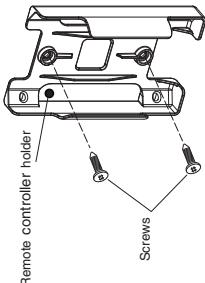

Remote controller holder

Screws

1. Choose a place from where the signals can reach the unit.
2. Fix the remote controller holder to a wall, a pillar or similar location with the provided screws.
3. Place the remote controller in the remote controller holder.

### NOTE

#### Notes on batteries

- When replacing the batteries, use batteries of the same type, and replace both old batteries together.
  - When the system is not used for a long time, take the batteries out.
  - The batteries will last for approximately 1 year. However, if the remote controller display begins to fade and degradation of reception performance occurs within a year, replace both batteries with new size AAA/LR03 (alkaline).
  - The attached batteries are provided for the initial use of the system.
- The usable period of the batteries may be short depending on the manufactured date of the air conditioner.

#### Notes on the remote controller


- Never expose the remote controller to direct sunlight.
- Dust on the signal transmitter or receiver will reduce the sensitivity. Wipe off dust with soft cloth.
- Signal communication may be disabled if an electronic-starter-type fluorescent lamp (such as inverted-type lamps) is in the room. Consult the shop if that is the case.
- If the remote controller signals happen to operate another appliance, move that appliance to somewhere else, or consult the service shop.
- When the remote controller is not in use, please close the slide cover to prevent failure.

SUOMI NEDERLANDS SVENSKA Eesti/likā PORTUGUESES ESPANOL ITALIANO FRANCÉS DEUTSCH ENGLISH

## Remote Controller Manual

Inspire the Next

MODEL  
RAR-6N2

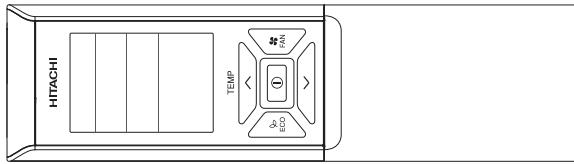





Remote Controller manual  
To obtain the best performance and ensure years of trouble free use, please read this instruction manual completely.

- 1 -

- 2 -

## PREPARATION BEFORE OPERATION

ENGLISH

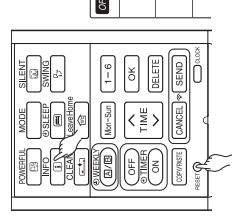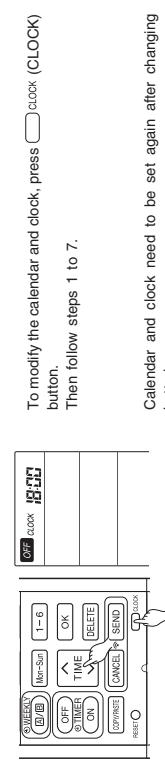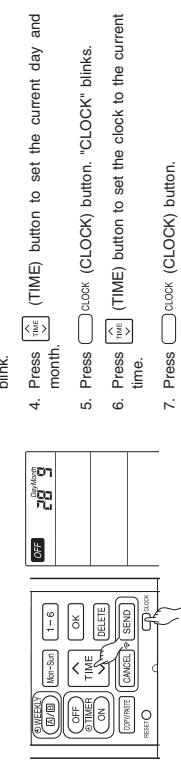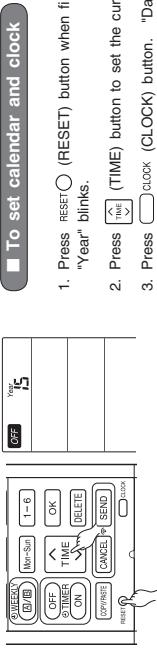

### NOTE


Note on setting the calendar and clock.

- If the calendar and clock are not set, the ON-timer, OFF-timer and Weekly Timer cannot be set.
- If the calendar and clock are not set correctly, the ON-timer, OFF-timer and Weekly Timer will not operate correctly.
- When the ON-timer, OFF-timer and Weekly Timer are set, the calendar and clock cannot be changed.
- If there is a need to change the calendar and clock, ON-timer, OFF-timer and Weekly Timer need to be cancelled.


## NAMES AND FUNCTIONS OF REMOTE CONTROLLER

### REMOTE CONTROLLER

- This controls the operation of the indoor unit. The range of control is about 7 meters. If indoor lighting is controlled electronically, the range of control may be shorter.
- This unit can be fixed on a wall using the fixture provided. Before fixing it, make sure the indoor unit can be controlled from the remote controller.
- Handle the remote controller with care. Dropping it or getting it wet may compromise its signal transmission capability.
- After new batteries are inserted into the remote controller, the unit will initially require approximately 10 seconds to respond to commands and operate.
- When remote controller is not in use for about 3 minutes during OFF condition, indicated by **OFF** on the display, the LCD will turn off.
- During clock setting, the LCD will turn off about 10 minutes later if the remote controller is not in use.
- When pressing any button, the LCD will turn on.
- The LCD will not turn off during TIMER setting.

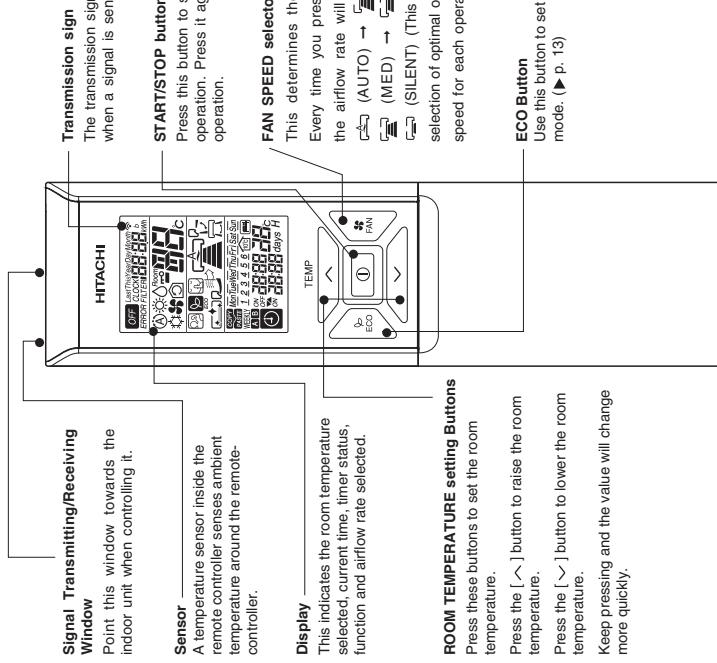

## NAMES AND FUNCTIONS OF REMOTE CONTROLLER

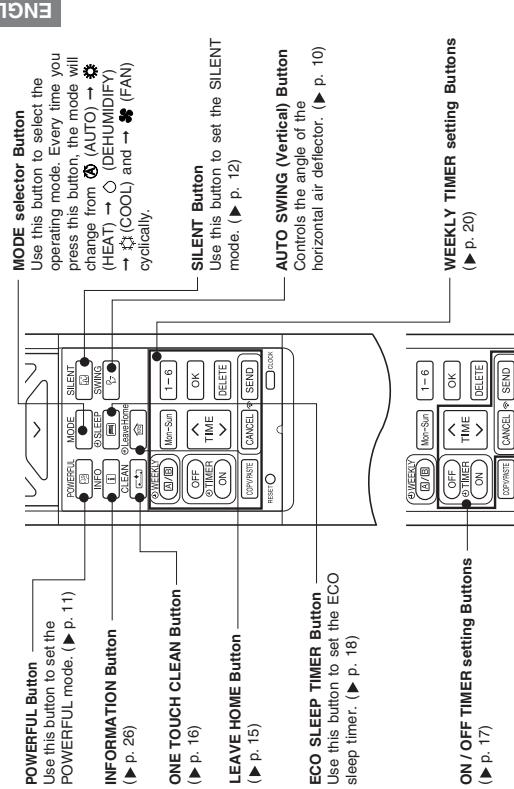

## VARIOUS FUNCTIONS

### ■ Auto Restart Control

If there is a power failure, operation will be automatically restarted when the power is resumed with previous operation mode and airflow direction.  
 If you intend not to continue the operation when the power is resumed, switch off the power supply.  
 When you switch on the circuit breaker, the operation will be automatically restarted with previous operation mode and airflow direction.  
 Note: 1. If you do not require Auto Restart Control, please consult your sales agent.  
 2. Auto Restart Control is not available when Timer or Sleep Timer mode is set.

## AUTOMATIC OPERATION

The device will automatically determine the mode of operation, HEAT or COOL depending on the current room temperature. The selected mode of operation will change when the room temperature varies. However, the mode of operation will not change when indoor unit is connected to multi type outdoor unit.

Press the MODE selector button so that the display indicates the (A) mode of operation.  
 • When AUTO has been selected, the device will automatically determine the mode of operation, HEAT or COOL depending on the current room temperature. However the mode of operation will not change when indoor unit is connected to multi type outdoor unit.  
 • If the mode automatically selected by the unit is not satisfactory, manually change the mode setting (HEAT, DEHUMIDIFY, COOL or FAN).

Set the desired FAN SPEED with the (FAN SPEED) button (the display indicates the setting).  
 → (AUTO) → (HIGH) → (MED) → (LOW) ←

Set the desired room temperature with the TEMPERATURE buttons (the display indicates the setting). The temperature setting and the actual room temperature may vary depending on conditions. Temperature range can be set between 16°C and 32°C.  
 Press the (1) (START/STOP) button. Operation starts with a beep. Press the button again to stop operation.

As the settings are stored in the memory of the remote controller, you only have to press the (1) (START/STOP) button next time.

Press the (FAN SPEED) button to select AUTO, HIGH, MED, LOW or SILENT.


**Precautions for Use**

- Do not put the remote controller in the following places.
  - Under direct sunlight.
  - In the vicinity of a heater.
- Handle the remote controller carefully. Do not drop it on the floor, and protect it from water.
  - Once the outdoor unit stops, it will not restart for about 3 minutes (unless you turn the power switch off and on or unplug the power cord and plug it in again).
  - This is to protect the device and does not indicate a failure.
  - If you press the MODE selector button during operation, the device may stop for about 3 minutes for protection.

## HEATING OPERATION

### ENGLISH

- Use the device for heating when the outdoor temperature is under 21°C.
- When it is too warm (over 21°C), the heating function may not work in order to protect the device.
- In order to maintain reliability of the device, please use this device when outdoor temperature is above -15°C.

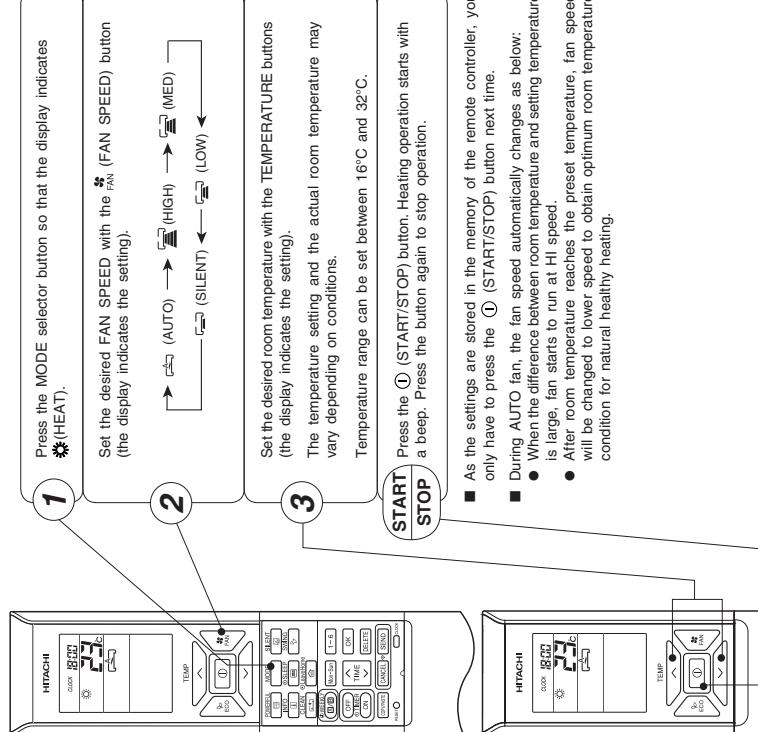


### Defrosting

- Defrosting will be performed about once an hour when frost forms on the heat exchange of the outdoor unit, for 5–10 minutes each time. During defrosting operation, the operation lamp blinks in a cycle of 3 seconds on and 0.5 second off. The maximum time for defrosting is 20 minutes. However, if the indoor unit is connected to multi type outdoor unit, the maximum time for defrosting is 15 minutes. (If the piping length used is longer than usual, frost is likely to form)

- 7 -

## DEHUMIDIFYING OPERATION

- Use the device for dehumidifying when the room temperature is over 16°C. When it is under 15°C, the dehumidifying function will not work.

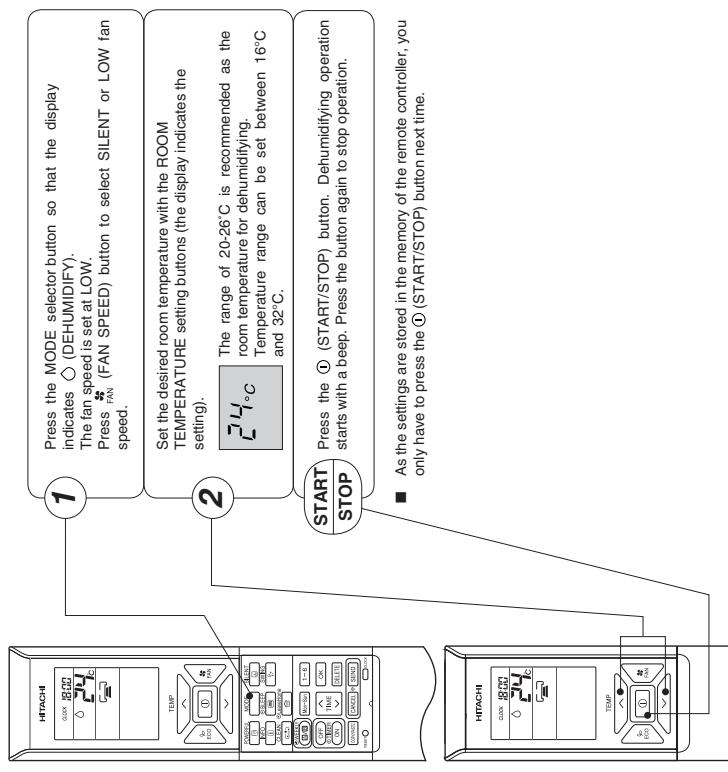

### Dehumidifying Function

- When the room temperature is higher than the temperature setting: The device will dehumidify the room, reducing the room temperature to the preset level.
- When the room temperature is lower than the temperature setting: Dehumidifying will be performed at the temperature setting slightly lower than the current room temperature, regardless of the temperature setting.
- The preset room temperature may not be reached depending on the number of people present in the room or other room conditions.

- 8 -


## COOLING OPERATION

Use the device for cooling when the outdoor temperature is -10~43°C.  
If indoors humidity is very high (80%), some dew may form on the air outlet grille of the indoor unit.

### FAN OPERATION

ENGLISH

User can use the device simply as an air circulator.

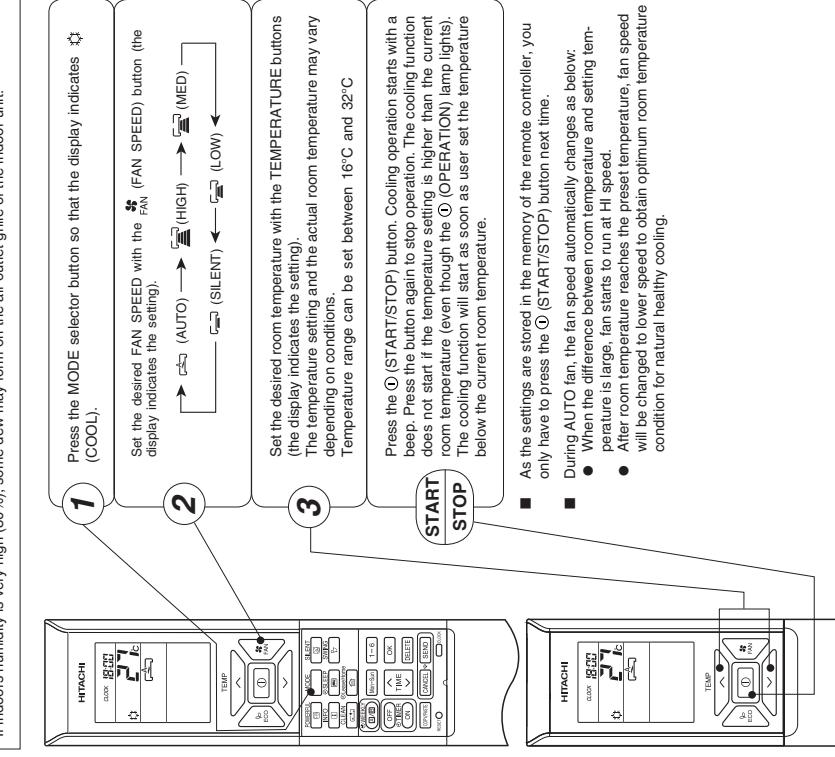

## POWERFUL OPERATION

ENGLISH

- By pressing  (POWERFUL) button during AUTO, HEATING, DEHUMIDIFYING, COOLING or FAN operation, the air conditioner performs at the maximum power.
- During POWERFUL operation, cooler or warmer air will be blown out from indoor unit for COOLING or HEATING operation respectively.

### To start POWERFUL operation

- Press  (POWERFUL) button during operation.
- " " is displayed on the LCD.


**1**

POWERFUL operation ends in 20 minutes. Then the system automatically operates with the previous settings used before POWERFUL operation.

### To cancel POWERFUL operation

- Press the  (START/STOP) button. Or
- Press  (POWERFUL) button again.
- POWERFUL operation stop.

" " disappears from the LCD.

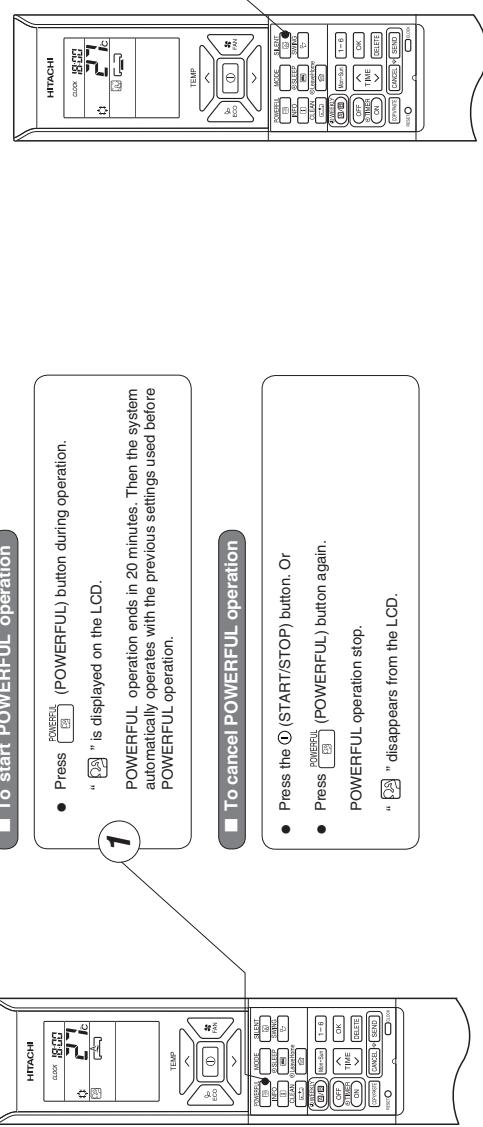

### NOTE

- When SLEEP mode, ECO mode, SILENT mode or LEAVE HOME mode is selected, POWERFUL operation is cancelled.
- During POWERFUL operation, capacity of the air conditioner will not increase
  - if the air conditioner is already running at maximum capacity,
  - just before defrost operation (when the air conditioner is running in HEATING operation).
- After auto restart, POWERFUL operation is cancelled. Fan speed will return to previous fan speed before SILENT operation.
- For multi model connections, POWERFUL operation may not function depending on operation conditions.

## SILENT OPERATION

- By pressing  (SILENT) button during AUTO, HEATING, DEHUMIDIFYING, COOLING or FAN operation, the fan speed will change to ultra slow.

### To start SILENT operation

- Press  (SILENT) button during operation.
- " " is displayed on the LCD. Fan speed will be ultra slow.

### To cancel SILENT operation

- Press  (START/STOP) button. Or
- Press  (SILENT) button again or  (FAN SPEED) button.
- Fan speed will return to previous fan speed before SILENT operation starts.
- SILENT operation stop.
- " " disappears from the LCD.

### NOTE

- When POWERFUL operation is selected, SILENT operation is cancelled. Fan speed will return to previous fan speed before SILENT operation.
- After auto restart, SILENT operation is cancelled. Fan speed will return to previous fan speed before SILENT operation.
- During any operation with fan speed  (SILENT), if press  (SILENT) button, fan speed will not change.


## ECO OPERATION

### ENGLISH

Please refer to [Names and Functions of each part] in the unit instruction manual to verify if your unit is equipped with a sensor and read the following instruction on ECO Operation accordingly.

#### ■ ECO OPERATION

ECO operation is an energy saving function by changing set temperature automatically and by limiting the maximum power consumption value.

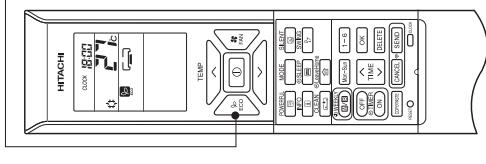

- By pressing the (ECO) button during AUTO, HEATING, DEHUMIDIFYING or COOLING operation, the air conditioner performs the "ECO" operation.

#### To start ECO operation

- Press (ECO) button during operation.  
“” is displayed on the LCD.  
A beep sound is emitted from indoor unit.
- Energy saving operation will start by changing the set temperature higher or lower automatically and reducing operation power consumption. This function may vary based on the connected outdoor unit.

#### To cancel ECO operation

- Press ① (START/STOP) button. Or
- Press (ECO) button again.  
“” disappears from the LCD.  
A beep sound is emitted from indoor unit.

#### NOTE

- ECO function will not be effective when power consumption is low.
- By pressing (POWERFUL) button, ECO operation is cancelled.
- After auto restart, ECO operation is cancelled and previous operation mode shall start.
- For multi model connections, energy saving operation shall start only by changing set temperature higher or lower automatically. However, effectiveness of ECO depends on operation conditions.


- 13 -

## ECO OPERATION

### ■ ECO OPERATION with sensor

The sensor detects the presence of people in the room. When nobody is detected, the unit automatically starts energy saving operation by shifting the set temperature in two steps.

#### ■ To start ECO operation

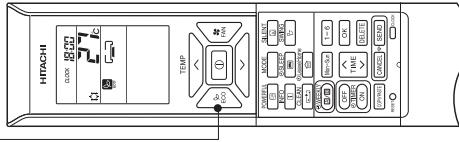


- By pressing the (ECO) button during AUTO, HEATING, DEHUMIDIFYING or COOLING operation, the air conditioner performs the "ECO" operation.

#### To start ECO operation

- Press (ECO) button during operation.  
“” is displayed on the LCD.  
A beep sound is emitted from indoor unit and the (ECO) lamp on the indoor unit lights up.  
The sensor starts to detect the presence of people in the room.
- Press ① (START/STOP) button. Or
- Press (ECO) button again.  
“” disappears from the LCD.  
A beep sound is emitted from indoor unit and the (ECO) lamp on the indoor unit turns off.

When the presence of people is not detected for 20 minutes, the set temperature is automatically shifted for energy saving. If nobody is in the room for 60 minutes, the set temperature is shifted further.

Cooling operation (diagram representation for illustrative purpose only)

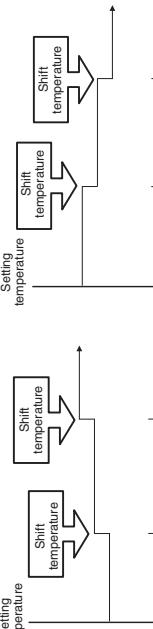

The unit returns to normal operation when the sensor detects human movement.

#### NOTE

- By pressing (POWERFUL) button, ECO operation is cancelled.
- After auto restart, ECO operation is cancelled and previous operation mode shall start.

- 14 -

100°C LEAVE HOME (LH) OPERATION

Prevent the room temperature from falling too much when no one is at home. The initial setting temperature is 10°C and the temperature range can be set between 10°C and 16°C.  
This operation is able to operate by "Continuous operation" or "Day timer operation". Please use "Day timer operation" to set the number of days up to 99 days.

כינונו בברא יב נוירב בפראטיזן

- ## Option 1. Continuous operation.

- ① Press  (LEAVE HOME) button again stop or operation.  
Room temperature is set at 10°C and heating operation starts.

② Set the desired room temperature with the TEMPERATURE buttons.  
Temperature range can be set between 10°C and 16°C.


**Option 2. Day timer operation.**

- Press  (LEAVE HOME) button during stop or operation. Room temperature is set at 10°C and heating operation starts. Set the desired room temperature with the TEMPERATURE buttons. Temperature range can be set between 10°C and 16°C.

     "SET TEMPERATURE" is displayed on the LCD.

③ Set number of operation days (1 to 99 days), if needed

Day timer operation

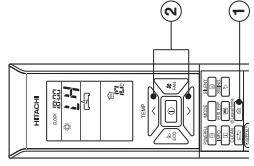

To cancel | LEAVE HOME operation

- Press  (START/STOP) button. Or  
Press  (LEAVE HOME) button again.
  - Return to previous operation mode. Or
  - Change to other operation mode by pressing  (MODE) button.

1

- After reaching the set number of operation days for Leave Home or by pressing the (Leave Home) button again, the unit will operate in previous mode.
  - During Leave Home operation, fan speed and horizontal air deflector position cannot be changed.
  - By pressing (Leave Home) button, implementation of Weekly Timer or One Timer is cancelled.
  - In case of power supply shut down, after autorestart, all setting for number of days operation will be reset and unit shall be in continuous operation.
  - POWERFUL, SILENT and ECO operations are not applicable during Leave Home operation.
  - For multi connection
  - FAN/COOLING/DEFROSTING and Leave Home cannot operate at the same time.
  - The first run unit has a priority and other units in different mode will be in standby mode.
  - Heating operation can be used with Leave Home.
  - When two or more rooms are set to operate Leave Home, the temperature set by Leave Home may not be reached. It also depends on outdoor temperature.

## CLEAN (ONE TOUCH CLEAN) OPERATION

Drying indoor heat exchanger after cooling operation to prevent mildew

## To start LEAVE HOME operation

## Option 1 Continuous operation

- Press  (CLEAN) button when unit is OFF.  
Total time taken for One Touch Clean operation is 60 minutes.  
During this operation, HEATING or FAN operation shall operate.  
During one touch clean operation lamp is blinking.

Set the desired room temperature with the TEI

- Temperature range can be set between 10°C and 16°C.

     "SET TEMPERATURE" is displayed on the LCD.

**③** Set number of operation days (1 to 99 days), if needed.

Press  (TIME) button to select number of days.

Number of day blink.

  - \* Press "↑ (UP)" or "↓ (DOWN)" to set number of days from 1 day to 99 days.
  - \* Number of day is counted when clock indicates 0:00.

**④** Press  (SEND) button to confirm number of operation days. Display for number of operation days will stop blinking.

Press  (CANCEL) button to reset number of operation days or to have continue operation.

100

- unit will switch OFF automatically, if there is a need to cancel those timer before operating CLEAN button. Pressing [CLEAN] (CLEAN) button, operation is limited to FAN operation. One room operates CLEAN operation first, other rooms can operate one room FAN operation. However, when other rooms need to operate HEATING mode, it is in STANDBY mode. After CLEAN operation finish, HEATING operation

- 15 -

## ONCE TIMER (ON/OFF TIMER) OPERATION

OFF TIMER

- The device can be set to turn off at a preset time.

  1. Press  (OFF-TIMER) button.  and  blink on the display.
  2. Set the "turn-off time" with  (TIME) button.  

  3. After setting, direct the remote controller towards the indoor unit and press .

 and "set time" lights up instead of blinking.  
A beep sound emitted from indoor unit and the (TIMER) lamp on the

100

- The device will turn on at a designated time.

  1. Press  (ON/TIMER) button.  and  blink on the display.
  2. Set the "turn-on time" with  (TIME) button.
  3. After setting, direct the remote controller towards the indoor and press .

A beep sound

- ON/OFF TIMER**

  - The device will turn on (off) and off (on) at the designated time.
  - The switching occurs first at the preset time that comes earlier.
  - The arrow mark appears on the display to indicate the sequence of switching operations.
  1. Press **(OFF-TIMER)** button so that **□<sup>OFF</sup>** and **□<sup>OFF</sup>** blink on the display.
  2. Set the 'turn-on' time with **[TIME]** button. After setting, direct the remote controller towards the indoor and press **SEND (SEND)** button.
  3. Press **(ON-TIMER)** button so that **□<sup>ON</sup>** and **□<sup>ON</sup>** blink up.

The **□<sup>OFF</sup>** and **□<sup>ON</sup>** blink.

תְּמִימָנֶה (תְּמִימָנֶה) – מושג שמיינטן בפיזיולוגיה וביוכננות.

**SEND** (SEND) button

Digitized by srujanika@gmail.com

unit lights up.

ON)-timer. Set the current time first because it serves as a reference.

卷之三

and

"and 'ON or Off set time' goes out with a beep and the (TIMER) lamp on the indoor unit turns off.

A small rectangular icon with rounded corners, containing a stylized 'T' shape, representing the Sleep button.

## ECO SLEEP TIMER OPERATION

The timer can be set up to a duration of 7 hours. By pressing  (SLEEP) button during AUTO, HEATING, DEHUMIDIFYING, COOLING or FAN operation, the unit shifts the room temperature and reduces the fan speed. It results in energy saving. Set the current time first before operating the FCO SI FEFP TMFR operation.

The image shows the front panel of a Hitachi remote control on the left, featuring a digital display showing '00:00' and a keypad with symbols like 'OK', 'C', 'TEMP', and arrows. On the right is the internal printed circuit board (PCB) with various electronic components, resistors, capacitors, and integrated circuits.

卷之三

## ■ To start ECO SLEEP TIMER operation

Press  (SLEEP) button during operation.

- A beep sound emitted from indoor unit and the (TIMER) lamp on the indoor unit lights up.

Pressing  (SLEEP) button repeatedly, the number of hours will change as below:

- During ECO SLEEP TIMER operation, air conditioner will continue to operate for the designated number of hours and then turn off.
- When the ECO SLEEP TIMER has been set, the display on the remote controller indicates the turn off time.

**[Example: If ECO SLEEP TIMER is set for 1 hour at 18:00, the switch off time will be at 19:00.]**

**[Diagram:** A sequence of arrows pointing right, labeled "1 H", "2 H", "3 H", and "7 H". Below the first arrow is the text "SLEEP TIMER off".

**[Image:** A digital clock display showing "18:00". To its right is a small icon of a person sitting in front of a computer monitor. Below the clock is a switch-like icon with the word "OFF" and a circular button with a "T" symbol.

TANNOI ECO SIEVE TIMED soration

- Press  (START/STOP) button.
  - Room air conditioner will switch off.
- Press  (SLEEP) button again until  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  "  " <img alt="Sleep mode icon" data-bbox="625 156

18

## ECO SLEEP TIMER OPERATION

### ■ To set ECO SLEEP TIMER and ON TIMER

The air conditioner will be turned off by ECO SLEEP TIMER and turned on by ON TIMER.

- Set the ON TIMER.
- Press (SLEEP) button and set ECO SLEEP TIMER.



Example:  
In this case, air conditioner will turn off in 2 hours (at 1:38) and it will be turned on at 6:00 the next morning.

### ■ To cancel ECO SLEEP TIMER and ON TIMER operation


Direct the remote controller towards the indoor unit and press (CANCEL) button.

- ", ", "OFF", "ON", "OFF", off time, "OFF", "ON", number of hour, "ON" and ON TIMER set time disappear from the remote controller display.
- A beep sound emitted from indoor unit and the (TIMER) lamp on the indoor unit turns off.
- ECO SLEEP TIMER and ON TIMER reservations are cancelled.


30 minutes after setting ECO SLEEP TIMER, outdoor fan speed will be reduced to lower the noise level and 1 hour after setting ECO SLEEP TIMER, set temperature will be slightly shifted. Amount of temperature shifted depends on type of air conditioner.

These automatic operation changes contribute to energy saving without losing comfort.  
The level of energy consumption depends on outside temperature, room temperature, set temperature or air conditioner type.

Cooling operation [diagram representation for illustrative purpose only]

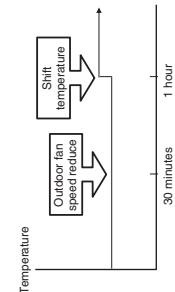

Heating operation [diagram representation for illustrative purpose only]

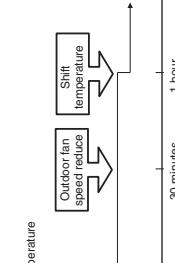

ENGLISH

## WEEKLY TIMER OPERATION


- It is possible to select Mode A or Mode B. For each mode, up to 6 programs can be set per day. In total, a maximum of 42 programs can be set for a week for each mode.
- If calendar and clock are not set, the reservation setting for WEEKLY TIMER cannot be set.
- If calendar and clock are not set correctly, WEEKLY TIMER will not operate correctly.
- Reservation for calendar and clock shall be set first before operating WEEKLY TIMER.

- Step 1 : Set the reservation schedule to the remote controller. Send the registered reservation to indoor unit and then operate.**
- Step 2 : Select Mode A or Mode B and activate or deactivate WEEKLY TIMER.**
- Step 3 : Copy and cancel the reservation schedule.**


- Step 1 : Set reservation schedule to the remote controller. Send the registered reservation to indoor unit and then operate.**

■ How to set a WEEKLY TIMER.


- Select Mode A or Mode B
- Press (WEEKLY) button, WEEKLY lights up. and blink on the display. (Mode A is selected).
- Press (WEEKLY) button again. and blink on the display. (Mode B is selected).
- If no reservation has been made, ON/OFF, , , appear.
  - If reservation has been made, ON/OFF, , , will not appear.

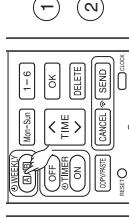

- Set a program
- Press (WEEKLY) button for about 3 seconds. The selection mode can be changed.
- Day: Mon, program no. : 1, ON/OFF, setting time and setting temperature blink on the display.

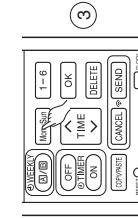

- Select the desired day of the week
- Press (DAY) button. The day changes from Mon → Tue → Wed → Thu → Fri → Sat → Sun → Mon, Tue, Wed, Thu, Fri, Sat, Sun [Full days] → Mon, Tue, Wed, Thu, Fri [weekday] → Sat, Sun [weekend] → Mon → Tue ....
- Select [Full days] for daily reservation. Select [weekday] for Saturday and Sunday reservation.
- After reservation has been set, it is easy to check and edit at the same time.

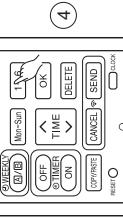

### NOTE

- If ECO SLEEP TIMER is set when OFF TIMER or ON/OFF TIMER has been set earlier, the ECO SLEEP TIMER becomes effective instead of the OFF TIMER or ON/OFF TIMER.

## WEEKLY TIMER OPERATION

ENGLISH

©WEEKLY  
[SET/RES]

5. Press  (ON-OFF TIMER) button to select ON TIMER or OFF TIMER reservation.
6. Press  (TIME) button to set time reservation.
7. Press  (TEMP ~ or >) button to set temperature reservation.
8. Press  (OK) button. The reservations are set. Day, program number, ON reservation, setting temperature will light up.  will be continuously blinks. If reservation is not complete, settings will not be stored in memory.

To continue with the reservation, press  [1-6]  buttons. Follow step 3 to 8 for reservation.

9. After all the reservations have been set, press  (SEND) button while directing the remote controller towards the indoor unit for about 3 seconds. Timer lamp on the indoor unit will blink rapidly. After beep sound emitted from indoor unit, TIMER lamp will light up.

**Please ensure that the TIMER lamp lights up.**

This indicates that the reservation has been stored in the indoor unit and Timer function has been completed. The reservation contents will appear on the remote controller display.

- If TIMER lamp on the indoor unit does not light up, press  (SEND) button while directing the remote controller towards the indoor unit for about 3 seconds.
- **CAUTION !** Do not press  (CANCEL) button during reservation setting because this will result in all reservation contents to be lost.
- The reservation contents will not stored in the indoor unit until  (SEND) button has been pressed.

### Step 2: Select Mode A or Mode B and activate or deactivate WEEKLY TIMER.

- How to select Mode A or Mode B of WEEKLY TIMER setting.
  1. Press  (WEEKLY) button.  and  blink on the display. (Normal Mode A will blink first).
  2. Press  (WEEKLY) button again.  and  blink on the display.
  3. Select Mode A or Mode B. Press  (SEND) button while directing the remote controller towards the indoor unit for about 3 seconds. Timer lamp on the indoor unit will blink rapidly.

After beep sound emitted from indoor unit, TIMER lamp will light up.  
**Please ensure that the TIMER lamp lights up.**  
This indicates that Mode A or Mode B selection and active WEEKLY TIMER have been confirmed.

### Setting non-active WEEKLY TIMER .

1. Direct the remote controller towards the indoor unit and press  (CANCEL) button. Beep sound will be emitted from indoor unit and TIMER lamp will be OFF. Reservation indication on remote display will also disappear. This indicates that non-active WEEKLY TIMER has been confirmed.

- To activate back the setting of WEEKLY TIMER, repeat the steps for "How to select Mode A or Mode B of WEEKLY TIMER setting".

### NOTE

- When setting ONCE TIMER, operation of WEEKLY TIMER is interrupted. After ONCE TIMER operation is complete, WEEKLY TIMER operation will be activated.
- When ONCE TIMER is cancelled, operation of WEEKLY TIMER is also cancelled. Need to set WEEKLY TIMER operation for activation.
- After auto restart, WEEKLY TIMER operation is cancelled. Need to set WEEKLY TIMER operation for activation.

### NOTE

- Up to 6 programs can be set per day. Setting ON TIMER or OFF TIMER for each program number can be at random. When pressing  (SEND) button, the set ON TIMER or OFF TIMER for each program number will automatically arranged so that program number 1 shall have the earliest time and program number 6 shall have the latest time. If the setting time is the same, Priority will be given to the latest reservation contents.
- **CAUTION** If the remote controller is left idle and  (SEND) button is not pressed within 3 minutes after reservations have been made , all current reservations will be lost.

## WEEKLY TIMER OPERATION

ENGLISH

### Step 3: Copy and cancel the reservation schedule.


- How to copy and paste.

Editing the reservation schedule is easy by copying data from one day to another day.


1. Press (WEEKLY) button to select Mode A or Mode B.



2. Press (COPY/PASTE) button for about 3 seconds to start editing the reservation schedule.

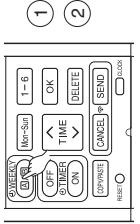


3. Press (DAY) button to select a day of the week to copy.

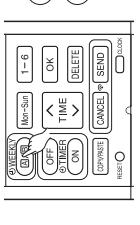


4. Press (COPY/PASTE) button. Then "PASTE" blinks on the display.  
\* Press (CANCEL) button to cancel the COPY mode. Normal setting mode is activated.




5. Press (DAY) button to select a day of the week to paste.

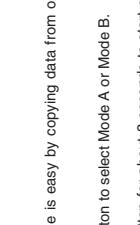

6. Press (COPY/PASTE) button one more time to paste. only blinks on the display.

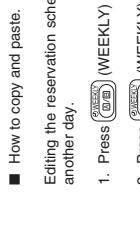


7. To continue copying to other days, press (MON-SUN) or (1-6) or (TIME) or (OK).

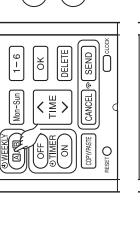


Then start from step 3.

8. After copy and paste completed, press (SEND) button while directing the remote controller towards the indoor unit for about 3 seconds. Timer lamp on the indoor unit will blink rapidly. After beep sound emitted from indoor unit, TIMER lamp will light up.

**Please ensure that the TIMER lamp lights up.**  
If TIMER lamp does not light up, Press (SEND) button again.

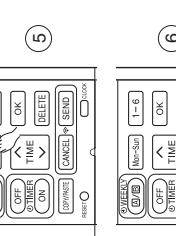

● Reservation data will not change if (SEND) button is not pressed.

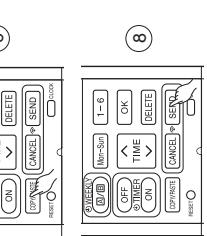

### NOTE

- If there is no reservation data, copying data from one day to another day cannot be done.


## WEEKLY TIMER OPERATION

### Step 3: Copy and cancel the reservation schedule.

- How to delete WEEKLY TIMER data.

[Delete one program number reservation]


1. Press (WEEKLY) button to select Mode A or Mode B.

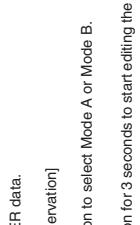

2. Press (DELETE) (WEEKLY) button for 3 seconds to start editing the reservation schedule.




3. Press (DAY) button to select a day of the week to edit.

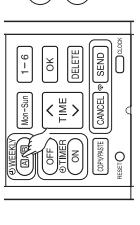

4. Press (1-6) to select program number. Selected program number will blink.





5. Press (DELETE) (WEEKLY) button. Reservation of selected program number is deleted.

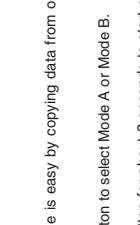

6. After deleting, press (SEND) button while directing the remote controller towards the indoor unit for about 3 seconds. Timer lamp on the indoor unit will blink rapidly. After beep sound emitted from indoor unit, TIMER lamp will light up.

**Please ensure that the TIMER lamp lights up.**

 ● Reservation will not change if (SEND) button is not pressed.

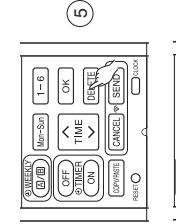


## WEEKLY TIMER OPERATION

ENGLISH

### Step 3: Copy and cancel the reservation schedule.

 [Delete one day reservation]



1. Press (WEEKLY) button to select Mode A or Mode B.

2. Press (WEEKLY) button for 3 seconds to start editing the reservation schedule.

3. Press (DAY) button to select a day of the week to edit.

 
4. Press (DELETE) button for about 10 seconds. Reservations for all program numbers will be deleted.

- If press for a short time, reservation for one program number will be deleted.

5. After deleting, press (SEND) button while directing the remote controller towards the indoor unit for about 3 seconds. Timer lamp on the indoor unit will blink rapidly. After beep sound emitted from indoor unit, TIMER lamp will light up.

Please ensure that the **TIMER lamp lights up**.

• Reservation will not change if (SEND) button is not pressed.



[Delete Mode A or Mode B]

1. Press (WEEKLY) button to select Mode A or Mode B.
2. Direct the remote controller towards the indoor unit and press (DELETE) button for about 10 seconds while Mode A or Mode B display blinks.

After beep sound emitted from indoor unit, reservations for Mode A or Mode B will disappear.



### NOTE

- If all reservations in the remote controller were deleted and pressed (SEND) button, no signal will be transmitted to indoor unit. TIMER lamp will remain off and no changes will be done to the reservations stored in the indoor unit.

## INFO FUNCTION

INFO

F

- By pressing (INFO) button, temperature around remote controller and monthly power consumption will be displayed on the remote controller.
- After changing the batteries, direct the remote controller towards the indoor unit and press (INFO) button.
- Current calendar and clock will be transmitted from indoor unit.
- In order to receive information from indoor unit, the distance between remote controller and receiver of indoor units is within 2 meters.

### To check temperature around remote controller

1. Press (INFO) button.

Temperature will be displayed for 10 seconds.

### To check monthly power consumption

- Direct the remote controller towards the receiver of indoor unit (within 2 meters in front of indoor unit) and press (INFO) button. Wait for 2 seconds for signal transmission.

While the display is off, the monthly power consumption amount for heating → last month power consumption amount for cooling → this month power consumption amount for heating → last month power consumption amount for cooling → temperature around remote controller → this month power consumption amount for heating ..... cyclically.

- If indication is not given, bring remote controller closer to the receiver of the indoor unit.
- Indicated value shall be regarded as a guide only.

### Current calendar and clock can be retrieved from indoor unit

- Direct the remote controller towards the receiver of indoor unit (within 2 meters in front of indoor unit) and press (INFO) button. Wait for 2 seconds for signal transmission.

Once received the current calendar and clock, check whether they are correct or not by pressing (CLOCK) button.

- If there is no power supply to indoor unit or calendar and clock have not been set, INFO function cannot be used for sending or receiving information.

### NOTE

- In case failure occurs to the air conditioner, by pressing (INFO) button, an error code will be displayed.
- Direct the remote controller towards the receiver of indoor unit (within 2 meters in front of indoor unit) and press (INFO) button. Wait for 2 seconds for signal transmission.
- An error code will be displayed.
- Call service center and inform the error code.
- Information of "Monthly Power consumption" is not available for 6 rooms multi system.
- Info Function to check monthly power consumption.
- During installation, in case of power failure or breaker ON / OFF, ensure to set the clock and calendar for each indoor unit (unit in standby mode or auto restart), for single or multi connection, by pressing (START / STOP) button.
- Failure to do the above, monthly power consumption amount will not be displayed on the remote controller.

## OPERATION MODE LOCK


ENGLISH

The remote controller can be set to fix the HEATING mode (including FAN), COOLING mode (including FAN) and DEHUMIDIFYING mode (including FAN) operations.

■ Method to lock HEATING mode (including FAN) operation.

Press  (ECO) and  (POWERFUL) buttons simultaneously for about 5 seconds when the remote controller is OFF.

"", "", "FAN" and "" will be displayed for about 10 seconds. Later, "", "", "FAN" and "" will remain.

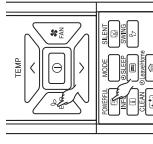

This indicates that HEATING mode operation is locked.

When pressing  (MODE) button, "", "", "FAN" or "" will be displayed.

■ Method to unlock HEATING mode (including FAN) operation.

Press  (ECO) and  (SILENT) buttons simultaneously for about 5 seconds when the remote controller is OFF.

All operation mode symbols will appear on the display for about 10 seconds. After that, operation mode symbol before cancellation will be displayed.

This indicates that HEATING mode operation is unlocked.

■ Method to lock COOLING and DEHUMIDIFYING modes (including FAN) operations.

Press  (ECO) and  (SILENT) buttons simultaneously for about 5 seconds when the remote controller is OFF.

"", "", "FAN" and "" will be displayed for about 10 seconds. Later, "", "", "FAN" and "" will remain.

This indicates that COOLING and DEHUMIDIFYING mode operation is locked.

When pressing  (MODE) button, "", "", "FAN" or "" will be displayed.

■ Method to unlock COOLING and DEHUMIDIFYING modes (including FAN) operations.

Press  (ECO) and  (SILENT) buttons simultaneously for about 5 seconds when the remote controller is OFF.

All operation mode symbols will appear on the display for about 10 seconds. After that, operation mode symbol before cancellation will be displayed.

This indicates that COOLING and DEHUMIDIFYING modes operation is unlocked.

**NOTE**


- Operation Mode Lock function will not activate if TIMER reservations activate.
- TIMER reservations shall be deactivated first. Then, Operation Mode Lock function can be activated.
- HEATING, COOLING and DEHUMIDIFYING mode (including FAN) operations can be unlocked by pressing the  (RESET) button. However, by pressing the  (RESET) button, all the information stored in the remote controller will disappear. You may need to set the necessary information again.
- For multi connections, unit and mode which is set to lock HEATING and switched on first shall have higher priority. Other units which are chosen to operate at different modes shall be in STANDBY until either the first unit operation is switched off or the mode is selected to be same as the first unit.

# HITACHI

Inspire the Next


## Remote Controller Manual

MODEL  
RAR-6N1

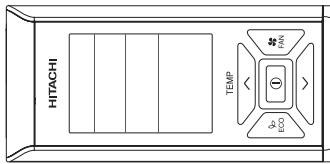



### **PREPARATION BEFORE OPERATION**

#### ■ To install the batteries

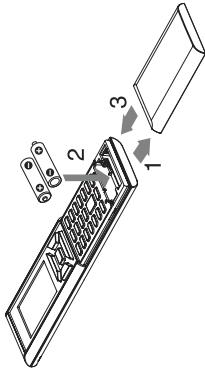

#### ■ To fix the remote controller holder to the wall

 1. Slide the cover to take it off.
2. Install two dry batteries AAA/LR03 (alkaline). The direction of the batteries should match the marks in the case.
3. Replace the cover at its original position.

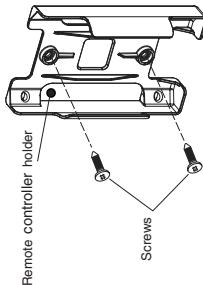

#### NOTE

##### Notes on batteries

- When replacing the batteries, use batteries of the same type, and replace both old batteries together.
- When the system is not used for a long time, take the batteries out.
- The batteries will last for approximately 1 year. However, if the remote controller display begins to fade and degradation of reception performance occurs within a year, replace both batteries with new size AAA/LR03 (alkaline).
- The attached batteries are provided for the initial use of the system.
- The usable period of the batteries may be short depending on the manufactured date of the air conditioner.

##### Notes on the remote controller





- Never expose the remote controller to direct sunlight.
- Dust on the signal transmitter or receiver will reduce the sensitivity. Wipe off dust with soft cloth.
- Signal communication may be disabled if an electronic-starter-type fluorescent lamp (such as inverter-type lamps) is in the room. Consult the shop if that is the case.
- If the remote controller signals happen to operate another appliance, move that appliance to somewhere else, or consult the service shop.
- When the remote controller is not in use, please close the slide cover to prevent failure.

SUOMI NEDERLANDS SVENSKA ÆHMÐVÍKA PORTUGUÈS ESPÀÑOL ITALIANO FRANCÃAIS DEUTSCHE ENGLISH

**Remote Controller manual**  
To obtain the best performance and ensure years of trouble free use, please read this instruction manual completely.  
Page 1-28

## PREPARATION BEFORE OPERATION

**ENGLISH**

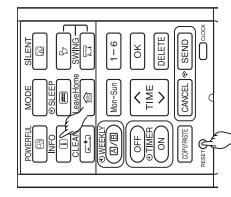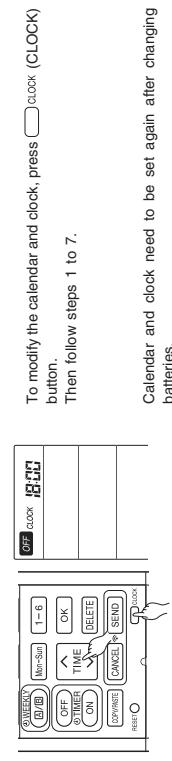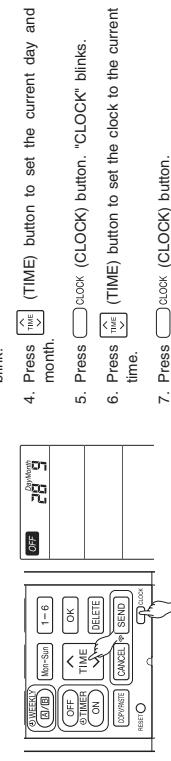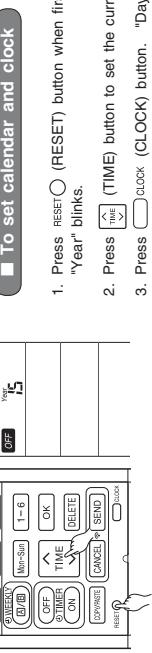


### NOTE

Note on setting the calendar and clock.  
 • If the calendar and clock are not set, the ON-timer, OFF-timer and Weekly Timer cannot be set.  
 • If the calendar and clock are not set correctly, the ON-timer, OFF-timer and Weekly Timer will not operate correctly.  
 • When the ON-timer, OFF-timer and Weekly Timer are set, the calendar and clock cannot be changed.  
 • If there is a need to change the calendar and clock, ON-timer, OFF-timer and Weekly Timer need to be cancelled.

## NAMES AND FUNCTIONS OF REMOTE CONTROLLER

### REMOTE CONTROLLER

- This controls the operation of the indoor unit. The range of control is about 7 meters. If indoor lighting is controlled electronically, the range of control may be shorter.
- This unit can be fixed on a wall using the fixture provided. Before fixing it, make sure the indoor unit can be controlled from the remote controller.
- Handle the remote controller with care. Dropping it or getting it wet may compromise its signal transmission capability.
- After new batteries are inserted into the remote controller, the unit will initially require approximately 10 seconds to respond to commands and operate.
- When remote controller is not in use for about 3 minutes during OFF condition, indicated by OFF on the display, the LCD will turn off.
- During clock setting, the LCD will turn off about 10 minutes later if the remote controller is not in use.
- The LCD will not turn off during TIMER setting.

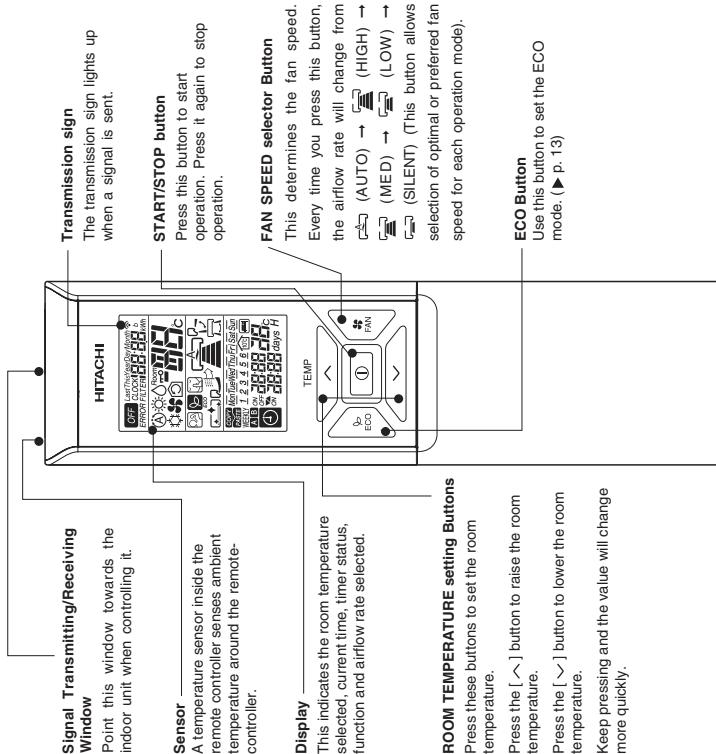


- 4 -

- 3 -


## NAMES AND FUNCTIONS OF REMOTE CONTROLLER

### VARIOUS FUNCTIONS

#### ■ Auto Restart Control

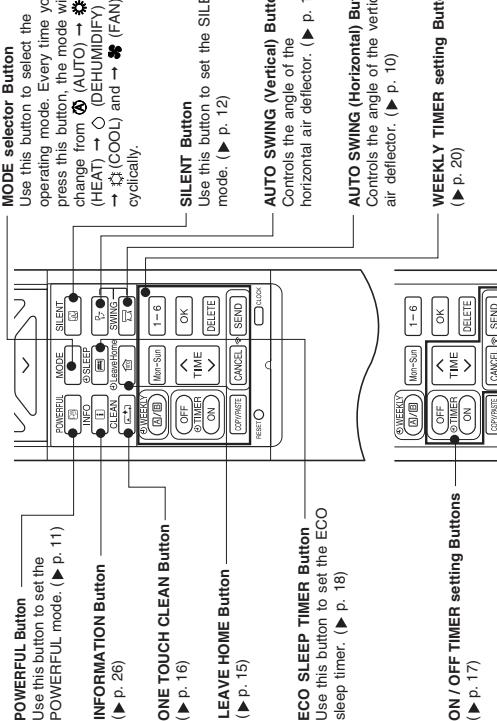


ENGLISH

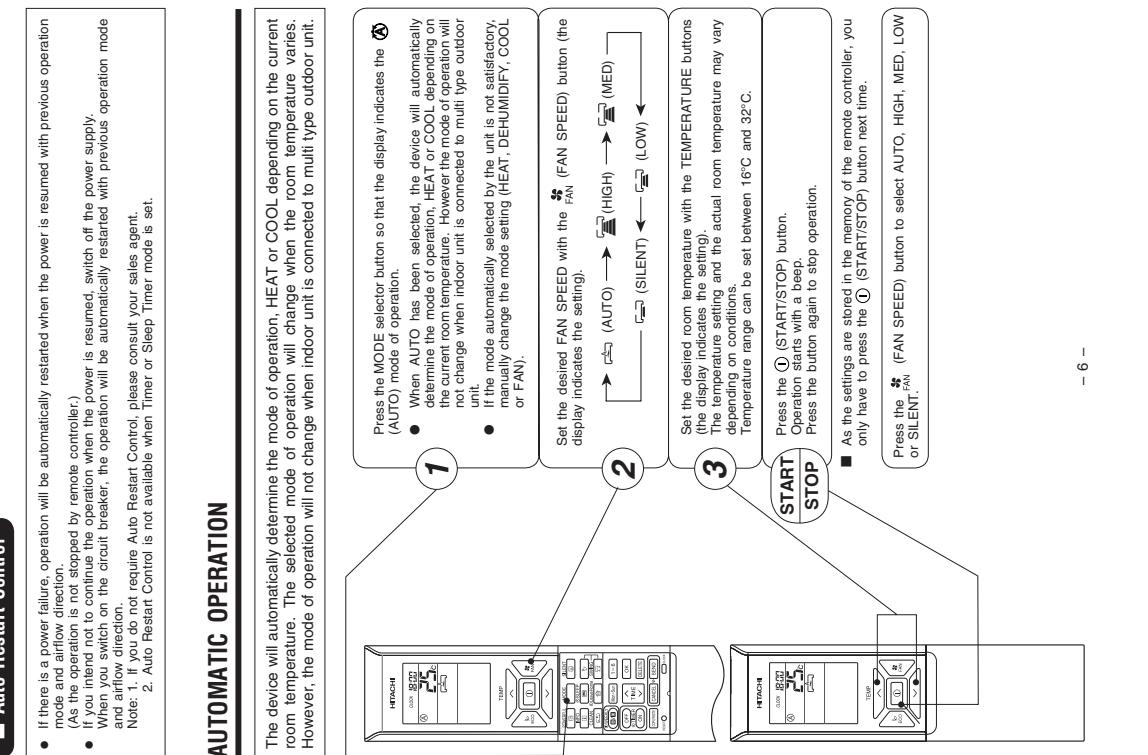

## HEATING OPERATION

### ENGLISH

- Use the device for heating when the outdoor temperature is under 21°C.
- When it is too warm (over 21°C), the heating function may not work in order to protect the device.
- In order to maintain reliability of the device, please use this device when outdoor temperature is above -15°C.

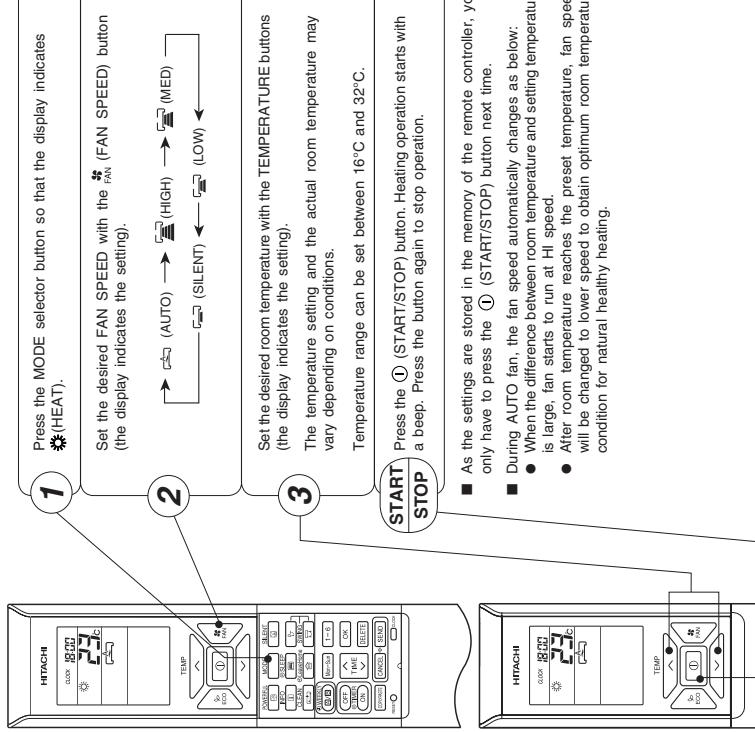


### Defrosting

Defrosting will be performed about once an hour when frost forms on the heat exchange of the outdoor unit, for 5-10 minutes each time. During defrosting operation, the operation lamp blinks in a cycle of 3 seconds on and 0.5 second off. The maximum time for defrosting is 20 minutes. However, if the indoor unit is connected to multi type outdoor unit, the maximum time for defrosting is 15 minutes. (If the piping length used is longer than usual, frost is likely to form.)

- 7 -

## DEHUMIDIFYING OPERATION

- Use the device for dehumidifying when the room temperature is over 16°C.
- When it is under 15°C, the dehumidifying function will not work.

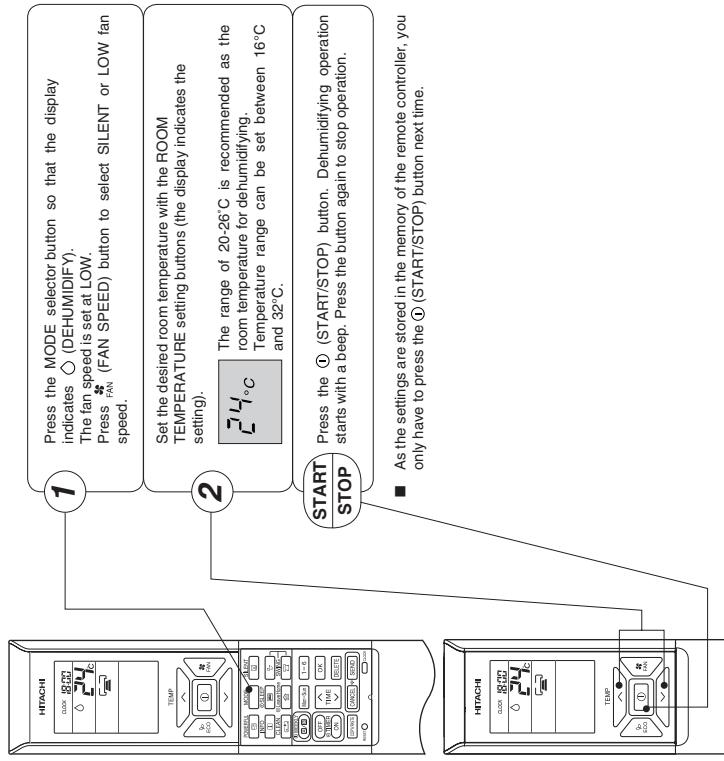

### Dehumidifying Function

- When the room temperature is higher than the temperature setting: The device will dehumidify the room, reducing the room temperature to the preset level.
- When the room temperature is lower than the temperature setting: Dehumidifying will be performed at the temperature setting slightly lower than the current room temperature, regardless of the temperature setting.
- The preset room temperature may not be reached depending on the number of people present in the room or other room conditions.


- 8 -

## COOLING OPERATION

Use the device for cooling when the outdoor temperature is 10~43°C.  
If indoors humidity is very high (80%), some dew may form on the air outlet grille of the indoor unit.

## FAN OPERATION

User can use the device simply as an air circulator.

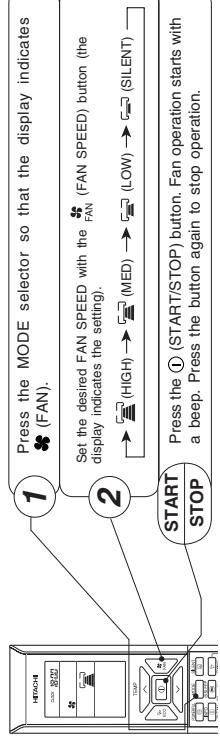

Set the desired room temperature with the TEMPERATURE buttons  
(the display indicates the setting).

The temperature setting and the actual room temperature may vary depending on conditions.


Temperature range can be set between 16°C and 32°C

Press the ① (START/STOP) button. Cooling operation starts with a beep. Press the button again to stop operation. The cooling function does not start if the temperature setting is higher than the current room temperature (even though the ① (OPERATION) lamp lights). The cooling function will start as soon as user sets the temperature below the current room temperature.

As the settings are stored in the memory of the remote controller, you only have to press the ① (START/STOP) button next time.

During AUTO fan, the fan speed automatically changes as below:


- When the difference between room temperature and setting temperature is large, fan starts to run at HI speed.
- After room temperature reaches the preset temperature, fan speed will be changed to lower speed to obtain optimum room temperature condition for natural healthy cooling.

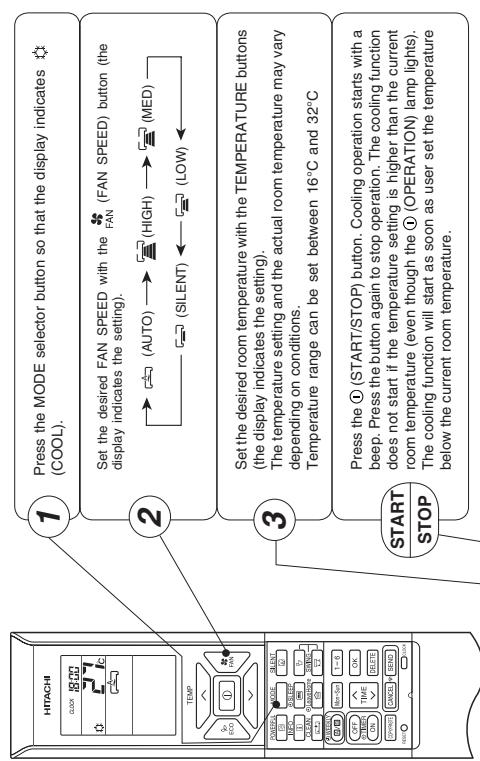

## AUTO SWING OPERATION

### VERTICAL SWING

 **To start Vertical Auto Swing**



• Press (AUTO SWING (VERTICAL)) button. The deflector(s) will start to swing up and down.  
 is displayed on the LCD.

**To cancel Vertical Auto Swing**

• Press (AUTO SWING (VERTICAL)) button again. The defector(s) will stop in the current position.  
 disappeared from the LCD.

### HORIZONTAL SWING

**To start Horizontal Auto Swing**



• Press (AUTO SWING (HORIZONTAL)) button. The defectors will start to swing right and left.  
 is displayed on the LCD.

**To cancel Horizontal Auto Swing**

• Press (AUTO SWING (HORIZONTAL)) button again. The defectors will stop in the current position.  
 disappeared from the LCD.

### NOTE

- During cooling and dehumidifying operation, do not keep the deflectors swinging or in the lower position (in the case of vertical auto swing) for a long time. It may cause dew condensation on the deflectors.

## POWERFUL OPERATION

### ENGLISH

- By pressing  (POWERFUL) button during AUTO, HEATING, DEHUMIDIFYING, COOLING or FAN operation, the air conditioner performs at the maximum power.
- During POWERFUL operation, cooler or warmer air will be blown out from indoor unit for COOLING or HEATING operation respectively.


#### ■ To start POWERFUL operation

- Press  (POWERFUL) button during operation.
- " " is displayed on the LCD.
- POWERFUL operation ends in 20 minutes. Then the system automatically operates with the previous settings used before POWERFUL operation.

#### ■ To cancel POWERFUL operation

- Press the  (START/STOP) button Or
- Press  (POWERFUL) button again.
- POWERFUL operation stops.

" " disappears from the LCD.

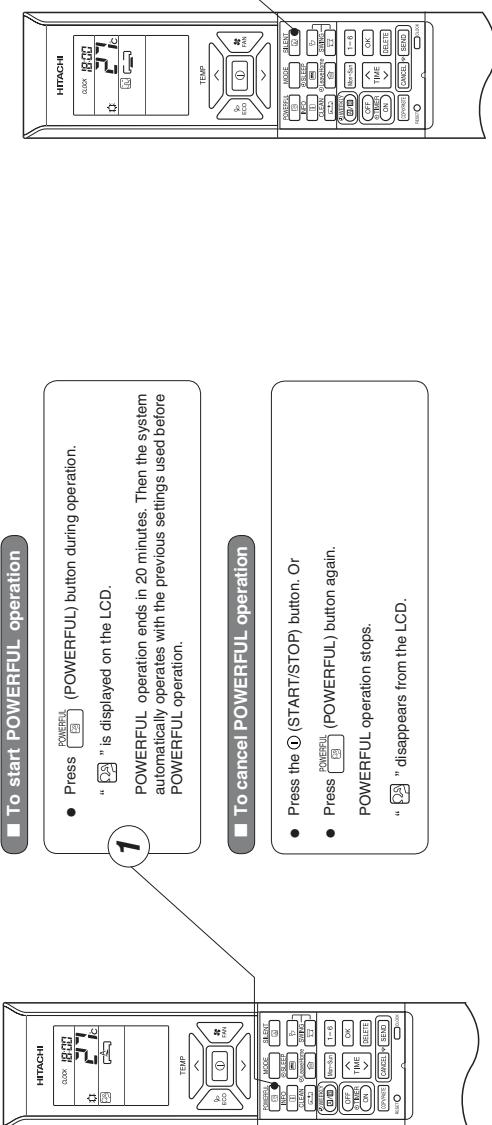

#### NOTE

- When SLEEP mode, ECO mode, SILENT mode or LEAVE HOME mode is selected, POWERFUL operation is cancelled.
- During POWERFUL operation, capacity of the air conditioner will not increase
  - if the air conditioner is already running at maximum capacity.
  - just before defrost operation (when the air conditioner is running in HEATING operation).
- After auto restart, SILENT operation is cancelled. Fan speed will return to previous fan speed before SILENT operation.
- For multi model connections, POWERFUL operation may not function depending on operation conditions.

## SILENT OPERATION

- By pressing  (SILENT) button during AUTO, HEATING, DEHUMIDIFYING, COOLING or FAN operation, the fan speed will change to ultra slow.

#### ■ To start SILENT operation

- Press  (SILENT) button during operation.
- " " is displayed on the LCD. Fan speed will be ultra slow.

#### ■ To cancel SILENT operation

- Press  (START/STOP) button. Or
- Press  (SILENT) button again or  (FAN SPEED) button.
- Fan speed will return to previous fan speed before SILENT operation starts.
- SILENT operation stops.
- " " disappears from the LCD.

#### NOTE

- When POWERFUL operation is selected, SILENT operation is cancelled. Fan speed will return to previous fan speed before SILENT operation.
- After auto restart, SILENT operation is cancelled. Fan speed will return to previous fan speed before SILENT operation.
- During any operation with fan speed  (SILENT), if press  (SILENT) button, fan speed will not change.

## ■ ECO OPERATION

### ■ ECO OPERATION with sensor

There are two kinds of ECO OPERATION with sensor or without sensor, depending on models.  
Please refer to [Names and Functions of each part] in the unit instruction manual to verify if your unit is equipped with a sensor and read the following instruction on ECO Operation accordingly.

#### ■ ECO OPERATION

ECO operation is an energy saving function by changing set temperature automatically and by limiting the maximum power consumption value.


- 1**
- By pressing the  (ECO) button during AUTO, HEATING, DEHUMIDIFYING or COOLING operation, the air conditioner performs the "ECO" operation.

#### ■ To start ECO operation

- Press  (ECO) button during operation.  
"  " is displayed on the LCD.  
A beep sound is emitted from indoor unit.  
Energy saving operation will start by changing the set temperature higher or lower automatically and reducing operation power consumption. This function may vary based on the connected outdoor unit.

#### ■ To cancel ECO operation

- Press ① (START/STOP) button. Or  
Press  (ECO) button again.  
"  " disappears from the LCD.  
A beep sound is emitted from indoor unit.

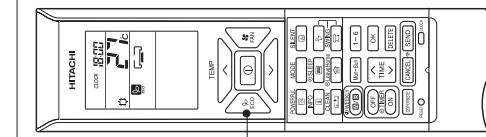

### ■ ECO OPERATION

The sensor detects the presence of people in the room. When nobody is detected, the unit automatically starts energy saving operation by shifting the set temperature in two steps.

- 1**
- By pressing the  (ECO) button during AUTO, HEATING, DEHUMIDIFYING or COOLING operation, the air conditioner performs the "ECO" operation.


#### ■ To start ECO operation

- Press  (ECO) button during operation.  
"  " is displayed on the LCD.  
A beep sound is emitted from indoor unit and the (ECO) lamp on the indoor unit lights up.  
The sensor starts to detect the presence of people in the room.

#### ■ To cancel ECO operation

- Press ① (START/STOP) button. Or  
Press  (ECO) button again.  
"  " disappears from the LCD.  
A beep sound is emitted from indoor unit and the (ECO) lamp on the indoor unit turns off.

When the presence of people is not detected for 20 minutes, the set temperature is automatically shifted for energy saving. If nobody is in the room for 60 minutes, the set temperature is shifted further.  
Cooling operation [diagram representation for illustrative purpose only]

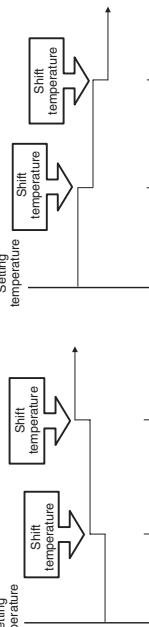

The unit returns to normal operation when the sensor detects human movement.

#### NOTE

- ECO function will not be effective when power consumption is low.
- By pressing (POWERFUL) button, ECO operation is cancelled.
- After auto restart, ECO operation is cancelled and previous operation mode shall start.
- For multi model connections, energy saving operation shall start only by changing set temperature higher or lower automatically. However, effectiveness of ECO depends on operation conditions.

ENGLISH

10°C LEAVE HOME (LH) OPERATION


Prevent the room temperature from falling too much when no one is at home. The initial setting temperature is 10°C and the temperature range is able to see between 10°C and 16°C.  
This operation is able to operate by "Continuous operation" or "Day timer operation". Please use "Day timer operation" to set the number of days up to 99 days.

ENGLISH

### Option 1 Continuous operation



Continuous operation

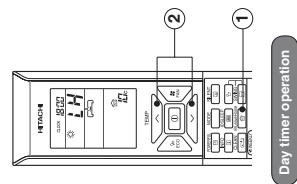

To cancel LEAVE HOME operation

- Press ① (START/STOP) button. Or  
②  (LEAVE HOME) button again.
  - Return to previous operation mode. Or
  - Change to other operation mode by pressing ④ MODE button.

1


- NOTE**

  - After reaching the set number of operation days for Leave Home or by pressing the (Leave Home) button again, the unit will operate in previous mode.
  - During Leave Home operation, fan speed and horizontal air deflector position cannot be changed.
  - By pressing Leave Home button, implementation of Weekly timer or Once timer is cancelled.
  - In case of power supply shut down, after autorestart, all setting for number of days operation will be reset and unit shall be in continuous operation.
  - POWERFUL, SILENT and ECO operations are not applicable during Leave Home operation.
  - For multi connection
    - FAN/COOLING/DEHUMIDIFYING and Leave Home cannot operate at the same time.
    - The first/run unit has a priority and other units in different mode will be in standby mode.
    - Heating operation can be used with Leave Home.
  - When two or more rooms, are set to operate Leave Home, the temperature set by Leave Home may not be reached. It also depends on outdoor temperature.

## CLEAN (ONE TOUCH CLEAN) OPERATION

Driving indoor heat exchanger after cooling operation to prevent mildew.

## ■ To start CLEAN operation

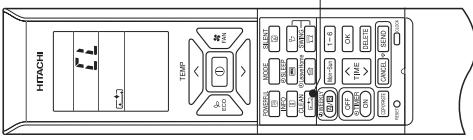

10

- When CLEAN operation finish, unit will switch OFF automatically.  
If Weekly Timer or Once Timer is set, there is a need to cancel those timer before operating CLEAN function.

For multi connections, when pressing  (CLEAN) button, operation is limited to FAN operation. For multi connections, when one room operates CLEAN operation first, other rooms can operate COOLING, DEHUMIDIFYING or FAN operation. However, when other rooms need to operate HEATING operation, air conditioner will be in STANDBY mode. After CLEAN operation finish, HEATING operation will start.

## ONCE TIMER (ON/OFF TIMER) OPERATION

②SLEEP  
OFF  
ON

### ENGLISH

#### OFF TIMER

The device can be set to turn off at a preset time.

1. Press  $\text{OFF}$  (OFF-TIMER) button.  $\oplus_{\text{on}}$  and  $\text{L}_{\text{off}}$  blink on the display.
2. Set the "turn-off time" with  $\text{TIME}$  button.
3. After setting, direct the remote controller towards the indoor and press  $\text{SEND}$  (SEND) button.

$\oplus_{\text{on}}$  and "set time" lights up instead of blinking.

A beep sound emitted from indoor unit and the (TIMER) lamp on the indoor unit lights up.

#### ON TIMER

The device will turn on at a designated time.

1. Press  $\text{TIME}$  (ON-TIMER) button.  $\text{O}_{\text{on}}$  and  $\text{L}_{\text{off}}$  blink on the display.
2. Set the "turn-on time" with  $\text{TIME}$  button.
3. After setting, direct the remote controller towards the indoor and press  $\text{SEND}$  (SEND) button.

$\text{O}_{\text{on}}$  and "set time" light up instead of blinking.

A beep sound emitted from indoor unit and the (TIMER) lamp on the indoor unit lights up.

#### ON/OFF TIMER

The device will turn on (off) and off (on) at the designated time.

- The switching occurs first at the preset time that comes earlier.
- The arrow mark appears on the display to indicate the sequence of switching operations.

1. Press  $\text{OFF}$  (OFF-TIMER) button so that  $\oplus_{\text{on}}$  and  $\text{L}_{\text{off}}$  blink on the display.
2. Set the "turn-off" time with  $\text{TIME}$  button. After setting, direct the remote controller towards the indoor and press  $\text{SEND}$  (SEND) button.
3. Press  $\text{ON}$  (ON-TIMER) button so that  $\text{O}_{\text{on}}$  and set "turn-off" time light up.
4. Set the "turn-on" time with  $\text{TIME}$  button.
5. After setting, direct the remote controller towards the indoor and press  $\text{SEND}$  (SEND) button

$\text{O}_{\text{on}}$  and set "turn-on" time light up instead of blinking.


A beep sound emitted from indoor unit and the (TIMER) lamp on the indoor unit lights up.

## ECO SLEEP TIMER OPERATION

②SLEEP  
OFF  
ON

The timer can be set up to a duration of 7 hours.  
By pressing  $\text{SLEEP}$  (SLEEP) button during AUTO, HEATING, DEHUMIDIFYING, COOLING or FAN operation, the unit shifts the room temperature and reduces the fan speed. It results in energy saving.  
Set the current time first before operating the ECO SLEEP TIMER operation.

### ■ To start ECO SLEEP TIMER operation

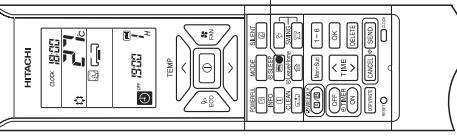

Press  $\text{SLEEP}$  (SLEEP) button during operation.

- "  $\text{O}_{\text{on}}$  ", "  $\text{L}_{\text{off}}$  ", "  $\oplus_{\text{on}}$  ", "OFF", "  $\text{SLEEP}$  ", off time, "  $\text{L}_{\text{off}}$  " and number of hour are displayed on the remote controller display.
- During ECO SLEEP TIMER operation, fan speed will be ultra slow.
- A beep sound emitted from indoor unit and the (TIMER) lamp on the indoor unit lights up.

1

Pressing  $\text{SLEEP}$  (SLEEP) button repeatedly, the number of hours will change as below:



- During ECO SLEEP TIMER operation, air conditioner will continue to operate for the designated number of hours and then turn off.
- When the ECO SLEEP TIMER has been set, the display on the remote controller indicates the turn off time.



### ■ To cancel ECO SLEEP TIMER operation

Press ① (START/STOP) button.

- Room air conditioner will switch off.

Press  $\text{SLEEP}$  (SLEEP) button again until "  $\text{O}_{\text{on}}$  ", "  $\text{L}_{\text{off}}$  ", "  $\oplus_{\text{on}}$  ", "OFF", "  $\text{SLEEP}$  ", off time, "  $\text{L}_{\text{off}}$  " and number of hour disappear from the remote controller display.

Press  $\text{CANCEL}$  (CANCEL) button.

- A beep sound emitted from indoor unit and the (TIMER) lamp on the indoor unit turns off.
- SLEEP TIMER operation is canceled.

- NOTE**
- Point the signal window of the remote controller towards the indoor unit and press  $\text{CANCEL}$  (CANCEL) button.
  - $\oplus_{\text{on}}$  and "ON or OFF set time" goes out with a beep and the (TIMER) lamp on the indoor unit turns off.

 
- NOTE**
- User can set only one of the OFF-timer, ON-timer or ON/OFF-timer.
  - If WEEKLY TIMER already set, by setting the ONCE TIMER, ONCE TIMER operation is prioritized. When ONCE TIMER operation is complete, WEEKLY TIMER operation will be activated.

## ECO SLEEP TIMER OPERATION

### ■ To set ECO SLEEP TIMER and ON TIMER

The air conditioner will be turned off by ECO SLEEP TIMER and turned on by ON TIMER.

- Set the ON TIMER.
- Press (SLEEP) button and set ECO SLEEP TIMER.



Example:

In this case, air conditioner will turn off in 2 hours (at 1:38) and it will be turned on at 6:00 the next morning.

### ■ To cancel ECO SLEEP TIMER and ON TIMER operation


Direct the remote controller towards the indoor unit and press (CANCEL) button.

- "", "", "", "", "OFF", off time, "OK", number of hour, "ON" and ON TIMER set time disappear from the remote controller display.
- A beep sound emitted from indoor unit and the (TIMER) lamp on the indoor unit turns off.
- ECO SLEEP TIMER and ON TIMER reservations are cancelled.


30 minutes after setting ECO SLEEP TIMER, outdoor fan speed will be reduced to lower the noise level and depends on type of air conditioner.

These automatic operation changes contribute to energy saving without losing comfort.  
The level of energy consumption depends on outside temperature, room temperature, set temperature or air conditioner type.

Cooling operation [diagram representation for illustrative purpose only]

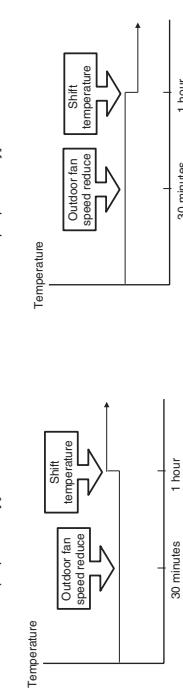

Heating operation [diagram representation for illustrative purpose only]

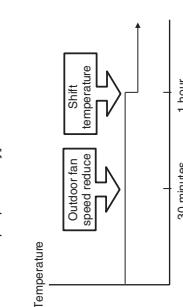

## ENGLISH

## WEEKLY TIMER OPERATION

- It is possible to select Mode A or Mode B. For each mode, up to 6 programs can be set per day. In total, a maximum of 42 programs can be set for a week for each mode.
- If calendar and clock are not set, the reservation setting for WEEKLY TIMER cannot be set.
- If calendar and clock are not set correctly, WEEKLY TIMER will not operate correctly.
- Reservation for calendar and clock shall be set first before operating WEEKLY TIMER.

**Step 1 : Set the reservation schedule to the remote controller. Send the registered reservation to indoor unit and then operate.**

**Step 2 : Select Mode A or Mode B and activate or deactivate WEEKLY TIMER.**

**Step 3 : Copy and cancel the reservation schedule.**

**Step 1 : Set reservation schedule to the remote controller. Send the registered reservation to indoor unit and then operate.**

■ How to set a WEEKLY TIMER.

1. Select Mode A or Mode B

- Press (WEEKLY) button. WEEKLY lights up. **A** and **B** blink on the display. (Mode A is selected). Press (WEEKLY) button again. **B** and **A** blink on the display. (Mode B is selected).

If no reservation has been made, ON/OFF, , appear.

If reservation has been made, ON/OFF, , will not appear.

2. Set a program

- Press (WEEKLY) button for about 3 seconds. The selection mode can be changed. **①**, day: Mon., program no. : 1, ON/OFF, setting time and setting temperature blink on the display.

3. Select the desired day of the week

Press (DAY) button.

- The day changes from Mon. → Tue → Wed → Thu → Fri → Sat → Sun  
→ Mon, Tue, Wed, Thu, Fri, Sat, Sun [Full days] → Mon, Tue, Wed, Thu, Fri [Weekday] → Sat, Sun [Weekend] → Mon → Tue ....

Select [Full day] for daily reservation.

Select [weekend] for Monday to Friday reservation.

- Select [weekend] for Saturday and Sunday reservation.
- After reservation has been set, it is easy to check and edit at the same time.

4. Press

- button to select a program number.  
The number changes from 1 → 2 → 3 → 4 → 5 → 6 → 1 → 2 ....

- If program number has been set, follow above in order to make changes.


### NOTE

- If ECO SLEEP TIMER is set when OFF TIMER or ON/OFF TIMER has been set earlier, the ECO SLEEP TIMER becomes effective instead of the OFF TIMER or ON/OFF TIMER.


## WEEKLY TIMER OPERATION

ENGLISH


- 5. Press (ON-OFF TIMER) button to select ON TIMER or OFF TIMER reservation.

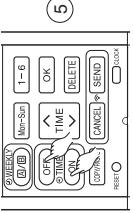

- 6. Press (TIME) button to set time reservation.

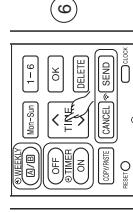

- 7. Press (TEMP < or >) button to set temperature reservation.

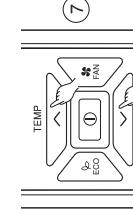

- 8. Press (OK) button. The reservations are set. Day, program number, ON reservation, setting temperature will light up. will be continuously blinks. If reservation is not complete, settings will not be stored in memory.

To continue with the reservation, press (1-6) (SEND) buttons.

Follow step 3 to 8 for reservation.

- 9. After all the reservations have been set, press (SEND) button while directing the remote controller towards the indoor unit for about 3 seconds. Timer lamp on the indoor unit will blink rapidly. After beep sound emitted from indoor unit, TIMER lamp will light up.

**Please ensure that the TIMER lamp lights up.**

This indicates that the reservation has been stored in the indoor unit and Timer function has been completed. The reservation contents will appear on the remote controller display.

- If TIMER lamp on the indoor unit does not light up, press (SEND) button while directing the remote controller towards the indoor unit for about 3 seconds.

- **CAUTION !** Do not press (CANCEL) button during reservation setting because this will result in all reservation contents to be lost.

- The reservation contents will not stored in the indoor unit until (SEND) button has been pressed.

### Step 2: Select Mode A or Mode B and activate or deactivate WEEKLY TIMER.



■ How to select Mode A or Mode B of WEEKLY TIMER setting.

1. Press (WEEKLY) button. and blink on the display. (Normally Mode A will blink first).
2. Press (WEEKLY) button again. and blink on the display.
3. Select Mode A or Mode B. Press (SEND) button while directing the remote controller towards the indoor unit for about 3 seconds. Timer lamp on the indoor unit will blink rapidly.

After beep sound emitted from indoor unit, TIMER lamp will light up.  
**Please ensure that the TIMER lamp lights up.**

This indicates that Mode A or Mode B selection and active WEEKLY TIMER have been confirmed.

■ Setting non-active WEEKLY TIMER .

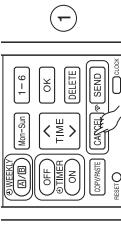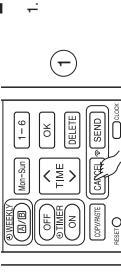

- 1. Direct the remote controller towards the indoor unit and press (CANCEL) button. Beep sound will be emitted from indoor unit and TIMER lamp will be OFF. Reservation indication on remote display will also disappear. This indicates that non-active WEEKLY TIMER has been confirmed.

- To activate back the setting of WEEKLY TIMER, repeat the steps for "How to select Mode A or Mode B of WEEKLY TIMER setting".

### NOTE

- When setting ONCE TIMER, operation of WEEKLY TIMER is interrupted. After ONCE TIMER operation is complete, WEEKLY TIMER operation will be activated.
- When ONCE TIMER is cancelled, operation of WEEKLY TIMER is also cancelled. Need to set WEEKLY TIMER operation for activation.
- After auto restart, WEEKLY TIMER operation is cancelled. Need to set WEEKLY TIMER operation for activation.

### NOTE

- Up to 6 programs can be set per day. Setting ON TIMER or OFF TIMER for each program number can be at random. When pressing (SEND) button, the set ON TIMER or OFF TIMER for each program number will automatically arranged so that program number 1 shall have the earliest time and program number 6 shall have the latest time.
- If the setting time is the same, Priority will be given to the latest reservation contents.
- **CAUTION !** If the remote controller is left idle and (SEND) button is not pressed within 3 minutes after reservations have been made , all current reservations will be lost.

## WEEKLY TIMER OPERATION

### Step 3: Copy and cancel the reservation schedule.

ENGLISH

- How to copy and paste.

Editing the reservation schedule is easy by copying data from one day to another day.

1. Press (WEEKLY) button to select Mode A or Mode B.

2. Press (WEEKLY) button for about 3 seconds to start editing the reservation schedule.

3. Press (DAY) button to select a day of the week to copy.

4. Press (COPY/PASTE) button. Then "PASTE" blinks on the display.  
\* Press (CANCEL) button to cancel the COPY mode. Normal setting mode is activated.

5. Press (DAY) button to select a day of the week to paste.

6. Press (COPY/PASTE) button one more time to paste. only blinks on the display.

7. To continue copying to other days, press (Mon-Sun) or (1-6) or (TIME UP) or (TIME DOWN).

- Then start from step 3.

8. After copy and paste completed, press (SEND) button while directing the remote controller towards the indoor unit for about 3 seconds. Timer lamp on the indoor unit will blink rapidly. After beep sound emitted from indoor unit, TIMER lamp will light up.

- Please ensure that the TIMER lamp lights up.**  
If TIMER lamp does not light up. Press (SEND) button again.

- Reservation data will not change if (SEND) button is not pressed.

### NOTE

- If there is no reservation data, copying data from one day to another day cannot be done.

## WEEKLY TIMER OPERATION

### Step 3: Copy and cancel the reservation schedule.

- How to delete WEEKLY TIMER data.

[Delete one program number reservation]

1. Press (WEEKLY) button to select Mode A or Mode B.

2. Press (WEEKLY) button for 3 seconds to start editing the reservation schedule.

3. Press (DAY) button to select a day of the week to edit.

4. Press (1-6) to select program number. Selected program number will blink.

5. Press (DELETE) button. Reservation of selected program number is deleted.

6. After deleting, press (SEND) button while directing the remote indoor unit towards the indoor unit for about 3 seconds. Timer lamp on the indoor unit will blink rapidly. After beep sound emitted from indoor unit, TIMER lamp will light up.

- Please ensure that the TIMER lamp lights up.**

- Reservation will not change if (SEND) button is not pressed.

## WEEKLY TIMER OPERATION

### INFO FUNCTION

#### ENGLISH

##### Step 3: Copy and cancel the reservation schedule.

[Delete one day reservation]

1. Press  (WEEKLY) button to select Mode A or Mode B.
2. Press  (WEEKLY) button for 3 seconds to start editing the reservation schedule.
3. Press  (DAY) button to select a day of the week to edit.
4. Press  (DELETE) button for about 10 seconds. Reservations for all program numbers will be deleted.

- If press for a short time, reservation for one program number will be deleted.
- 5. After deleting, press  (SEND) button while directing the remote controller towards the indoor unit for about 3 seconds. Timer lamp on the indoor unit will blink rapidly. After beep sound emitted from indoor unit, TIMER lamp will light up.

Please ensure that the TIMER lamp lights up.

- Reservation will not change if  (SEND) button is not pressed.

- By pressing  (INFO) button, temperature around remote controller and monthly power consumption will be displayed on the remote controller.
- After changing the batteries, direct the remote controller towards the indoor unit and press  (INFO) button.
- Current calendar and clock will be transmitted from indoor unit.
- In order to receive information from indoor unit, the distance between remote controller and receiver of indoor units is within 2 meters.

##### To check temperature around remote controller

Press  (INFO) button.

- 1** Temperature will be displayed for 10 seconds.

##### To check monthly power consumption

- Direct the remote controller towards the receiver of indoor unit (within 2 meters in front of indoor unit) and press  (INFO) button. Wait for 2 seconds for signal transmission.
- While checking monthly power consumption amount for heating → last month power consumption amount for cooling → last month power consumption amount for heating → this month power consumption amount for heating → last month power consumption amount for cooling → temperature controller → this month power consumption amount for heating ..... cyclically.
- If indication is not given, bring remote controller closer to the receiver of the indoor unit.
  - Indicated value shall be regarded as a guide only.

##### Current calendar and clock can be retrieved from indoor unit

- Direct the remote controller towards the receiver of indoor unit (within 2 meters in front of indoor unit) and press  (INFO) button. Wait for 2 seconds for signal transmission.
- Once received the current calendar and clock, check whether they are correct or not by pressing  (CLOCK) button.
- If there is no power supply to indoor unit or calendar and clock have not been set, INFO function cannot be used for sending or receiving information.


##### NOTE

- In case failure occurs to the air conditioner, by pressing  (INFO) button, an error code will be displayed.
- Direct the remote controller towards the receiver of indoor unit (within 2 meters in front of indoor unit) and press  (INFO) button. Wait for 2 seconds for signal transmission.
- An error code will be displayed.
- Information of "Monthly power consumption" is not available for 6 rooms multi system.
- During installation, in case of power failure or breaker ON / OFF, ensure to set the clock and calendar for each indoor unit (unit in standby mode or auto restart), for single or multi connection, by pressing 
- Failure to do the above, monthly power consumption amount will not be displayed on the remote controller.

## OPERATION MODE LOCK

The remote controller can be set to fix the HEATING mode (including FAN), COOLING mode (including FAN) and DEHUMIDIFYING mode (including FAN) operations.

### ENGLISH

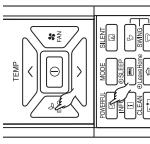

**Method to lock HEATING mode (including FAN) operation.**

Press (ECO) and (POWERFUL) buttons simultaneously for about 5 seconds when the remote controller is OFF.

"", "", and "" will be displayed for about 10 seconds. Later, "", "", and "" will remain.

This indicates that HEATING mode operation is locked.

When pressing (MODE) button, "", "", or "" will be displayed.

**Method to unlock HEATING mode (including FAN) operation.**

Press (ECO) and (POWERFUL) buttons simultaneously for about 5 seconds when the remote controller is OFF.

All operation mode symbols will appear on the display for about 10 seconds. After that, operation mode symbol before cancellation will be displayed.

This indicates that HEATING mode operation is unlocked.

**Method to lock COOLING and DEHUMIDIFYING modes (including FAN) operations.**

Press (ECO) and (SILENT) buttons simultaneously for about 5 seconds when the remote controller is OFF.

"", "", "", and "" will be displayed for about 10 seconds. Later, "", "", "", or "" will remain.

This indicates that COOLING and DEHUMIDIFYING mode operation is locked.

When pressing (MODE) button, "", "", "", or "" will be displayed.

**Method to unlock COOLING and DEHUMIDIFYING modes (including FAN) operations.**

Press (ECO) and (SILENT) buttons simultaneously for about 5 seconds when the remote controller is OFF.

All operation mode symbols will appear on the display for about 10 seconds. After that, operation mode symbol before cancellation will be displayed.

This indicates that COOLING and DEHUMIDIFYING modes operation is unlocked.

### NOTE


Operation Mode Lock function will not activate if TIMER reservations activate.

- TIMER reservations shall be deactivated first. Then, Operation Mode Lock function can be activated.
- HEATING, COOLING and DEHUMIDIFYING mode (including FAN) operations can be unlocked by pressing the (RESET) button. However, by pressing the (RESET) button, all the information stored in the remote controller will disappear. You may need to set the necessary information again.
- For multi connections, unit and mode which is set to lock HEATING and switched on first shall have higher priority. Other units which are chosen to operate at different modes shall be in STANDBY until either the first unit operation is switched off or the mode is selected to be same as the first unit.

# ADJUSTING THE AIR DEFLECTORS

## ■ To start Vertical Auto Swing

- Press  (AUTO SWING (VERTICAL)) button. The deflector(s) will start to swing up and down.  
 is displayed on the LCD.

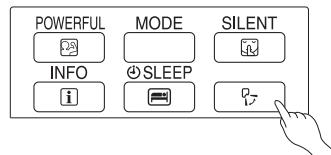


## ■ To cancel Vertical Auto Swing

- Press  (AUTO SWING (VERTICAL)) button again. The deflector(s) will stop in the current position.  
 disappeared from the LCD.


### NOTE

- During cooling and dehumidifying operation, do not keep the deflectors swinging or in the lower position (in the case of vertical auto swing) for a long time. It may cause dew condensation on the deflectors.

RAK-15QPB, RAK-18/25RPB

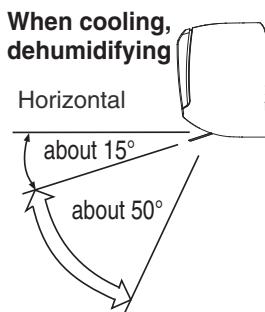

RAK-35/50RPB

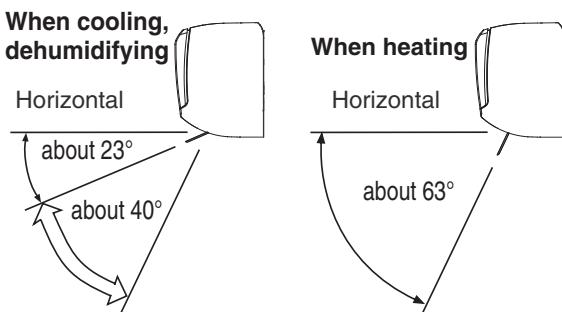


### ! CAUTION

- When operating the unit in cooling operation with the air deflector facing down and moving automatically for a long period of time, water will be condensed on the air deflector and drips down occasionally. This will wet your furniture.


## For the RAK-15QPB, RAK-18/25RPB

Adjustment of the conditioned air to the left and right.


Hold the vertical air deflector as shown in the figure and adjust the conditioned air to the left and right.

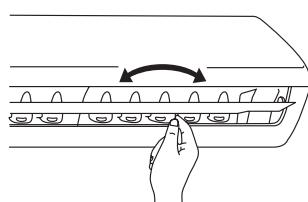

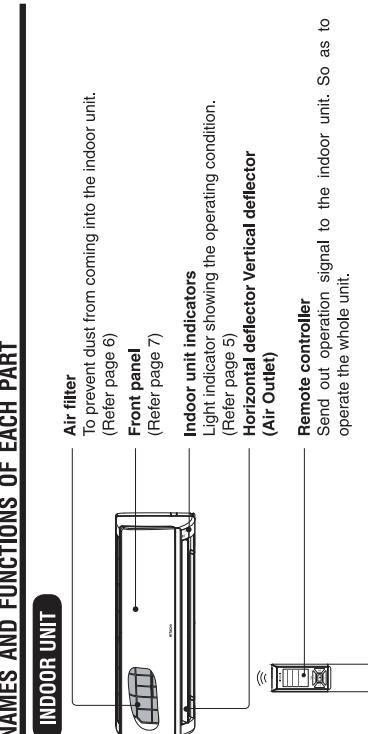

**NAMES AND FUNCTIONS OF EACH PART****INDOOR UNIT INDICATIONS****OPERATING RANGE**

Operation mode	Cooling / Dehumidifying	Heating
Outdoor temperature	-10 to 43°C	-15 to 21°C

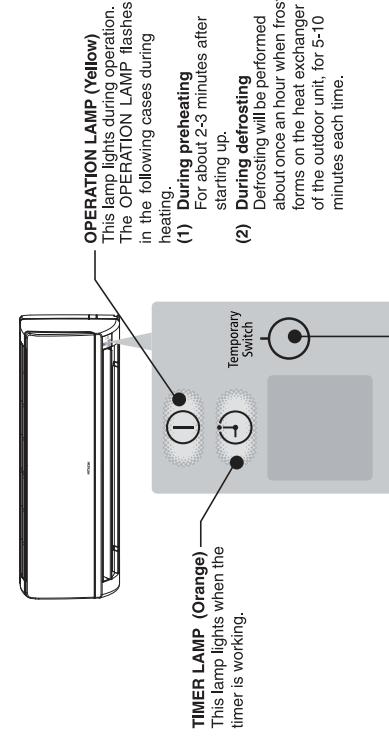**NAMES AND FUNCTIONS OF EACH PART****INDOOR UNIT****MODEL NAME AND DIMENSIONS**

MODEL	WIDTH (mm)	HEIGHT (mm)	DEPTH (mm)
RAK-15QPB, RAK-18RPB, RAK-25RPB	780	280	218
RAK-35RPB, RAK-50RPB	900	295	230

**NOTE FOR MULTI SYSTEM**

Several indoor units can be connected to one outdoor unit.  
You can operate only one unit or several units according to your needs.

**Combination of operations:**

When operation mode is selected:

- You cannot operate the indoor units in the following combinations.
 

One unit	Other unit
Cooling	Dehumidifying
Heating	Fan
- To operate the indoor units turned on later, set the operation mode as same as the indoor unit turned on first.

During automatic operation:

- When heating operation is automatically selected for the first indoor unit, the next indoor unit will then start to heat. Also, if cooling or dehumidifying is automatically selected for the first indoor unit, the next indoor unit will also start to cool or dehumidify.

**Adjusting the number of indoor units:**


Decrease the number of indoor units to be operated especially when it is very hot or very cold or when you want to reach the preset temperature quickly.

**Stopped indoor units:**

When an indoor unit is operated in the cooling, heating or dehumidifying mode in one room, the sound of refrigerant flow may be heard from a stopped indoor unit or a stopped indoor unit may become warm. This is because the indoor unit returns refrigerant to the outdoor unit to be ready for operation.

**TEMPORARY SWITCH**  
Use this switch to start and stop when the remote controller does not work.  
● By pressing the temporary switch, the operation is done in automatic mode.  
● When the operation is done using the temporary switch after the power source is turned off and turn on again, the operation is done in automatic mode.

**CAUTION**  
Turn off the circuit breaker if the unit is not be operated for a long period.

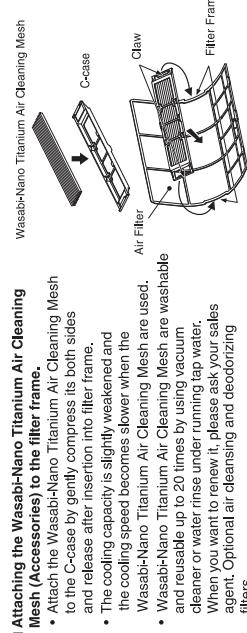

## MAINTENANCE

### ▲ CAUTION


Cleaning and maintenance must be carried out only by qualified service personal. Before cleaning, stop operation and switch off the power supply.

### 1. AIR FILTER

Please clean the filter once about every two weeks. By doing so, the power rates are saved. In case the air filter is full of dust, the air flow will decrease and the cooling capacity will be reduced. Further, noise may occur. Be sure to clean the filter following the procedure below.

#### PROCEDURE

- ① Open the front panel carefully and remove the filter.

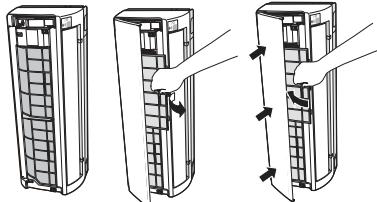

- ② Vacuum dust from the air filter using vacuum cleaner. If there is too much dust, wash the filter with a detergent and rinse it thoroughly. After that, dry it in the shade.



- ③ Set the filter with "FRONT" mark facing front, and slot them into the original state.  
After attaching the filters, push the front panel at three arrow portions as shown in figure and close it.



### ▲ CAUTION

- Do not wash with hot water at more than 40°C. The filter may shrink.
- When washing it, shake off moisture completely and dry it in the shade; do not expose it directly to the sun. The filter may shrink.
- Don't operate the unit without filter. Fault may occur if you continue.

## 2. CLEANING OF FRONT PANEL

- Remove the front panel and wash with clean water.
- Wash it with a soft sponge.
- After using neutral detergent, wash thoroughly with clean water.

- When front panel is not removed, wipe it with a soft dry cloth. Wipe the remote controller thoroughly with a soft dry cloth.

- Wipe the water thoroughly.  
If water remains at indicators or signal receiver of indoor unit, it causes trouble.

Method of removing the front panel.  
Be sure to hold the front panel with both hands to detach and attach it.

 
### Removing the Front Panel



- 1 Push the end of the right-side arm outward to release the tab.

- 2 Move the left-side arm outward to release the left tab, and then pull the panel towards you.

### Attaching the Front Panel



- Insert the shaft of the left arm along the step on the unit into the hole.
- Securely insert the shaft of the right arm along the step on the unit into the hole.
- Make sure that the front panel is securely attached, and then close the front panel.

### ▲ CAUTION

- When the front panel is fully opened with both hands, push the right arm to the inside to release it, and while closing the front panel slightly, put it out forward.
- Move the shafts of the left and right arms into the steps in the unit and securely insert them into the holes.

## 3. MAINTENANCE AT BEGINNING OF LONG OFF PERIOD

- Run the unit by setting the operation mode to **•** (FAN) and the fan speed to **H1** for about half a day on a fine day, and dry the whole of the unit.
- Switch off the power plug or turn off the circuit breaker.

## INFORMATION

### CAPABILITIES

#### Heating Capability

- This room air conditioner utilizes a heat pump system that absorbs exterior heat and brings it into a room to be heated. As the ambient temperature gets lower, heating capability will also lower. In such situation, the inverter work to increase compressor rpm to keep the units heating capability from decreasing. If the unit's heating performance is still unsatisfactory, other heating appliances should be used to augment this unit's performance.
- The air conditioner is designed to heat an entire room so that it may take some time before you feel warm.
- If the heat present in a room exceeds the unit's cooling capacity (for example, if there are many people in the room or other heating appliances are used), the preset room temperature may not be reached.

#### CAUTION



PROMPT

Do not use a stove or any other high-temperature devices in proximity to the indoor unit.

#### Cooling and Dehumidifying Capabilities

- If the heat present in a room exceeds the unit's cooling capacity (for example, if there are many people in the room or other heating appliances are used), the preset room temperature may not be reached.

## REGULAR INSPECTION

PLEASE CHECK THE FOLLOWING POINTS EVERY EITHER HALF YEARLY OR YEARLY. CONTACT YOUR SALES AGENT SHOULD YOU NEED ANY HELP.

ENGLISH

		WARNING	
1		Check to see if the unit's earth line has been connected correctly. If the earth line is disconnected or faulty, unit failure or electric shock hazard may result.	
2		Check to see if the mounting frame has rusted excessively or if the outdoor unit has tilted or become unstable. It could collapse or fall, causing injury.	

## AFTER SALES SERVICE AND WARRANTY


WHEN ASKING FOR SERVICE, CHECK THE FOLLOWING POINTS.

CONDITION	CHECK THE FOLLOWING POINTS
If the remote controller is not transmitting a signal. (Remote controller display is dim or blank.)	<ul style="list-style-type: none"> <li>Do the batteries need replacement?</li> <li>Is the polarity of the inserted batteries correct?</li> </ul>
When it does not operate.	<ul style="list-style-type: none"> <li>Is the fuse all right?</li> <li>Is the voltage extremely high or low?</li> <li>Is the circuit breaker "ON"?</li> <li>Is the power plug inserted?</li> <li>Do you have any power cut?</li> </ul>
When it does not cool well. When it does not heat well.	<ul style="list-style-type: none"> <li>Is the air filter blocked with dust?</li> <li>Is the set temperature suitable?</li> <li>Have horizontal air deflectors been adjusted to their correct positions according to the operation mode selected?</li> <li>Are the air inlets or air outlets of indoor and outdoor units blocked?</li> <li>Is the fan speed "LOW" or "SILENT"?</li> </ul>
The following phenomena do not indicate unit failure.	
During heating, the operation indicator blinks and air blow stops	<Operation start> The unit is preparing to blow warm air. Please wait. <In operation> The outdoor unit is defrosting. Please wait.
Hissing or fuzzy sounds	Refrigerant flow noise in the pipe or valve sound generated when flow rate is adjusted.
Squeaking noise	Noise generated when the unit expands or contracts due to temperature changes.
Rustling noise	Noise generated with the indoor unit fan's rpm changing such as operation start times.
Clicking noise	Noise of the motorized valve when the unit is switched on.

Perking noise	Noise of the ventilation fan sucking in air present in the drain hose and blowing out dehumidifying water that had accumulated in the condensed water collector. For details, consult your sales agent.
Changing operation noise	Operation noise changes due to power variations according to room temperature changes.
Mist emission	Mist is generated as the air within the room is suddenly cooled by conditioned air.
Steam emitted from the outdoor unit	Water generated during defrosting operation evaporates and steam is emitted.
Odors	Caused as the smell and particles of smoke, food, cosmetics, etc. present in room air become attached the unit and blown off into the room again.
The outdoor unit continues to operate even if operation is stopped.	Defrosting is underway (as the heating operation is stopped, the microcomputer checks frost accumulated in the outdoor unit and instructs the unit to perform automatic defrosting if necessary).
The OPERATION lamp is blinking.	Shows preheating or defrosting operation is underway.
Does not reach the temperature setting	Actual room temperature may deviate slightly from the remote controller's temperature setting depending on the number of people in the room, indoor or outdoor conditions.

<b>Contact your sales agent immediately if the following phenomena should occur</b>	
	<ul style="list-style-type: none"> <li>• The circuit breaker switches off or the fuse blows frequently.</li> <li>• The switch operation is not stable.</li> <li>• Foreign matter or water accidentally enters the unit interior.</li> <li>• The power cord gets excessively hot or its insulation is torn or stripped.</li> <li>• The TIMER lamp on the indoor unit display blinks.</li> </ul> <p>(As the nature of the failure can be identified by the blinking cycle, check the blinking cycle before turning off the circuit breaker.)</p>

- If the unit still fails to operate normally after performing the above inspections, turn the circuit breaker off and contact your sales agent immediately.

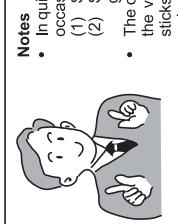

#### Notes

- In quiet operation or stopping the running, the following phenomena may occasionally occur, but they are not abnormal for the operation.
  - (1) Slight flowing noise of refrigerant in the refrigerating cycle.
  - (2) Slight rubbing noise from the fan casing which is cooled and then gradually warmed as operation stops.
- The odor will possibly be emitted from the room air conditioner because the various odor, emitted by smoke, foodstuffs, cosmetics and so on, sticks to it. So please clean the air filter and the evaporator regularly to reduce the odor.

- Please contact your sales agent immediately if the air conditioner still fails to operate normally after the above inspections. Inform your agent of the model of your unit, production number, date of installation. Please also inform him regarding the fault.


Please note:  
On switching on the equipment, particularly when the room light is dimmed, a slight brightness fluctuation may occur. This is of no consequence.  
The conditions of the local Power Supply Companies are to be observed.

# CONSTRUCTION AND DIMENSIONAL DIAGRAM

MODEL RAK-15QPB ,RAK-18RPB ,RAK-25RPB

## INDOOR UNIT

Unit : mm

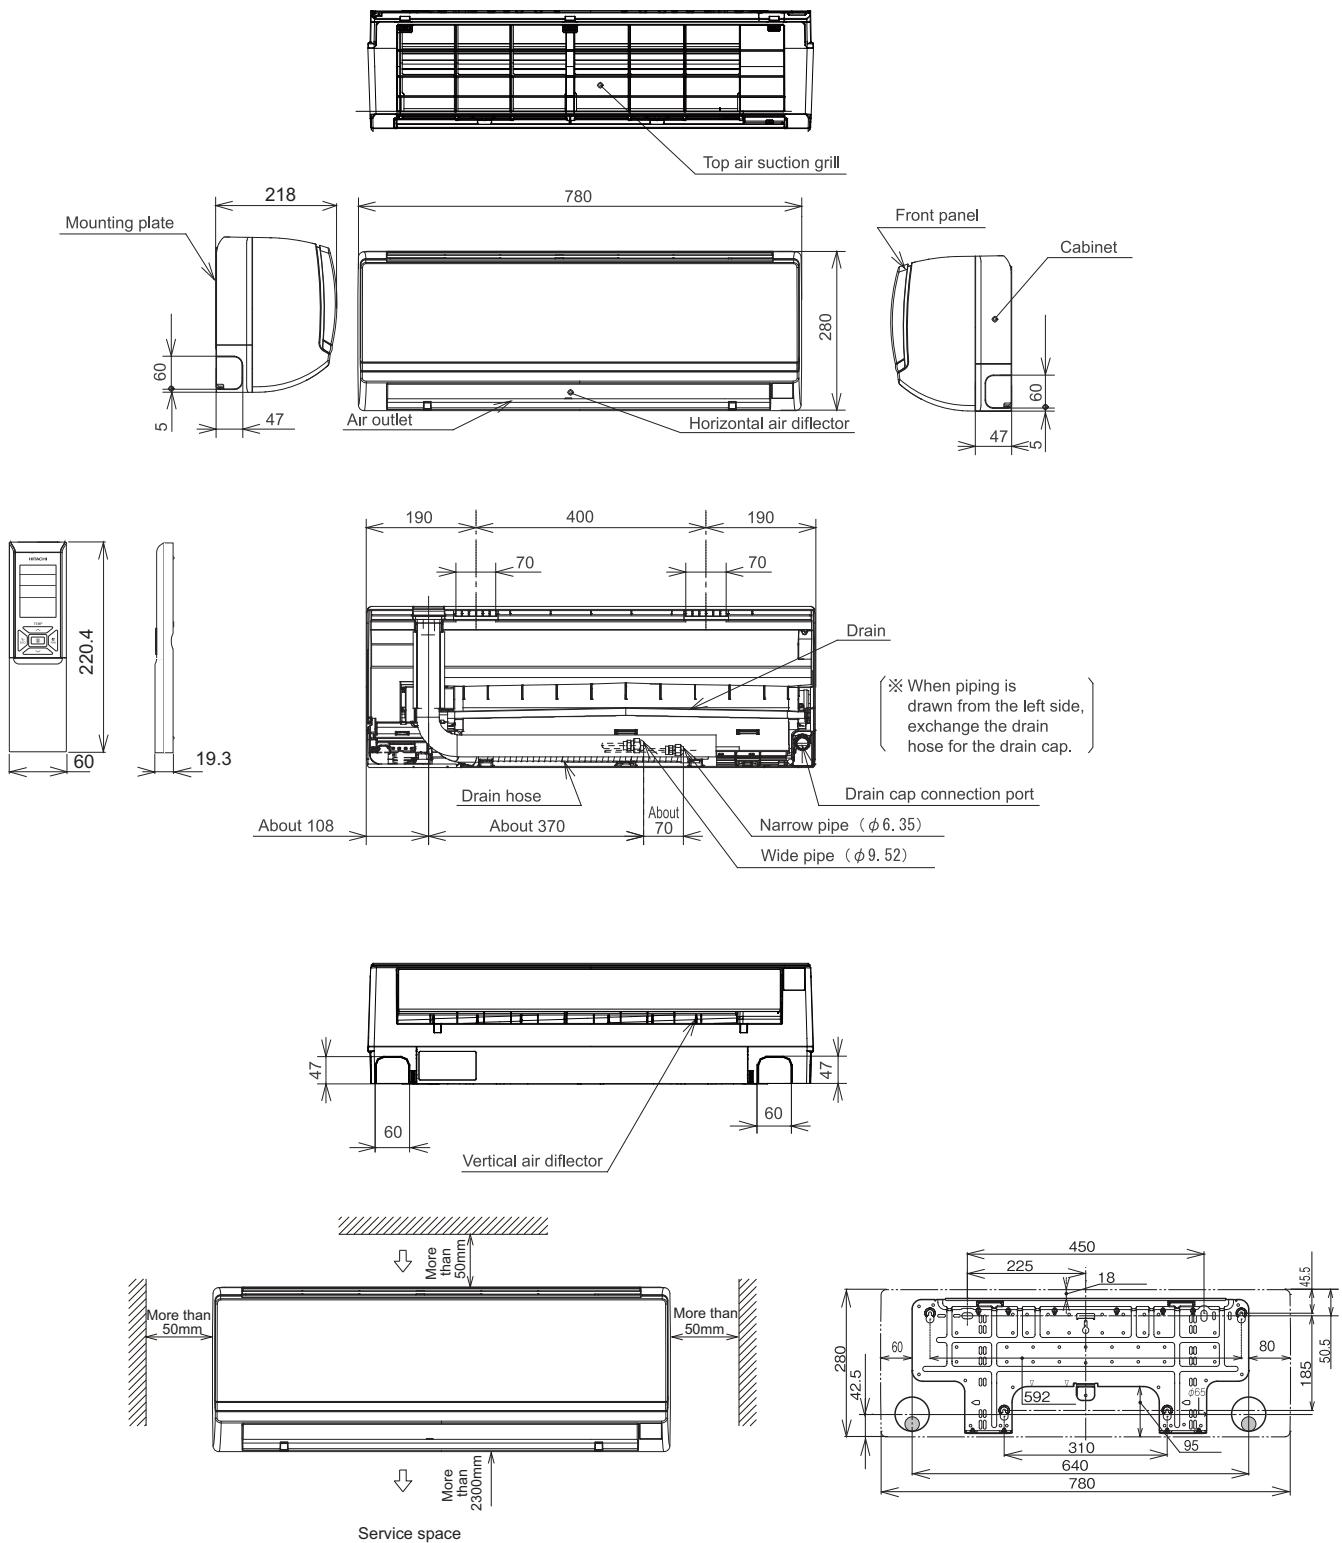


# CONSTRUCTION AND DIMENSIONAL DIAGRAM

MODEL RAK-35RPB ,RAK-50RPB

## INDOOR UNIT

Unit : mm

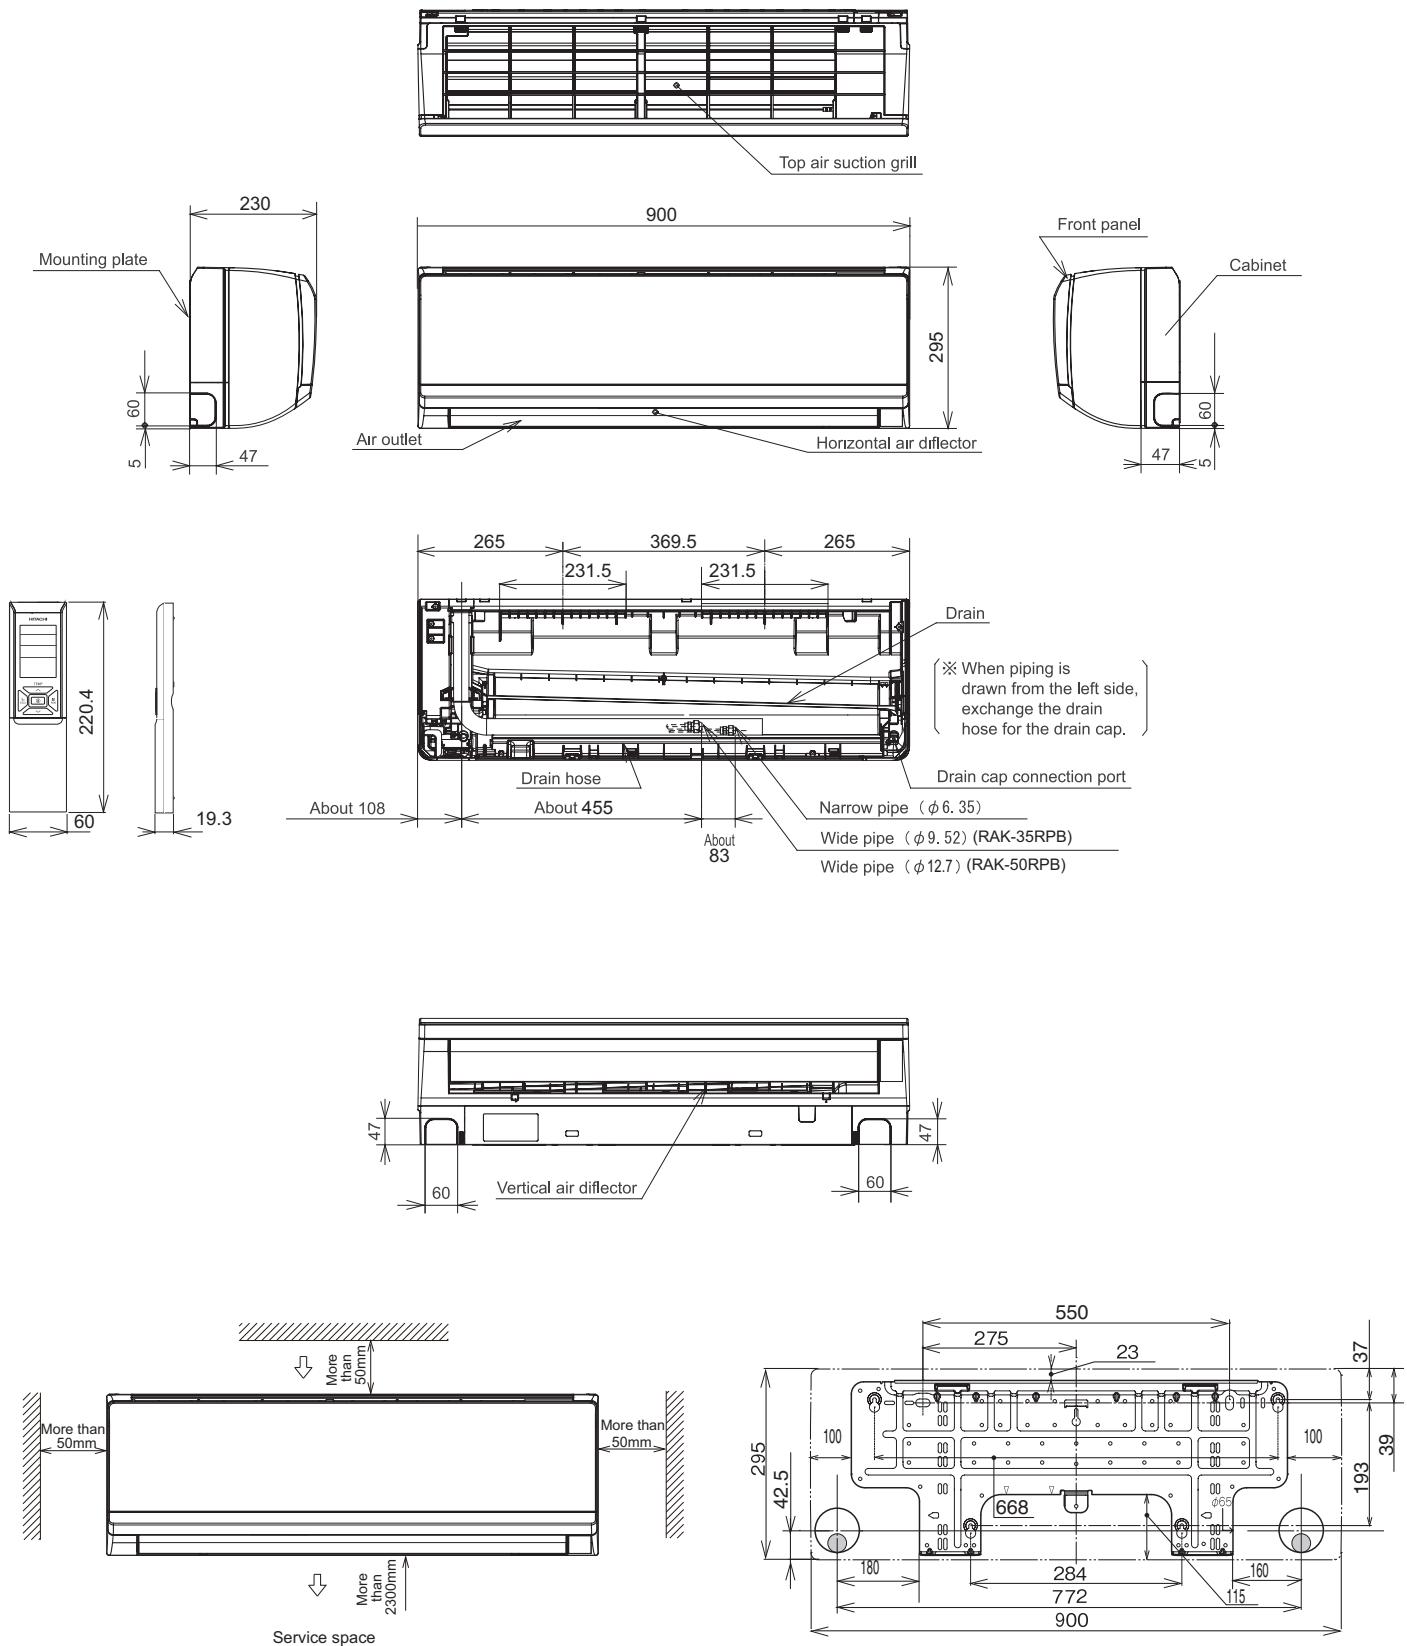

## MAIN PARTS COMPONENT


THERMOSTAT (Room temperature Thermistor)

### Thermostat Specifications

MODEL			RAK-15QPB, RAK-18RPB, RAK-25RPB, RAK-35RPB, RAK-50RPB		
THERMOSTAT MODEL			IC		
OPERATION MODE			COOL		HEAT
TEMPERATURE °C (°F)	INDICATION 16	ON	15.3 (59.54)	16.7 (62.06)	
		OFF	15.0 (59.00)	16.7 (62.06)	
	INDICATION 24	ON	23.3 (73.94)	24.7 (76.46)	
		OFF	23.0 (73.40)	24.7 (76.46)	
	INDICATION 32	ON	31.3 (88.34)	32.7 (90.86)	
		OFF	31.0 (87.80)	32.7 (90.86)	

### FAN MOTOR

#### Fan Motor Specifications

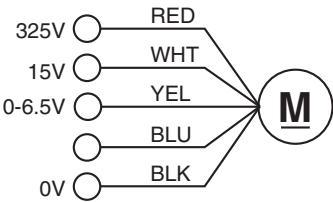MODEL	RAK-15QPB, RAK-18RPB, RAK-25RPB, RAK-35RPB, RAK-50RPB	
POWER SOURCE	DC : 325V	
OUTPUT	30W	
CONNECTION	 (Control circuit built in)	

BLU : BLUE

YEL : YELLOW

BRN : BROWN

WHT : WHITE

GRY : GRAY

ORN : ORANGE

GRN : GREEN

RED : RED

BLK : BLACK

PNK : PINK


VIO : VIOLET

## **WIRING DIAGRAM**

INDOOR UNIT

MODEL RAK-15QPB, RAK-18RPB, RAK-25RPB, RAK-35RPB, RAK-50RPB



# WIRING DIAGRAM

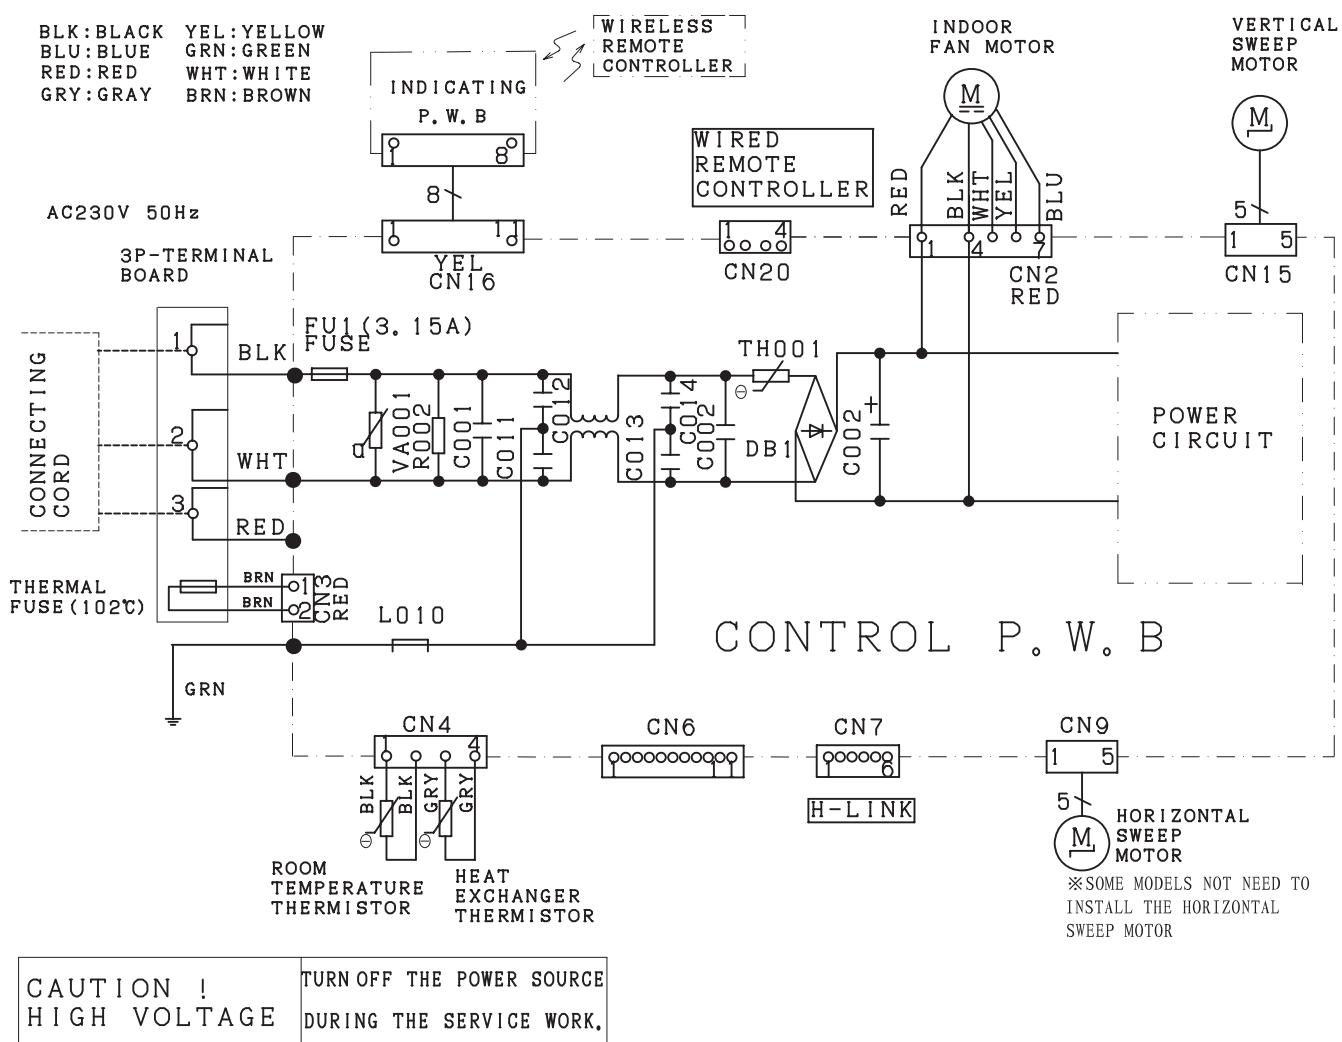

## WIRING DIAGRAM OF THE PRINTED WIRING BOARD


RAR-6N2

[Remote controller] RAR-6N1/RAR-6N2

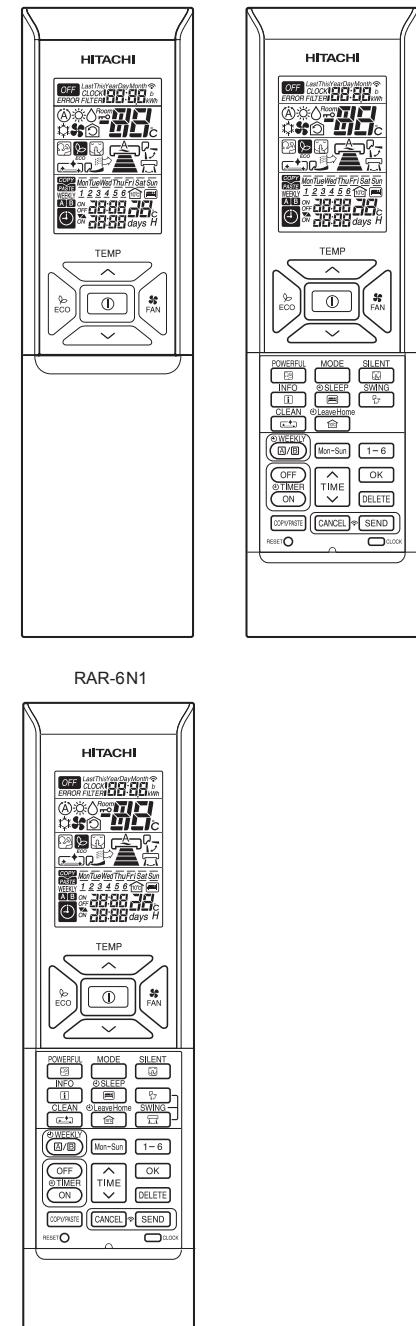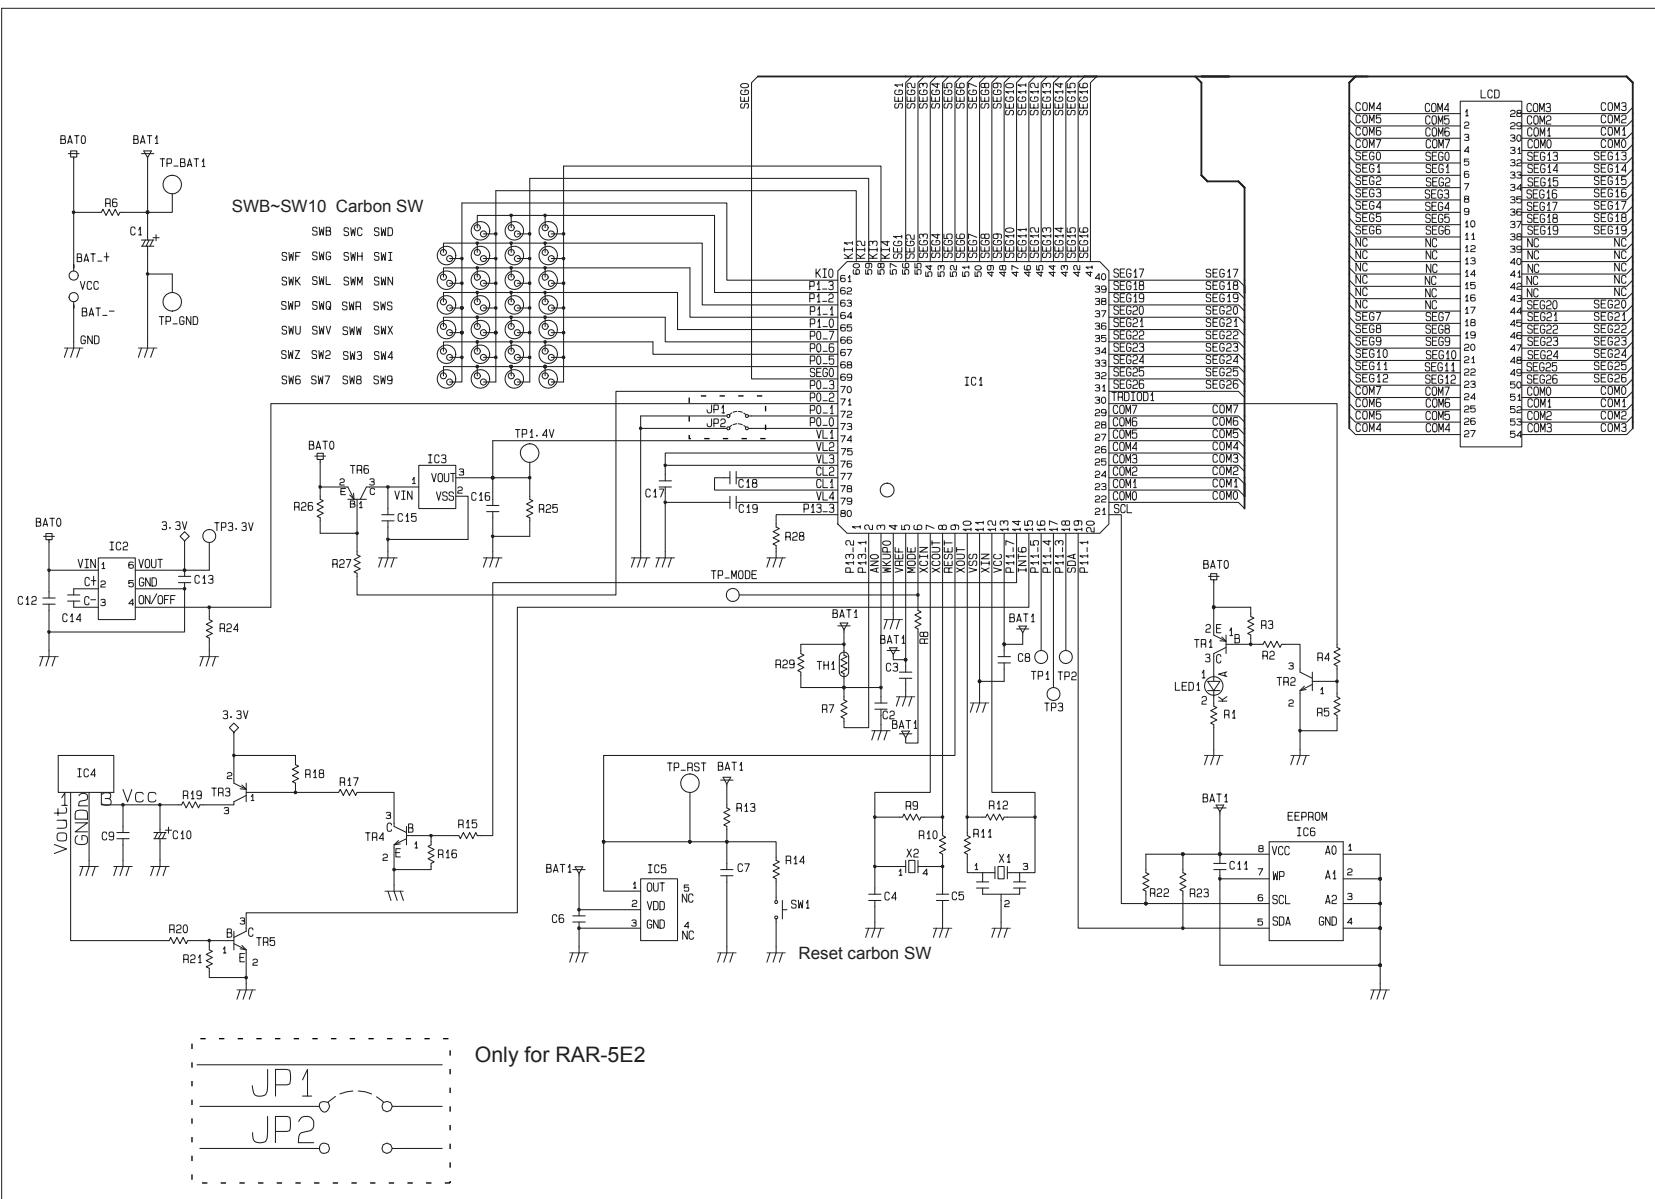


## CIRCUIT DIAGRAM MODEL

MODEL RAK-15QPB

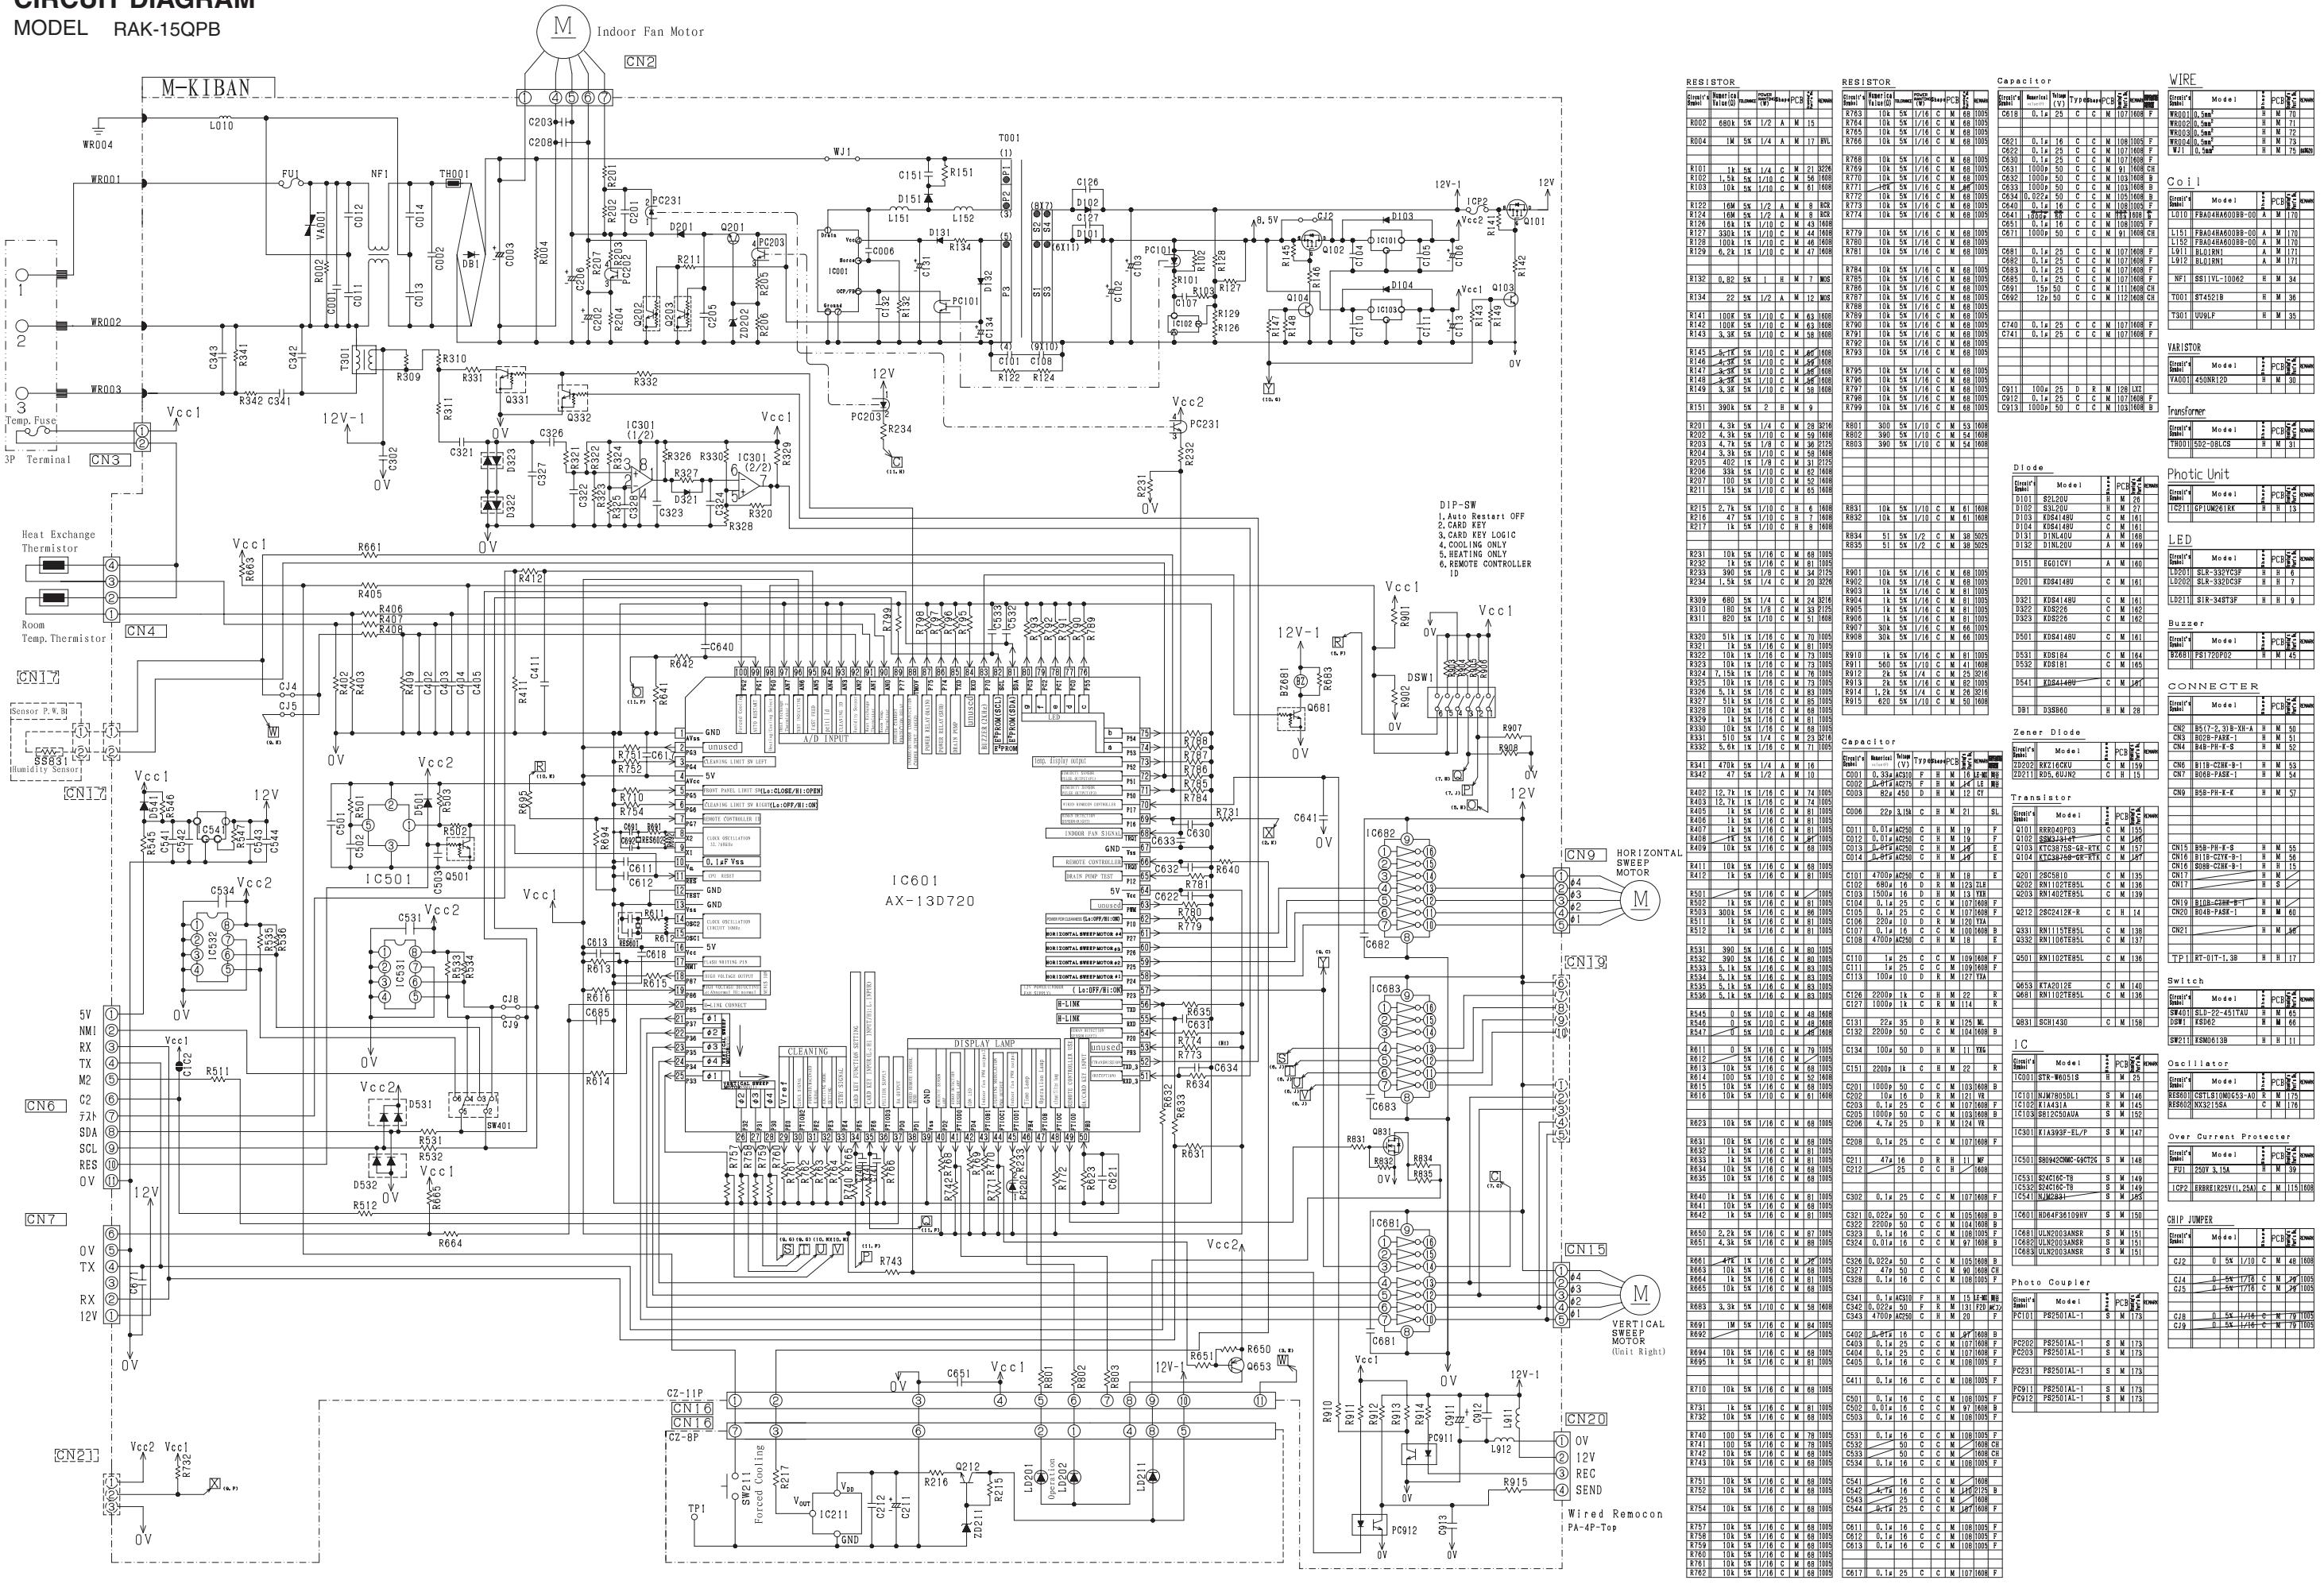


# CIRCUIT DIAGRAM

MODEL RAK-18RPB, RAK-25RPB  
RAK-35RPB, RAK-50RPB

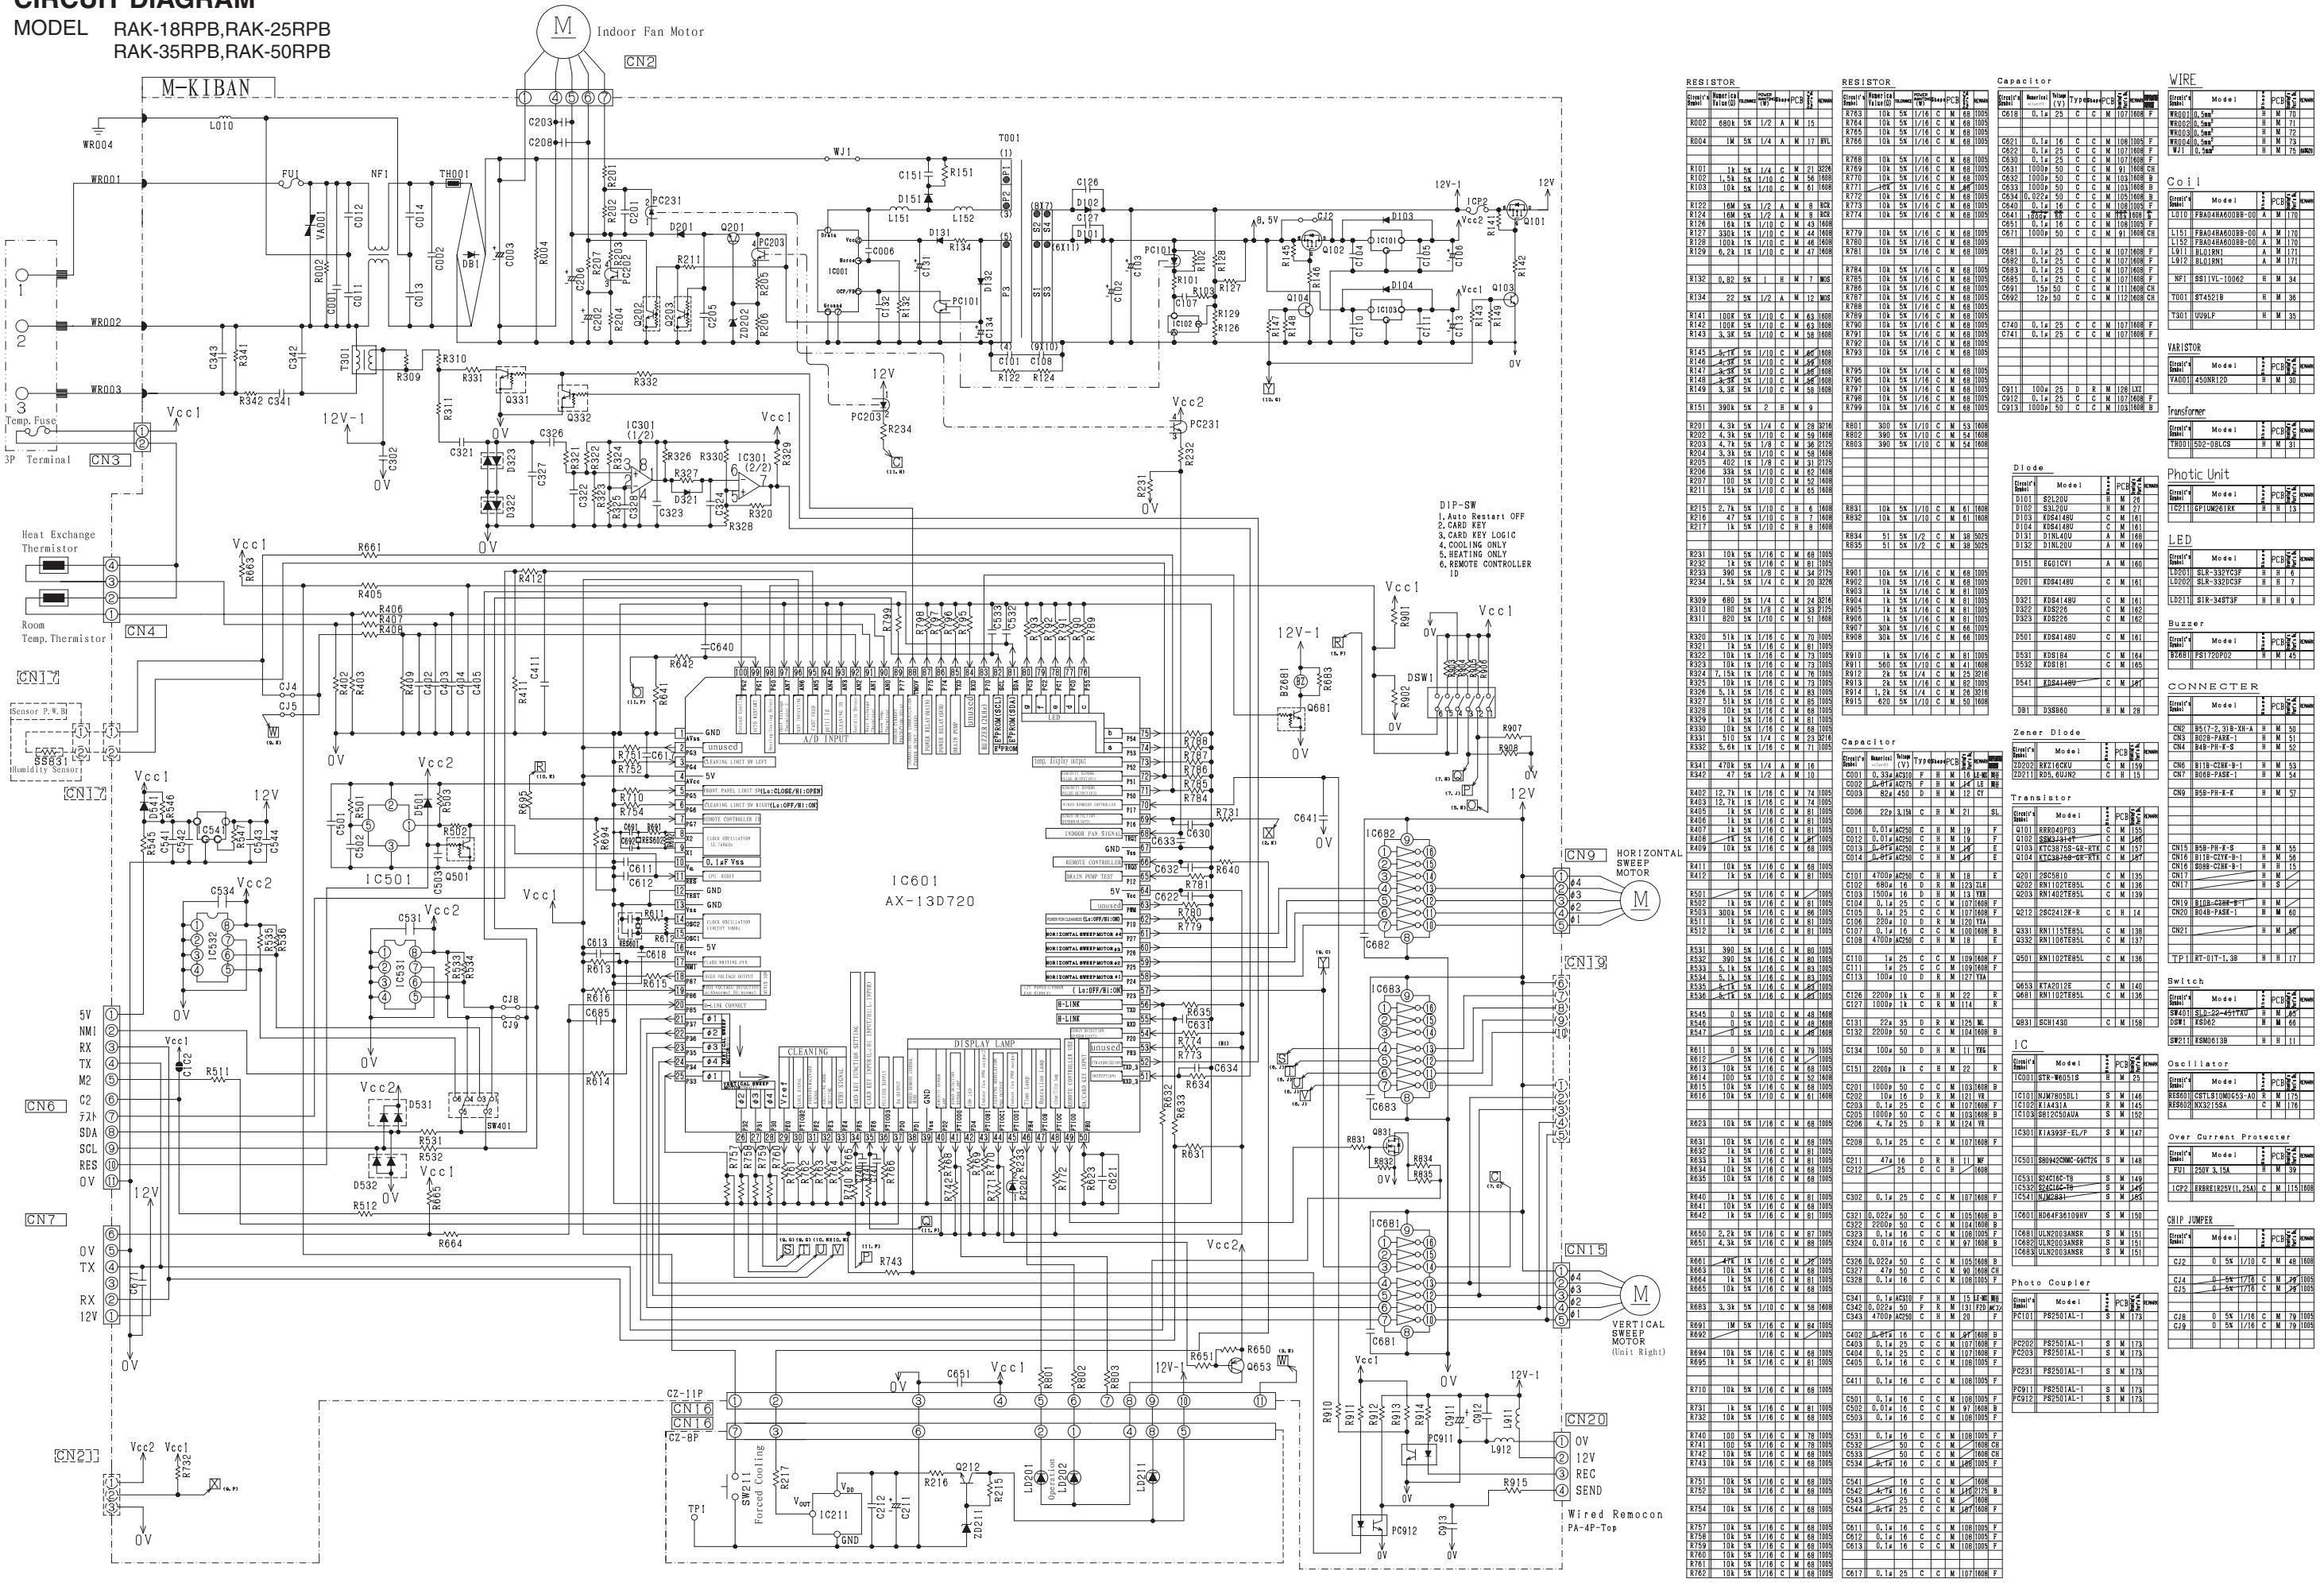





## BLOCK DIAGRAM

MODEL RAK-15QPB, RAK-18RPB, RAK-25RPB, RAK-35RPB, RAK-50RPB

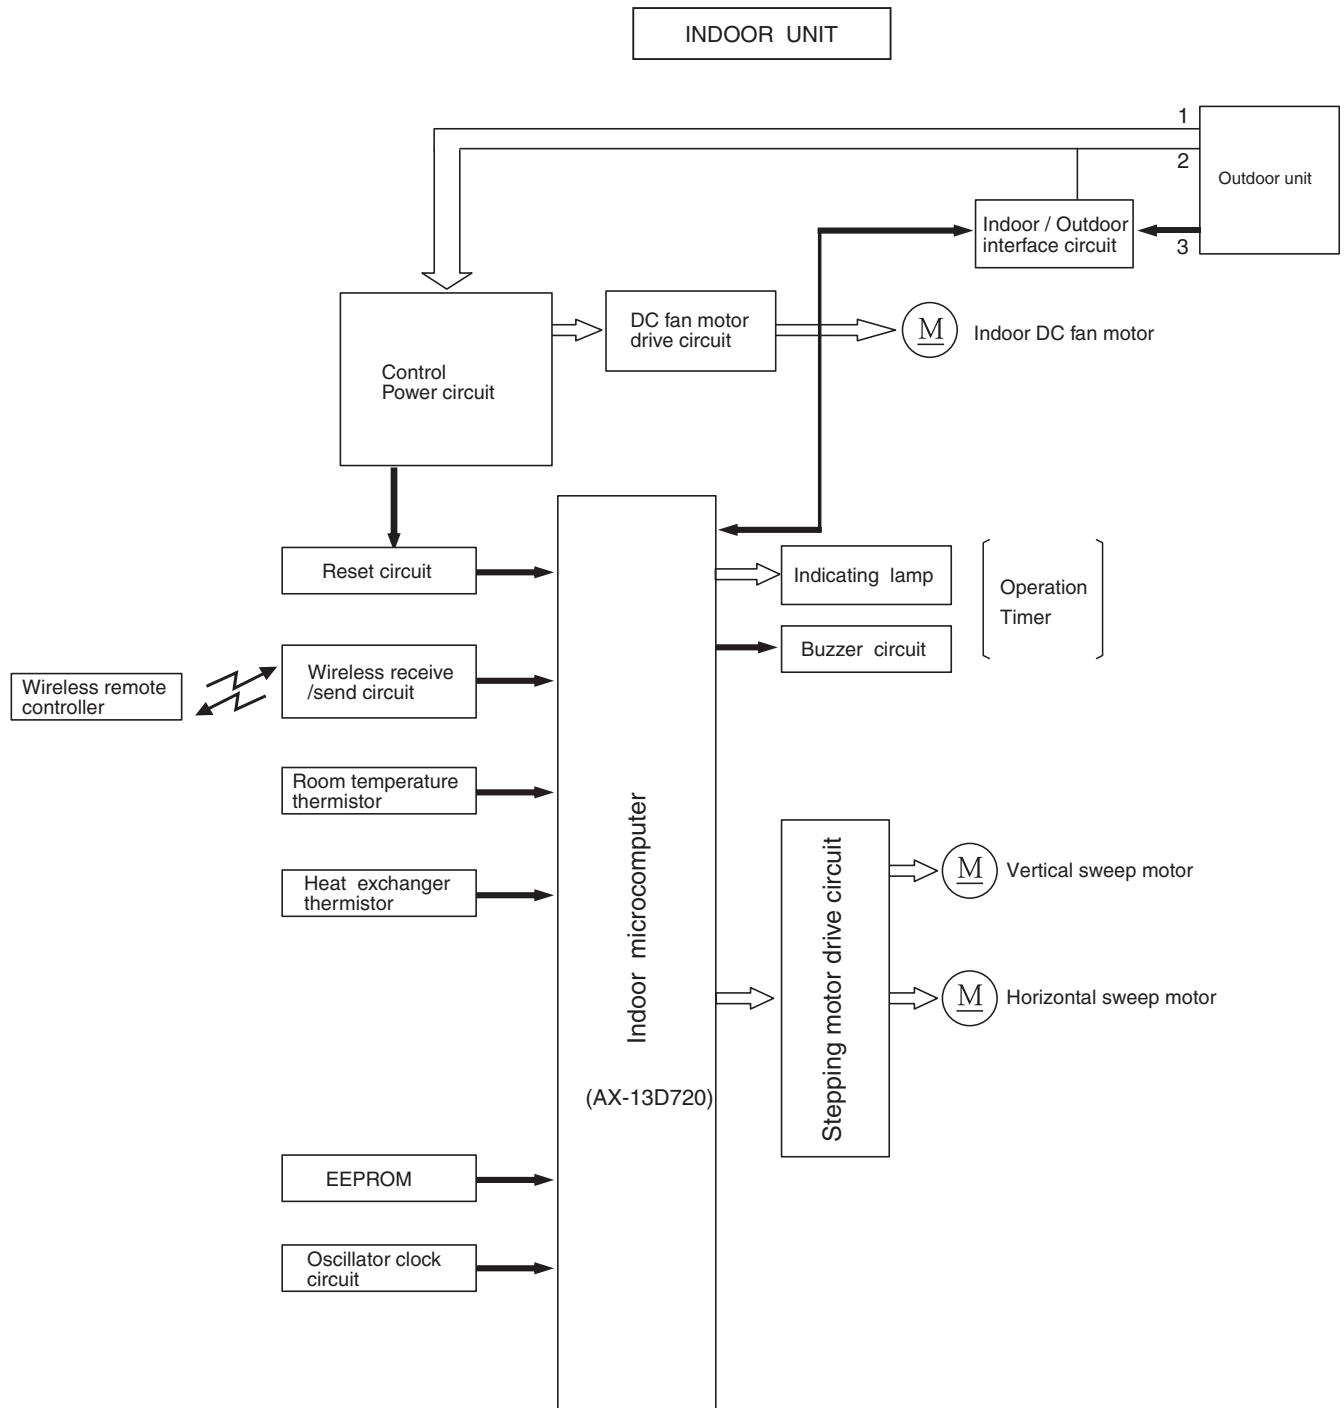

## BASIC MODE

 MODEL RAK-15QPB, RAK-18RPB, RAK-25RPB, RAK-35RPB, RAK-50RPB

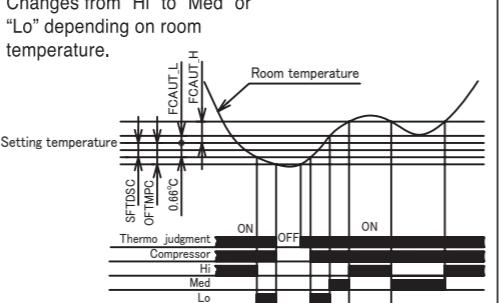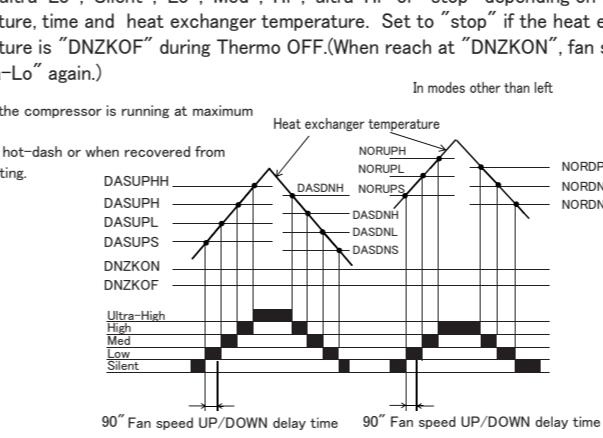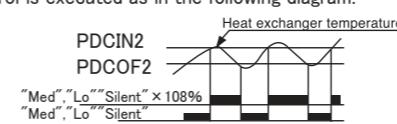Operation mode \	Fan	Cooling	Dehumidifying	Heating	Auto		
Basic operation of start/stop button				Start/stop button Operation lamp			
Timer functions	Off-timer			Start/stop button Reserve button Cancel button Operation lamp Timer lamp Timer memory	(Off-timer during stop) (Change in reserved time)		
	On-timer			Start/stop button Reserve button Cancel button Operation lamp Timer lamp Timer memory	(Change in reserved time) (On-timer during operation)		
	Off -> On On -> Off timer			Start/stop button Reserve button Cancel button Operation lamp Timer lamp Timer memory	(Off->On timer) (On->Off timer) (On->Off timer) during operation (Off->On timer) during stop		
Fan speed mode (indoor fan)	Auto	Changes from "Hi" to "Med" or "Lo" depending on room temperature.  1. Runs at "Hi" until room temperature reaches to "setting temperature-SFTDSC" after operation is started. 2. Runs at "ultra-Lo" when thermo is off.		Set to "ultra-Lo", "Silent", "Lo", "Med", "Hi", "ultra-Hi" or "stop" depending on the room temperature, time and heat exchanger temperature. Set to "stop" if the heat exchanger temperature is "DNZKOF" during Thermo OFF.(When reach at "DNZKON", fan speed set to "ultra-Lo" again.) 	Operating mode is judged by room temperature. <b>(1) Judging by room temperature</b> <ul style="list-style-type: none"><li>Operating mode at start up is judged (initial judgment).</li><li>Conditions for judgment (any of the followings).<ul style="list-style-type: none"><li>When auto operation is started after the previous auto mode operation.</li><li>When auto operation is started after the previous manual mode operation.</li><li>When the operating mode is switched to auto while operating at manual mode.</li></ul></li></ul> <b>(b) Judging method</b> <ul style="list-style-type: none"><li>[ Cooling ] : Room temperature</li><li>[ Heating ] : Room temperature</li></ul> <p>Remote controller setting ≤ Remote controller setting - &lt; Remote controller setting</p> <p>[ Room temperature setting of remote controller ]</p> <table border="1"><tr><td>Cooling</td></tr><tr><td>Heating</td></tr></table> <b>(2) Judging operating mode change during operation (Continuous judgment).</b> <ul style="list-style-type: none"><li>Conditions for judgment<ul style="list-style-type: none"><li>The mode is reviewed at interval time.</li><li>Interval time as below<ul style="list-style-type: none"><li>The first interval time : 10 minutes</li><li>The second interval time : 15 minutes</li><li>On and after the third interval time : 55 minutes</li></ul></li></ul></li><li>Judging method<ul style="list-style-type: none"><li>Judge by setting the hysteresis on the final preset temperature.</li></ul>The final preset temperature is the actually targeted preset temperature which is sum of basic preset temperature and each type of shift value. (e.g. preset temperature correction value, powerful shift value, eco shift value, eco sleep shift value, etc.)</li></ul>	Cooling	Heating
Cooling							
Heating							
Hi	Operates at "Hi" regardless of the room temperature.	Set to "ultra-Hi" when the compressor runs at cold dash mode speed, and to "Hi" in other modes. Runs at "ultra-Lo" when thermo is off.	Set to "ultra-Lo", "Silent", "Lo", "Med", "Hi", "ultra-Hi" or "stop" depending on the room temperature, time and heat exchanger temperature. Set to "stop" if the heat exchanger temperature is "DNZKOF" during Thermo OFF.(When reach at "DNZKON", fan speed set to "ultra-Lo" again.)				
Med	Operates at "Med" regardless of the room temperature.	Operates at "Med" regardless of the room temperature. Runs at "ultra-Lo" when thermo is off.	Set to "ultra-Lo", "Silent", "Lo", "Med", "Hi", "ultra-Hi" or "stop" depending on the room temperature, time and heat exchanger temperature. Set to "stop" if the heat exchanger temperature is "DNZKOF" during Thermo OFF.(When reach at "DNZKON", fan speed set to "ultra-Lo" again.)				
Lo	Operates at "Lo" regardless of the room temperature.	Operates at "Lo" regardless of the room temperature. Runs at "ultra-Lo" when thermo is off.	Set to "Lo" in modes other than when the compressor stops.	Set to "ultra-Lo", "Silent", "Lo", "Med", "Hi", "ultra-Hi" or "stop" depending on the room temperature, time and heat exchanger temperature. Set to "stop" if the heat exchanger temperature is "DNZKOF" during Thermo OFF.(When reach at "DNZKON", fan speed set to "ultra-Lo" again.) The fan speed is controlled by the heat exchanger temperature; the overload control is executed as in the following diagram: 			
Silent	Operates at "Silent" regardless of the room temperature.	Operates at "Silent" regardless of the room temperature. Runs at "ultra-Lo" when thermo is off.	Set to "Silent" in modes other than when the compressor stops.				
Basic operation of temperature controller	Performs only fan operation at the set speed regardless of the room temperature. 	See page 55.	See page 57.	See page 59.			
Sleep operation (with sleep button ON)	• Enters sleep operation after set as on the left. • Action during sleep operation Lo (sleep) operation	• Same as at left • See page 56.	• Same as at left • See page 58.	• Same as at left • See page 60.	• Same as at left. • Performs the sleep operation of each operation mode.		

For the multi indoor unit

MODEL		RAK-15QPB(1.5KW)	RAK-15QPB(1.0KW)	RAK-18RPB	RAK-25RPB	RAK-35RPB	RAK-50RPB
PROM NO.	LABEL NAME	REQUIRED VALUE OF UNIT					
43E	WMAX_M	4900min <sup>-1</sup>	3900min <sup>-1</sup>	4900min <sup>-1</sup>	4900min <sup>-1</sup>	4900min <sup>-1</sup>	4900min <sup>-1</sup>
43F	WMAX2_M	4900min <sup>-1</sup>	3900min <sup>-1</sup>	4900min <sup>-1</sup>	4900min <sup>-1</sup>	4900min <sup>-1</sup>	4900min <sup>-1</sup>
441	WSTD_M	3500min <sup>-1</sup>	2800min <sup>-1</sup>	3500min <sup>-1</sup>	3500min <sup>-1</sup>	3500min <sup>-1</sup>	3500min <sup>-1</sup>
447	CMAX_M	4200min <sup>-1</sup>	3350min <sup>-1</sup>	4200min <sup>-1</sup>	4200min <sup>-1</sup>	4200min <sup>-1</sup>	4200min <sup>-1</sup>
448	CMAX2_M	4200min <sup>-1</sup>	3350min <sup>-1</sup>	4200min <sup>-1</sup>	4200min <sup>-1</sup>	4200min <sup>-1</sup>	4200min <sup>-1</sup>
44B	CSTD_M	3500min <sup>-1</sup>	2800min <sup>-1</sup>	3500min <sup>-1</sup>	3500min <sup>-1</sup>	3500min <sup>-1</sup>	3500min <sup>-1</sup>
455	SDMAX_M	3500min <sup>-1</sup>	2800min <sup>-1</sup>	3500min <sup>-1</sup>	3500min <sup>-1</sup>	3500min <sup>-1</sup>	3500min <sup>-1</sup>
456	SDRPM_M	2200min <sup>-1</sup>	1800min <sup>-1</sup>	2200min <sup>-1</sup>	2200min <sup>-1</sup>	2200min <sup>-1</sup>	2200min <sup>-1</sup>
457	WMIN_M	1000min <sup>-1</sup>					
45F	CMINHI_M	900min <sup>-1</sup>					
460	CMIN_M	900min <sup>-1</sup>					
462	DMIN_M	900min <sup>-1</sup>					
463	PKOU_M	400min <sup>-1</sup>					
465	FZZY_GN_M	1	1	1	1	1	1
467	FZZYTM_M	2min	2min	2min	2min	2min	2min
468	DWNRATEW_M	80%	80%	80%	80%	80%	80%
469	DWNRATEC_M	60%	60%	60%	60%	60%	70%
480	SHIFTW_M	0°C	0°C	0°C	0°C	0°C	0°C
481	SFTSZW_M	0°C	0°C	0°C	0°C	0°C	0°C
488	SHIFTC_M	0°C	0°C	0°C	0°C	0°C	0°C
48C	SHIFTD_M	0°C	0°C	0°C	0°C	0°C	0°C
44A	CLMXTP_M	33°C	33°C	33°C	33°C	33°C	33°C
4B4	YNEOF_M	24°C	24°C	24°C	24°C	25°C	25°C
4DF	SFTDSW_M	1°C	1°C	1°C	1°C	0.66°C	0.66°C
4A3	TEION_M	2°C	2°C	2°C	2°C	2°C	2°C
4A4	TEIOF_M	9°C	9°C	9°C	6°C	9°C	9°C
4F0	FWSS_M	350min <sup>-1</sup>	500min <sup>-1</sup>				
4F1	FWSOY_M	450min <sup>-1</sup>	450min <sup>-1</sup>	450min <sup>-1</sup>	500min <sup>-1</sup>	600min <sup>-1</sup>	500min <sup>-1</sup>
4F2	FWS_M	540min <sup>-1</sup>	500min <sup>-1</sup>	540min <sup>-1</sup>	600min <sup>-1</sup>	630min <sup>-1</sup>	700min <sup>-1</sup>
4F5	FWKAF_M	850min <sup>-1</sup>	850min <sup>-1</sup>	850min <sup>-1</sup>	850min <sup>-1</sup>	980min <sup>-1</sup>	950min <sup>-1</sup>
4F4	FWL_M	750min <sup>-1</sup>	650min <sup>-1</sup>	750min <sup>-1</sup>	780min <sup>-1</sup>	850min <sup>-1</sup>	900min <sup>-1</sup>
4F6	FWAH_M	830min <sup>-1</sup>	740min <sup>-1</sup>	870min <sup>-1</sup>	900min <sup>-1</sup>	980min <sup>-1</sup>	1000min <sup>-1</sup>
4F7	FWH_M	830min <sup>-1</sup>	740min <sup>-1</sup>	870min <sup>-1</sup>	900min <sup>-1</sup>	980min <sup>-1</sup>	1050min <sup>-1</sup>
4F9	FWHH_M	890min <sup>-1</sup>	890min <sup>-1</sup>	930min <sup>-1</sup>	950min <sup>-1</sup>	980min <sup>-1</sup>	1050min <sup>-1</sup>
4FF	FCSOY_M	450min <sup>-1</sup>	450min <sup>-1</sup>	450min <sup>-1</sup>	450min <sup>-1</sup>	500min <sup>-1</sup>	500min <sup>-1</sup>
500	FCS_M	500min <sup>-1</sup>	450min <sup>-1</sup>	500min <sup>-1</sup>	550min <sup>-1</sup>	540min <sup>-1</sup>	550min <sup>-1</sup>
501	FCL_M	670min <sup>-1</sup>	570min <sup>-1</sup>	670min <sup>-1</sup>	720min <sup>-1</sup>	750min <sup>-1</sup>	800min <sup>-1</sup>
502	FCAH_M	770min <sup>-1</sup>	650min <sup>-1</sup>	830min <sup>-1</sup>	880min <sup>-1</sup>	1000min <sup>-1</sup>	1050min <sup>-1</sup>
503	FCH_M	770min <sup>-1</sup>	650min <sup>-1</sup>	830min <sup>-1</sup>	880min <sup>-1</sup>	1000min <sup>-1</sup>	1050min <sup>-1</sup>
504	FCHH_M	820min <sup>-1</sup>	730min <sup>-1</sup>	870min <sup>-1</sup>	920min <sup>-1</sup>	1000min <sup>-1</sup>	1100min <sup>-1</sup>
506	FDOY_M	450min <sup>-1</sup>	400min <sup>-1</sup>	450min <sup>-1</sup>	450min <sup>-1</sup>	500min <sup>-1</sup>	500min <sup>-1</sup>
507	FDS1_M	500min <sup>-1</sup>	450min <sup>-1</sup>	500min <sup>-1</sup>	500min <sup>-1</sup>	540min <sup>-1</sup>	550min <sup>-1</sup>
508	FDS2_M	500min <sup>-1</sup>	500min <sup>-1</sup>	500min <sup>-1</sup>	500min <sup>-1</sup>	540min <sup>-1</sup>	550min <sup>-1</sup>

Table 1 Fan speed by mode

Operation mode	Fan speed mode		Label name
	Ultra Lo		FWSS_M
Heating operation	Sleep		FWSOY_M
	Lo		FWS_M
	Overload		FWKAF_M
	Med		FWL_M
	Hi	Set fan speed "AUTO"	FWAH_M
	Hi	Set fan speed "Hi"	FWH_M
	Ultra Hi		FWHH_M
	Sleep		FCSOY_M
	Lo		FCS_M
	Med		FCL_M
Cooling operation	Hi	Set fan speed "AUTO"	FCAH_M
	Hi	Set fan speed "Hi"	FCH_M
	Ultra Hi		FCHH_M
	Sleep		FDOY_M
	Lo 1		FDS1_M
Dehumidifying operation	Lo 2		FDS2_M

Table 2 Room temperature shift value


Operation mode	Shift value	
Heating operation	Fan speed "AUTO, Hi, Med"	SHIFTW_M
	Fan speed "Lo, Sleep"	SFTSZW_M
Cooling operation		SHIFTC_M
Dehumidifying operation		SHIFTD_M

For the single indoor unit

Table 1 Mode data file

MODEL	RAK-18RPB	RAK-25RPB	RAK-35RPB	RAK-50RPB
LABEL NAME	VALUE			
WMAX	4200 min-1	6200 min-1	6700 min-1	6000 min-1
WMAX2	4200 min-1	6200 min-1	6700 min-1	6000 min-1
WSTD	3000 min-1	4500 min-1	5700 min-1	4800 min-1
WJKMAX	2800 min-1	4200 min-1	5500 min-1	4100 min-1
WBEMAX	2800 min-1	3800 min-1	5000 min-1	3500 min-1
WSZMAX	2800 min-1	3700 min-1	4000 min-1	3500 min-1
CMAX	4600 min-1	4600 min-1	6000 min-1	5500 min-1
CMAX2	4600 min-1	4600 min-1	6000 min-1	5500 min-1
CSTD	3200 min-1	3200 min-1	4800 min-1	4750 min-1
CJKMAX	3000 min-1	3000 min-1	4700 min-1	4100 min-1
CBEMAX	2800 min-1	2800 min-1	4000 min-1	2800 min-1
CSZMAX	2200 min-1	2200 min-1	3800 min-1	2500 min-1
WIN-CMPH	2000 min-1	2000 min-1	2000 min-1	2400 min-1
WIN-CMPL	2000 min-1	2000 min-1	2000 min-1	2400 min-1
CMIN	2000 min-1	2000 min-1	2000 min-1	1700 min-1
STARTMC	90 Seconds	90 Seconds	90 Seconds	90 Seconds
DWNRATEW	80%	80%	80%	80%
DWNRATEC	60%	60%	60%	70%
SHIFTW	0.00 °C	0.00 °C	0.00 °C	0.00 °C
SHIFTC	0.00 °C	0.00 °C	0.00 °C	0.00 °C
CLMXTP	30.00 °C	30.00 °C	30.00 °C	30.00 °C
TEION	2.00 °C	2.00 °C	2.00 °C	2.00 °C
TEIOF	6.00 °C	6.00 °C	6.00 °C	6.00 °C
SFTDSW	1.00 °C	1.00 °C	0.66 °C	0.66 °C
DFTIM-OTP0	43 Minutes	43 Minutes	43 Minutes	40 Minutes
DFTIM-OTP5	43 Minutes	43 Minutes	43 Minutes	90 Minutes
DFTIM-OTP10	43 Minutes	43 Minutes	43 Minutes	60 Minutes
FCAUT-L	0.66 °C	0.66 °C	0.66 °C	0.66 °C
FCAUT-H	2.00 °C	2.00 °C	2.00 °C	2.00 °C
SFTDSC	0.66 °C	0.66 °C	0.66 °C	0.66 °C
OFTMPC	1.00 °C	1.00 °C	1.00 °C	1.00 °C
DASUPHH	43.00	45.00	45.00	39.00
DASDNHH	39.00	41.00	41.00	36.00
DASUPH	38.00	40.00	40.00	35.00
DASDNH	33.33	35.33	35.33	32.00
DASUPL	33.00	35.00	35.00	31.00
DASDNL	28.00	28.00	28.00	29.00
DASUPS	28.00	28.00	28.00	28.00
DASDNS	27.00	27.00	27.00	26.00
NORUPH	45.00	45.00	45.00	45.00
NORDNH	36.00	40.00	40.00	38.00
NORUPL	36.00	37.00	37.00	37.00
NORDNL	33.00	33.00	33.00	33.66
NORUPS	33.00	33.00	33.00	33.00
NORDNS	30.00	30.00	30.00	30.00
PDCIN2	50.00	50.00	54.00	50.00
PDCOF2	45.00	45.00	48.00	48.00
DNZKON	15.00	15.00	15.00	15.00
DNZKOF	13.00	13.00	13.00	13.00
FNUPPW-C	30 min-1	30 min-1	30 min-1	30 min-1
DFMAX-STD	5500 min-1	5500 min-1	5500 min-1	5200 min-1
DFMAX-ATF	5500 min-1	5500 min-1	5500 min-1	5200 min-1


## Basic Cooling Operation

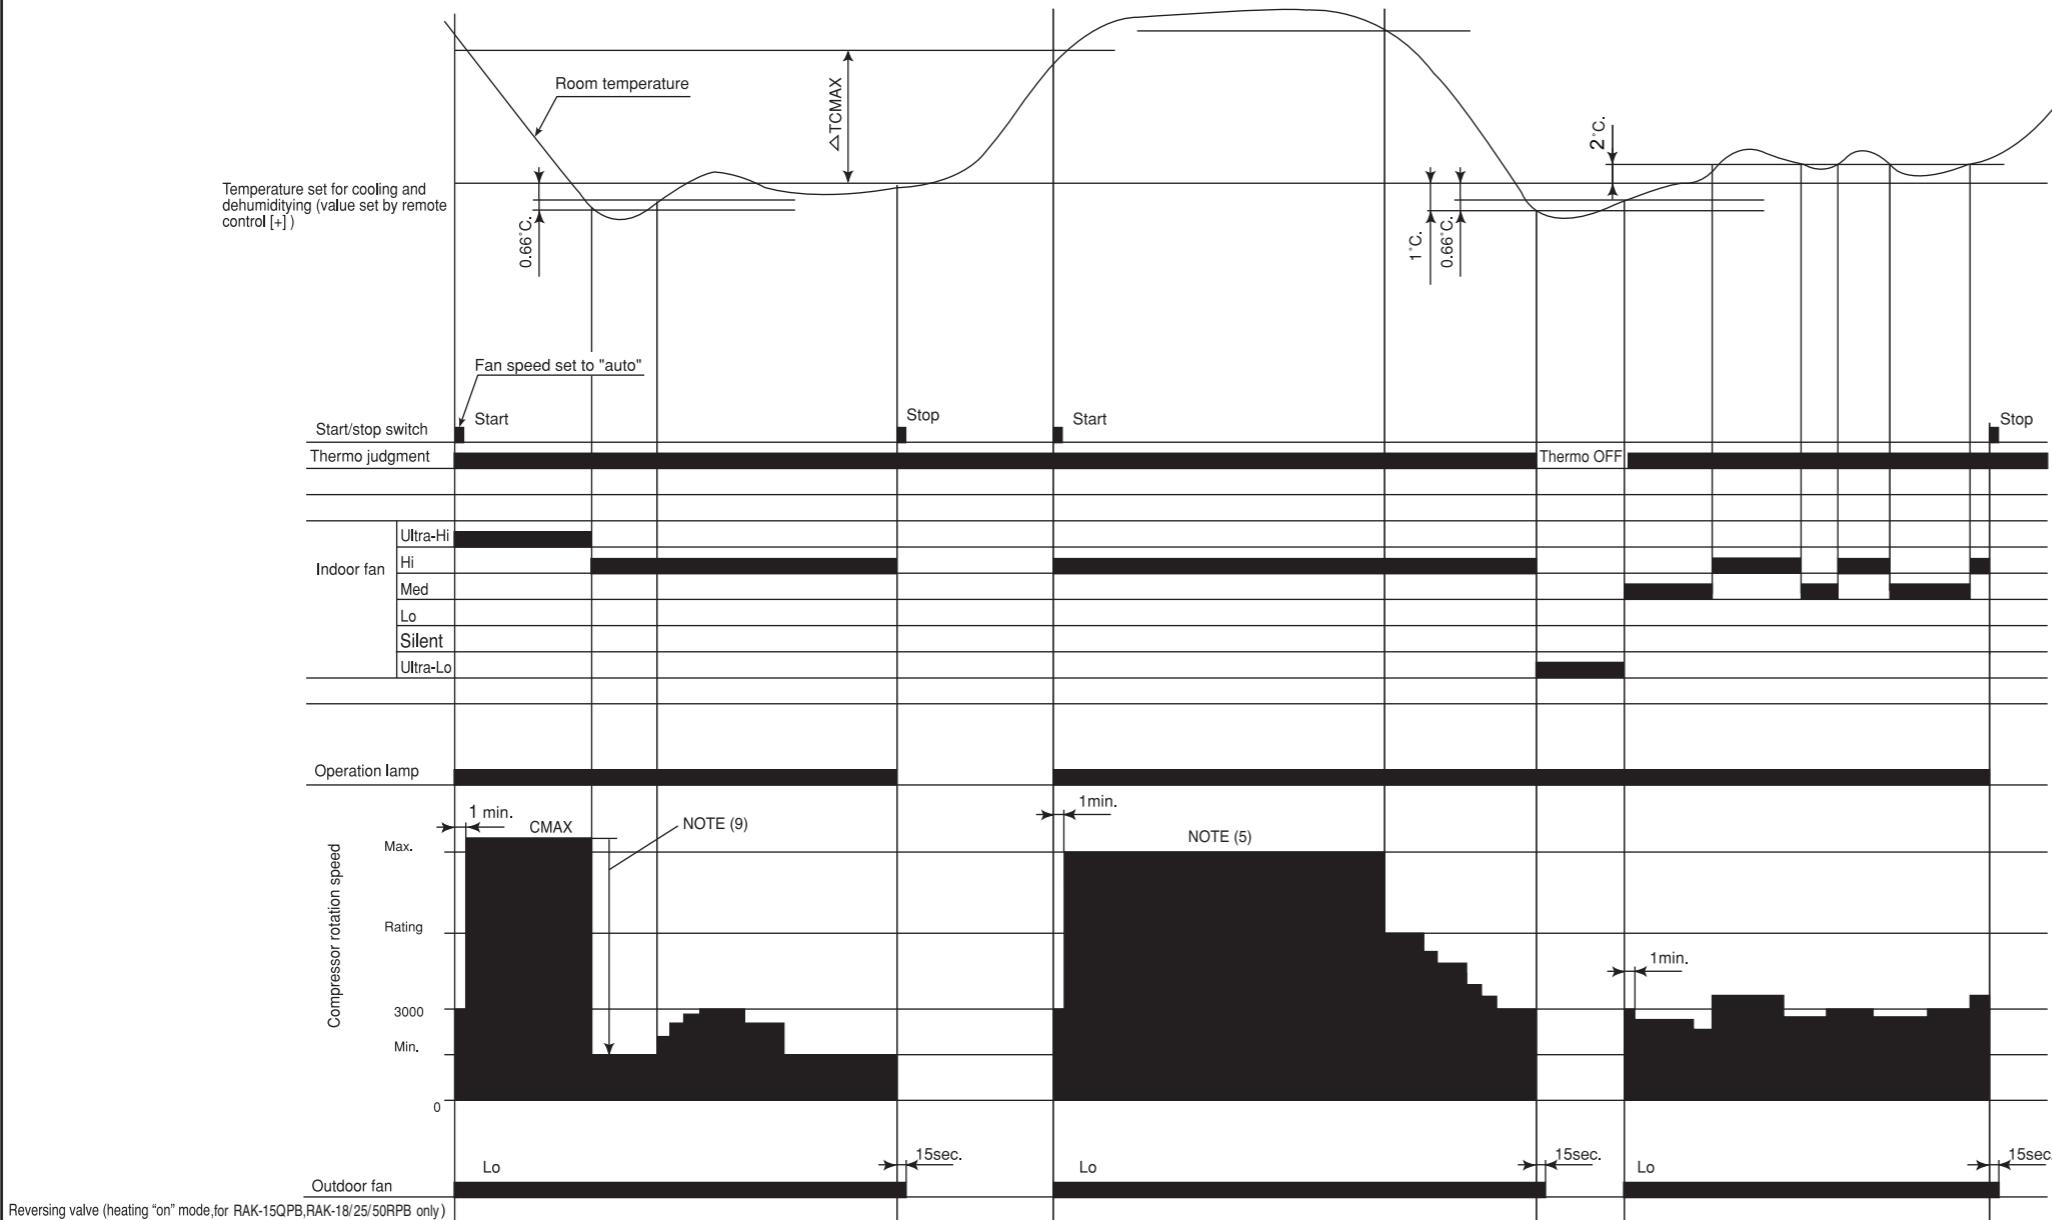


**Notes:**

- (1) Condition for entering into Cool Dashed mode. When fan set to "Hi" or "Auto" and when the compressor speed (P section) due to temperature difference between setting temperature (including the correction shift only) and room temperature is CMAX or higher.
- (2) Cool Dashed will release when i) a maximum 25 minutes is lapsed and ii) room temperature is lower than set temperature  $-3^{\circ}\text{C}$  (thermo off) and iii) when room temperature has achieved setting temperature  $-1^{\circ}\text{C}$  then maximum Cool Dashed time will be revised to 20 minutes. And iv) indoor fan is set to Lo and Med fan mode and v) change operation mode.
- (3) During Cool Dashed operation, thermo off temperature is set temperature (with shift value)  $-3^{\circ}\text{C}$ . After thermo off, operation continue in Fuzzy control mode.
- (4) Compressor minimum "ON" time and "OFF" time is 3 minutes.
- (5) During normal cooling mode, compressor maximum rpm CMAX will maintain for 60 minutes if indoor temperature is lower than CLMXTP. No time constrain if indoor temperature is higher than CLMXTP.
- (6) When fan is set to "Hi", compressor rpm will be limited to CSTD.
- (7) When fan is set to "Med", compressor rpm will be limited to CJKMAX.
- (8) When fan is set to "Lo", compressor rpm will be limited to CBEMAX.
- (9) During Cool Dashed, when room temperature reaches set temperature  $-1^{\circ}\text{C}$  compressor rpm is actual rpm x DWNRATEC.

## Cooling Defrost

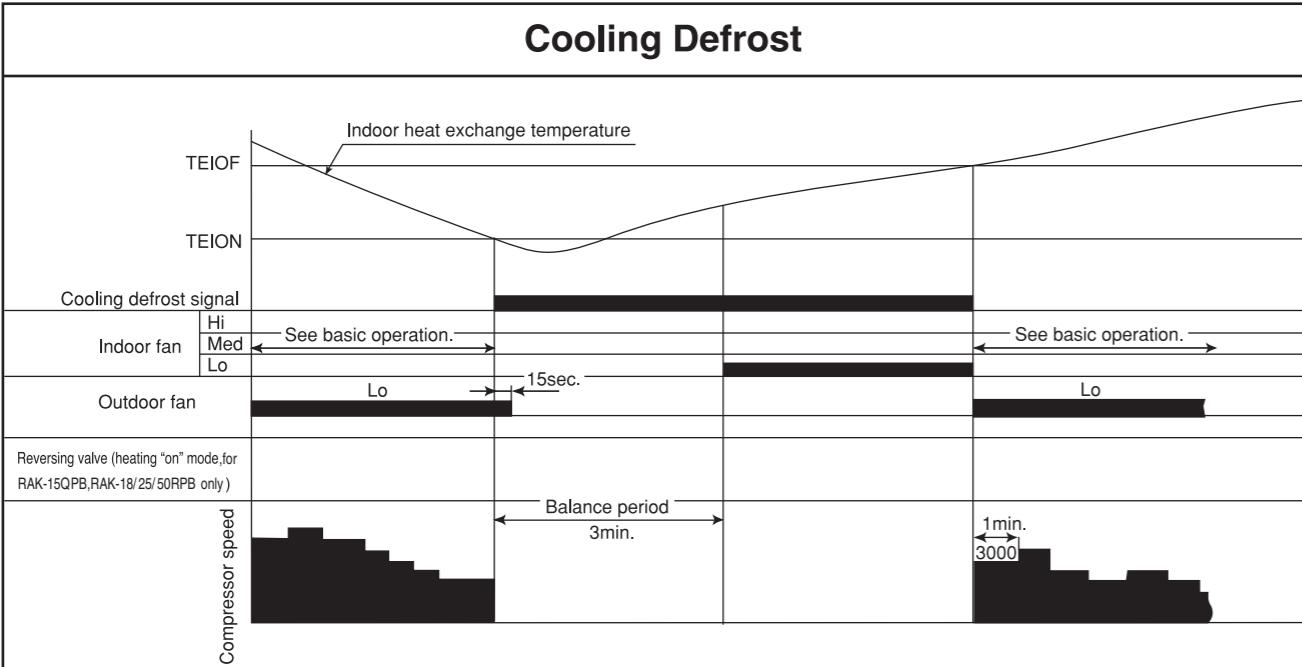


## Cooling Powerful Operation

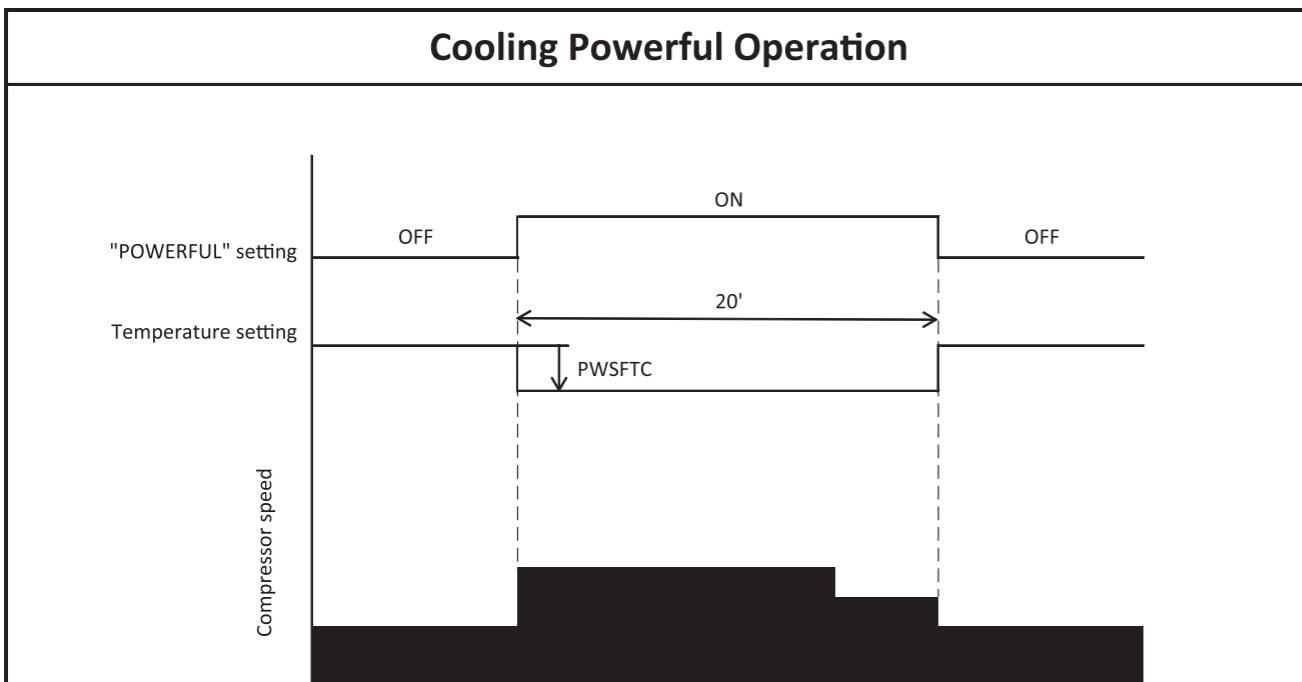

### Notes :

- (1) Pressing the "POWERFUL" button will reduce the temperature setting by PWSFTC.
- (2) The powerful operation is for 20 minutes after setting.
- (3) Operation is continued forcibly thermo-ON for 20 minutes after the powerful operation is finished.
- (4) Pressing the "START/STOP" button and "POWERFUL" button during powerful operation will cancel the powerful operation.
- (5) If the sleep timer is set during powerful operation, the powerful operation will be canceled.
- (6) When the powerful operation is set, the fan speed will be set to "HIGH" and the compressor's maximum speed will be set to CMAX2 during powerful operation. The compressor's lower limit speed is CKYMIN\_PW.
- (7) The fan speed increases by FNUPPW\_C.
- (8) After the powerful operation is ended, the system automatically operates with the previous settings used before the powerful operation.


## Cooling Sleep Operation

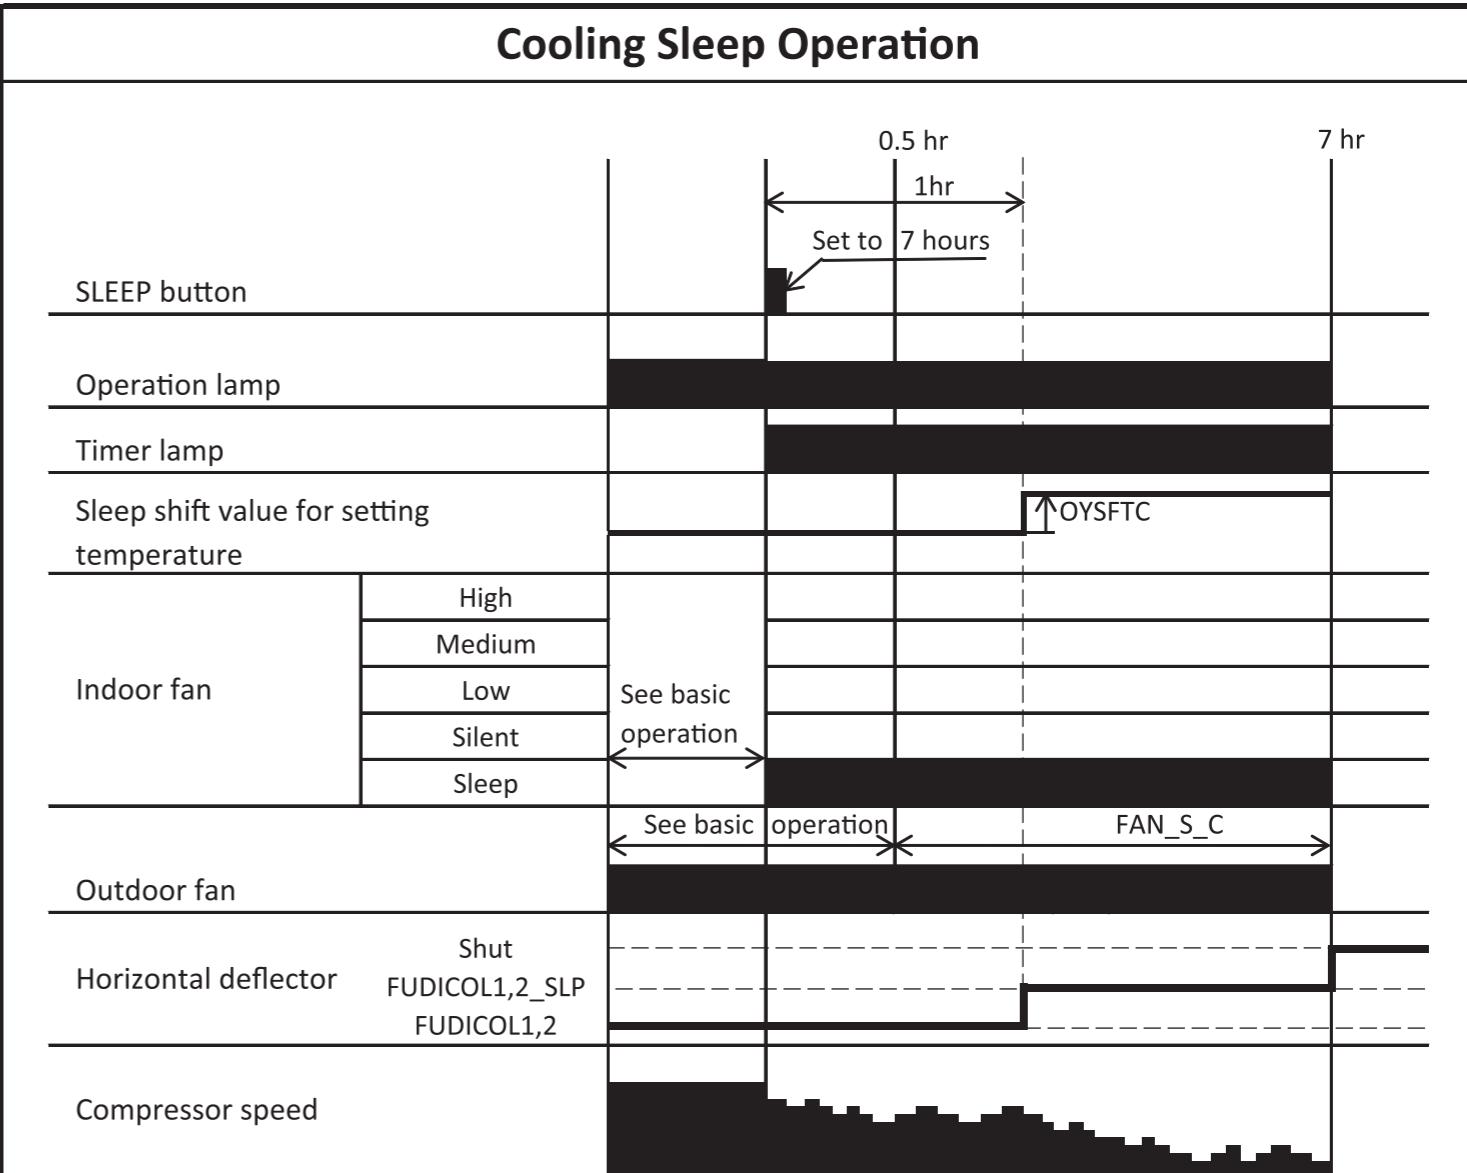


### Notes :

- (1) The sleep operation starts when the "SLEEP" button is pressed.
- (2) When the sleep operation is set, the maximum compressor speed is limited to CSZMAX, and the indoor fan set is "sleep" (FCSOY\_P).
- (3) The indoor fan speed does not change even when the fan speed mode is changed.
- (4) If sleep operation is canceled by the cancel button or sleep button, all data is cleared.
- (5) 1 hour after the sleep operation is set, the sleep shift value (OYSFTC) is added.

## Dehumidifying

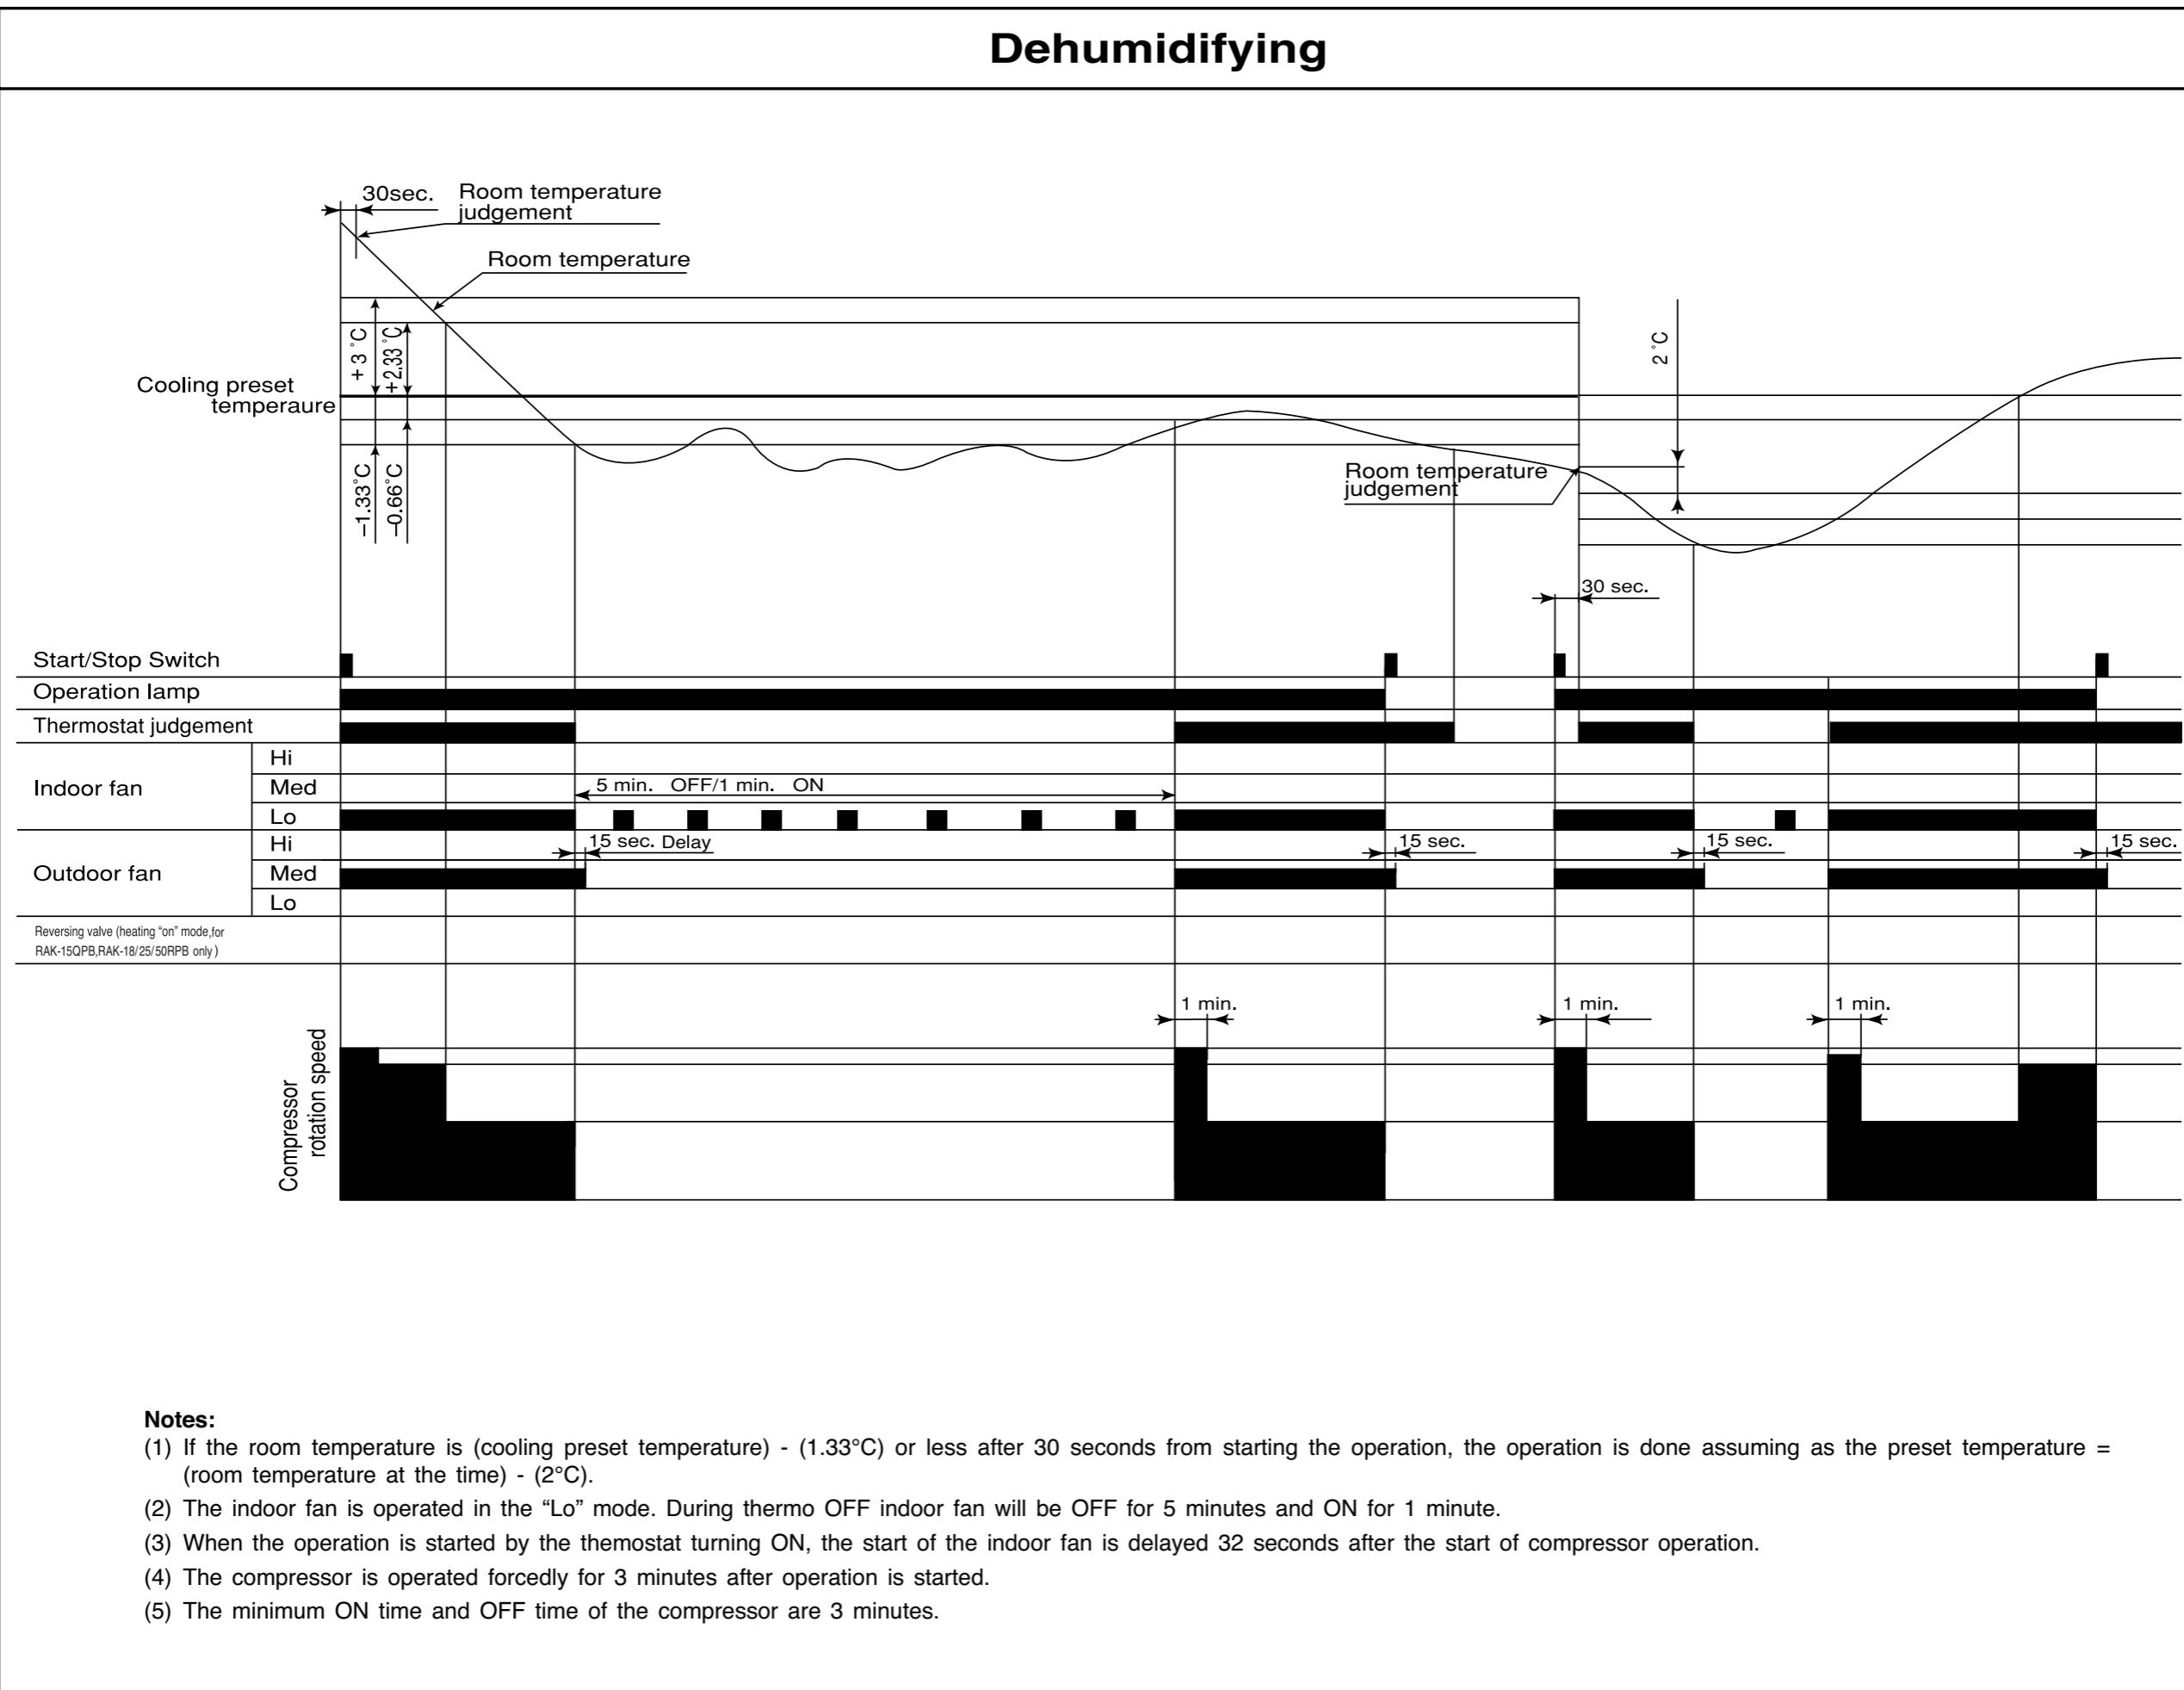


## Dehumidifying Powerful Operation

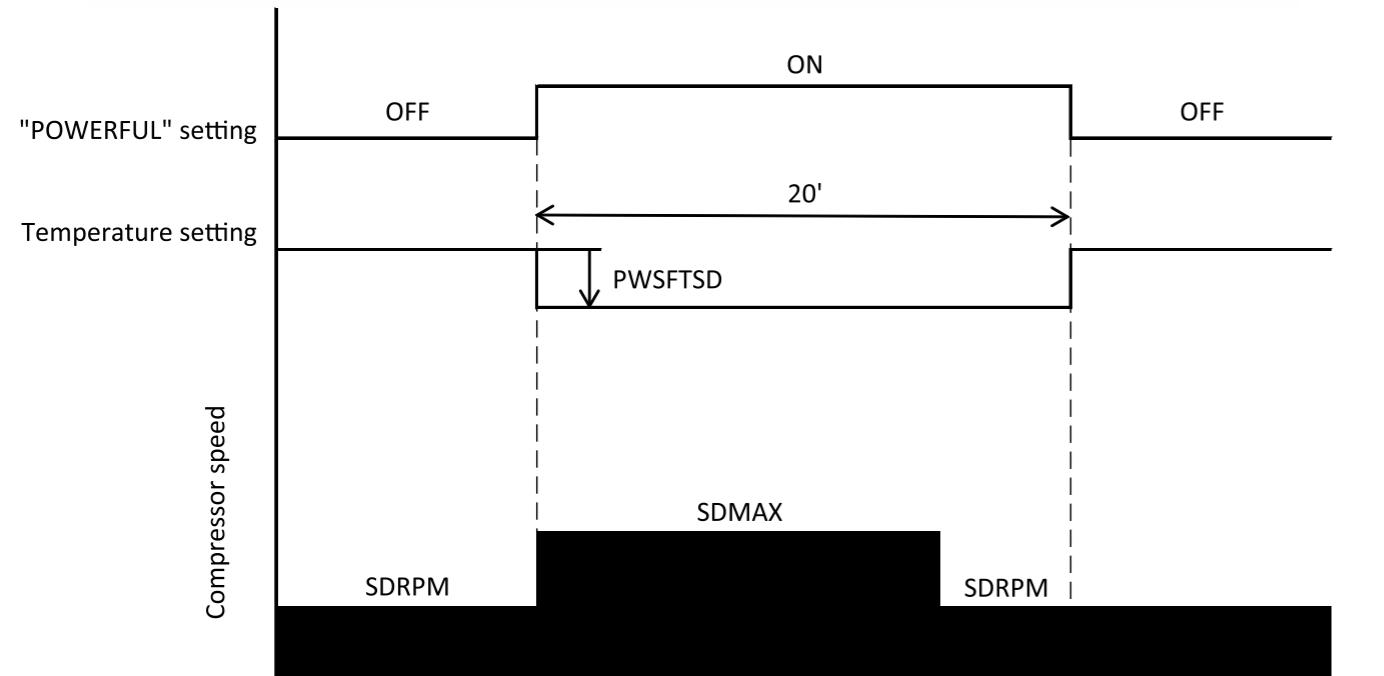

### Notes :

- (1) Pressing the "POWERFUL" button will reduce the temperature setting by PWSFTSD.
- (2) The powerful operation is for 20 minutes after setting.
- (3) Operation is continued forcibly thermo-ON for 20 minutes after the powerful operation is finished.
- (4) Pressing the "START/STOP" button and "POWERFUL" button during powerful operation will cancel the powerful operation.
- (5) If the sleep timer is set during powerful operation, the powerful operation will be canceled.
- (6) If the differential(the room temperature - the temperature setting) is "the differential  $\geq 3^{\circ}\text{C}$ " after powerful setting , the compressor's maximum speed during powerful operation will be set to SDMAX. Then the differential reduce "the differential  $\leq 2.33^{\circ}\text{C}$ " during powerful operation, the compressor's speed will be set to SDRPM.  
If the differential(the room temperature - the temperature setting) is "the differential  $< 3^{\circ}\text{C}$ " after powerful setting , the compressor's minimum speed during powerful operation will be set to SDRPM.
- (7) After the powerful operation is ended, the system automatically operates with the previous settings used before the powerful operation.


## Dehumidifying Sleep Operation

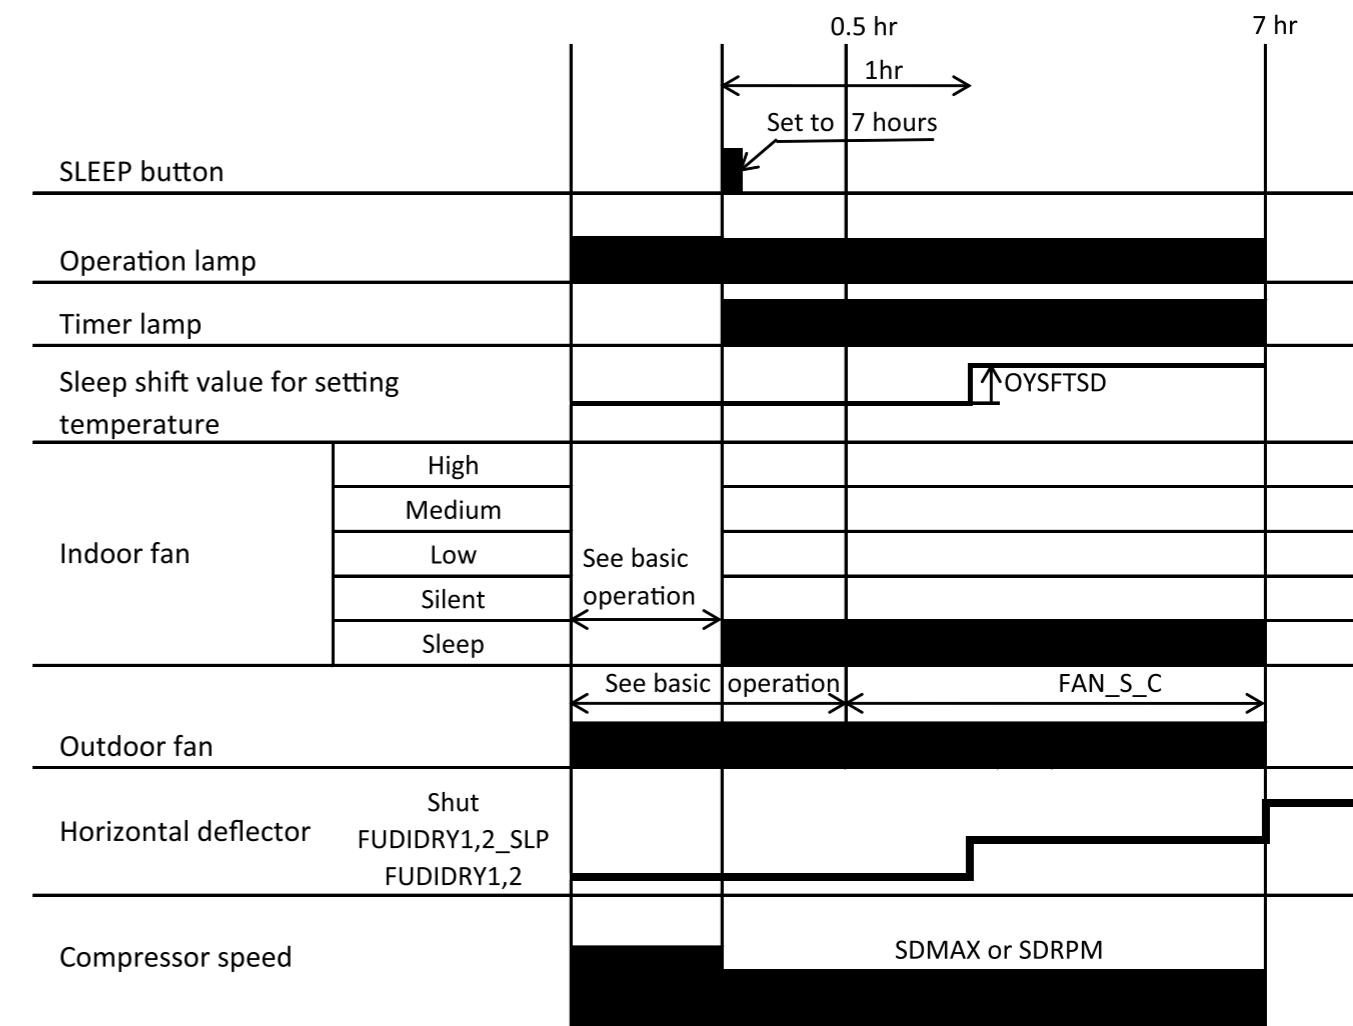

### Notes :

- (1) The sleep operation starts when the "SLEEP" button is pressed.
- (2) When the sleep operation is set, the indoor fan set is "sleep"(FDOY\_P).
- (3) The indoor fan speed does not change even when the fan speed mode is changed.
- (4) If sleep operation is canceled by the cancel button or sleep button, all data is cleared.
- (5) 1 hour after the sleep operation is set, the sleep shift value(OYSFTSD) is added.


## Basic Heating Operation

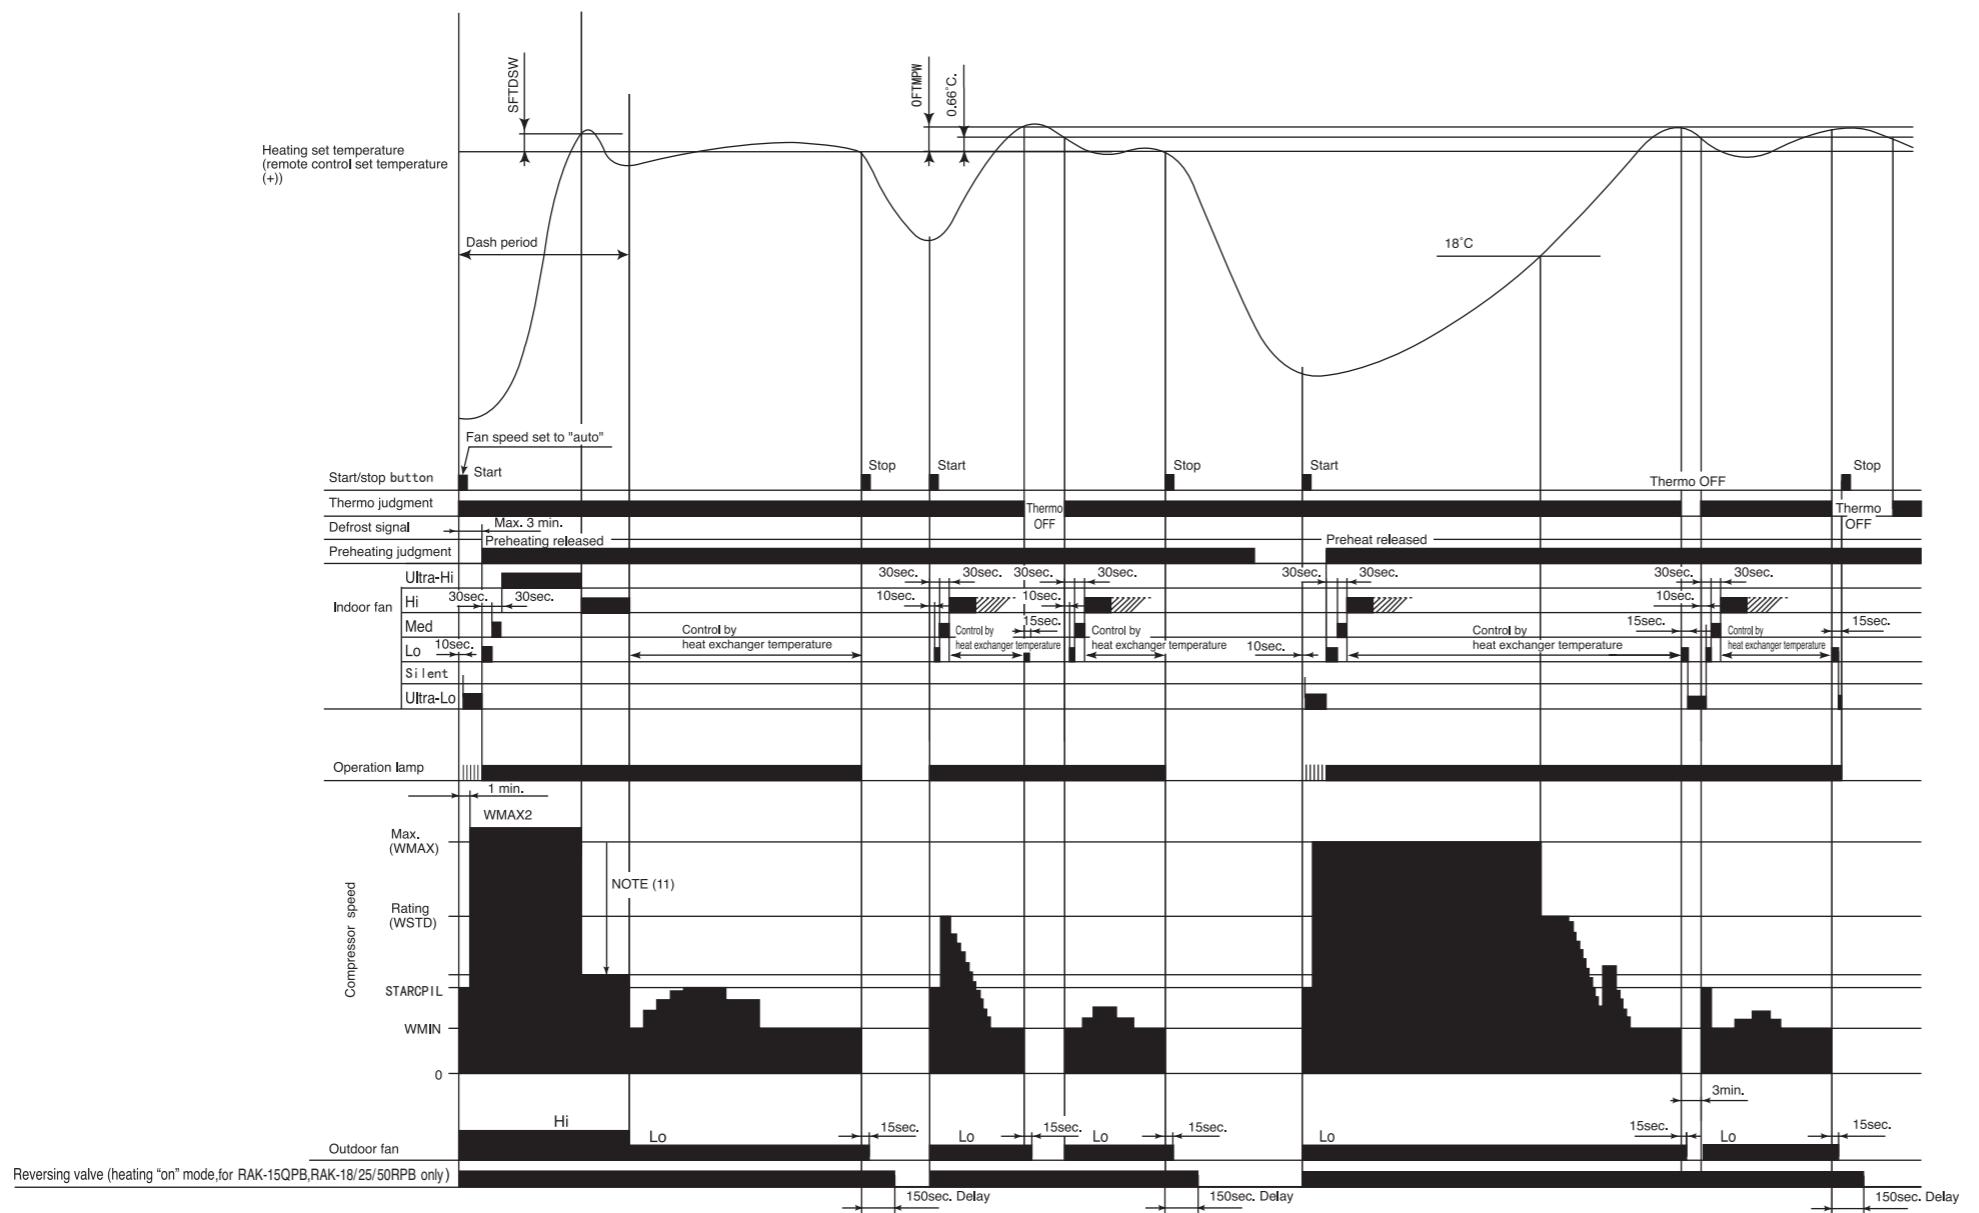

## Notes:

- (1) Condition for entering into hot dashed mode. When fan set to "Hi" or "Auto" and i) room temperature is 18 or less, and ii) outdoor temperature is 10 or less, and iii) compressor speed (P section) due to temperature difference between setting temperature(including shift value only) and room temperature is WMAX or more.
  - (2) The maximum compressor speed period during hot dash is finished when i) room temperature has reached the setting temperature + SFTDSW. ii ) thermo off.
  - (3) During hot dashed operation, thermo off temperature is setting temperature (with shift value) +3 . After thermo off, operation continue inn Fuzzy control mode.
  - (4) Minimum "ON" time and minimum "OFF" time of compressor operation is 3 minutes.
  - (5) During normal heating mode, compressor maximum rpm WMAX will maintain for 120 minutes. No time limit constrain if room temperature is 18 or less and outdoor temperature is 2 or less.
  - (6) During preheating or defrosting or auto fresh defrosting mode, indoor unit operation lamp will blink at interval of 2 seconds "ON" and 1 second "OFF".
  - (7) When heating mode starts, it will enter into preheating mode if indoor heat exchanger temperature is less than YNEOF + 0.33 .
  - (8) When fan is set to "Med" or "Lo" or "Silent", compressor rpm will be limited to "WJKMAX" or "WBEMAX" or "WSZMAX".
  - (9) During "Ultra-Lo" mode, if room temperature is 18 or less, indoor fan will stop. If room temperature is 18 + 0.33 or more, fan will continue in "Ultra-Lo" mode. However, "Ulta-Lo" mode during preheating or preheating after defrosting does not stop if room temperature is 18 or less.
  - (10) During hot dashed or outdoor temperature is -5 or less, compressor rpm is WMAX2.
  - (11) During hot dashed, when room temperature reaches setting temperature + SFTDSW compressor rpm is actual rpm x DWNRATEW.


## SILENT

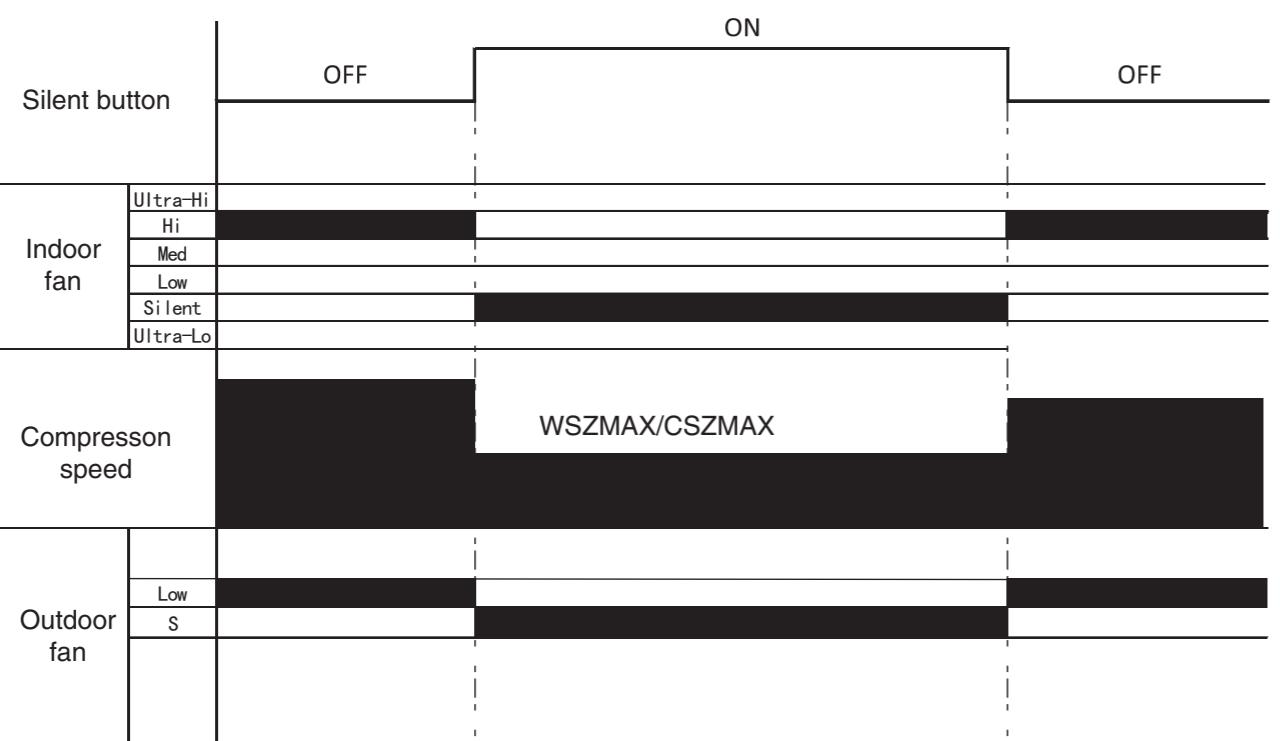

### Notes:

- Can't set POWERFUL and SILENT at the same time.


## Setting Defrosting Inhibit Period

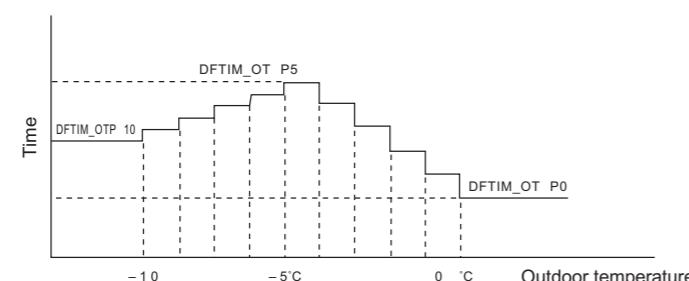

### Notes:

- (1) The first inhibit time after operation start is set to DFTIM\_FST.
  - (2) From the second time onwards, the inhibit time is set according to the time required for defrosting.
- Reverse cycle operation time [DEFCOL] : DEFTIM\_COL is set.  
Reverse cycle operation time < [DEFCOL] : The time corresponding to outdoor temperature is set.


## Heating Sleep Operation

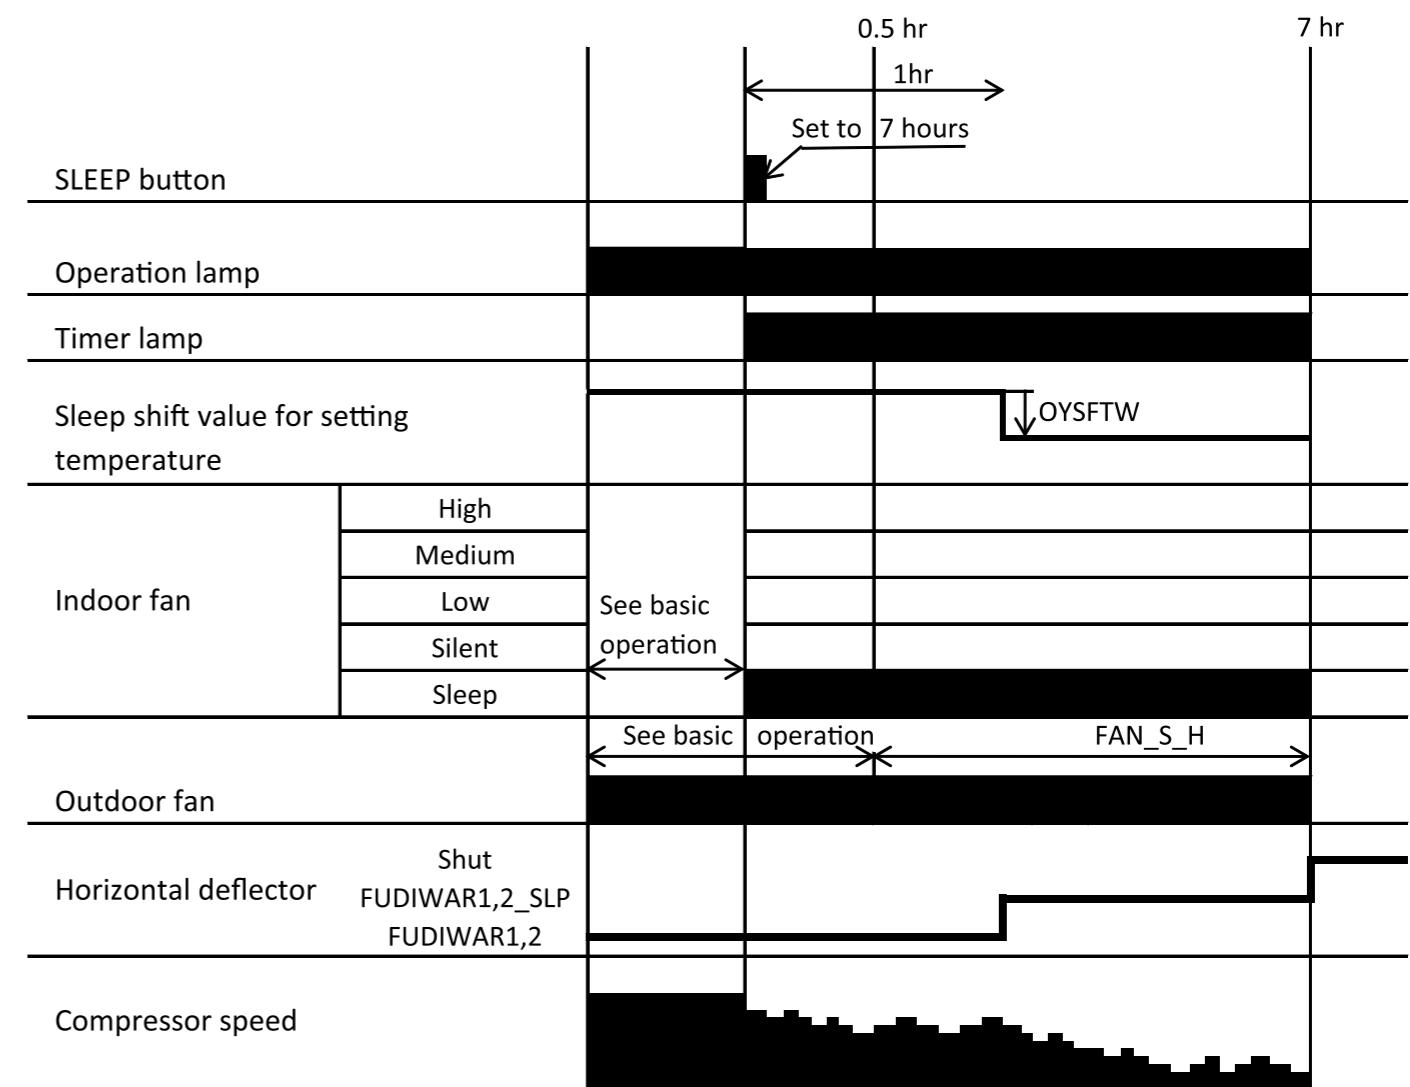

### Notes :

- (1) The sleep operation starts when the "SLEEP" button is pressed.
- (2) When the sleep operation is set, the maximum compressor speed is limited to WSZMAX, and the indoor fan set is "sleep"(FWSOY\_P).
- (3) The indoor fan speed does not change even when the fan speed mode is changed.
- (4) If sleep operation is canceled by the cancel button or sleep button, all data is cleared.
- (5) 1 hour after the sleep operation is set, the sleep shift value(OYSFTW) is reduced.


## Heating Powerful Operation

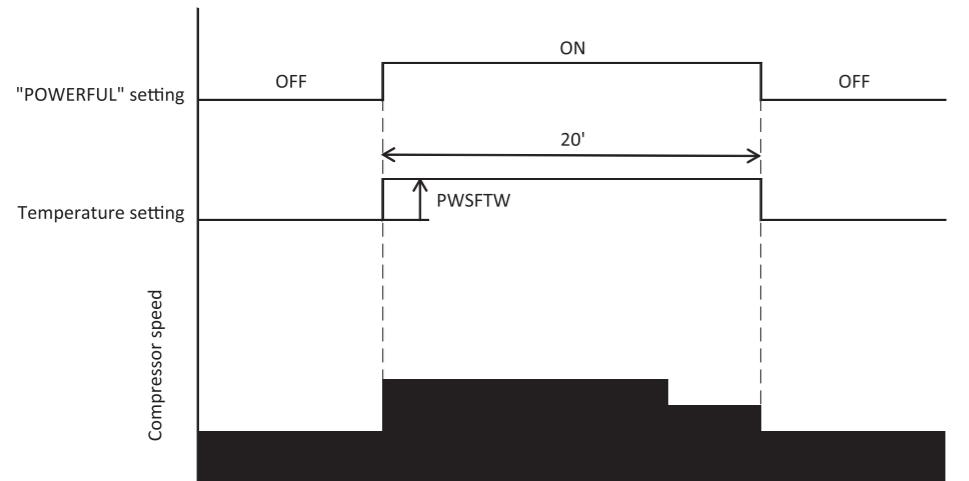

Notes :

- (1) Pressing the "POWERFUL" button will increase the temperature setting by PWSFTW.
- (2) The powerful operation is for 20 minutes after setting.
- (3) Operation is continued forcibly thermo-ON for 20 minutes after the powerful operation is finished.
- (4) Defrost is inhibited for 20 minutes after the start of the powerful operation.
- (5) Pressing the "START/STOP" button and "POWERFUL" button during powerful operation will cancel the powerful operation.
- (6) If the sleep timer is set during powerful operation, the powerful operation will be canceled.
- (7) When the powerful operation is set, the fan speed will be set to "HIGH" and the compressor's maximum speed will be set to WMAX2 during powerful operation. The compressor's lower limit speed is WKYMIN\_PW.
- (8) After the powerful operation is ended, the system automatically operates with the previous settings used before the powerful operation.


## Leave Home

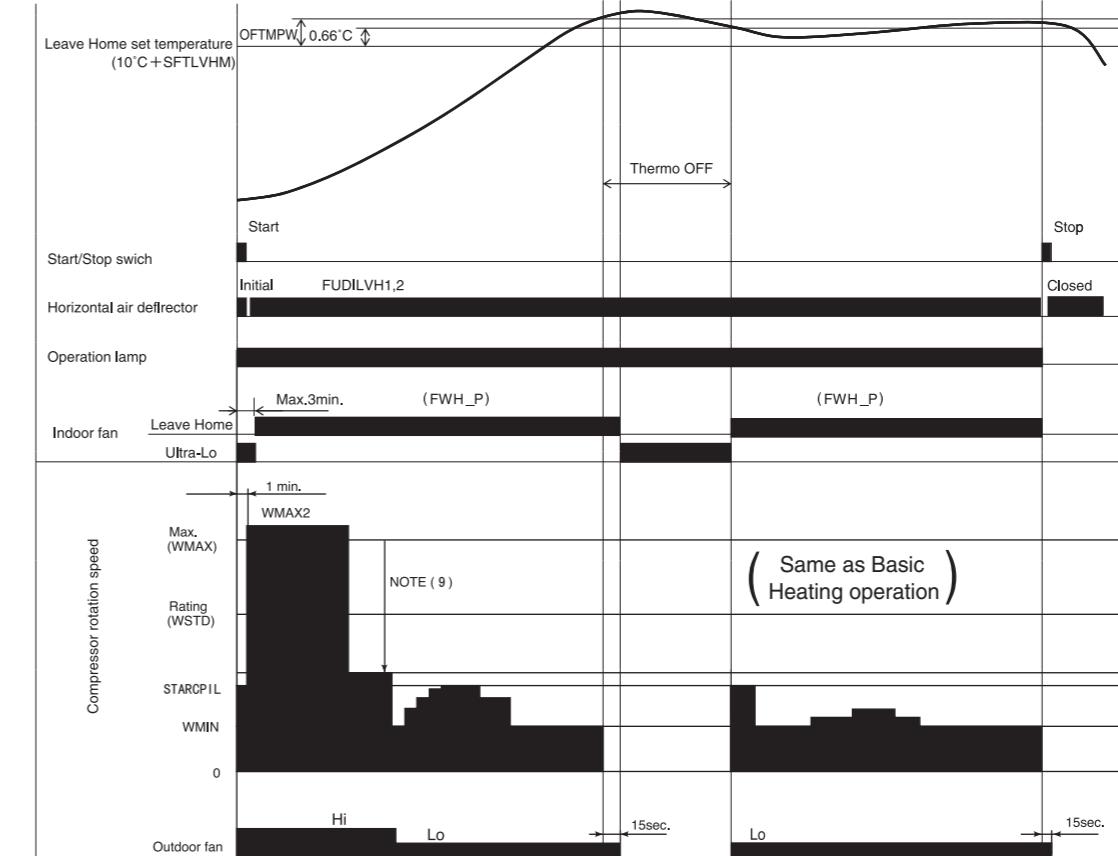

Notes:

- Perform Leave Home operation according to the following control contents.
- (1) Operation mode : Heating
  - (2) Temperature set :  $10^{\circ}\text{C} \sim 16^{\circ}\text{C}$
  - (3) Temperature setting correction shift : + [SFTLVHM]
  - (4) Indoor fan : [FWH\_P]
  - (5) Outdoor fan speed :
  - (6) Compressor start control : } Same as Basic Heating operation
  - (7) Compressor speed :
  - (8) Lamp indication :
    - i ) Operation lamp : ON
    - ii) Timer lamp : OFF( Continuous operation ) ; ON( Day timer operation )


## ECO

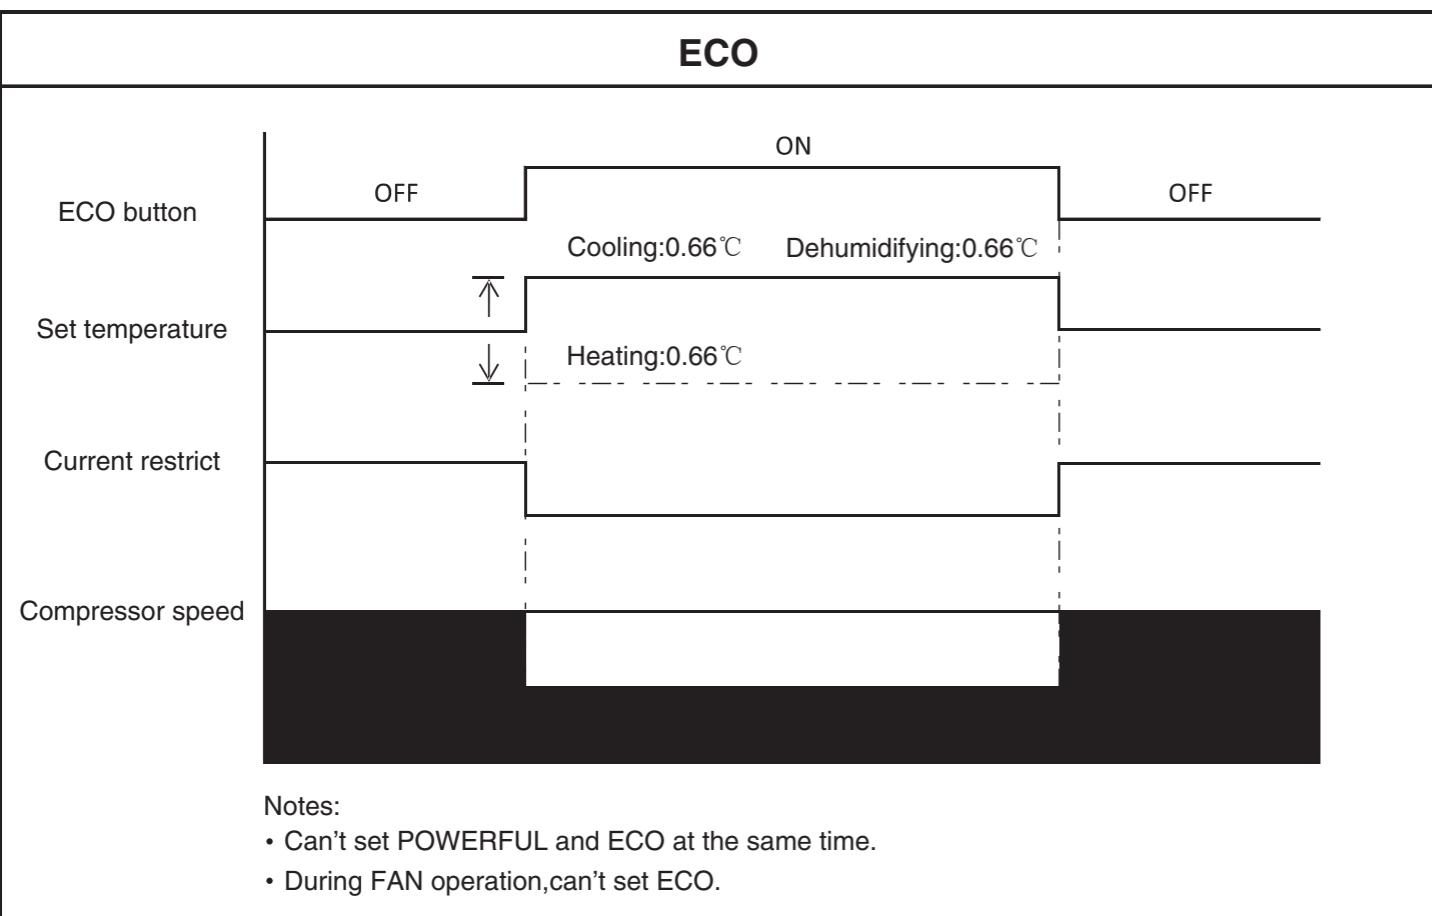

Notes:

- Can't set POWERFUL and ECO at the same time.
- During FAN operation, can't set ECO.

## Clean Operation

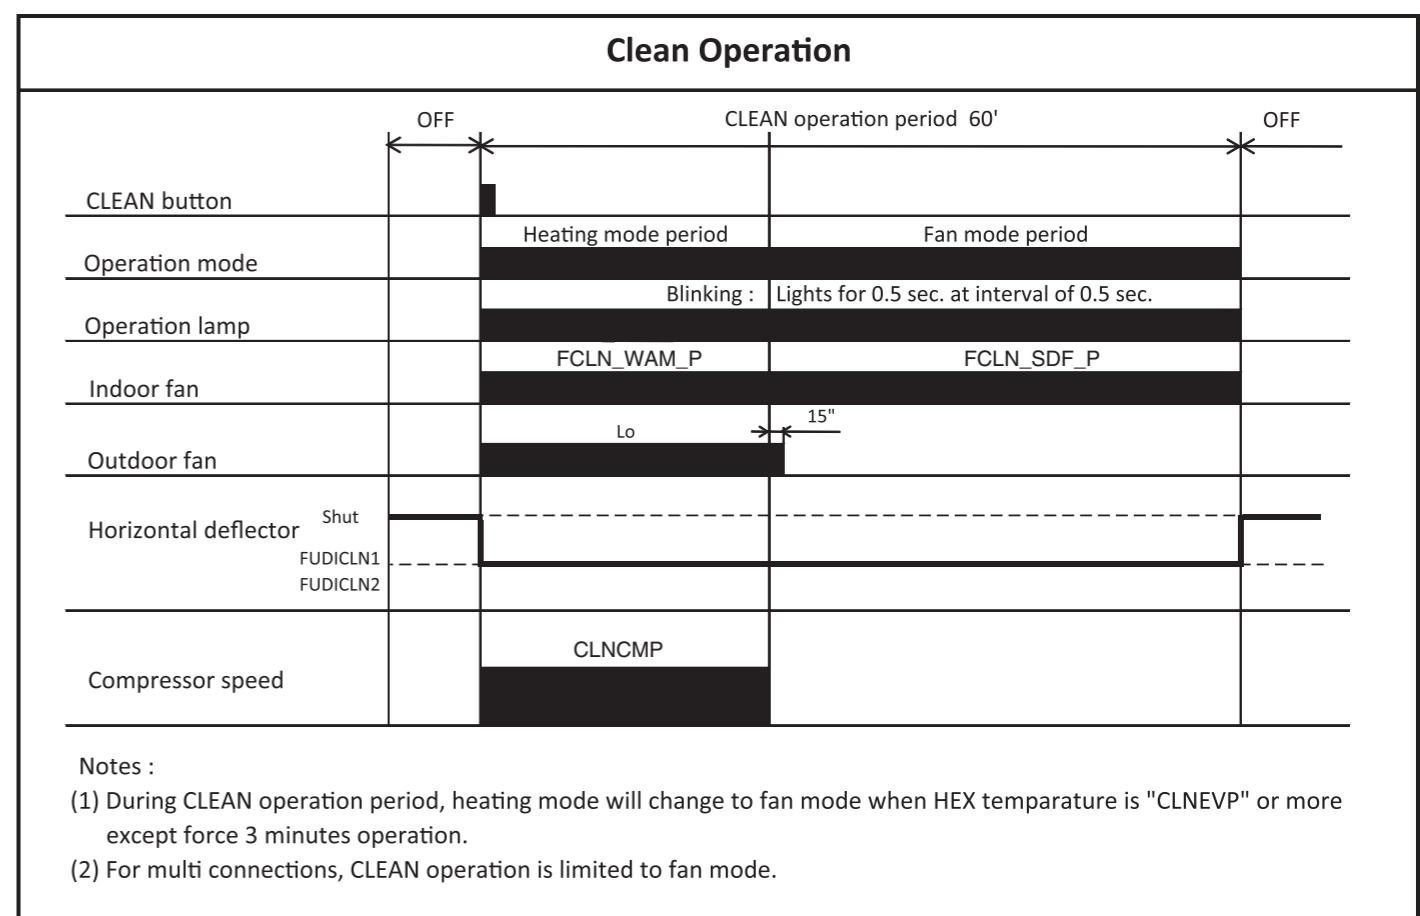


Notes :

- (1) During CLEAN operation period, heating mode will change to fan mode when HEX temperature is "CLNEVP" or more except force 3 minutes operation.
- (2) For multi connections, CLEAN operation is limited to fan mode.

## RAK-35RPB

**RAK-15QPB  
RAK-18RPB  
RAK-25RPB  
RAK-50RPB**


### Reversing valve defrosting

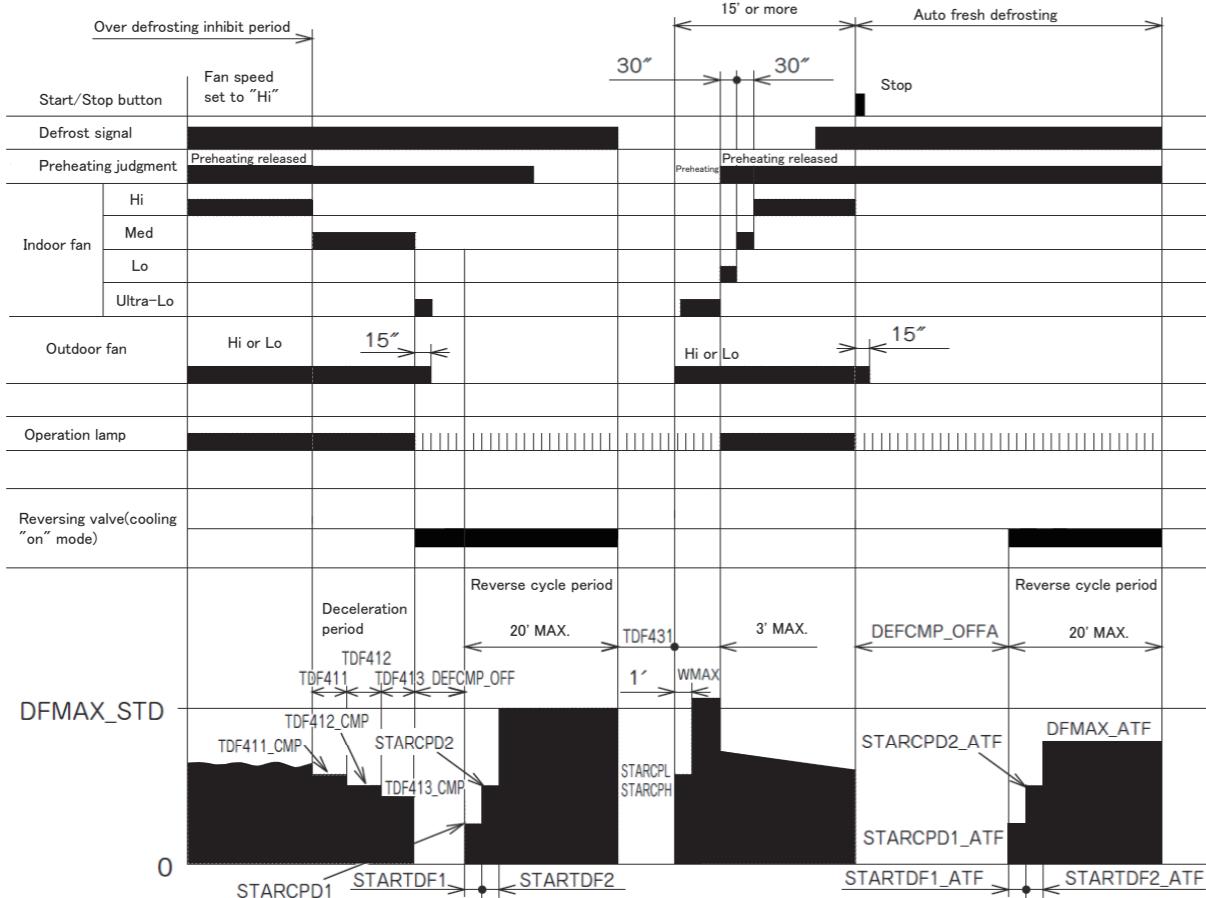

#### Notes:

- (1) The defrosting inhibit period is set as shown in the diagram below. When defrosting has finished once, the inhibit period is newly set, based on the outdoor temperature when the compressor was started. During this period, the defrost signal is not accepted.
- (2) If the difference between the room and outdoor temperature is large when defrosting is finished, the maximum compressor speed (WMAX) or (WMAX2) can be continued for 120 minutes maximum.
- (3) The defrosting period is 20 minutes maximum.
- (4) When operation is stopped during defrosting, it is switched to auto refresh defrosting.
- (5) Auto refresh defrosting cannot be engaged within 15 minutes after operation is started or defrosting is finished.

### Reversing valve defrosting

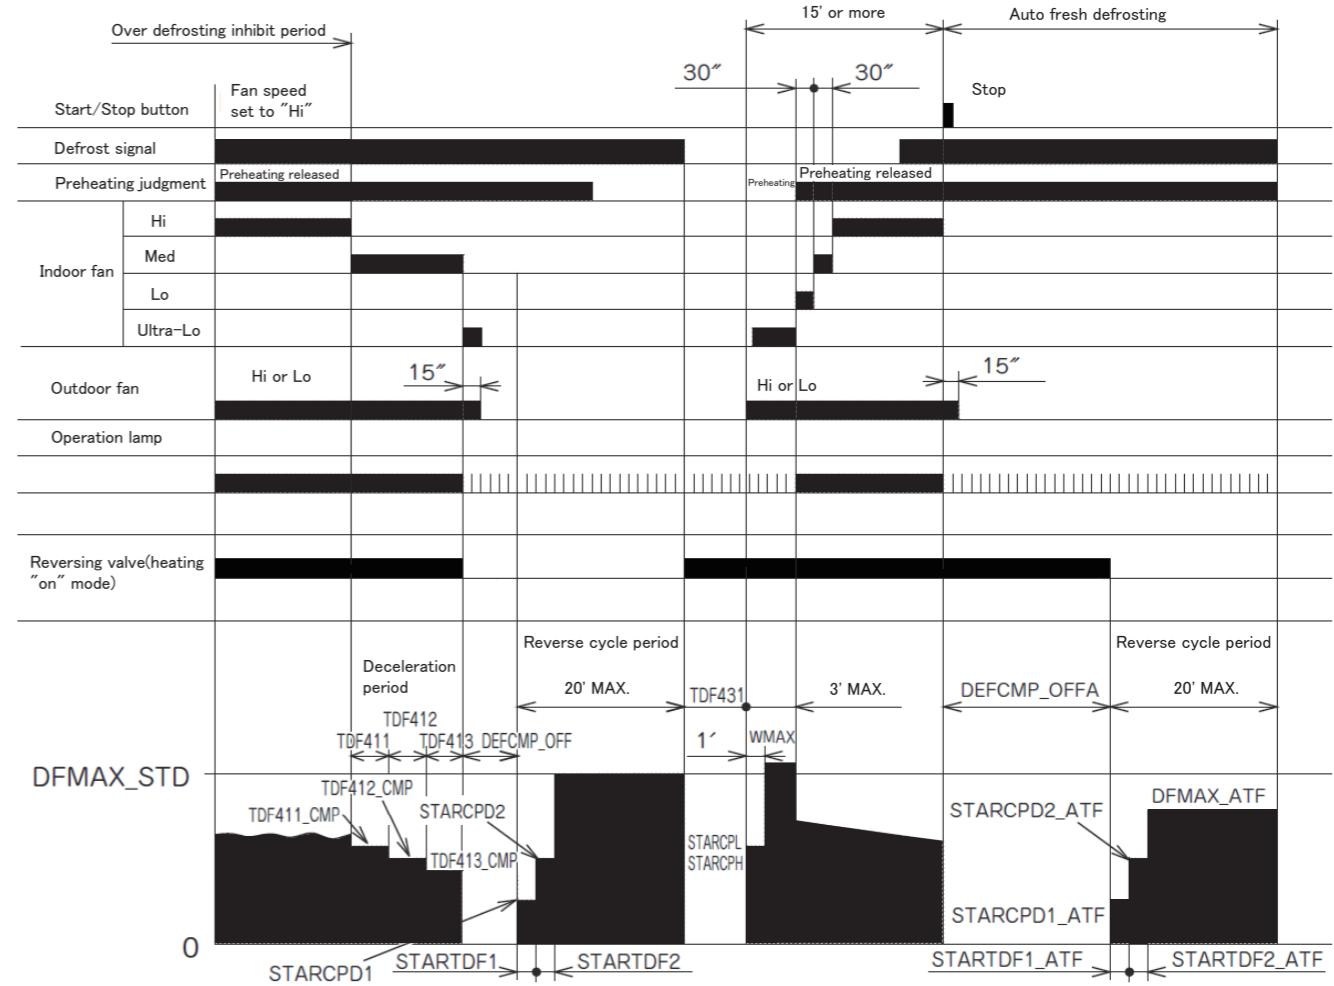

#### Notes:


- (1) The defrosting inhibit period is set as shown in the diagram below. When defrosting has finished once, the inhibit period is newly set, based on the outdoor temperature when the compressor was started. During this period, the defrost signal is not accepted.
- (2) If the difference between the room and outdoor temperature is large when defrosting is finished, the maximum compressor speed (WMAX) or (WMAX2) can be continued for 120 minutes maximum.
- (3) The defrosting period is 20 minutes maximum.
- (4) When operation is stopped during defrosting, it is switched to auto refresh defrosting.
- (5) Auto refresh defrosting cannot be engaged within 15 minutes after operation is started or defrosting is finished.

# REFRIGERATING CYCLE DIAGRAM

MODEL RAK-15QPB

RAK-18RPB

RAK-25RPB

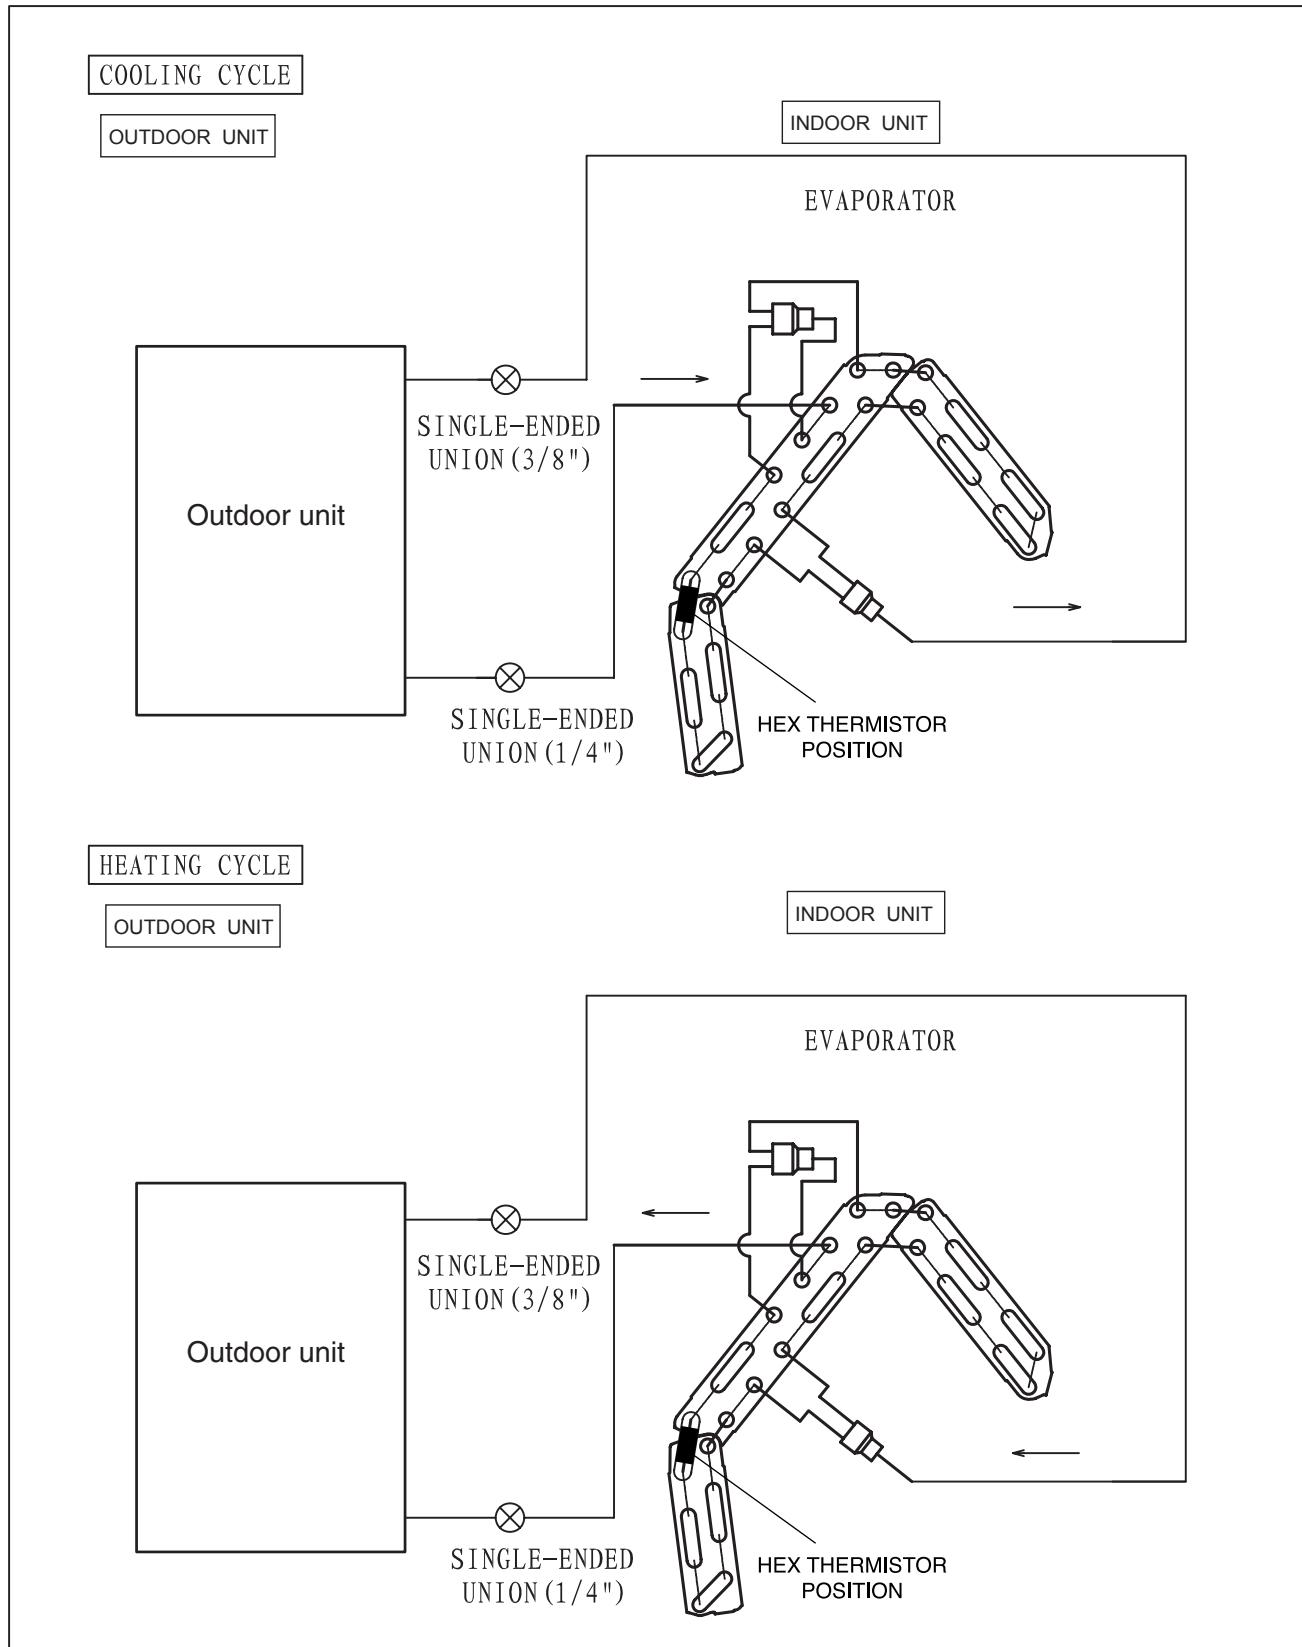



# REFRIGERATING CYCLE DIAGRAM

MODEL RAK-35RPB  
RAK-50RPB

COOLING CYCLE

OUTDOOR UNIT



INDOOR UNIT

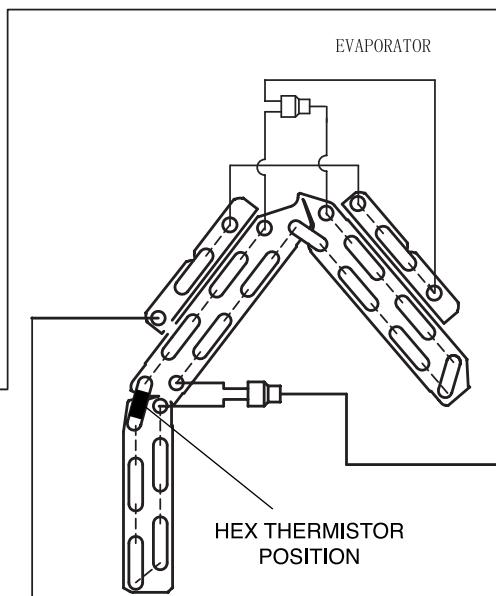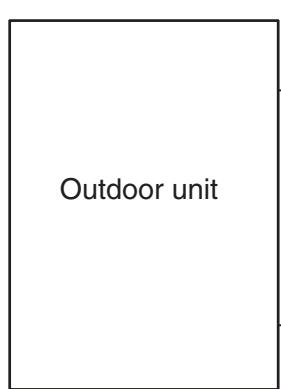

HEATING CYCLE

OUTDOOR UNIT

INDOOR UNIT

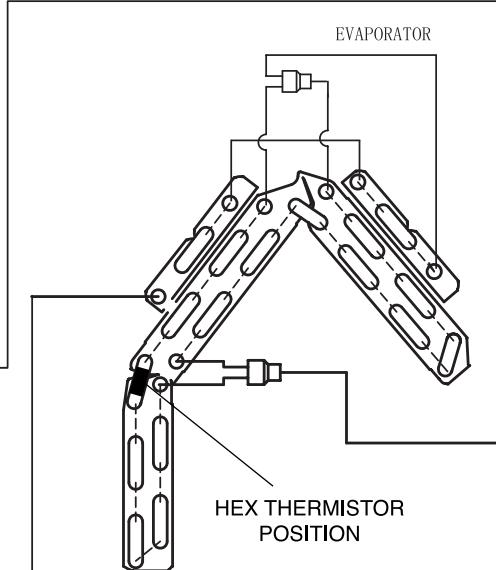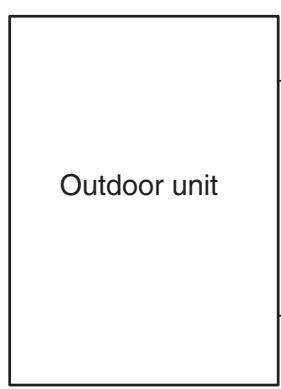

# Procedure for Disassembly and Reassembly

## INDOOR UNIT

RAK-15QPB, RAK-18RPB, RAK-25RPB

RAK-35RPB, RAK-50RPB

### 1. Front Panel

Be sure to hold the front panel with both hands to detach and attach it.

RAK-15QPB, RAK-18RPB, RAK-25RPB

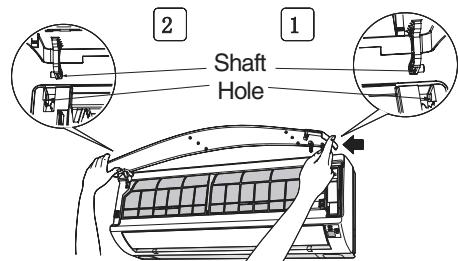


Fig. 1

When the front panel is fully opened with both hands, push the right arm to the inside to release it, and while closing the front panel slightly, put it out forward.

RAK-35RPB, RAK-50RPB

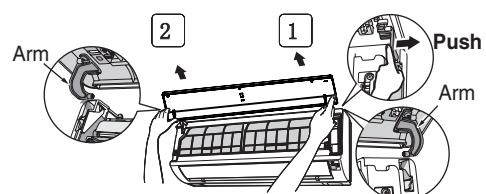


Fig. 2

1. Push the end of the right-side arm outward to release the tab.
2. Move the left-side arm outward to release the left tab, and then pull the panel towards you.

### 2. Front cover

- (1) After removing the screw of fixing the terminal cover, hold the handle of terminal cover and remove it.
- (2) After removing two screws, pull the center of the front cover forward and release the claws.
- (3) Hold the front cover at both lower sides and pull them forward to remove.

RAK-15QPB, RAK-18RPB, RAK-25RPB


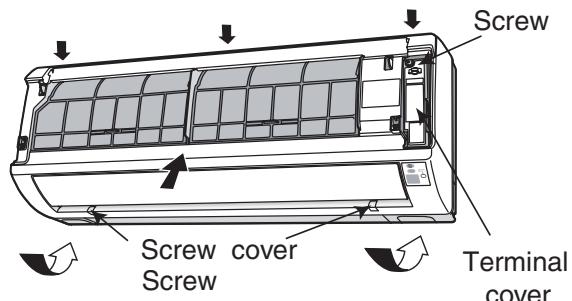


Fig. 3

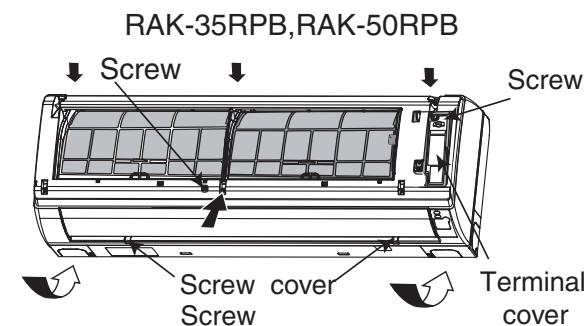

### 3. Control P.W.B. and Indicating P.W.B.

- (1) Remove each connector from the lead wire.
- (2) Remove the four P.W.B. supports from the control P.W.B.
- (3) Pull the support hook at the upper side of the indication lamp of the indicating P.W.B. and pull out the P.W.B. forward.

RAK-15QPB, RAK-18RPB, RAK-25RPB


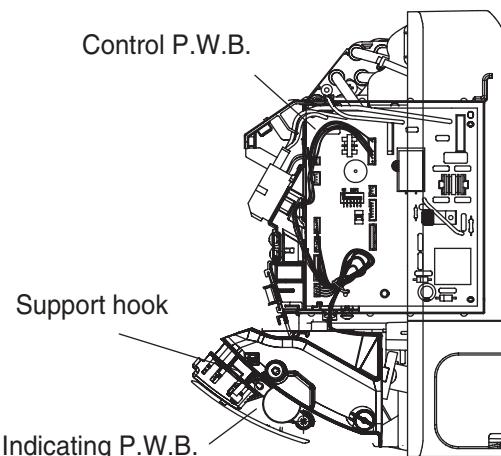


Fig. 4

RAK-35RPB, RAK-50RPB

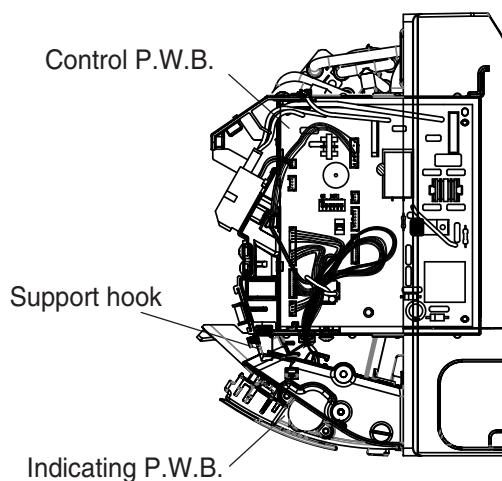

#### 4. Tangential air flow fan and fan motor

- (1) Press to lower the hook at the center of the unit a little and pull the claw forward to remove the drain pan.

18/25PPB only have one

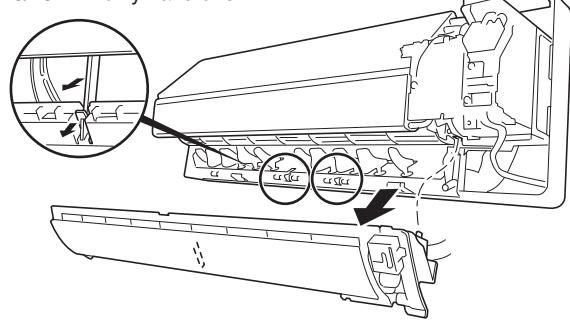


Fig. 5

- (2) Remove the screws from the upper and lower bearing covers.  
(3) Remove the locking hook of the lower bearing cover from the Cabinet.

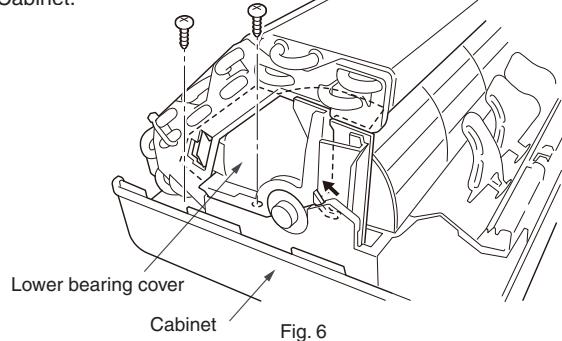


Fig. 6

- (4) Remove two lock screws from the fan motorholder.  
(5) Pull up the evaporator by holding it at the lower side. Insert a screwdriver through the space between the evaporator and drain chute and loosen the fan lock screw to remove the fan and fan motor.

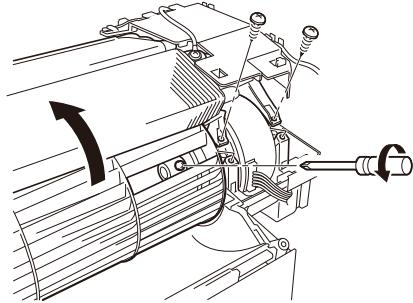


Fig. 7

# DESCRIPTION OF MAIN CIRCUIT OPERATION

MODEL RAK-15QPB, RAK-18RPB, RAK-25RPB, RAK-35RPB, RAK-50RPB

## 1. Control power circuit

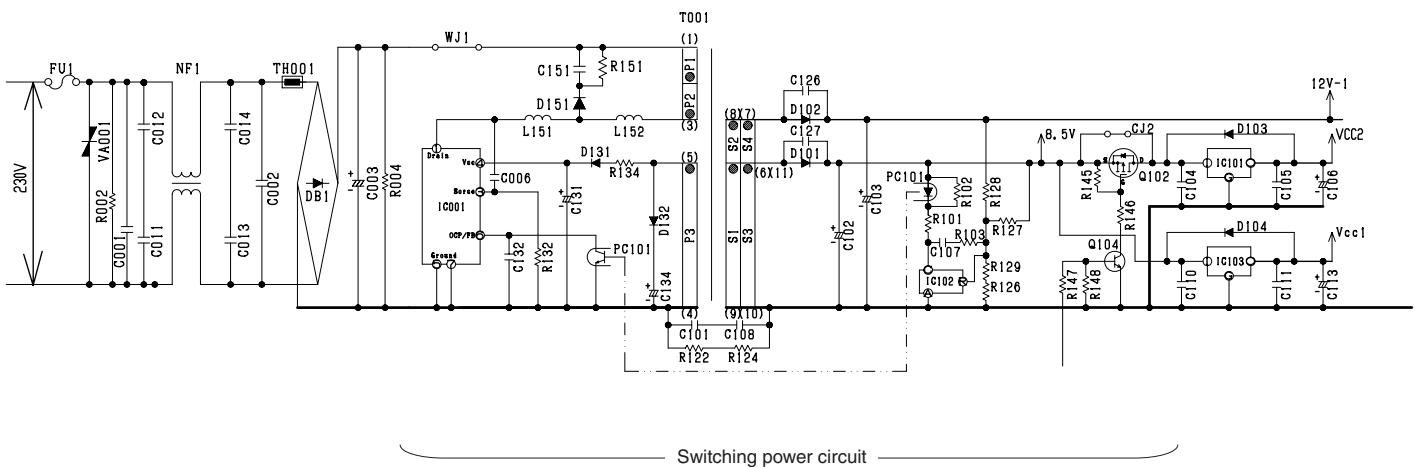


Fig. 1-1

- An AC power supply from outdoor unit passes through the 3.15 A fuse, varistor (VA001), and noise filter circuit and rectified and smoothed by DB1 and C003 to become a DC current 325 V. It is then supplied to indoor fan motor drive circuit, and switching power circuit.
- The switching power circuit, as controlled by IC001, drives the primary winding of the transformer (T001) to produce a specified voltage at the output winding. [The output terminal (pin ①) of IC001 has a switching voltage. But it changes in voltage peak and oscillation period depending on the power load. usually, the oscillation frequency when the air condition operation is about 67 kHz. In the standby state, the oscillation frequency is lowered to a level as low as 20 kHz or so to reduce the standby power.]
- The outputs of the output windings of the transformer is rectified and smoothed to become DC voltages at primary 18.5 V, 12 V, and 8.5 V respectively. The primary 18.5 V is supplied to the drive circuit of the indoor fan motor, the 12 V is supplied to each vane motor and to the drive circuits of the cleaning unit driving motor and other equipment, and the 8.5 V is adjusted to a stable 5 V by the 3-terminal regulator IC (IC101, IC103) and supplied to the microcomputer peripheral circuit.

### Check

If a failure in a part or circuit has produced an abnormal current in the power supply, the 3.15 A fuse will melt down to prevent further damage. If the 3.15 A fuse melts down, check the indoor fan motor, switching electrical circuit, and other components and replace any defective part.

### Check

If an abnormally high voltage is applied to the power supply, the 3.15 A fuse and varistor (VA001) will prevent further damage. If a high voltage results in the 3.15A fuse melted down, the varistor (VA001) should have deteriorated and destroyed. Therefore replace it at the same time.

### Caution

The primary circuit of the transformer (T001) has a voltage to ground. Guard against electric shocks.

## 2. Reset Circuit

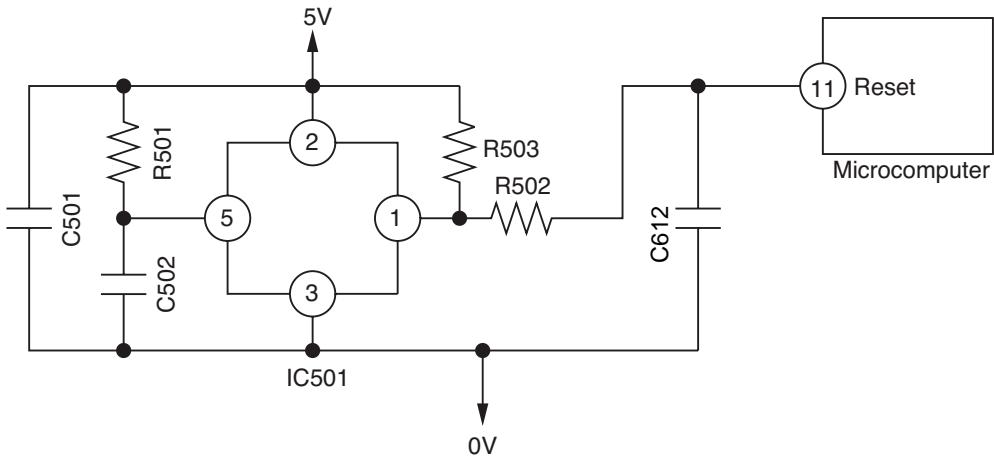


Fig.2-1

Timing chart

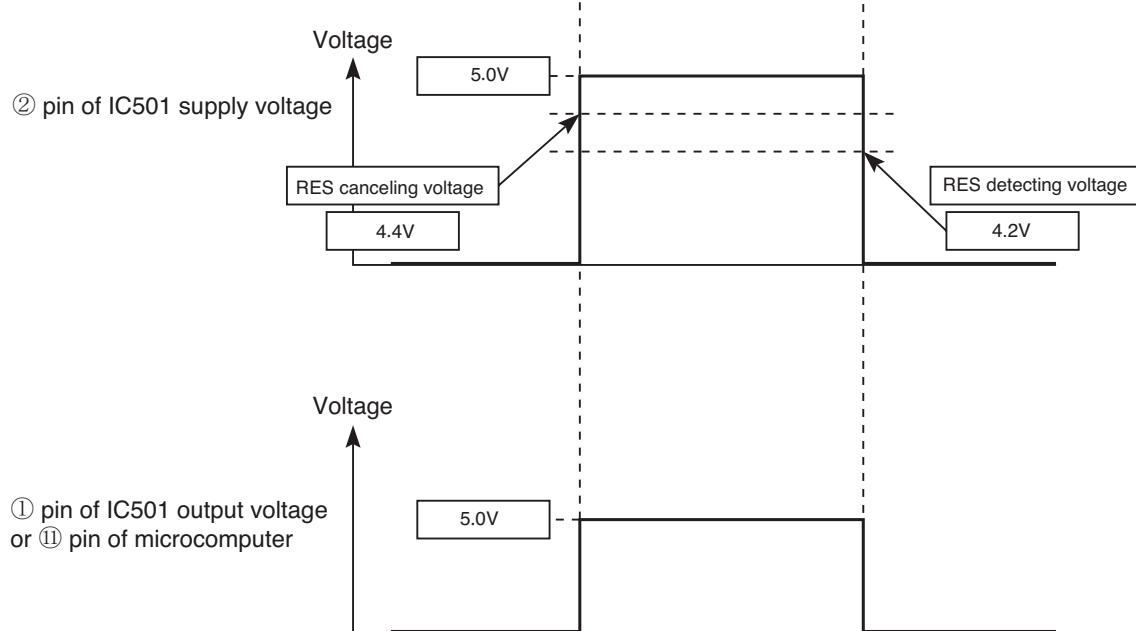


Fig.2-2

- Reset circuit is to initialize the indoor unit microcomputer when switching ON the power or after recovering from power failure.
- Microcomputer operates when ⑪ pin of the indoor unit microcomputer (reset input) is "Lo" for resetting and "Hi" for heating.
- Waveform of each part when switching ON the power and when shutting down is shown in the Fig. 2-2.
- After switching ON the power, ① pin of IC501 supply voltage and ⑪ pin of microcomputer becomes Hi when DC5V line rises and reaches approximately 4.4V or higher.  
Then, resetting will be cancelled and microcomputer starts operating.
- After shutting down the power, ① pin of IC501 supply voltage and ⑪ pin of microcomputer becomes Lo when DC5V line falls and reaches approximately 4.2V or lower.  
Then, the microcomputer will be in reset condition.

### 3. Drive circuit of the indoor fan motor

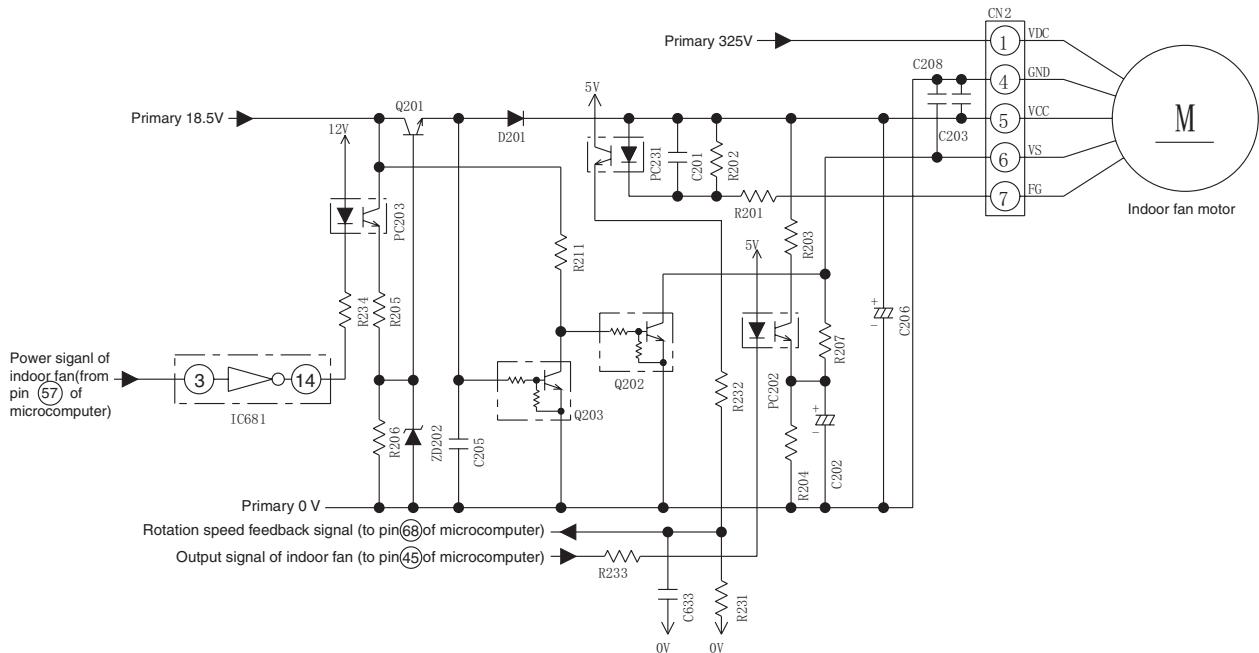


Fig. 3-1


### < The circuit check (For test) >

Name	Test point	Test voltage
Motor drive power	CN2 ① pin- ④ pin	About 325V
Motor control power	CN2 ⑤ pin- ④ pin	About 15V
Motor speed signal	CN2 ⑥ pin- ④ pin	About 2-6V
Motor rotation speed debug	CN2 ⑦ pin- ④ pin	About 7.5V

\* The voltage above is all motor operation vol. when you start the test, take care of your connector, do not touch the different pin together.

\* The voltage of pin ⑥ - pin ④ , pin ⑦ - ④ maybe different from above.

< Pin 6 - Pin 4 voltage one example >

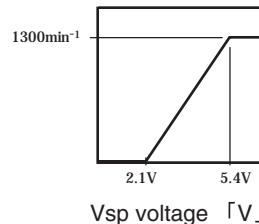

\* The different mode maybe have different FAN rotation speed.

< Typical circuit waveform >

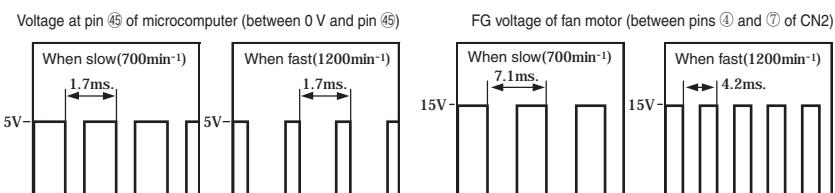


Fig. 3-2

- The indoor fan motor receives VDC (motor drive power supply), VCC (power supply for the control circuit inside the motor), and VS (speed command voltage) from CN2. The indoor fan motor returns an FG signal of a frequency that matches the rotation speed.
  - VCC stabilizes the primary 18.5 V power supply into 15 V by using Q201 and supplies it.
  - While on standby for a remote control signal, the Q201 shuts down the VCC and reduces the standby power.
  - The VS receives a command voltage from the microcomputer (IC601). The VS terminal undergoes an analog voltage that matches the Lo level time ratio of the pulse signal from pin ④ of the microcomputer. (See Fig. 3-2.)
  - The FG terminal undergoes a signal of 12 pulses per revolution of the motor shaft. By counting the pulse rate, the microcomputer (IC601) recognizes the motor speed, thereby performing feedback control.

### Caution

The indoor fan motor and drive circuit are connected to the primary power supply. They therefore have voltage to ground. Guard against electric shocks.

### Caution

While the product is energized, do not under any circumstances detach or reattach a connector. Any such practice would cause a high voltage to run, resulting in the indoor fan motor and board circuit being destroyed. (Check the discharge of the C003 before detaching or reattaching the connectors.)

## 4. Buzzer Circuit

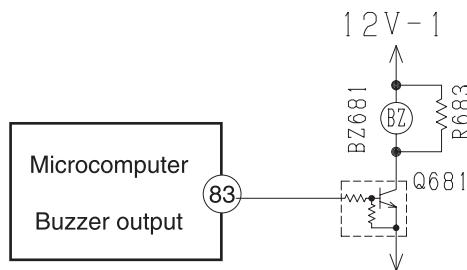


Fig.4-1 Buzzer Circuit

- When the buzzer sounds, an approx. 3.9kHz square signal is output from buzzer output pin 83 of the micro computer. After the amplitude of this signal has been set to 12Vp-p by a transistor, it is applied to the buzzer. The piezoelectric element in the buzzer oscillates to generate the buzzer's sound.

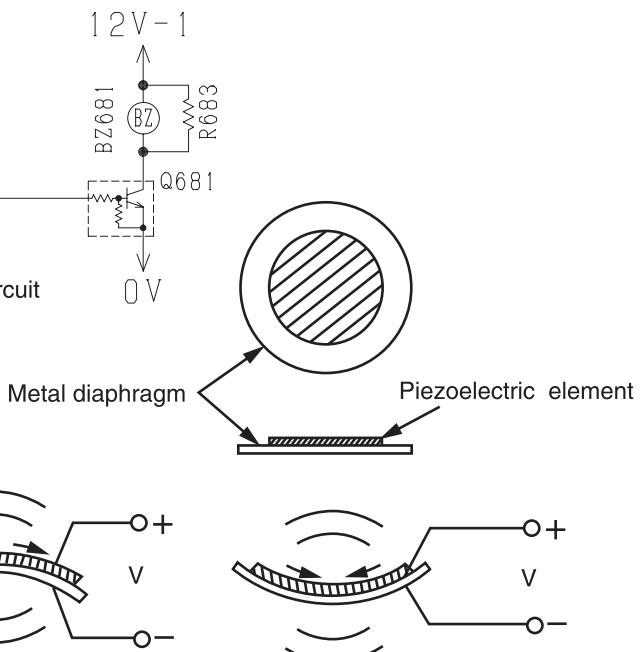


Fig.4-2 Buzzer Operation

## 5 . Remote control reception circuit

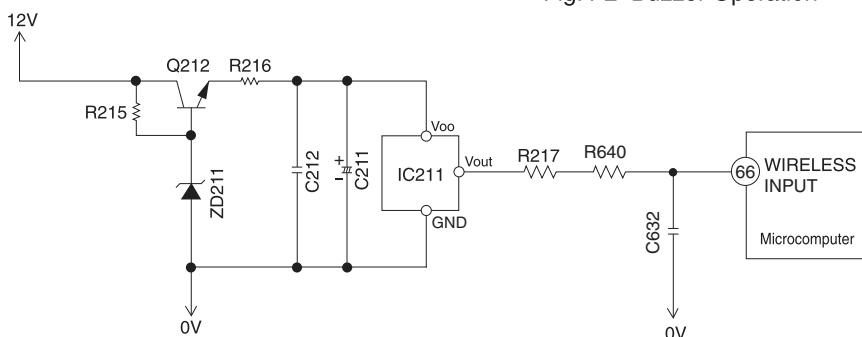


Fig.5-1

[Typical communication waveform]

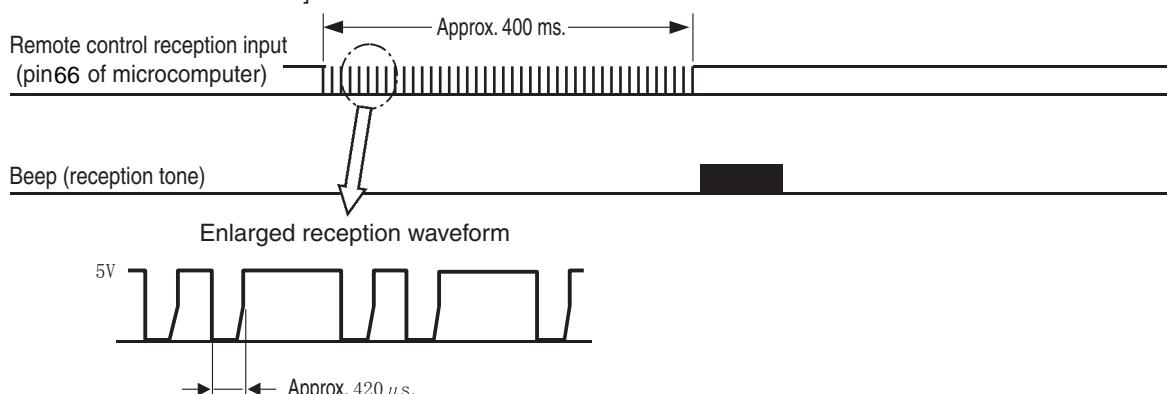


Fig. 5-2

- An infrared signal from the remote control unit is converted to an electrical signal by the remote control light-receiving unit (IC211) and is received by the microcomputer. Data is transmitted as digital data 0 and 1 by changing the interval of the basic pulses at about  $420\mu s$ .

## 6. Initial Setting Circuit (IC531)

- When power is supplied, the microcomputer reads the data in IC531 ( $E^2PROM$ ) and sets the preheating activation value and the rating and maximum speed of the compressor, etc. to their initial values.
- Data of self-diagnosis mode is stored in IC531; data will not be erased even when power is turned off.

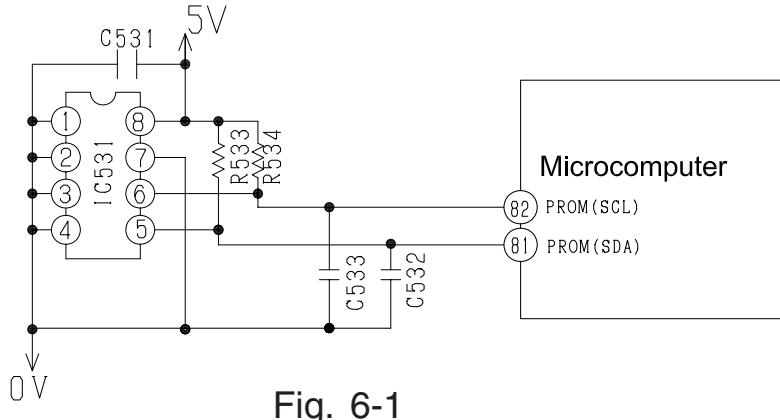


Fig. 6-1

## Initial Setting Circuit (IC531 and IC532) - For RAK -15QPB only

- When power is supplied, the microcomputer reads the data in IC531 and IC532 ( $E^2PROM$ ) and sets the preheating activation value and the rating and maximum speed of the compressor, etc. to their initial values.


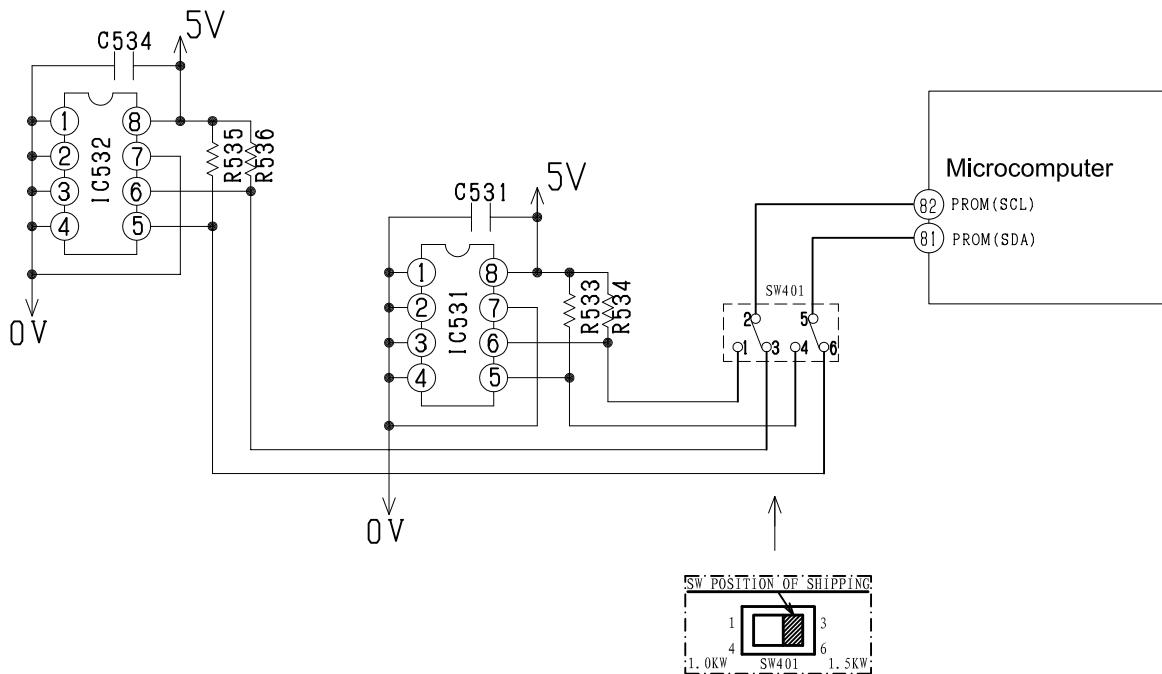


Fig. 6-2

SW401 will act as a program selector for 1.0kW and 1.5kW. When switch is turn to position(1 4), IC531 will be selected as 1.0kW mode. When switch is turn to position(3 6), IC 532 will be selected as 1.5kW mode.

## 7. Temporary Switch Circuit


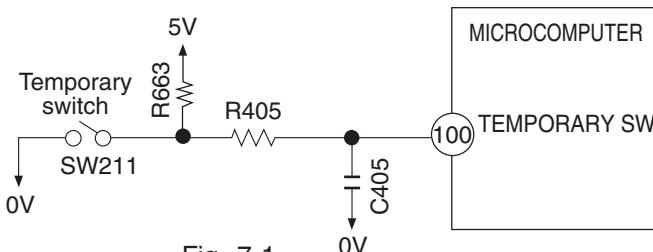


- The temporary switch is used to operate the air conditioner temporarily when the wireless remote control is lost or faulty.
- The air conditioner operates in the previous mode at the previously set temperature. However, when the power switch is set to OFF, it starts automatic operation.

## 8. Room Temperature Thermistor Circuit

A room temperature thermistor circuit is shown in Fig. 8-1.

According to room temperature, the voltage of point (A) becomes as it is shown in Fig. 8-2.

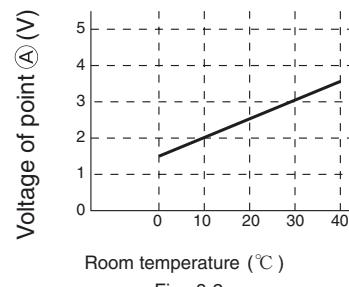
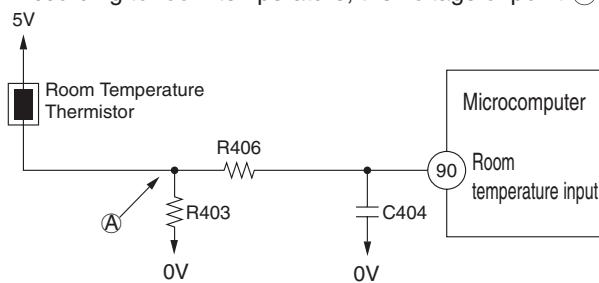


## 9. Heat Exchanger Thermistor Circuit

Heat exchanger temperature is noticed inside the room

- (1) Preheating
- (2) Low-temperature defrosts at cooling and dehumidification operation time.
- (3) Not working of reversing valve or detection of opening of heat exchanger thermistor is controlled.

According to heat exchanger temperature, the voltage of point (A) becomes as it is shown in Fig. 9-2.

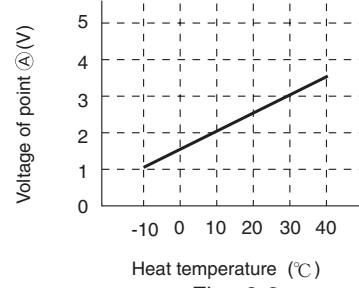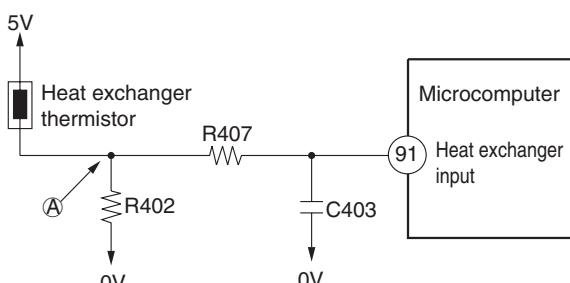

## 10 . Dip-switch

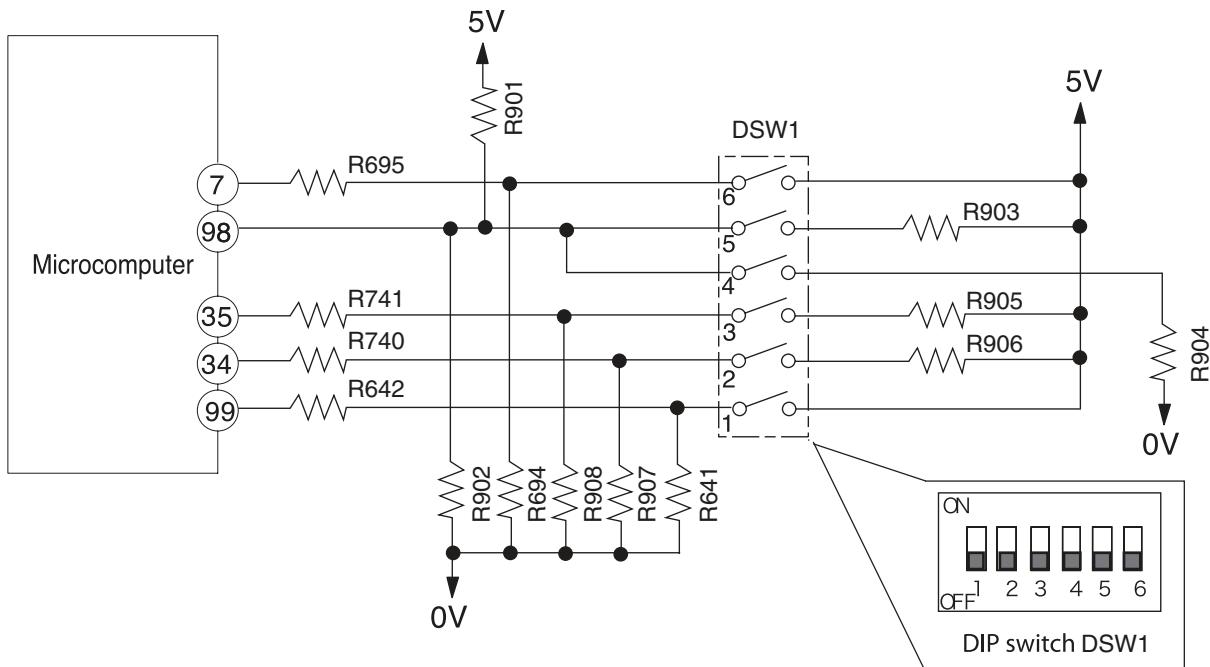


Fig.10-1 Dip switch Circuit

- Fig. 10-1 shows the dip switch circuit; the table shown in Fig.10-2 are function and setting position from ①–⑥ of the switch no.

SW No.	ITEM	FUNCTION					
		OFF *	ENABLE	ON	DISABLE		
1	AUTO RESTART	OFF *	ENABLE	ON	DISABLE		
2	CARD KEY MODE	OFF *	DISABLE	ON	ENABLE		
3	CARD KEY LOGIC SELECT	OFF *	INPUT HIGH ACTIVE	ON	INPUT LOW ACTIVE		
4	HEATING/COOLING ONLY MODE SELECT	OFF *	HEATING &	OFF	HEATING ONLY	ON	COOLING ONLY
5	HEATING/COOLING ONLY MODE SELECT	OFF *	COOLING	ON		OFF	ON HEATING & COOLING
6		NOT USED					

Fig.10-2 Functions of Dip switch

NOTE:

\* Marking is position of shipping [FACTORY default setting]

## 11. Indoor/outdoor communication circuits


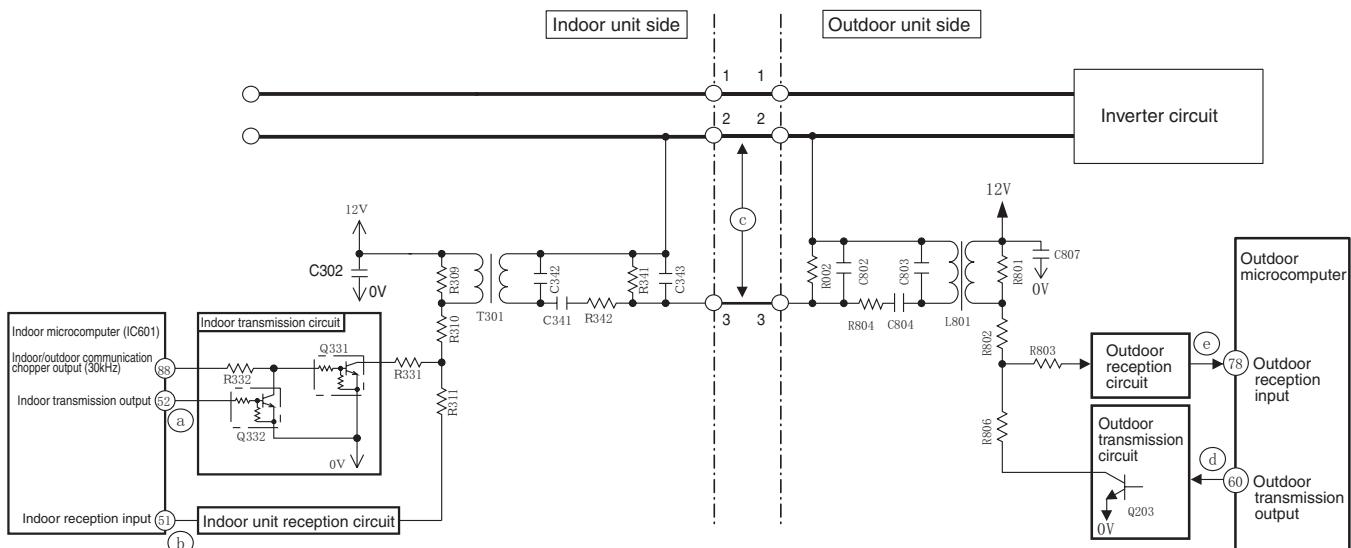


Fig. 11-1

< Typical communication waveform >

The unit is receiving a signal that it sent  
(it is not used particularly as a signal).

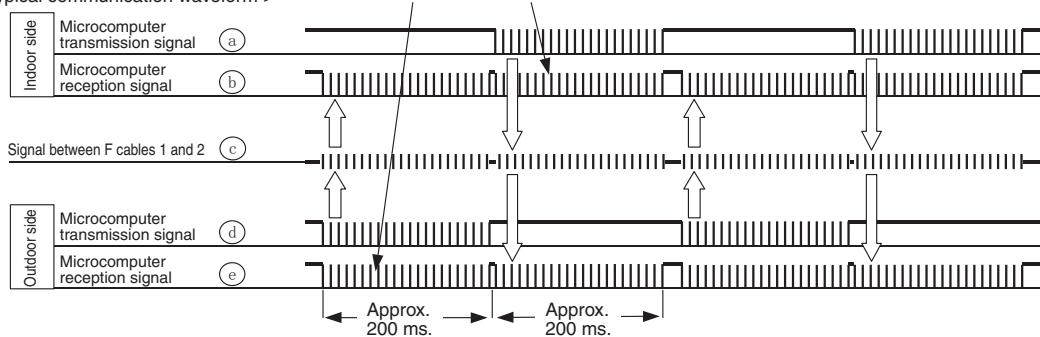

< Enlarged waveform >

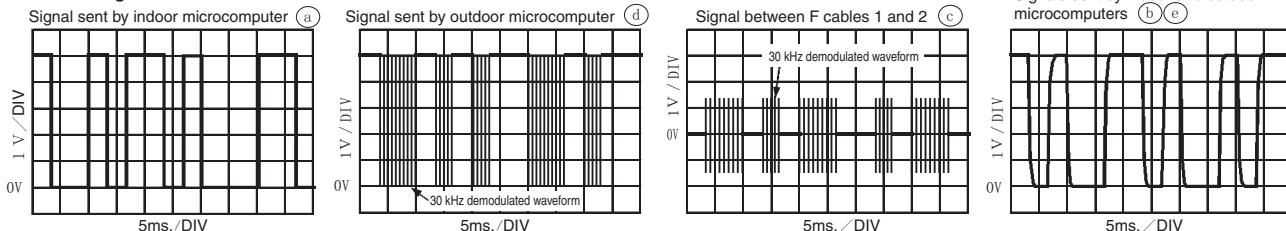


Fig. 11-2

- Indoor and outdoor communications are conducted by using lines 2 and 3 of F cable. Line 2 of F cable is shared with a transmission channel that powers the outdoor unit.
- Data communicated between the indoor and outdoor units are outputted from the microcomputer as serial signals and are transmitted as demodulated by a 30 kHz carrier wave. (Both the indoor and outdoor microcomputers directly output a signal demodulated at 30 kHz.)

### Check

If a cable poorly inserted in the indoor terminal board or some other failure overheats the terminal board and the temperature fuse of the terminal board blows out, the power to the indoor communication circuit will be shut down to stop the communications function. (In that case, the failure will be displayed by the timer lamp blinking 3 times.)

### Check

If communication fails between the indoor and outdoor units for some reason, the product will give a self-diagnosis display either by "the timer lamp blinking 3 times" or "the timer lamp blinking 12 times" depending on the cause.

## 12. Stepping motor drive circuit

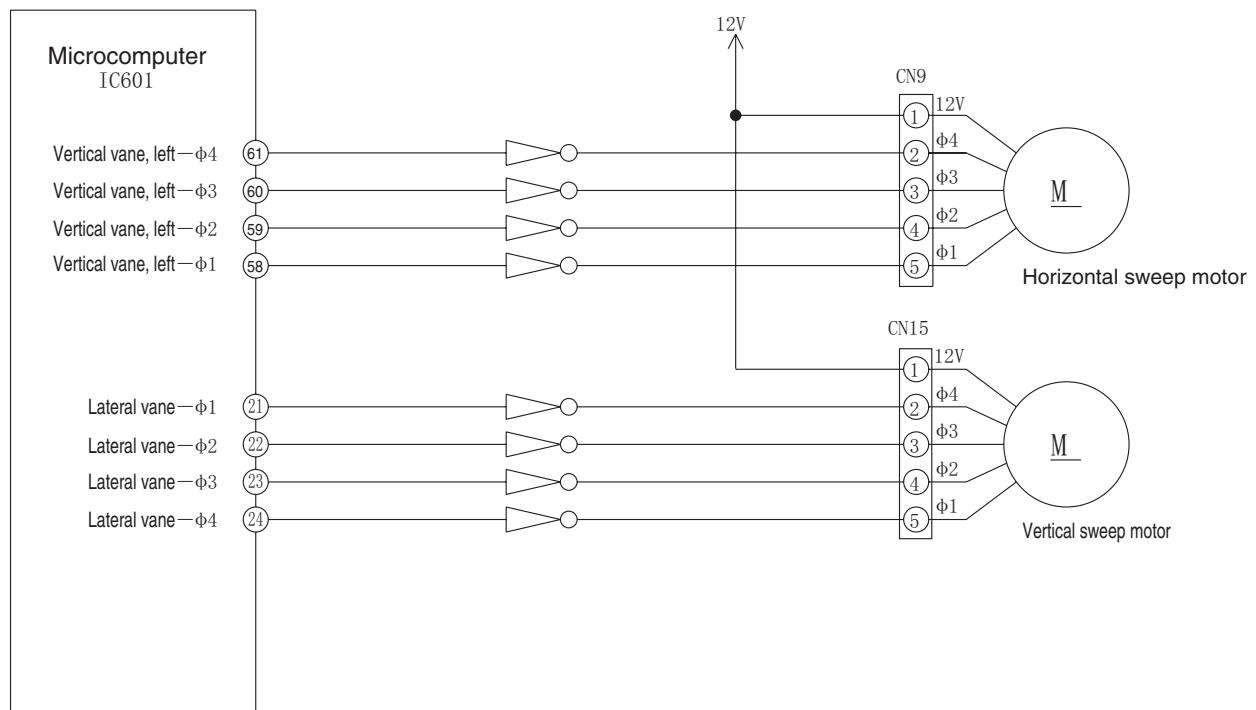


Fig. 12-1

[Connector circuit waveform while the motor runs]

Voltage waveforms of different phases as viewed from the OV line while the motor rotor is turning counterclockwise as viewed from the shaft side

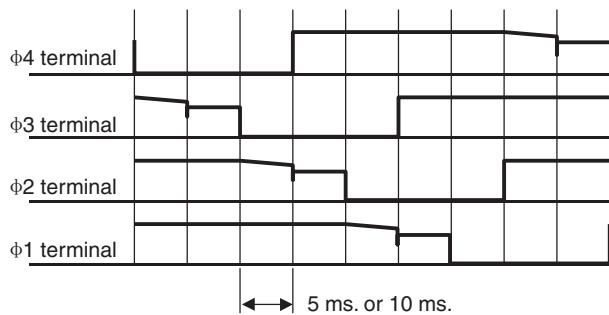


Fig. 12-2

- Each stepping motor runs as excited in 1 or 2 phases at 100 PPS or 200 PPS.
- The excitation pattern passes the microcomputer (IC601) and then the driver IC and excites the coil of each stepping motor.
- Some models not need to install the horizontal sweep motor.

## SERVICE CALL Q&A

MODEL RAK-15QPB, RAK-18RPB, RAK-25RPB, RAK-35RPB, RAK-50RPB

### Cooling operation

Q1 The compressor sometimes stops during cooling.

A1 Check if the heat exchanger of the indoor unit is covered with frost. Wait for 3 to 4 minutes until the frost disappears.

Cooling when the room temperature is low may cause the heat exchanger of the indoor unit to gather frost.

### Dehumidification

Q1 The indoor unit produces a noise that goes "shaaahhh" during dehumidification.

A1 That is a noise produced by refrigerant flowing through the pipe.

Q2 Cold air comes out during a dehumidifying operation.

A2 To improve the dehumidification efficiency performs quiet fan operation. Therefore the air is cold and it is not a malfunction.

Q3 The operation does not stop even by setting the temperature higher than room temperature on the remote controller.

A3 It sets to perform dehumidifying operation by setting the temperature slightly lower than remote controller setting.

### Heating operation

Q1 The product sometimes fails to produce a wind during heating.

A1 Defrosting is in progress. Wait 5 to 10 minutes until the frost on the outdoor unit disappears.

Q2 The product begins with a slight fan speed during heating even though set to "Hi fan" or "Med fan" or "Low fan" or "silent fan".

A2 At the first of the heating, the product will run for 30 seconds with a slight fan speed. When set to strong fan speed, the product will begin with a slight fan speed operation, producing a weak fan speed for 30 seconds, and then switch to strong fan speed.

Q3 The product stops during heating even though it is set to "30°C".

A3 When heating is conducted despite the high outdoor temperature, the product may stop to protect its equipment.

### Auto-fresh defrost

Q1 During heating, I turned off the product by using the START/STOP button. But the "operation lamp" is blinking and the outdoor unit is running.

A1 The "auto-fresh defrost" should be working. When stopped, the product will check its outdoor unit for frost and, if there is any frost, conduct defrosting and then stop operating.

### Automatic operation


Q1 During an automatic run, switching the fan speed selector will not change the fan speed.

A1 The product will switch automatically to automatic fan speed. You cannot select strong or weak fan speed by remote control but you can select fan speed and quiet.


Q2 How is the automatic operation mode determined?

A2 According to the room temperature, heating or cooling operation is automatically selected. Refer to the basic operation section.

Common, etc.

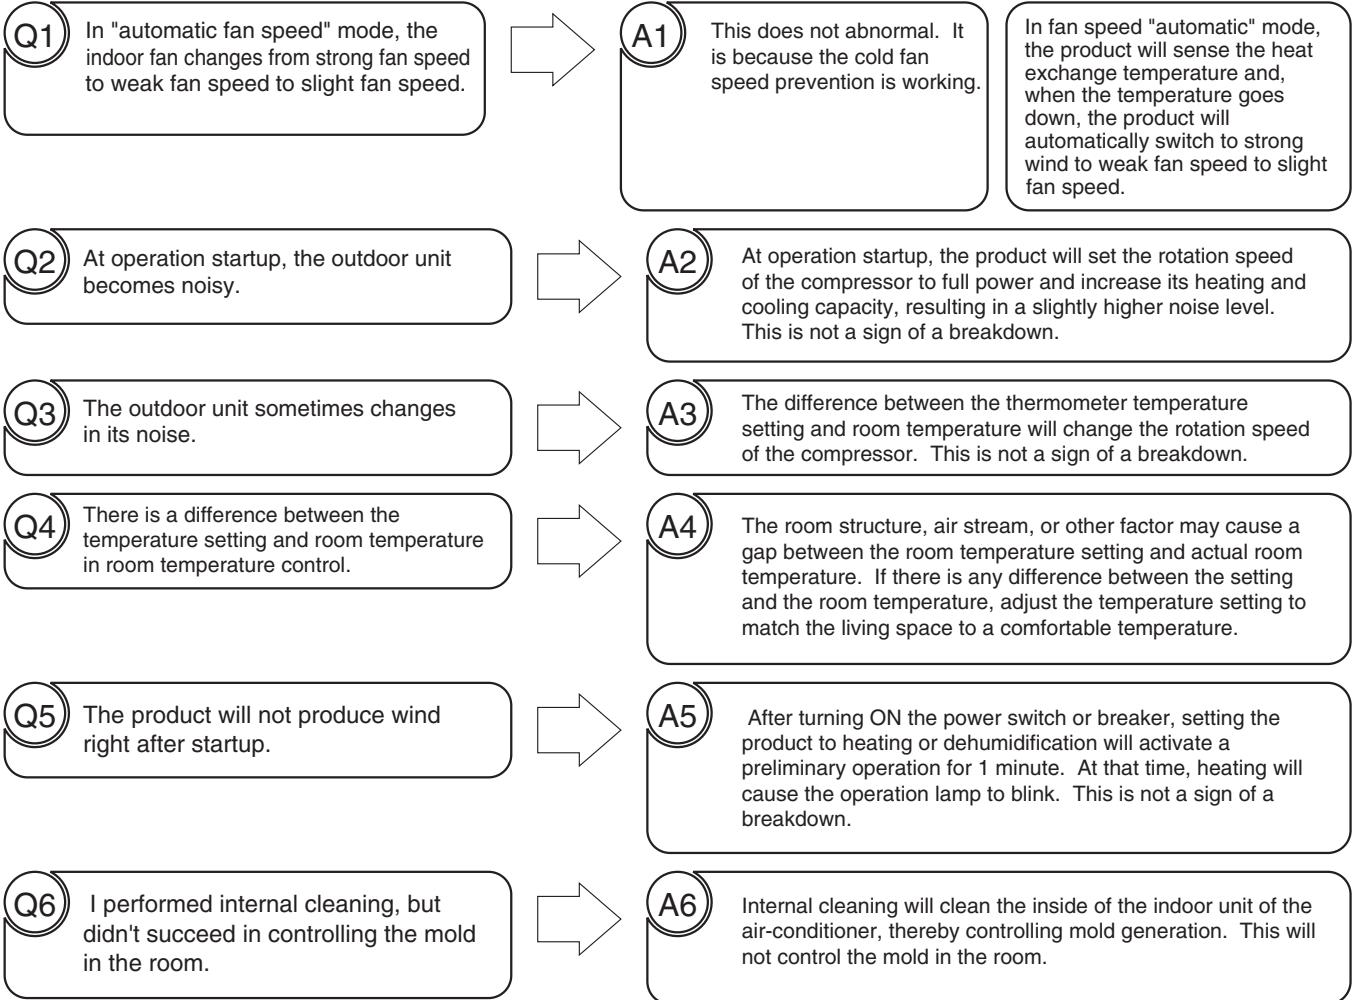


## Wireless remote control

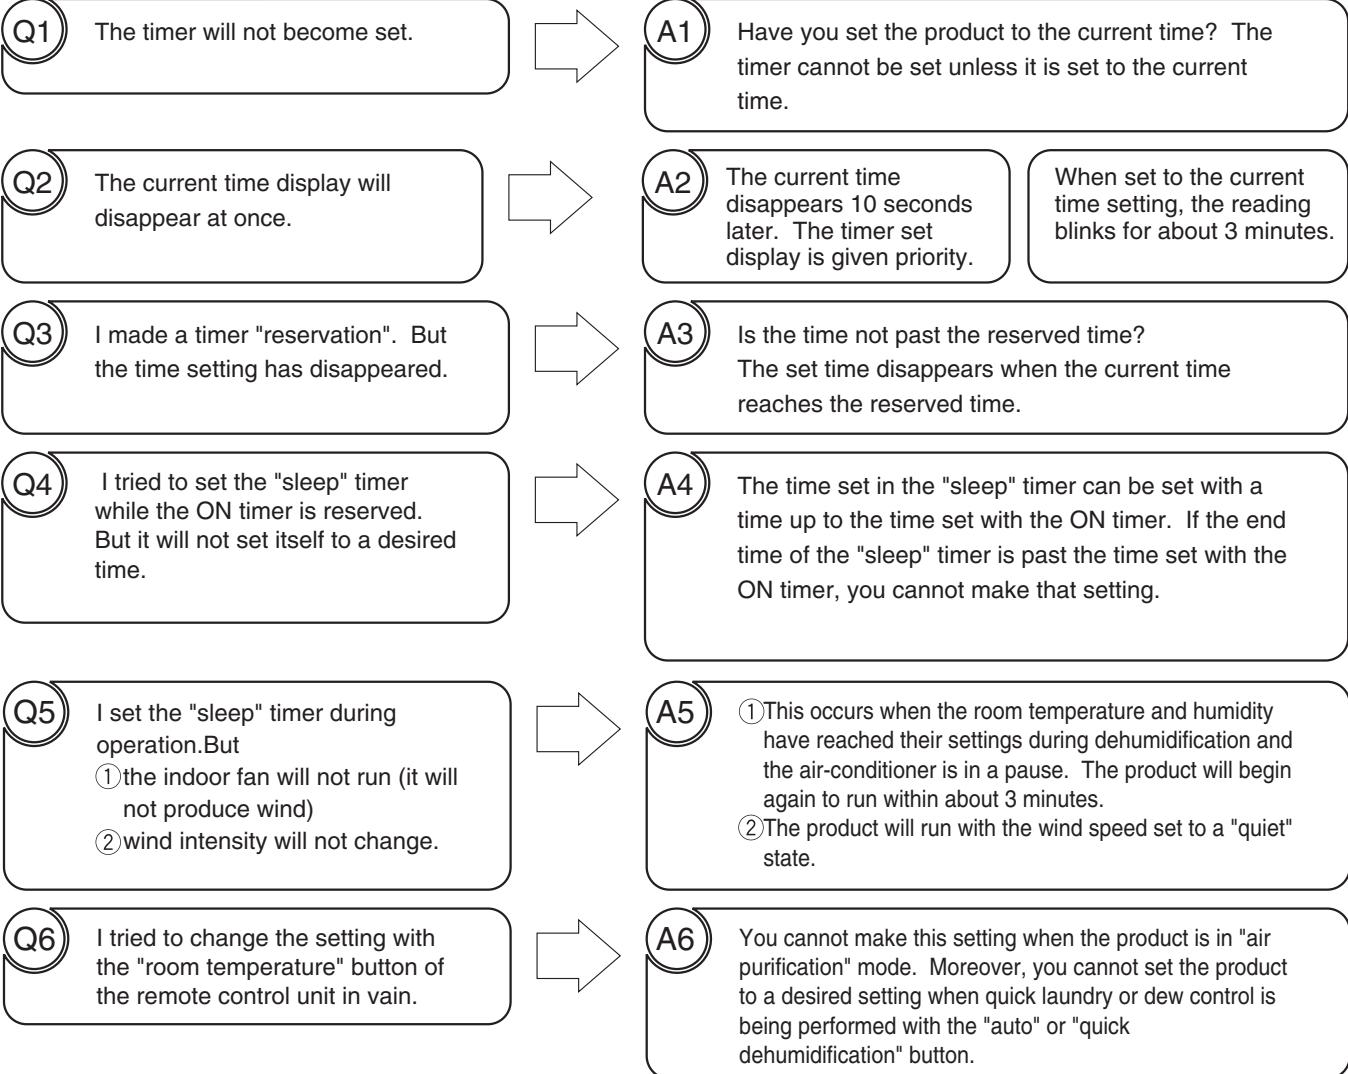


# STRUCTURE OF AN INDOOR UNIT ELECTRIC PARTS

## RAK-15QPB, RAK-18RPB, RAK-25RPB, RAK-35RPB, RAK-50RPB

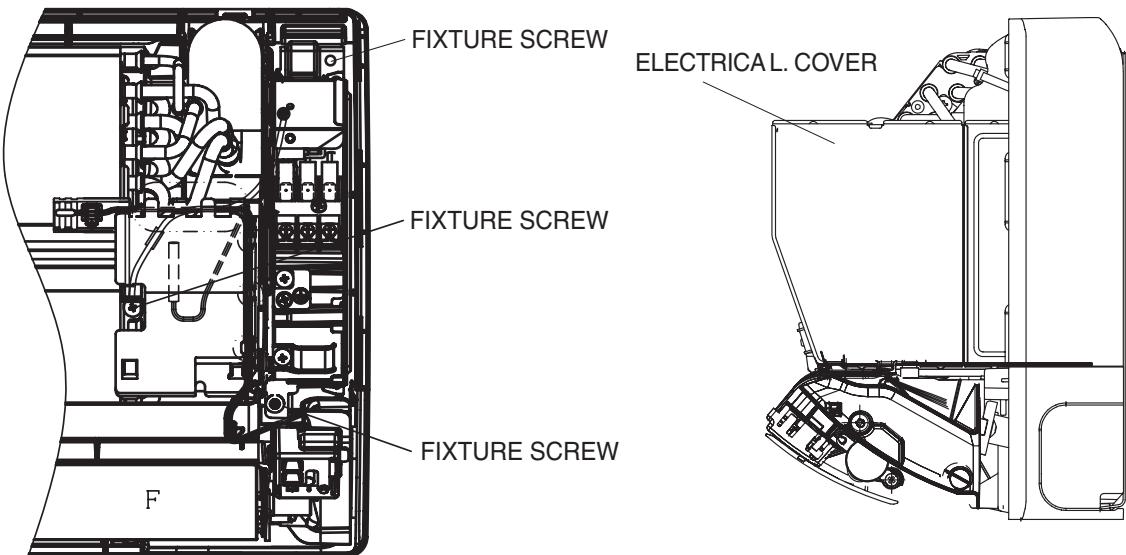

### Removing electrical parts

1. Remove the electrical parts cover.
2. Remove the connectors from the CN4 (heat exchange thermistor), CN15 (stepping motor) and CN2 (fan motor).
3. Remove three lock screws.

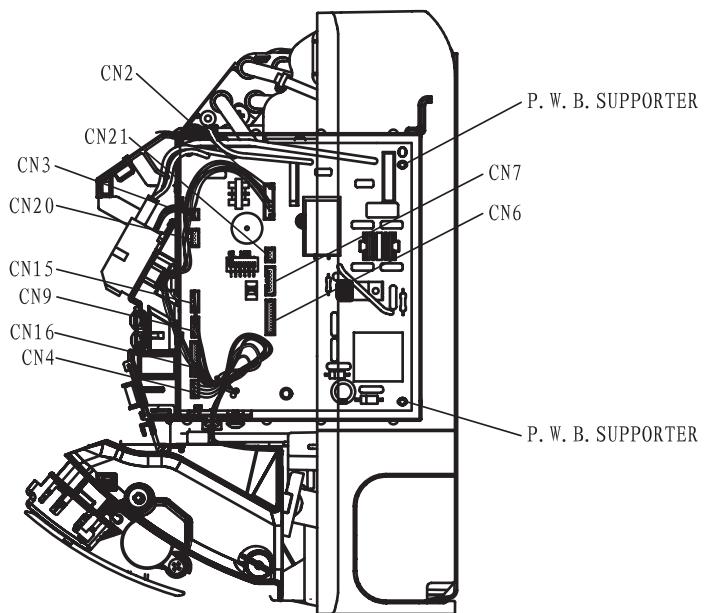

### Removing control P.W.B.

1. Remove the connectors from the CN3.
2. Remove the P.W.B. from the P.W.B. support.

### Removing the indicating P.W.B.

1. Remove the connector from the CN16 on the control P.W.B.
2. Remove the upper hook from the indicating P.W.B. lock resin, pull the P.W.B. forward a little and remove it.


## Other instructions

### (1) Detaching and reattaching the receptacles for tab terminal

All the receptacles for connecting tab terminals are with a locking mechanism. Forcibly pulling any such receptacle without unlocking it will destroy it. Be on guard.


When reconnecting it, insert it securely all the way home.

- Receptacle types and how to unlock them

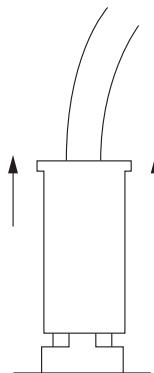

Vertical (with a resin case)

Hold the resin case and pull it out.

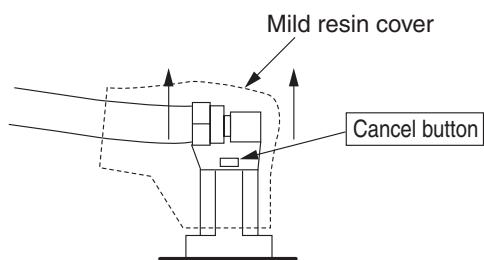


Horizontal (with a mild resin cover)

Hold the cancel button down on the mild resin cover while pulling it out.

### (2) Detaching and reattaching the board connector

The product comes equipped with many board connectors provided with lock mechanism. Forcibly pulling any such part without unlocking it will destroy it. Be on guard. When reconnecting it, insert it securely all the way home.

Pinch the locking mechanism with your fingers and pull it out unlocked.

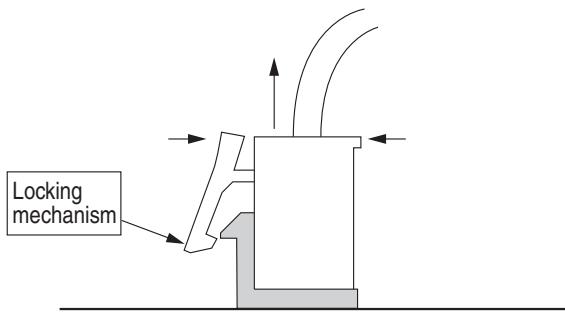

### (3) Do not detach or reattach the connectors while energized

Do not under any circumstances detach or reattach the connectors while energized. That would destroy the board components and fan motor. For both the indoor and outdoor boards, ensure that the smoothing capacitor has discharged its electricity fully before you do your work.

## Troubleshooting support

No	Function	Description
1	Self-diagnosis display [Display on the indoor unit side]	<ul style="list-style-type: none"> <li>The failure mode detected on the indoor unit side is displayed by blinking the "timer lamp". And a failure detected on the outdoor unit side will be indicated by the "time lamp" blinking 4 times.</li> <li>If the outdoor unit side detects a failure, the product will first conduct several operation retrials.</li> </ul> <p>There are some failure modes with no lamp display while retrials are continued.</p> <p>[Failure mode where retrials are continued and the indoor unit lamp does not end up giving a display]</p> <p>OH thermistor heat-up Overload lower limit cut Low-frequency things</p>
	[Display on the outdoor unit side]	<ul style="list-style-type: none"> <li>The failure mode detected on the outdoor unit side is displayed by blinking the "LD301". Detecting a failure will stop the outdoor unit and keep blinking the LD301 until it is restarted. (The communication error will persist until the communication is reestablished.)</li> </ul>
2	Self-diagnosis memory	<ul style="list-style-type: none"> <li>The failure modes detected on the indoor and outdoor unit sides are stored in the nonvolatile memory of the indoor unit and can be read later on. (The memory will remain even after power-off.)</li> <li>The failure modes detected on the outdoor unit side are written in memory every time any such mode occurs. The failure mode can therefore be detected on the indoor unit side without waiting for the retry frequency to reach the display of the indoor unit lamp. Moreover, the normal self-diagnosis display function which rarely occurs will store and display failure modes that do not end up displaying the indoor unit lamp. (Any such mode may be unable to be stored if indoor or outdoor communications is in a failure.)</li> <li>The product stores 5 last-stored failure modes.</li> <li>There is a function for deleting memory. Once you clear the memory and run the product for several days, you can read the failure modes and check them, thereby detecting the less frequent failure phenomena.</li> <li>Failure modes can be checked by both the blinking of the lamp of the indoor unit and the display of the remote control liquid crystal display.</li> </ul>

※The "self-diagnosis function of the communication circuit" available in our conventional models is now incorporated as part of the normal self-diagnosis function. In the case of a failure in the communication circuit, you do not have to conduct a special operation and the operations can be automatically divided into 3 blinking operations and 12 blinking operations of the timer lamp. However, a strong external noise may have resulted in 12 times of blinking.

## Self-diagnosis display function (indoor side display)

While the "timer lamp" (orange), of the indoor unit is blinking, troubleshoot the product while referring to the table below.

### 1. How to count the lamp blinking frequency

- The product will repeat blinking with 2-second intermissions.
- The blinking speed is as follows: on for 0.35 seconds and off for 0.35 seconds.

[An example of 5-time blinking]



### 2. If you wish to try another operation while the lamp is blinking, operate the START/STOP button on the remote control unit twice. The first push will reset the indoor microcomputer, while the second will activate the product

## DESCRIPTION OF THE SELF-DIAGNOSIS INDICATION

REFER TO THE TABLE BELOW IF THE TIMER INDICATOR(ORANGE) IS BLINKING.

LAMP BLINKING MODE	MAIN DEFECTIVE
■ 2 sec   -----   ONCE	REFRIGERANT CYCLE DEFECTIVE
■ ■ 2 sec   -----   2 TIMES	FORCED COOLING OPERATION
■ ■ ■ 2 sec   ---   3 TIMES	INTERFACE DEFECTIVE(INDOOR)
■ ■ ■ 2 sec   ---   4 TIMES	OUTDOOR UNIT DEFECTIVE
■ ■ ■ ■ 2 sec   --   9 TIMES	INDOOR THERMISTOR DEFECTIVE
■ ■ ■ ■ 2 sec   --   10 TIMES	ABNORMAL ROTATING NUMBERS OF DC FAN MOTOR
■ ■ ■ ■ 2 sec   --   12 TIMES	INTERFACE DEFECTIVE(OUTDOOR)
■ ■ ■ ■ 2 sec   --   13 TIMES	IC531 DEFECTIVE

( ■ -- LIGHTS FOR 0.35 SEC AT )  
INTERVAL OF 0.35 SEC.

\* IF THE INTERFACE CIRCUIT IS DEFECTIVE WHEN THE POWER IS TURNED ON.

THE SELF-DIAGNOSIS INDICATION WILL NOT WORK.

\* IF THE INDOOR UNIT CAN NOT BE OPERATED AT ALL,

REFER TO THE TABLE BELOW IF THE INDOOR UNIT DOSE NOT WORK AT ALL.

CHECK POINT	ACTION/REPLACEMENT PARTS, etc
FU1(3.15A) FUSE BLOWN	REPLACE THE PART WHICH CAUSED BLOWING /DISCONNECTION OF FU1(3.15A) FUSE
COME OFF OR DISCONNECTION OF THE CONNECTOR FOR INDICATING P.W.B	FIX CN16 CONNECTOR
FAILURE OF CONTROL P.W.B	REFER TO THE SERVICE GUIDE FOR HOW TO DETERMINE THE FAILED PART

## SELF-DIAGNOSIS MEMORY FUNCTION

Failure modes are stored in the nonvolatile memory of indoor unit and shall be redisplayed by remote controller.

This function is useful in checking the failure modes either during switching OFF the power or restarting the device without checking the number of indication lamp blinking. Remote controller can redisplay up to last 5 failure modes from the memory. However, failure modes which are rarely to occur are also stored in the memory which caused the numbers of failure more than 5. Thus, for some failure modes which are unable to retrieve because of remote controller limit to redisplay only 5 failure modes, it can be found by clearing up the memory first then recheck the memory content again during the visit at the customer place.

### < How to redisplay failure diagnosis >

1. Turn the circuit breaker OFF.
2. Set the remote controller to OFF condition, indicated by  on the display.
3. By pressing  (MODE) button on the remote controller, set to Cooling operation indicated by  (COOL).
4. Turn the circuit breaker ON.
5. Set the room temperature setting on the remote controller to 32°C by pressing the (TEMP  $\checkmark$  or  $\wedge$ ) button.
6. Set the fan speed with the  (FAN SPEED) button according to the desired failure information. (Refer to the corresponding table below)

Fan speed settings for failure data

Fan Speed	Data
AUTO 	Newest
HI 	Second newest
MED 	Third newest
LOW 	Fourth newest
SILENT 	Oldest

7. While directing the remote controller towards the receiver of the indoor unit, press (TEMP  $\wedge$ ) button and  (START/STOP) button simultaneously. (The remote controller perform signal transmission with the device.)
8. The device beeps [Pi-] to indicate that it has just received the signal to redispays the failure mode.
9. Direct the remote controller towards the receiver of indoor unit (within 2 meters in front of indoor unit) and press the  (INFO) button. Wait for 2 seconds for signal transmission. An error code will be displayed on the remote controller display.

### < How to clear the troubleshooting data >



1. Redisplay the troubleshooting status. (See the above procedure.)
2. Turn the circuit breaker OFF.
3. By pressing  (MODE) button on the remote controller, set to Heating operation indicated by  (HEAT).
4. Turn the circuit breaker ON.
5. Set the room temperature setting on the remote controller to 16°C by pressing the (TEMP  $\checkmark$  or  $\wedge$ ) button.
6. While directing the remote controller towards the receiver of the indoor unit, press (TEMP  $\checkmark$ ) button and  (START/STOP) button simultaneously. (The remote controller perform signal transmission with the device.)
7. The product beeps for a second [Pi-] to indicated that it has just received the signal. The data has now been cleared.

### < How to display error code in case of failure just occurs>

If timer lamp  of the indoor unit blinking and operation stops, please perform below procedures.

1. Direct the remote controller towards the receiver of indoor unit (within 2m in front of the indoor unit) and press  (INFO) button.
2. Wait for 2 seconds for signal transmission.
3. Indication of error code will be shown on the remote controller display for 10 seconds.

For example :

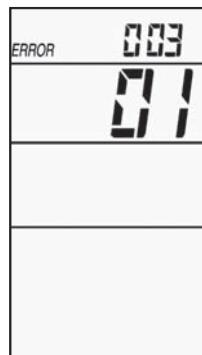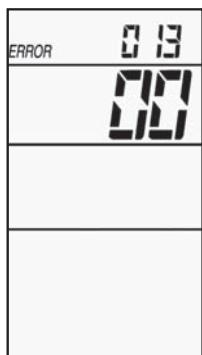

For details information regarding error code, please refer to page 85.

	TIMER LAMP BLINKING	LD301 BLINKING	CODE	MEANING	DETAILS	MAIN CHECK POINT
INDOOR	-	-	000 00	Normal		
	1 time	-	001 00	Refrigerant cycle fault	When the indoor heat exchanger temperature is too low in the heating mode or it is too high in the cooling mode.	1. Reversing valve defective 2. Heat exchanger thermistor disconnected. (only in heating mode)
	2 times	-	-	Outdoor unit is under forced operation.	It is not failure. Outdoor unit is in forced operation or balancing operation after forced operation.	1. Electrical parts in the outdoor unit.
	3 times	9 times (single only)	003 00	Communication error between indoor and outdoor units.	Indoor interface circuit broken	1. Indoor interface circuit
	9 times	-	009 00	Indoor thermistor		
	10 times	-	010 00	Abnormal rotating numbers of DC fan motor	Overcurrent is detected at the DC fan motor of the indoor unit.	1. Indoor interface circuit 2. Outdoor interface circuit 3. Indoor control P.W.B
	12 times	9 times (single only)	012 00	communication error between indoor and outdoor units	Outdoor interface circuit broken	1. Outdoor interface circuit
	13 times	-	013 00	IC401 data reading error	When data read from IC401 or IC402 is incorrect.	1. IC401 or IC402 abnormal

< Cautions >

This function is effective only once immediately after the power is turned on. It will not work if you have performed another remote control operation beforehand. Note also that it may not function in response to a procedure other than the above. (If it does not work, turn off the power, turn it back on and repeat the procedure.)

If the memory stores nothing, performing a redisplay operation will not blink the lamp.

For a normal operation, turn off the power and turn it back on. After the above operation, the product will not receive a remote control signal normally.

After clearing the troubleshooting data, turn off the power. (If you do not turn off the power, the product will become unresponsive to remote control signals.)

## Forced cooling operation (Only single connection)

The cooling operation can be forcibly performed for collecting refrigerant and inspecting failures. Do not perform the forced cooling operation continuously for long hours, because the compressor continues to be in operational status, regardless of room temperature.



### <How to start the operation>

- The operation of the unit should be stopped.
- Press and hold the "Temporary operation SW" shown in the right figure for 5 sec.

### <How to stop the operation>

- Press and hold the "Temporary operation SW" again. Or stop the operation using the remote controller.

※During the forced cooling operation,  
the "Timer indicator" blinks twice.

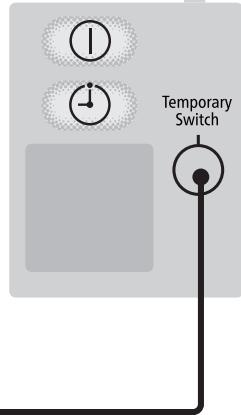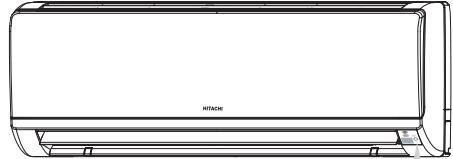

Temporary operation switch

When performing the forced cooling operation, turn the power off once. If you press and hold the switch for 5 sec or longer, the forced cooling operation starts. To stop the forced cooling operation, press the switch once again or stop the operation using the remote controller.

## HOW TO CHANGE THE SHIFT VALUE SETTING TEMPERATURE

The shift value setting temperature for Cooling and Heating mode operation can be change using remote controller. (This procedure shall be implemented strictly by service personnel only.)


(For initial shift value temperature setting for Cooling mode (SHIFTC) and Heating operation mode (SHIFTW) :  
Please refer to page 53 and page 54)

### PROCEDURES

1. While pressing and holding ① (START/STOP) button and <sup>②</sup><sub>ON</sub> (ON) button, press <sub>RESET</sub> [RESET] button on the same. Release <sub>RESET</sub> [RESET] button only and make sure that all marks on the remote controller display are indicated, then release the ① (START/STOP) button and <sup>②</sup><sub>ON</sub> [ON] button.


Remote controller now enters "Shift Value Change Mode".

2. Press the <sup>MODE</sup> (MODE) selector button so that the display indicates  (FAN) mode.
3. Press the ①(START/STOP) button and FAN operation will be started.
4. Set the FAN SPEED with the  (FAN SPEED) button according to the following FAN speed setting in order to choose the desired operation mode that is required for shift value setting temperature modification.
  - To change the shift value for COOLING mode operation, select either  (HIGH) or  (MED) FAN SPEED.
  - To change the shift value for HEATING mode operation, select either  (LOW) or  (SILENT) FAN SPEED.

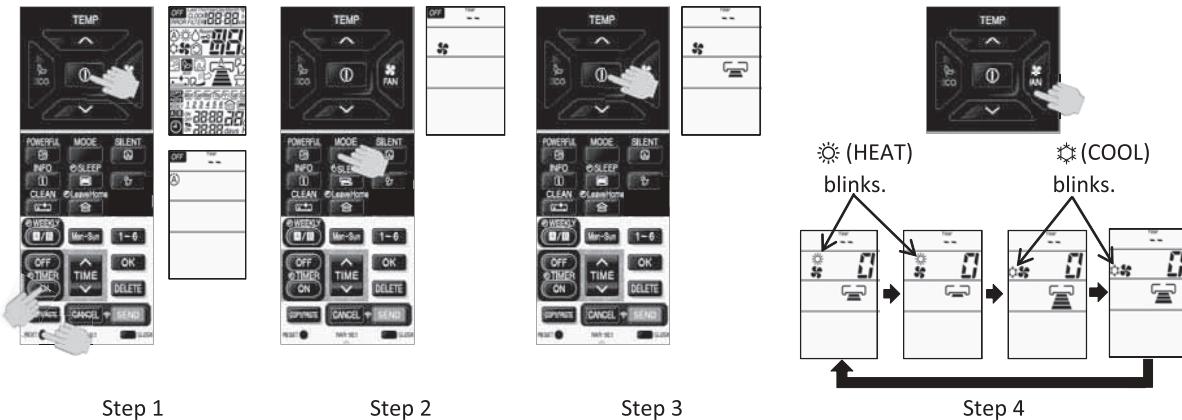

5. Press the (TEMP  $\swarrow$  or  $\nwarrow$ ) button to change the shift value.

(The shift value changed with device beep sound.)

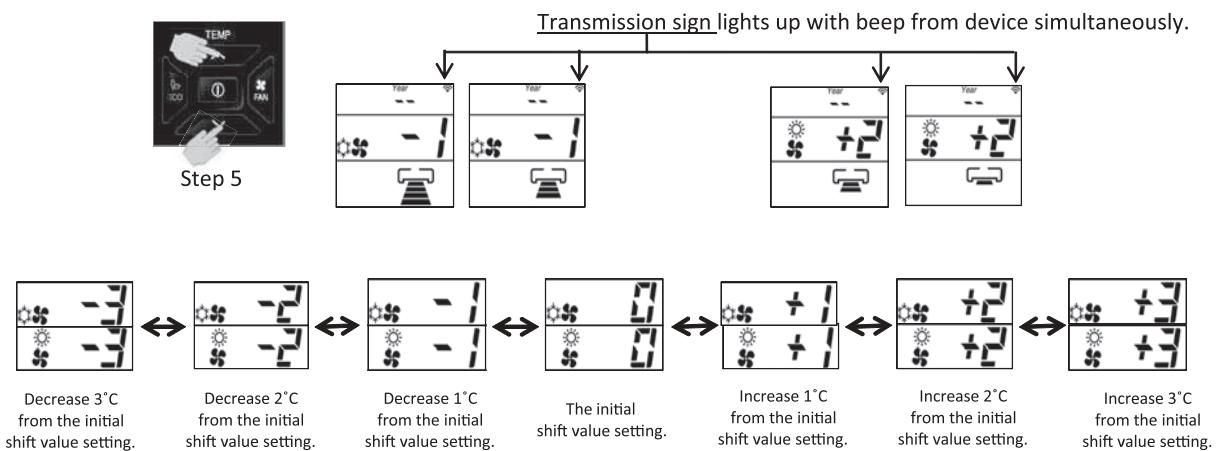

### NOTE :

- (1) The displayed shift value,  (HEAT) and  (COOL) symbol on the remote controller display will be disappear after 10 seconds.
- (2) The changed shift value will remain unchanged after turned off the power.
- (3) If "0" is displayed on the remote controller display, it indicates the shift value is now at the initial setting.

## SETTING THE PREVENTION OF MUTUAL INTERFERENCE FOR REMOTE CONTROLLER

( Applicable for Remote controller model : RAR-6N1, RAR-6N2, RAR-6N3, RAR-6N4, RAR-6N5 )

Case : 2 sets of indoor units installed near to each other.

If both indoor units can receive the same remote controller signal, please set the remote controller as below. ( This setting will change the signal address of each remote controller.)

Initial remote controller signal address setting is A.

This procedure change the remote controller signal address from A to B.


1. The circuit breaker for the other unit shall be OFF.



2. Slide the remote controller cover to take it off.

3. While directing the remote controller towards the receiver of the indoor unit, press **1~6** button, **ON** (ON TIMER) button and **RESET** (RESET) button simultaneously. (The remote controller perform signal transmission with the device.)

Signal transmission : From A to B

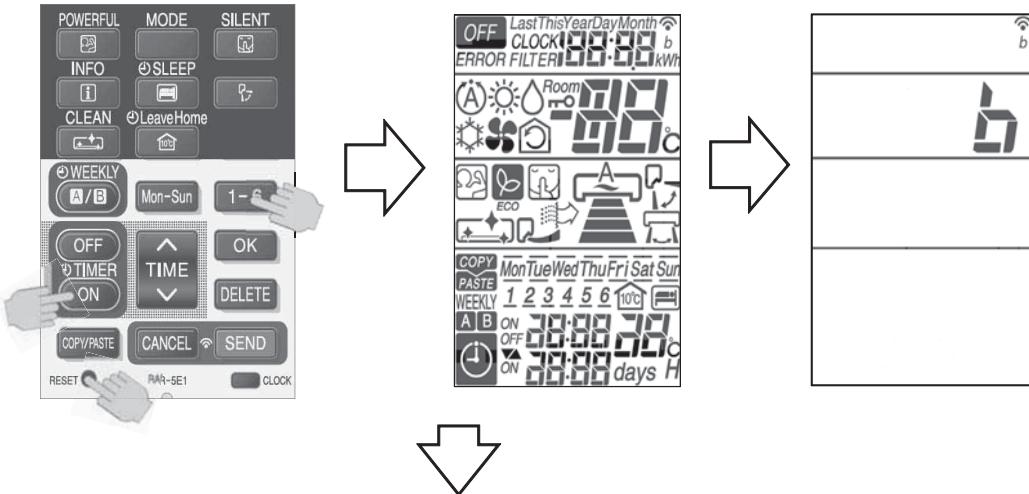

4. The indoor unit beeps [Pip] to indicate that it has just received the signal from remote controller.




5. Please check the usability of each set of indoor unit using its own remote controller.

Signal transmission : From B to A

Note : If indoor unit still not receive the correct signal from the correct remote controller, setting shall be made again.

By setting again for the 2nd time, the signal address will change from B to A. Then, if repeat again for the 3rd time, the remote controller signal address will change from A to B.

Please set the DIP switch No.6 to ON accordingly (Refer to page 74 ).

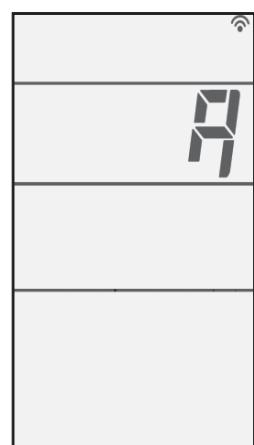

## OPERATION MODE LOCK SETTING


If Dip switch position is set at "Heating mode only" or "Cooling mode only" as mentioned on page 74, it is required to set the remote controller into operation mode lock setting. Without setting the remote controller, it will caused unmatch signal transmission between indoor unit and remote controller.

### PROCEDURE

#### 1. Heating operation mode lock setting

- (a) While pressing and holding  (ECO) button and  (POWERFUL) button, press  (RESET) button on the same time. Release  (RESET) button only and make sure that all marks on the remote controller display are indicated, then release the  (ECO) button and  (POWERFUL) button. Remote controller now enters "Heating operation mode lock".


- (b) To cancel the "Heating operation mode lock", repeat the above procedure (1(a)).

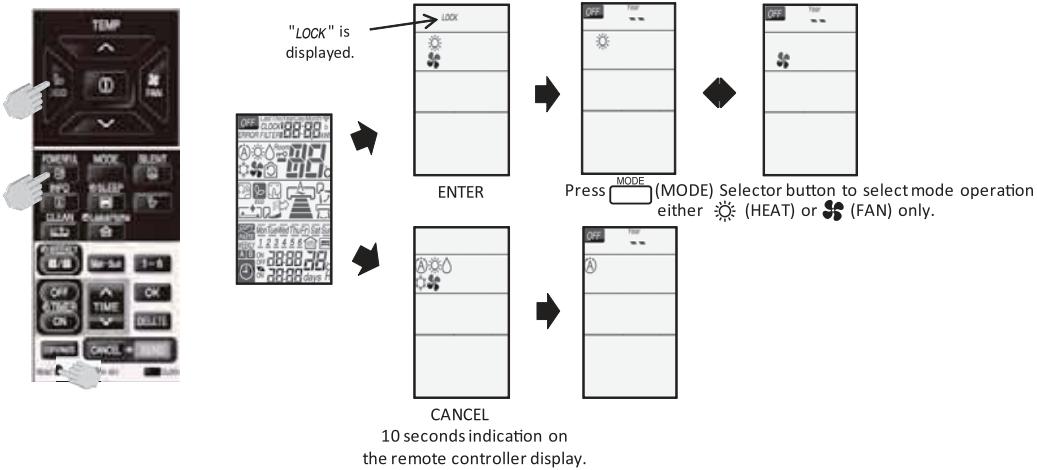

#### 2. Cooling opearation mode lock setting

- (a) While pressing and holding  (ECO) button and  (SILENT) button, press  (RESET) button on the same time. Release  (RESET) button only and make sure that all marks on the remote controller display are indicated, then release the  (ECO) button and  (SILENT) button. Remote controller now enters "Cooling operation mode lock".

- (b) To cancel the "Cooling operation mode lock", repeat the above procedure (2(a)).

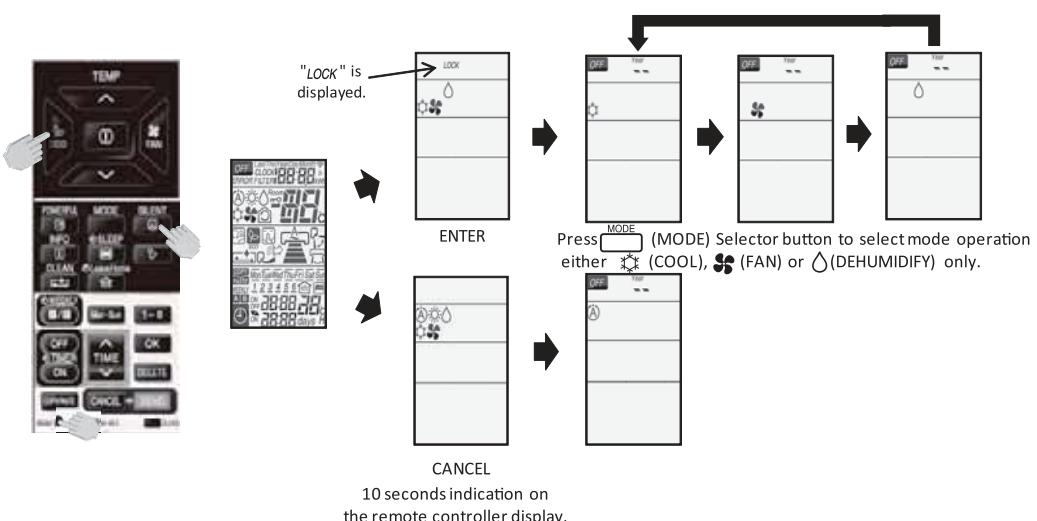

### NOTE :


- (1) The indication of "LOCK" and (" (HEAT)", " (COOL)", " (FAN) or " (DEHUMIDIFY)) mode operation symbol on the remote controller display will disappear after 10 seconds and it will enters to OFF condition indicated by  on the display.
- (2) The OPERATION MODE LOCK setting will remain in the remote controller memory eventhough the remote controller is ran out of battery.

## DISPLAY OPERATION MODE SETTING

For operating indoor unit independently (without outdoor unit connection), remote controller has to be set according to below procedures before send the signal to the indoor unit. New communication format between indoor and outdoor is required to communicate with outdoor unit.

### PROCEDURE


1. While pressing and holding **INFO** button and **COPY/PASTE** button, press **RESET** button on the same time. Release **RESET** button only and make sure that all marks on the LCD display are indicated, then release the **INFO** button and **COPY/PASTE** button.  
Remote controller now enters "DISPLAY OPERATION MODE" for the indoor unit to run independently.  
Please ensure that when pressing **FAN** (FAN) button, "**—**" will blinking.

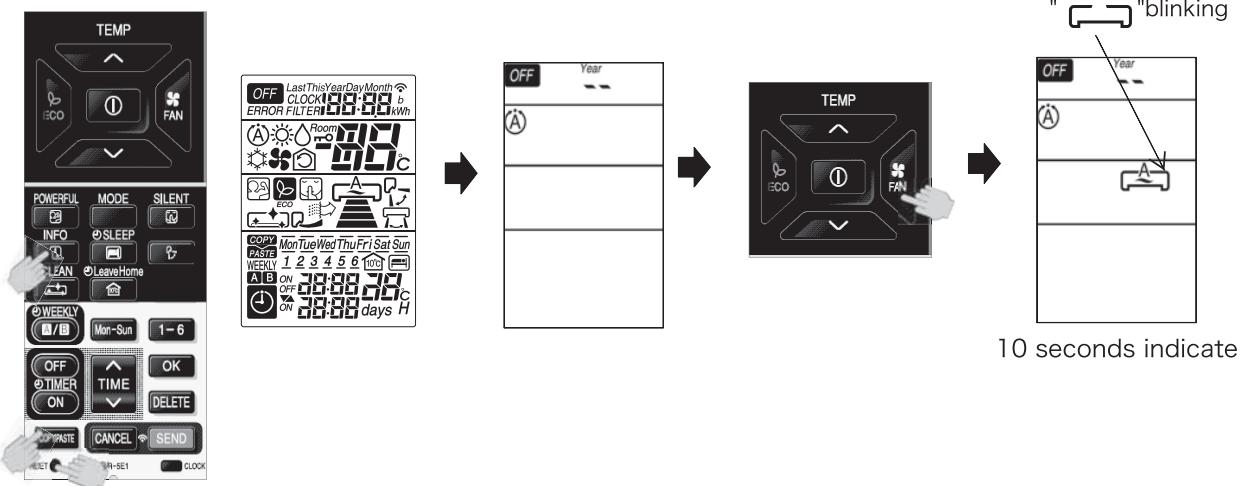

2. Press the **MODE** selector button to choose the desired operation mode.

3. Press **(START/STOP)** button.

Then, the indoor unit will starts to operate independently accoring the selected operation mode.

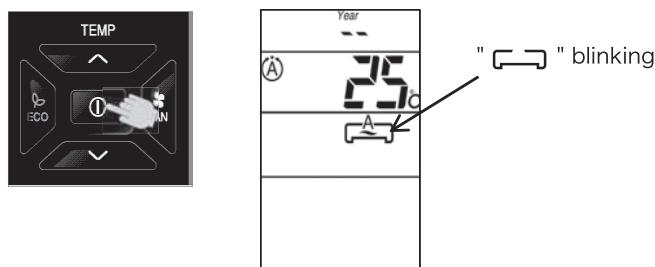

### NOTE :

- (1) During "DISPLAY OPERATION MODE", "**—**" blinks on LCD of remote controller.
- (2) When operation stops, "DISPLAY OPERATION MODE" is canceled.

## HOW TO CHANGE THE INTERMITTENT FAN CONTROL SETTING


The intermittent fan control during thermo off in Heating mode can be changed by the remote controller.  
 (This procedure should be done only by service personnel.)  
 It is possible to select from 3 patterns.

### PROCEDURE

1. Press [START/STOP] button, [Mon-Sun] [Mon-Sun] button and press [RESET] button simultaneously.

Release [RESET] button only and make sure that all marks on the remote controller display are indicated, then release [START/STOP] button and [Mon-Sun] [Mon-Sun] button.


Remote controller now enters "Intermittent Fan Control Change Mode".

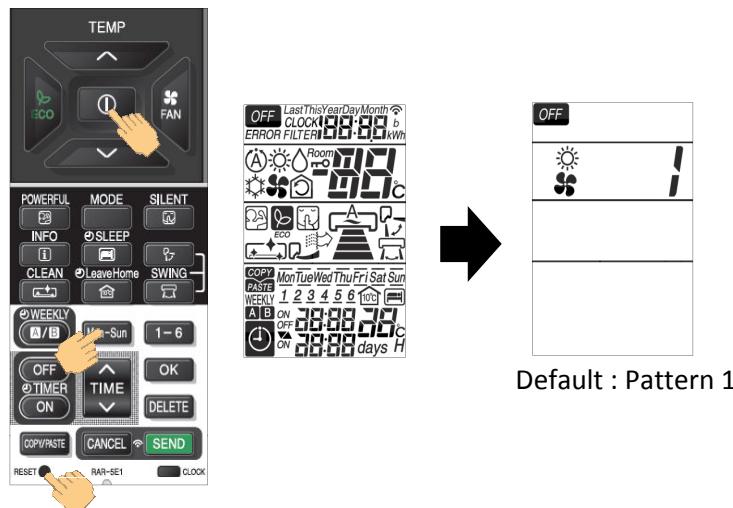

2. Press [ROOM TEMPERATURE setting] [ $\wedge$ (UP)]/[ $\vee$ (DOWN)] buttons.

(The intermittent pattern changed with indoor unit beep sound.)

Transmission sign lights up with beep from indoor unit simultaneously.

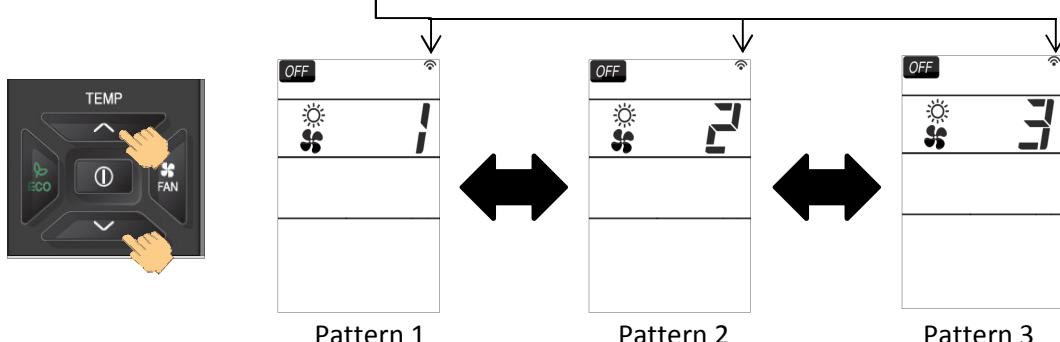

	Pattern 1	Pattern 2	Pattern 3
Single model	Continuous	30sec ON/210sec OFF repeatedly	50sec ON/190sec OFF repeatedly
Multi model	30sec ON/210sec OFF repeatedly	50sec ON/190sec OFF repeatedly	Continuous

### NOTE :

- (1) The indication of the selected intermittent pattern will disappear after 10 seconds.
- (2) The selected intermittent pattern will remain unchanged after the unit is turned off.

## HOW TO CHANGE THE FAN SPEED IN COOLING MODE DURING THERMO OFF

The fan speed in Cooling mode during thermo off can be changed by the remote controller.


(This procedure shall be implemented strictly by service personnel only.)

It is possible to return it to the default setting.

### PROCEDURE

Press [POWERFUL] button and [TIME ▲ (UP)] button simultaneously for about 5 seconds when the remote controller is OFF.

Transmission sign lights up with beep from indoor unit simultaneously.

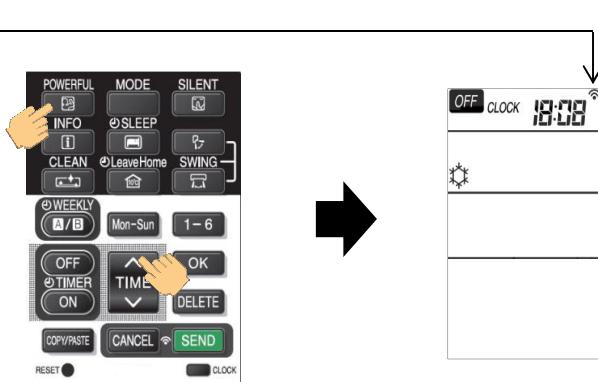

Beep sound pattern : 1) Default setting : Short beep  
2) Changed setting : Double beep


	Fan speed during thermo off
Default setting	Ultra low
Changed setting	Set fan speed (When auto fan speed is set, the fan speed is low.)

### NOTE :

- (1) The selected fan speed will remain unchanged after the unit is turned off.
- (2) If Timer reservation has been set, it will be canceled.
- (3) During time setting and timer setting, this operation cannot be set.

## Diagnosis and troubleshooting of indoor electric parts

Initiating troubleshooting

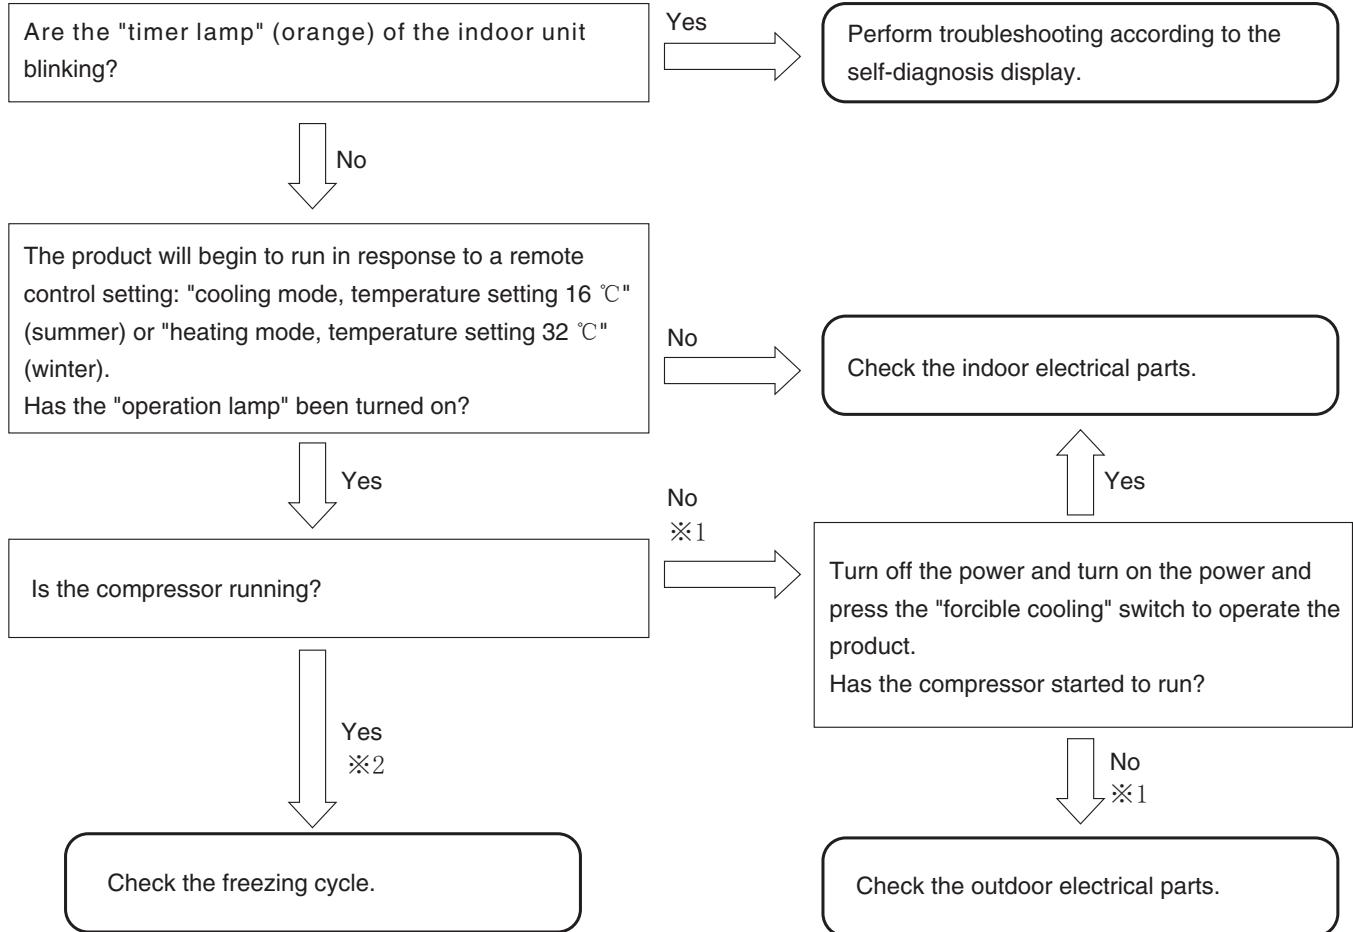

< Troubleshooting by using the self-diagnosis memory function >

- By using the self-diagnosis memory function, you can check the failure mode (※1) occurring in the outdoor electrical parts on the indoor unit side.

- Steps**
1. Clear the troubleshooting data.
  2. Run the product for several minutes under the conditions where the compressor runs.
  3. Redisplay and check the data written in the self-diagnosis memory.

- The self-diagnosis memory function can also be used to catch sporadic failure phenomena.

- Steps**
1. Clear the troubleshooting data.
  2. Have the user use the product as usual until a failure phenomenon occurs.  
(The period depends on the incidence of the phenomenon.)
  3. At a later date, redisplay and check the data written in the self-diagnosis memory.

- For the outdoor self-diagnosis display (OH thermistor heat-up, overload lower limit cut) stemming from the freezing cycle or operating condition, the time lag is long from operation startup to the emergence of the phenomenon. Moreover, it is affected by the temperature, sunshine, operating hours, and other factors of the day, so that the phenomenon may not be able to be identified at the time of a repair service visit. In that case too, use the self-diagnosis memory function (※2).
- The outdoor self-diagnosis display "overload lower limit cut" and "OH thermistor heat-up" can be identified only when you are using the self-diagnosis lamp of the outdoor unit and the self-diagnosis memory function of the indoor unit. Note that this will not be automatically displayed on the indoor unit side.

## Checking the indoor unit electrical parts

### Introduction

First check the failure phenomenon and status, and then move on to elaborate diagnosis.

#### Initiating troubleshooting

Is the "timer lamp" (orange) of the indoor unit blinking?

Yes

How many times does the time lamp blinding

↓ not 4 times

time lamp blinking,  
please according to the  
self-diagnosis display.

↓ 4 times

outdoor ele.unit check

↓ No

Turn off the power, wait at least 5 seconds, turn it back on, and observe the way the horizontal vanes move for about 30 seconds.

Check 1: Have the horizontal vanes moved? (Yes/No)

↓

Set the remote control unit to cooling mode, temperature setting 16°C (summer), heating mode, temperature setting 32°C (winter) and operate the product.

Check 2: Has the product received the remote control signal and has the "operation lamp" gone on? (Yes/No)

If you responded "Yes" to Check 2:

Check 3: Is the compressor of the outdoor unit running? (Yes/No)

If you responded "No" to Check 2:

Check 4: Does the "emergency operation switch" work? (Yes/No)

#### Check results and next check items

Check 1	Check 2	Check 3	Check 4	Next check item
No	No	—	No	Go on to "The power will not become turned on".
Yes	No	—	Yes	Go on to "The product will not receive the remote control signal".
Yes	Yes	No	—	Go on to "The compressor will not run".

## 1. Failure phenomenon: The power will not become turned on.


[Situation] Neither initialization, remote control, nor any other step works on the vane position at power-on.

[Estimated failure locations]	<ul style="list-style-type: none"> <li>· 3.15 A fuse blown out</li> <li>· Control power circuit</li> <li>· Connector loose, wire break</li> </ul>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 5px;">Estimated cause of fuse blowout</td><td style="padding: 5px;">· Abnormally high voltage applied to the power supply</td></tr> <tr> <td></td><td style="padding: 5px;">· Indoor fan motor out of order</td></tr> <tr> <td></td><td style="padding: 5px;">· Power circuit out of order</td></tr> </table>	Estimated cause of fuse blowout	· Abnormally high voltage applied to the power supply		· Indoor fan motor out of order		· Power circuit out of order
Estimated cause of fuse blowout	· Abnormally high voltage applied to the power supply							
	· Indoor fan motor out of order							
	· Power circuit out of order							

- [Cautions]
- Before work, check the power supply voltage. An abnormal voltage may be being supplied in some rare occasions due to a defect in the indoor wiring (a wire break in the neutral wire of the single-phase 3-wire power supply).
  - If the 3.15 A fuse has blown out, eliminate the cause of the fuse blowout. Otherwise, there will occur another fuse blowout.
  - If the 3.15 A fuse has blown out due to an abnormally high voltage to the power supply, the varistor (VA001) will deteriorate and become destroyed as well.
  - On a repair service visit due to the failure phenomenon of "The power will not become turned on", take a "3.15 A fuse" and a "varistor" with you.

### [Diagnosis flow]

Initiating troubleshooting

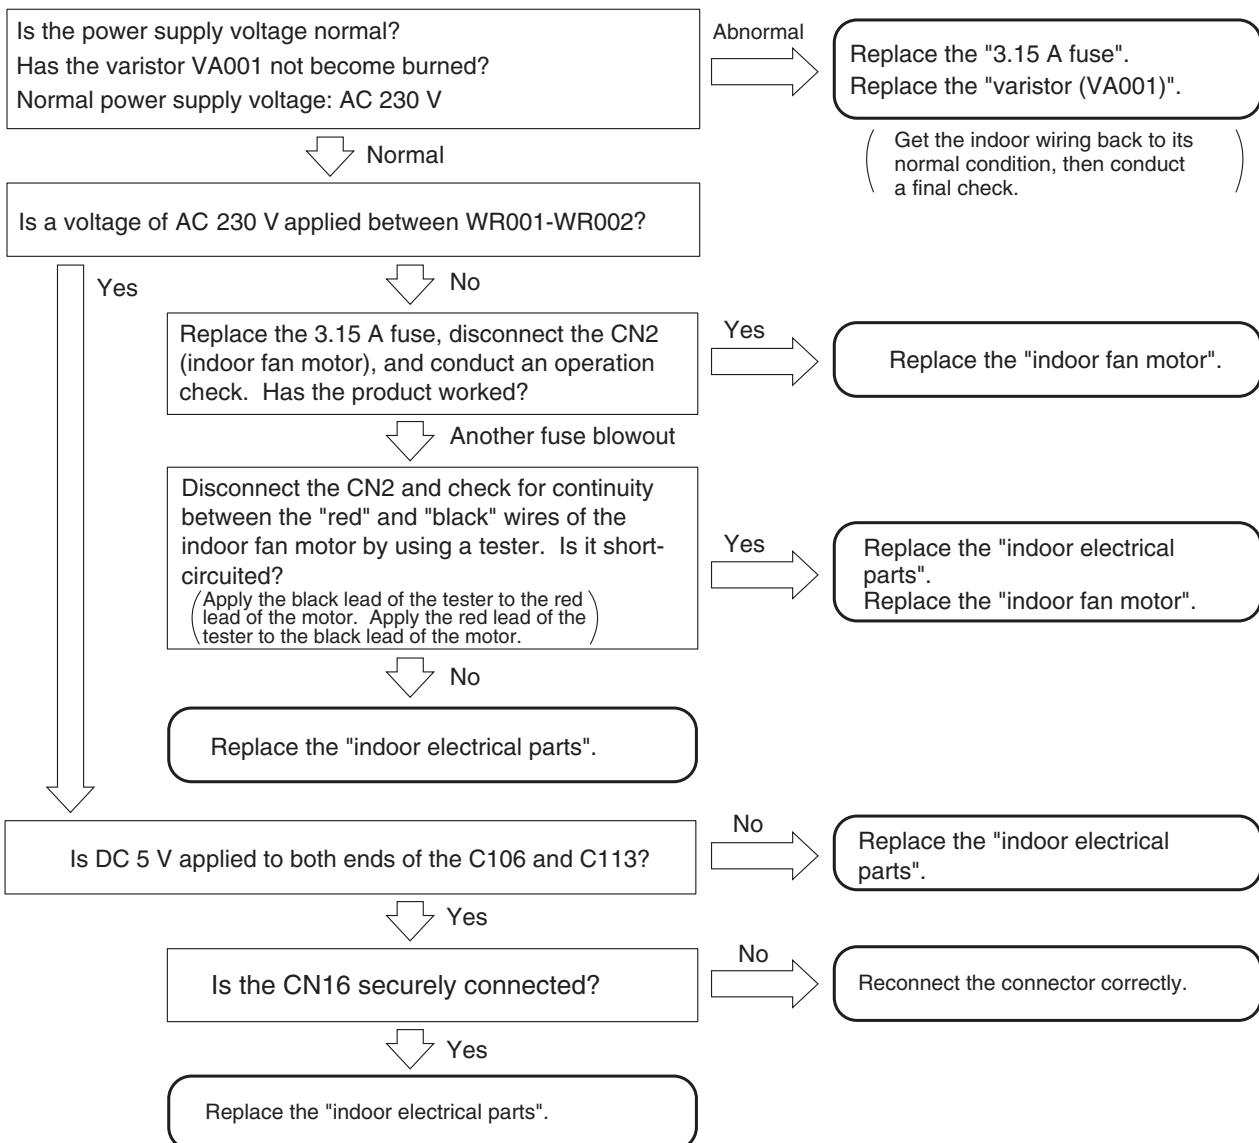

## 2.Failure phenomenon: The product will not receive a remote control signal.

[Situation] The product does not receive a remote control signal. It is not very responsive.

(The product does run normally in response to the emergency operation switch.)


[Estimated failure locations] · Remote control failure, remote control low battery level, remote control poorly set  
· Remote control light-receiving unit  
· Connector loose, wire break

· Normal product (external factors: the remote control units for lighting equipment and other equipment, electrical noise, etc.)

[Cautions] · Even if the product is trouble-free, a factor coming from outside the product may hamper the reception of signals from the remote control unit.  
· Batteries may decline in capacity at low temperatures. Old batteries decline particularly much in voltage in the morning and evening of winter, resulting in the poor arrival of remote control signals. Instruct your users to use new alkaline batteries.

### [Diagnosis flow]

Initiating troubleshooting

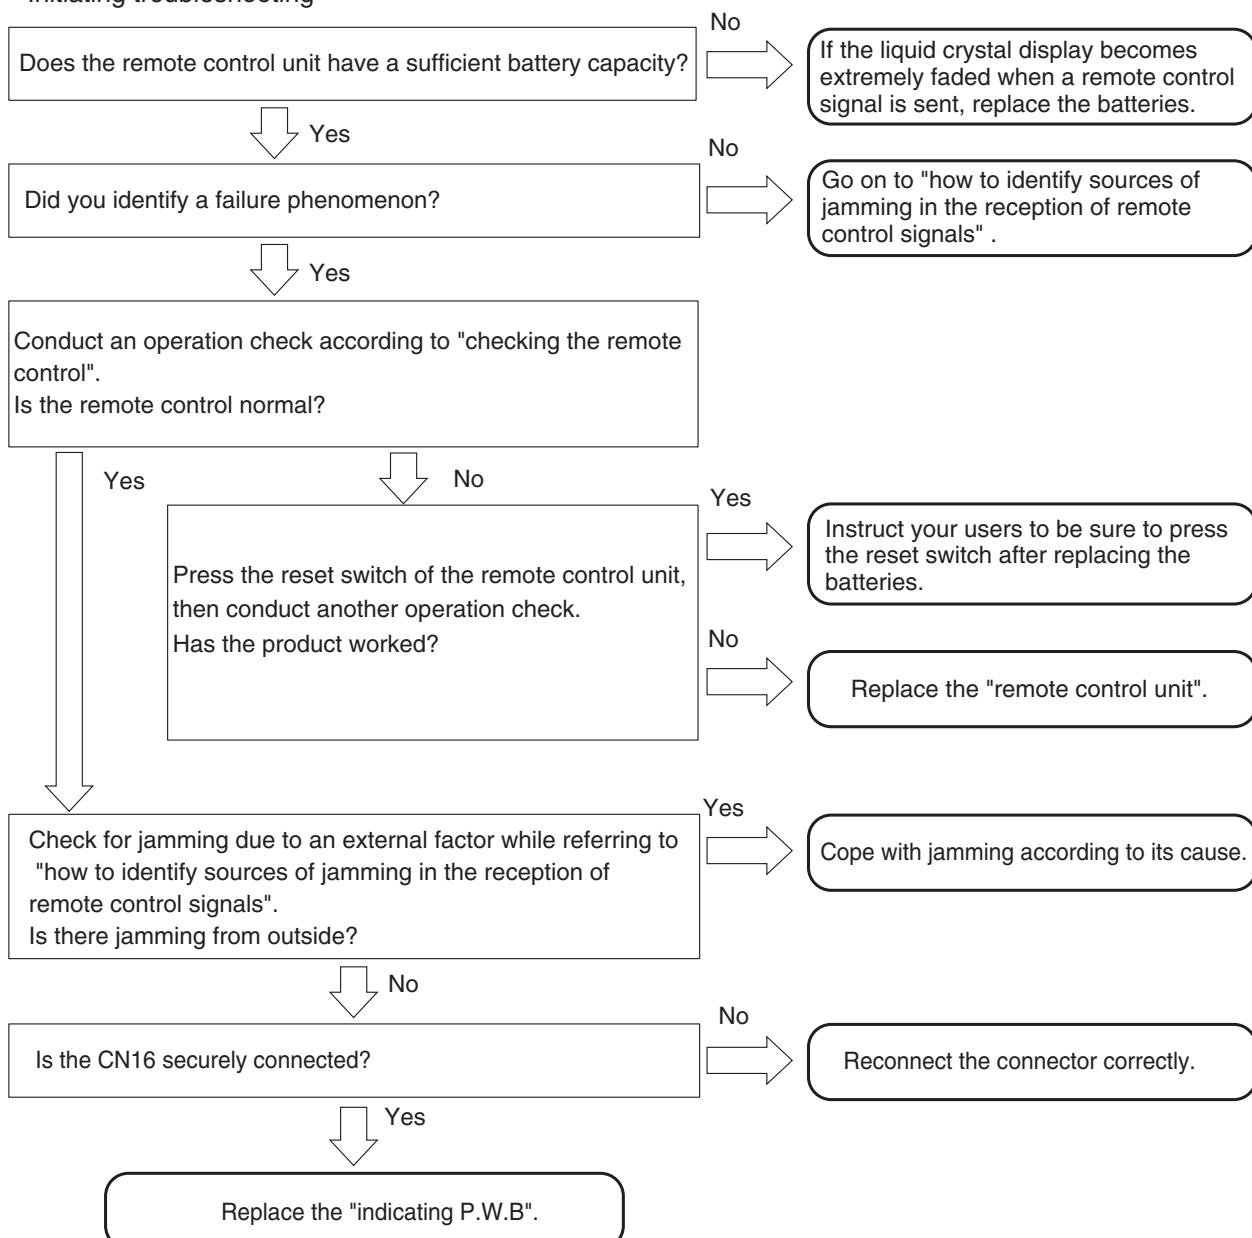

[Cautions in replacing the indicating P.W.B.] Be sure to replace the indicating P.W.B. components.



## How to identify sources of jamming in the reception of remote control signals


[ Situation ] The product may become poorly responsive to remote control signals due to external factors even though the product itself is trouble-free.

[ Estimating sources of jamming ] Identify the installation status of the air-conditioner and the indoor and outdoor environments to identify possible causes of the jamming.

- Indoor lighting equipment (quantity, type, location)
- Remote control units of other electrical products and equipment
- Is the grounding for the air-conditioner shared with other equipment?
- Are the surroundings of the air-conditioner clear of wireless antenna?
- Is the remote control light-receiving unit protected from direct sunlight?

### [ Checking and actions ]

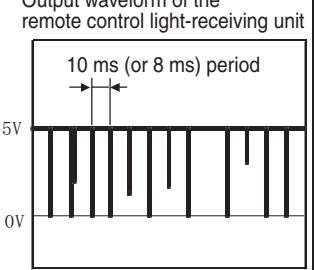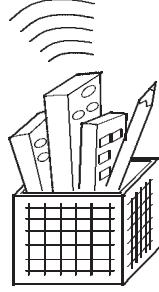Effects of lighting equipment (fluorescent lamps)	<p><u>Checking points</u></p> <ul style="list-style-type: none"> <li>· Turn on and off the lighting equipment and check for its effects on the reception of remote control signals.</li> <li>· When cold, the fluorescent lamp tends to emit infrared rays with wavelengths close to those used in remote control.</li> </ul> <p>If you cannot detect the phenomenon about which your user is complaining at the time of your visit, such as "the product sometimes fails to receive remote control signals" and "the product fails to receive remote control signals in the morning alone", then turn off the lighting for about 20-30 minutes and wait for the fluorescent lamps to cool down before conducting another check.</p> <p>There are even cases where the product fails to receive remote control signals for 1 to 2 minutes only after the lighting equipment is turned on.</p> <ul style="list-style-type: none"> <li>· The noise status may vary with the dimming of the lighting equipment. In the case of lighting equipment with a dimmer, therefore, conduct a check with all the light intensities.</li> <li>· If the lighting equipment is the source of the jamming, the remote control light-receiving unit output usually shows a noise waveform as shown in the right-hand figure. In the case of slight jamming, this kind of waveform will not cause practical problems. However, intense degrees of jamming will disable the reception of remote control signals.</li> <li>· When the fluorescent lamp is old and is flickering, it may cause disorders in the reception of remote control signals.</li> </ul> <p><u>Output waveform of the remote control light-receiving unit</u></p>  <p><u>Actions proposed</u></p> <ol style="list-style-type: none"> <li>1. Make it hard for light of the lighting equipment to enter the remote control light-receiving unit.       <ul style="list-style-type: none"> <li>· Separate the lighting equipment from the indoor unit.</li> <li>· Raise the lighting equipment.</li> <li>· Cover the upper half of the light-receiving panel from its rear side with aluminum tape or black vinyl tape.           <p>(This will also affect the reception of remote control signals. Therefore, set the range to be covered with tape to a range that is problem-free in practice, while checking the reception status.)</p> </li> </ul> </li> <li>2. Add an interference filter to the front panel of the remote control light-receiving unit.       <p>※ Lighting equipment that produces strong jamming exists although rarely. Some problems may therefore be unsolvable by managing the air-conditioner side alone.</p> </li> </ol> <p><u>Effects of the remote control units of other equipment</u></p> <p><u>Checking points</u></p> <ul style="list-style-type: none"> <li>· If, on the remote control unit of a TV or audio equipment, its sound volume key or something similar is left pressed, infrared signals become continuously sent, thereby jamming the reception of remote control signals.</li> <li>· Check how the remote control unit and related components are stored, thereby checking if there is any possibility that a button may be inadvertently left pressed on the remote control unit of other equipment.</li> </ul> <p><u>Actions proposed</u></p> <p>If there is any such possibility, give explanations to your users to that effect and instruct them to exercise caution.</p> 
---	---

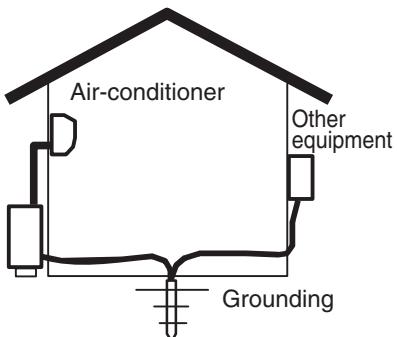Effects of other electrical products	<p><u>Checking points</u></p> <ul style="list-style-type: none"> <li>Check the effects of light and power noises coming from other electrical products.</li> <li>Turn on and off the electrical products, turn off the power and turn on the power, and check their effects on the reception of remote control signals.</li> <li>For products whose operating states change, check the effects of each state.</li> </ul> <p><u>Actions proposed</u></p> <ul style="list-style-type: none"> <li>Change the location relationship between the air-conditioner and the target products.</li> <li>Use a different wall outlet for the target products.</li> </ul>
Sharing a grounding	<p><u>Checking points</u></p> <ul style="list-style-type: none"> <li>Check for effects of electrical noises coming into the air-conditioner through grounding wires.</li> <li>Check if the grounding works is for the air-conditioner alone or shared with other equipment. If there is any equipment that shares it, turn on and off that equipment and detach and reattach the power plugs and examine their effects on the reception of remote control signals.</li> </ul> <p><u>Actions proposed</u></p> <ul style="list-style-type: none"> <li>Establish an independent grounding for the air-conditioner.</li> </ul> 
Effects of radio waves	<p><u>Checking points</u></p> <ul style="list-style-type: none"> <li>Using a wireless transmitter near the air-conditioner may affect the reception of remote control signals.</li> <li>Have your users try sending signals with a wireless transmitter and examine their effects on the reception of remote control signals.</li> </ul> <p><u>Actions proposed</u></p> <ul style="list-style-type: none"> <li>Add a ferrite core to the power cord and F cable.</li> <li>Add a ferrite core to the internal wiring of the indoor unit.</li> <li>Move the wireless antenna.</li> </ul>
Effects of direct sunlight	<p><u>Checking points</u></p> <ul style="list-style-type: none"> <li>Direct sunlight and other intense light make the remote control light-receiving unit less sensitive.</li> <li>Check for any time zone where the remote control light-receiving unit of the indoor unit is affected by direct sunlight depending on the location of the sun and mirror reflection.</li> </ul> <p><u>Actions proposed</u></p> <ul style="list-style-type: none"> <li>Block the sunlight to protect against direct sunlight.</li> </ul>



### 3. Failure phenomenon: The compressor will not run.

[ Situation ] The compressor will not run (the same state as the thermometer turned off), the product receives remote control signals normally. The self-diagnosis lamp (LD301) of the outdoor unit blinks once or becomes turned off.

[ Estimated failure locations ]

- Room temperature thermistor, heat exchanger thermistor
- Microcomputer peripheral circuit

[ Diagnosis flow ]  
Initiating troubleshooting

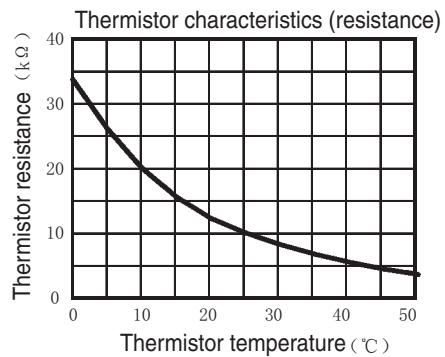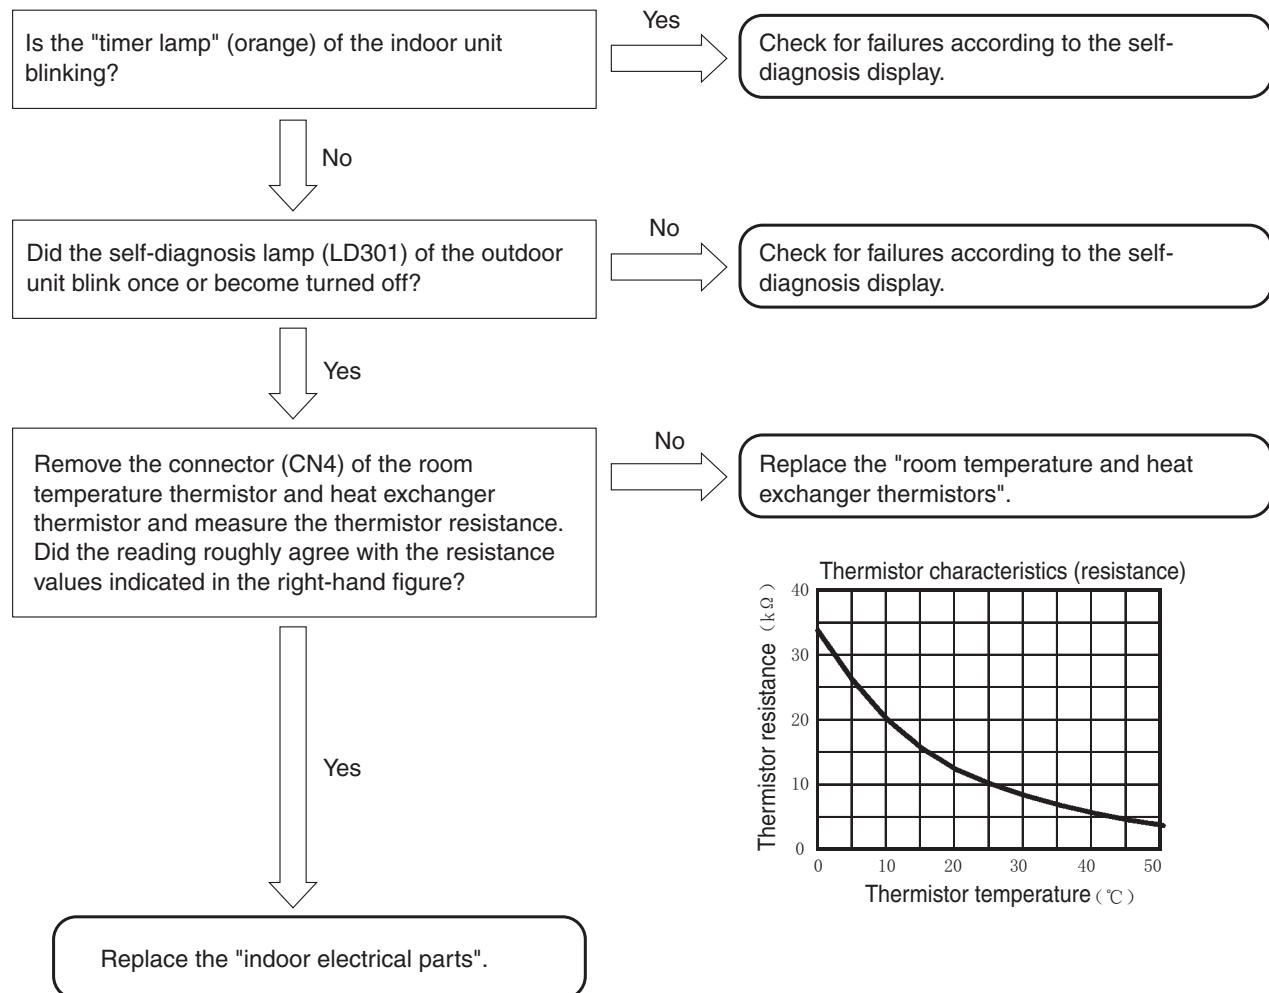

#### 4. Failure phenomenon: The fan motor will not stop.

[Situation] I have conducted the stop operation on the product by remote control, but the indoor fan motor will not stop.  
(It stopped about 10 minutes later.)

[Estimated failure locations]

- Indoor fan motor
- Fan motor drive circuit

[Diagnosis flow]

Initiating troubleshooting

Run the product by remote control and then stop it.  
(Reproduce the failure phenomenon.)  
Is the voltage between pins ④ and ⑥ of the fan motor connector (CN2) below 1.5 V? (Take measurements while the failure phenomenon is present.)



Replace the "indoor fan motor".



No

Replace the "indoor electrical parts".

## 5. Timer lamp blinking: blinking once

[Situation] The timer lamp blinks one time and the product will not operate.  
(This is not a sign of a breakdown.)

[Estimated failure locations]

- Reversing valve defective.
- The refrigerating cycle block gas leak.

## 6. Timer lamp blinking: blinking twice

[Situation] The product is giving a display to indicate that it is performing forcible cooling.  
(This is not a sign of a breakdown.)

## 7. Timer lamp blinking: blinking three times

[Situation] The timer lamp blinks three times and the product will not operate.

[Estimated failure locations]


- Meltdown of the terminal board temperature fuse (the terminal board poorly inserted into the F cable)
- Outdoor communication circuit out of order

[Cautions]

- If a terminal board is replaced to counter the meltdown of the terminal board temperature fuse, ensure that the F cable to be inserted into the terminal board has the appropriate dimension for peeling the insulation sheathing and that the insertion region is unbent before inserting it into the terminal board securely.

[Diagnosis flow]

Initiating troubleshooting

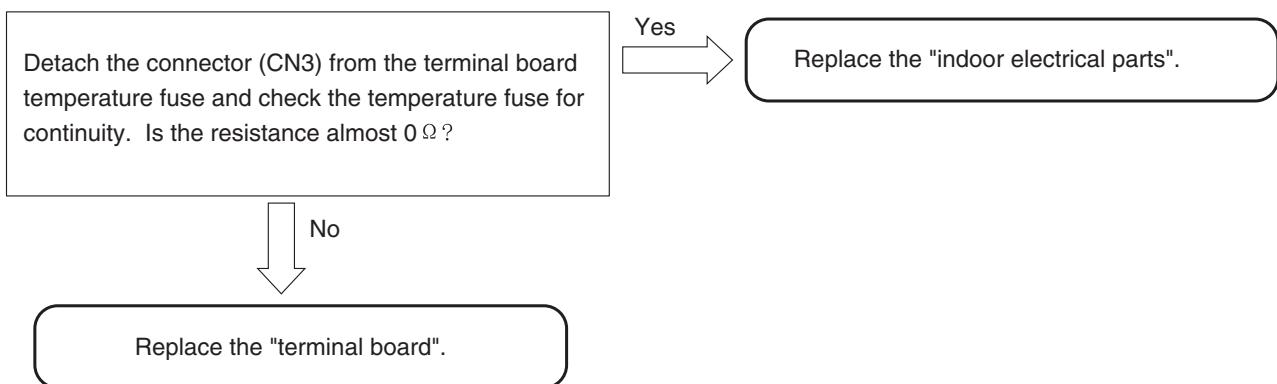

## 8. Timer lamp blinking: blinking four times

[Situation] The timer lamp blinks four times and the product will not operate.

[Estimated failure locations]

- Outdoor unit error.

- Please confirm the times of the LD301 blinking, and then see the outdoor selfcheck table.

## 9. Timer lamp blinking: blinking 9 times


[Situation] The timer lamp blinks 9 times and the product will not run.

[Estimated failure location] • Loose connector, wire break, or short-circuit in the room temperature thermistor, heat exchanger thermistor.

[Cautions] • Starting the product by remote control will initiate failure detection.  
(Merely turning on the power will not activate the failure detection function.)

### [Diagnosis flow]

Initiating troubleshooting

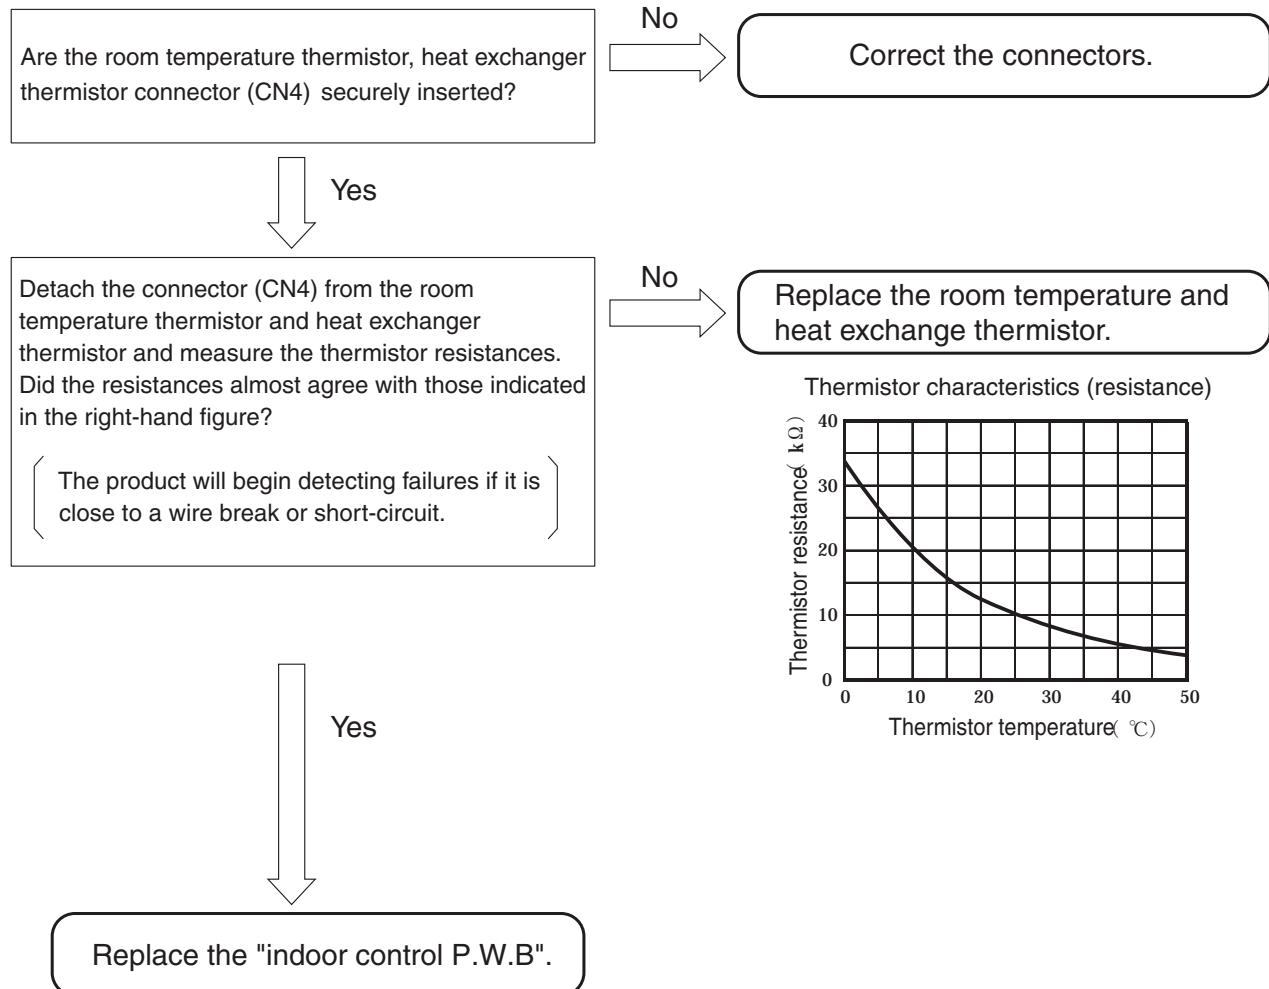

## 10. Timer lamp blinking: blinking 10 times


[Situation] The timer lamp blinks 10 times and the product will not run.

[Estimated failure locations]

- Loose connector or wire break in the indoor fan motor
- Indoor fan motor mechanically locked
- Indoor fan motor
- Indoor fan motor drive circuit

[Diagnosis flow]

Initiating troubleshooting

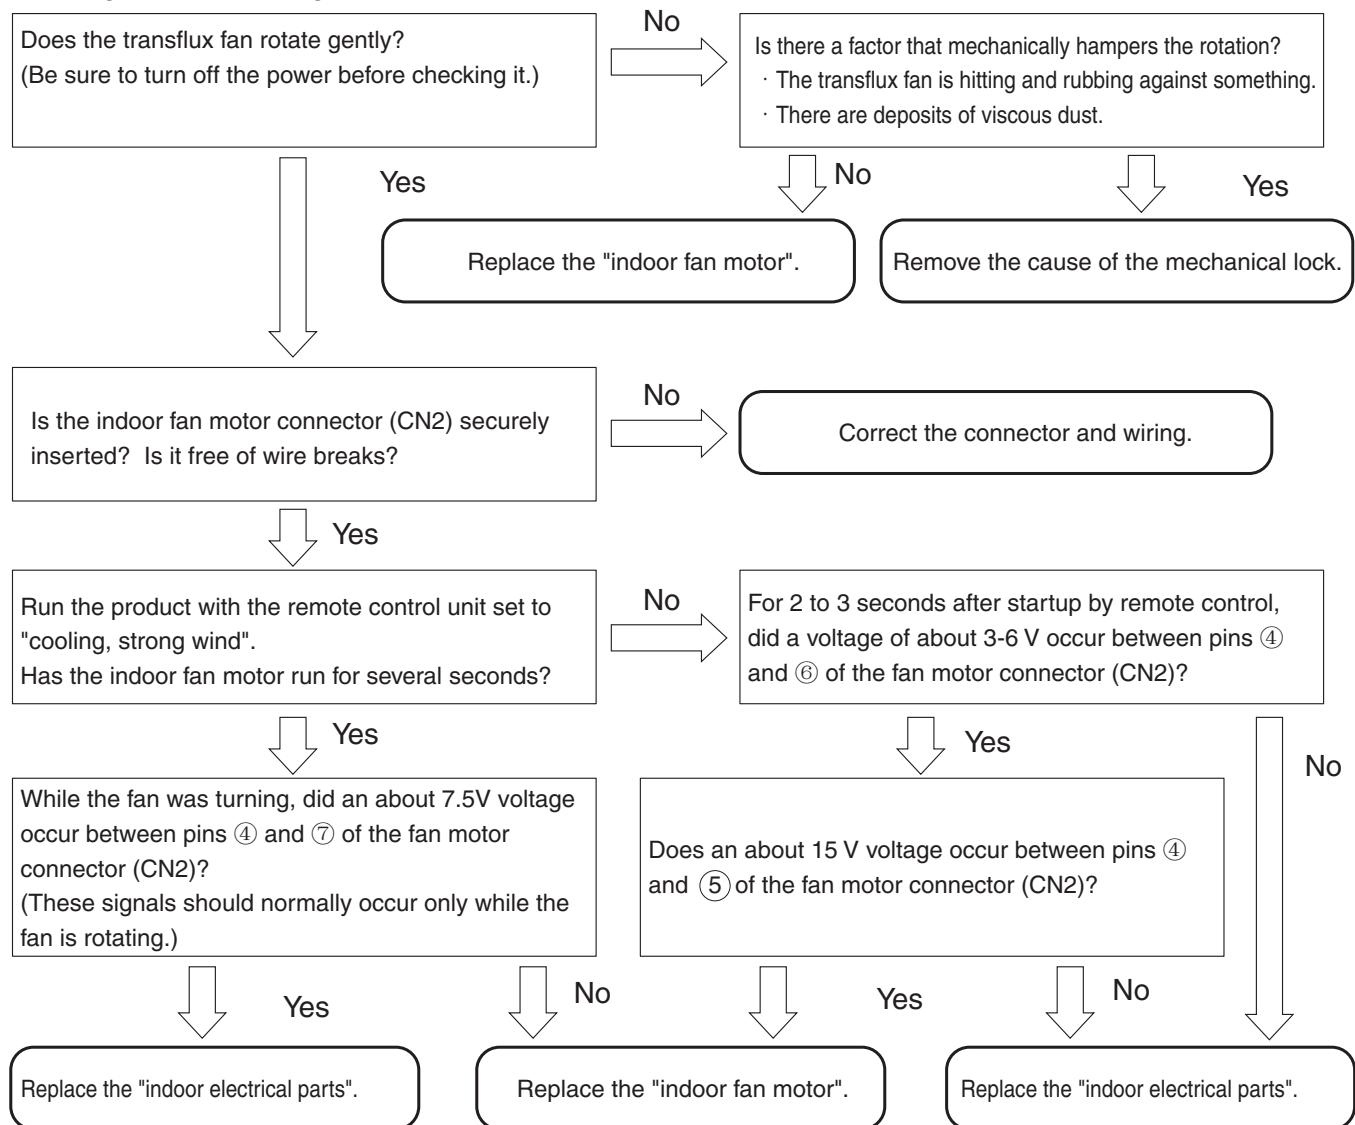

## 11. Timer lamp blinking: blinking 12 times

[Situation] The timer blinks 12 times and the product will not run.


- [Estimated failure locations]
- Erroneous connection in the indoor-outdoor connection line (F cable)
  - Forget to connect CN27 of outdoor P.W.B
  - Wire break or poor insertion of the indoor-outdoor connection line (F cable)
  - Electrical parts in the outdoor unit (communication circuit, power circuit error)
  - Communication error due to noise in other home electronics
- ※This does not constitute a failure in the air-conditioner

[Cautions]

- When lines 1 and 2 of F cable are erroneously connected (crossed), the product may not enter self-diagnosis display mode. If the self-diagnosis memory stores data about "timer lamp blinked 12 times", then, just in case, check if the F cable is not erroneously connected.

[Diagnosis flow]

Initiating troubleshooting

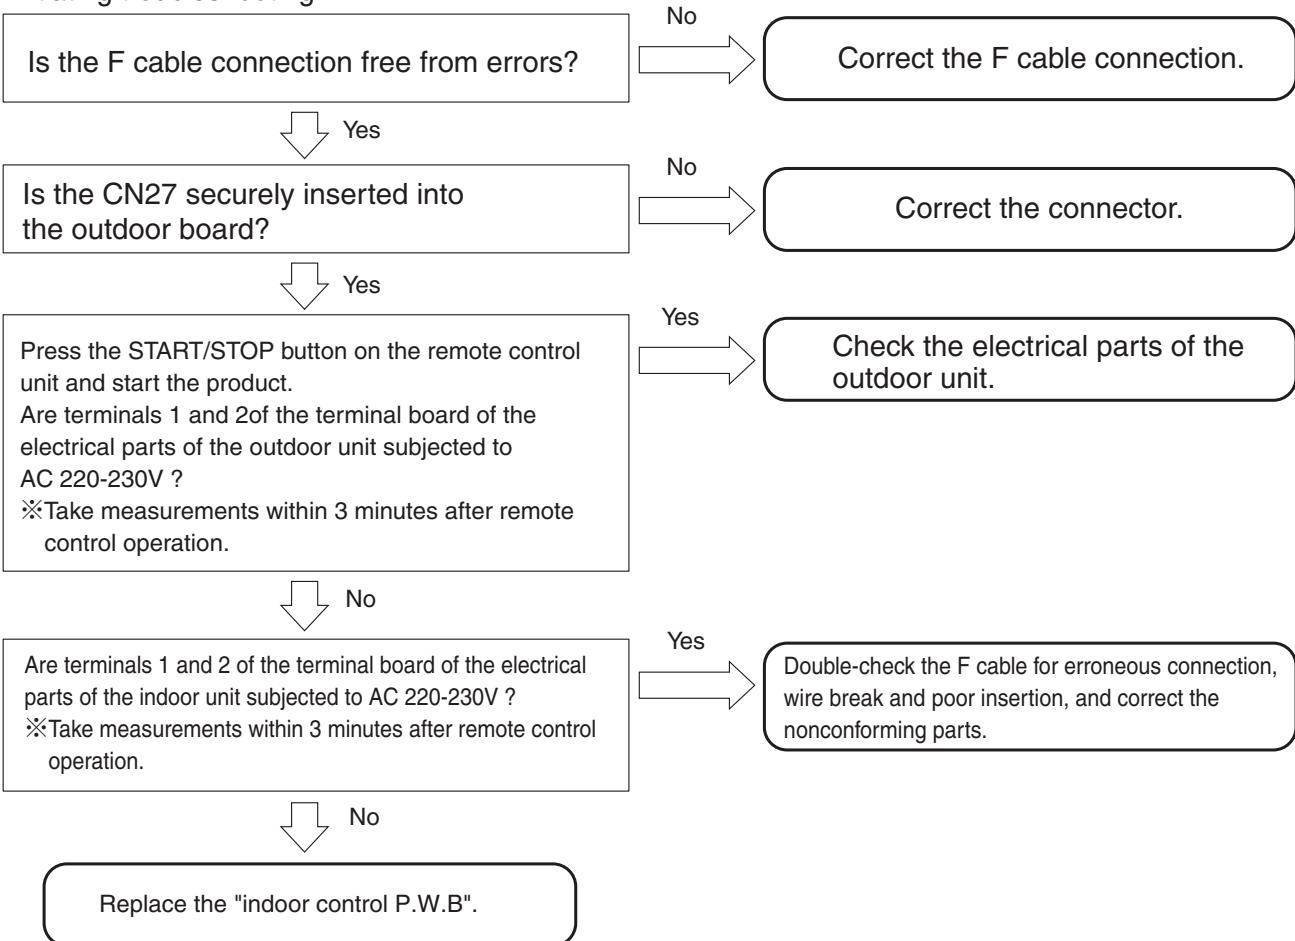

## 12. Timer lamp blinking: blinking 13 times

[Situation] The timer lamp blinks 13 times and the product will not run.

- [Estimated failure location]
- EEPROM, microcomputer


[Diagnosis flow]

Replace the "indoor control P.W.B."

## PARTS LIST AND DIAGRAM

INDOOR UNIT

MODEL: RAK-15QPB, RAK-18RPB, RAK-25RPB

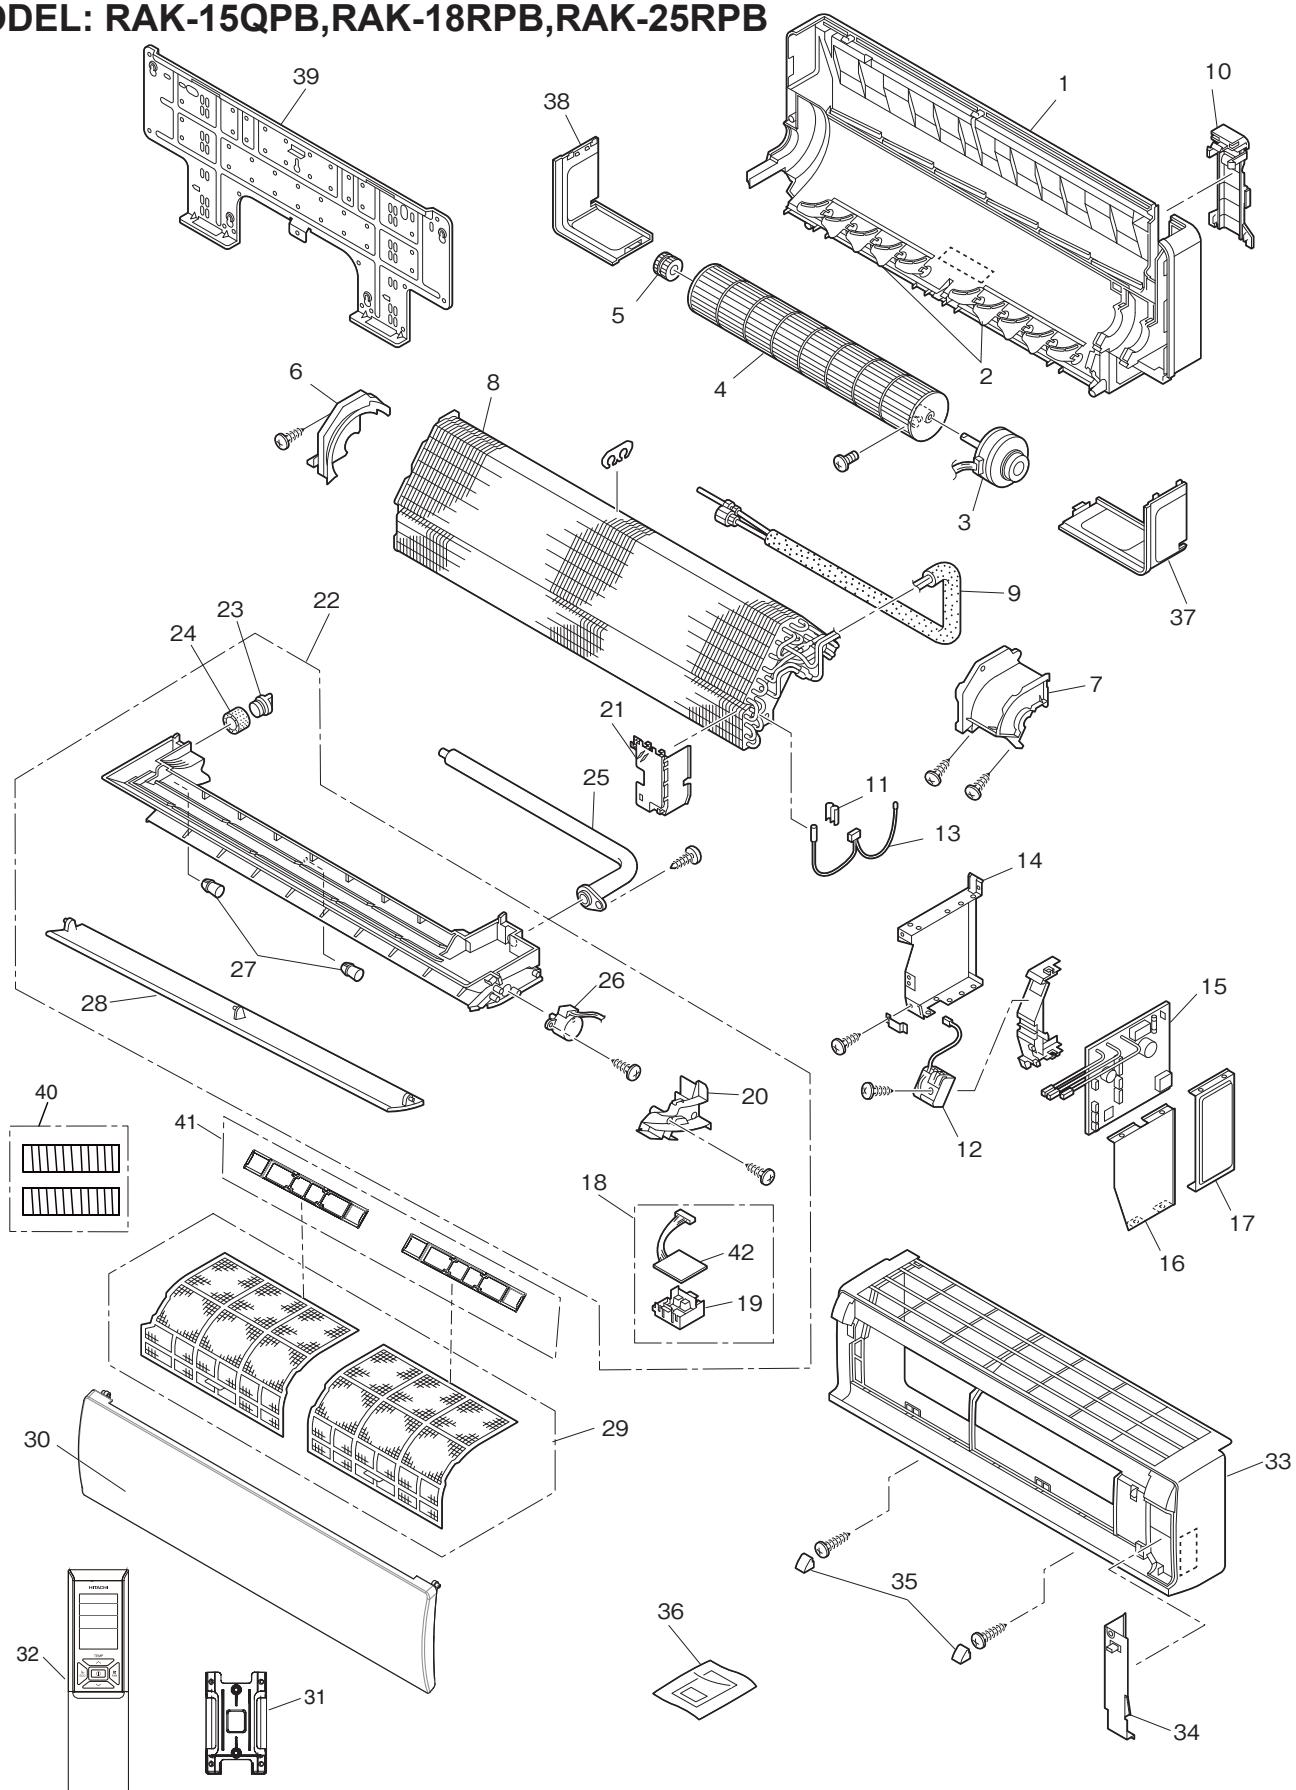


**INDOOR UNIT**

NO	HHAW PARTS NO			Q' TY /UNIT	PARTS NAME		
	RAK-15QPB	RAK-18RPB	RAK-25RPB				
1		HWRACK-18PSPA	901	1	CABINET ASS' Y		
2		HWRACK-25PEA	902	2	VERTICAL AIR DEFLECTOR		
3		HWRACK-18PEB	901	1	FAN MOTOR		
4		HWRACK-18PSPA	902	1	TANGENTIAL AIR FLOW FAN		
5		HWRAS-25YH4	908	1	FAN SUPPORT ASS' Y		
6		HWRAS-E10H3	905	1	FAN COVER		
7		HWRAS-10EH4	901	1	FAN MOTOR SUPPORT		
8		HWRACK-18PEB	902	1	EVAPORATOR ASS' Y		
9		HWRAS-E10H3	908	1	PIPING ASS' Y		
10		HWRAS-E10H3	909	1	UPPER COVER		
11		HWRAS-25YH4	A15	1	SPRING		
12		HWRACK-18PEB	904	1	TERMINAL BOARD (3P)		
13		HWRAS-E10H3	911	1	THERMISTOR ASS' Y		
14		HWRACK-18RPB	901	1	COVER (ELECTRIC)		
15	HWRACK-15QPB	901	HWRACK-18RPB	902	HWRACK-25RPB 901	1	P. W. B. (MAIN)
16		HWRACK-18PEB	907	1	ELEC-COVER-L		
17		HWRACK-18PEB	908	1	ELEC-COVER-R		
18		HWRACK-18PEB	909	1	P. W. B. (INDICATION)		
19		HWRAS-E10H3	917	1	LED-COVER		
20		HWRAS-E10H3	918	1	FC-GUIDE		
21		HWRAS-E10H3	919	1	PIPE COVER		
22		HWRACK-18PEB	910	1	DRAIN PAN ASS' Y		
23		HWRAS-25YH4	A30	1	DRAIN CAP		
24		HWRAS-25YH4	A31	1	FO-PIPE		
25		HWRAS-E10H3	921	1	DRAINAGE PIPE		
26		HWRACK-18PSPA	910	1	STEPPING MOTOR		
27		HWRAS-25YH4	A28	2	DEFLECTOR SUPPORT		
28		HWRAS-E10HA	901	1	HORIZONTAL AIR DEFLECTOR		
29		HWRAS-E10H3	924	1	AIR FILTER		
30		HWRACK-25PPA	901	1	FRONT PANEL AS		
31		HWRACK-18PPB	902	1	RE-HOLDER		
32		HWRACK-18RPB	903	1	REMOTE CONTROL ASS' Y		
33		HWRACK-18PPB	903	1	FRONT COVER AS		
34		HWRAS-E10H3	927	1	T-COVER ASS' Y		
35		HWRAS-E10H3	928	2	CAP		
36		HWRACK-18PEB	911	1	H-LABEL		
37		HWRAS-E10H3	930	1	S-COVER-R		
38		HWRAS-E10H3	931	1	S-COVER-L		
39		HWRAS-E10H3	932	1	MOUNTING PLATE		
40		HWRACK-18PPB	904	1	ACL-FILTER		
41		HWRACK-18PPB	905	2	C-CASE		
42		HWRACK-18RPB	904	1	HBOARD-AS		

## PARTS LIST AND DIAGRAM

### INDOOR UNIT

MODEL: RAK-35RPB, RAK-50RPB

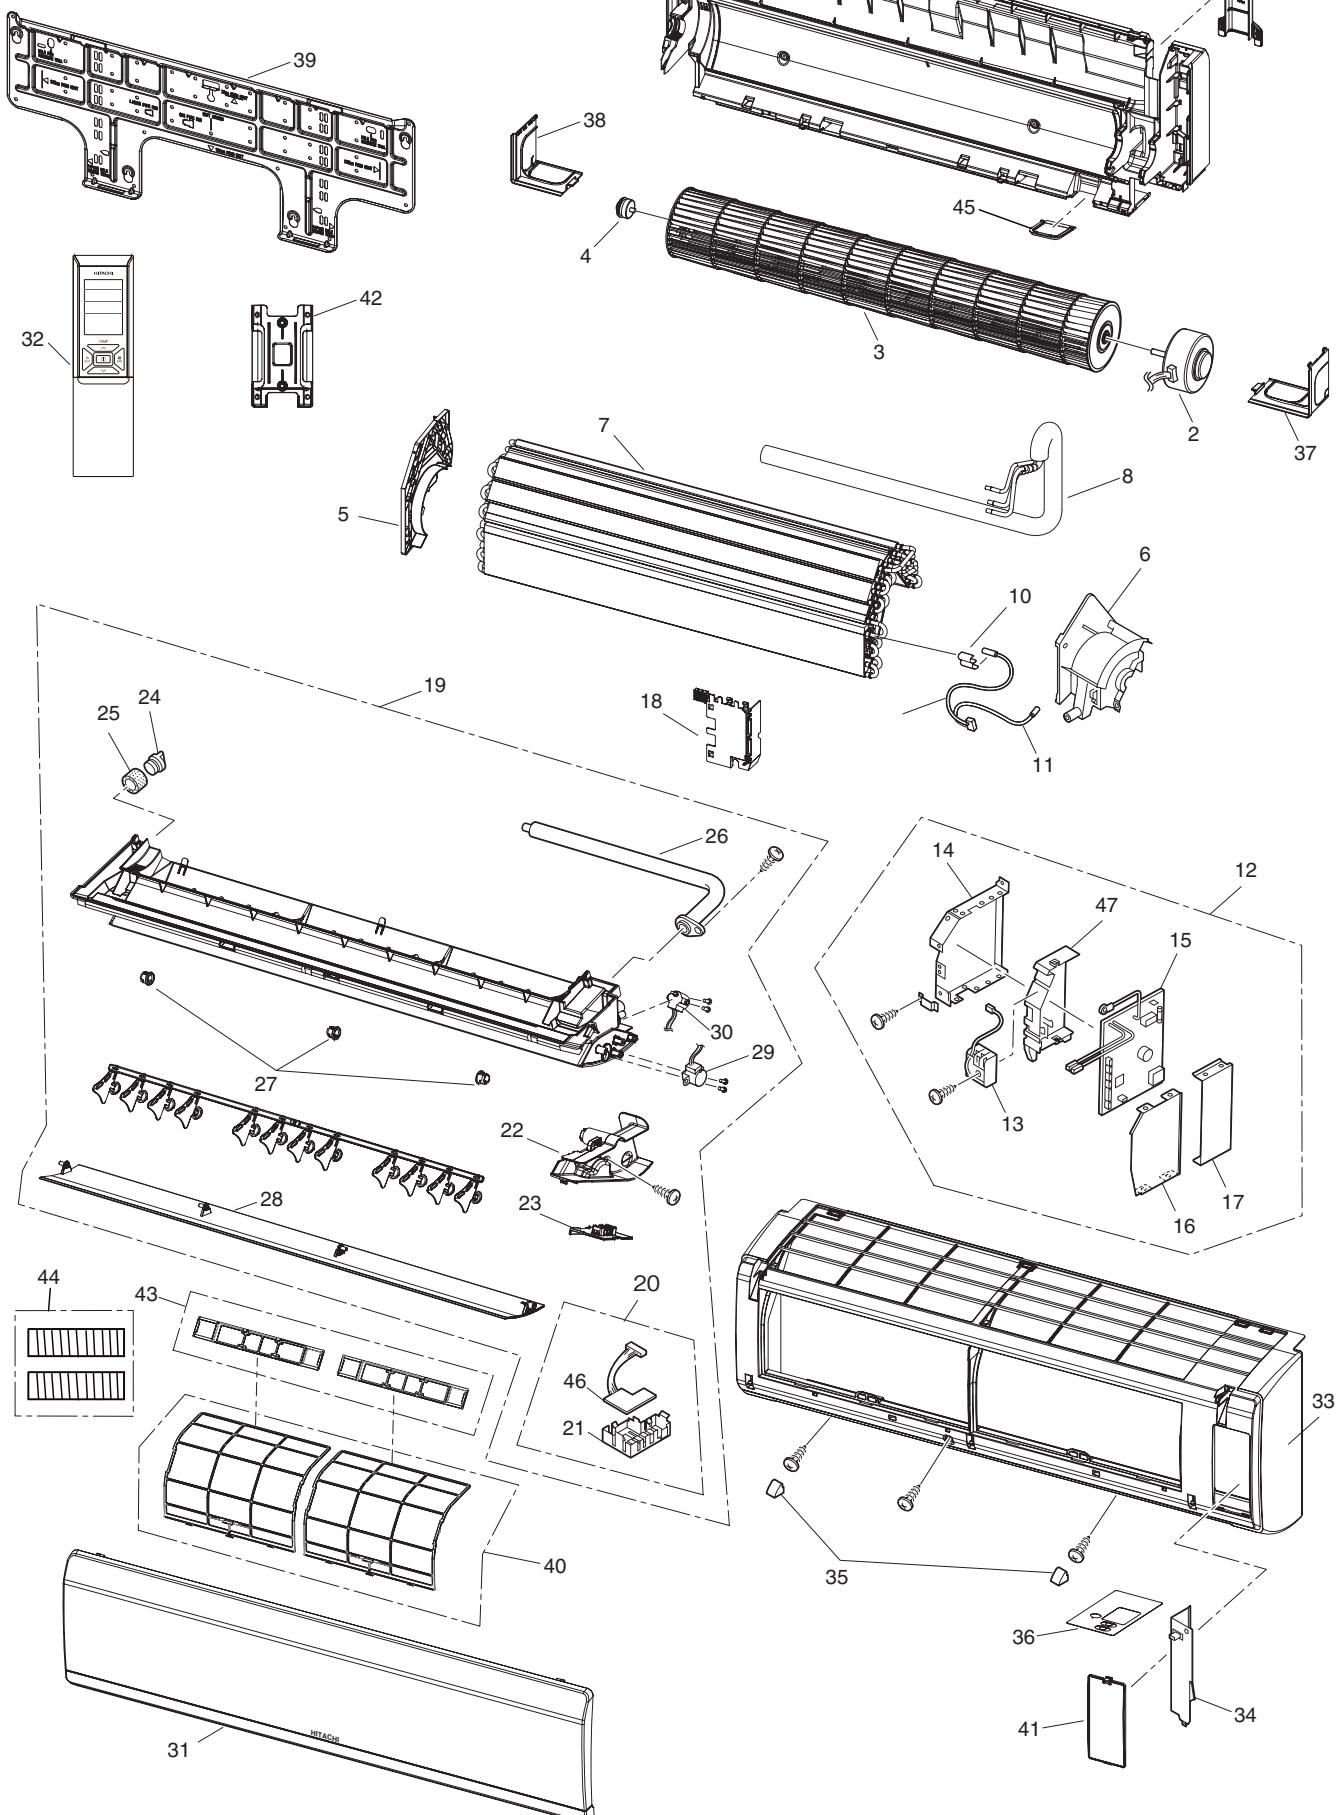

**INDOOR UNIT**

NO	HHAW PARTS NO		Q' TY /UNIT	PARTS NAME
	RAK-35RPB	RAK-50RPB		
1	HWRACK-35PPB	901	1	CABINET ASS' Y
2	HWRACK-18PEB	901	1	FAN MOTOR
3	HWRACK-35PPB	902	1	TANGENTIAL AIR FLOW FAN
4	HWRAS-25YH4	908	1	FAN SUPPORT ASS' Y
5	HWRACK-35PPB	903	1	FAN COVER
6	HWRACK-35PPB	904	1	FAN MOTOR SUPPORT
7	HWRACK-35PPB	905	1	EVAPORATOR ASS' Y
8	HWRACK-35PPB	906	1	HWRAK-50PPB 901 PIPING ASS' Y
9	HWRACK-35RPB	901	1	UPPER COVER
10	HWRAS-25YH4	A15	1	SPRING
11	HWRAS-E10H3	911	1	THERMISTOR ASS' Y
12	HWRAK-35RPB	902	1	HWRAK-50RPB 901 ELECTRIC ASSEMBLY
13	HWRACK-18PEB	904	1	TERMINAL BOARD (3P)
14	HWRACK-35RPB	903	1	COVER (ELECTRIC)
15	HWRAK-35RPB	904	1	HWRAK-50RPB 902 P. W. B. (MAIN)
16	HWRACK-18PEB	907	1	ELEC-COVER-L
17	HWRACK-18PEB	908	1	ELEC-COVER-R
18	HWRACK-35RPB	905	1	PIPE COVER
19	HWRACK-35PPB	912	1	DRAIN PAN ASS' Y
20	HWRACK-18PEB	909	1	P. W. B. (INDICATION)
21	HWRAS-E10H3	917	1	LED-COVER
22	HWRACK-35PPB	913	1	FC-GUIDE
23	HWRACK-35PPB	914	1	K-SUP
24	HWRAS-25YH4	A30	1	DRAIN CAP
25	HWRAS-25YH4	A31	1	F0-PIPE
26	HWRAS-E10H3	921	1	DRAINAGE PIPE
27	HWRAS-25YH4	A28	3	DEFLECTOR SUPPORT
28	HWRACK-35PPB	915	1	HORIZONTAL AIR DEFLECTOR
29	HWRACK-18PSPA	910	1	STEPPING MOTOR
30	HWRACK-35PPB	916	1	STEPPING MOTOR(VERTICAL AIR DEFLECTOR)
31	HWRACK-35PPB	917	1	FRONT PANEL
32	HWRACK-35RPB	906	1	REMOTE CONTROL ASS' Y
33	HWRACK-35PPB	919	1	FRONT COVER AS
34	HWRAS-E10H3	927	1	T-COVER ASS' Y
35	HWRACK-35PPB	920	2	CAP
36	HWRACK-35PPB	921	1	H-LABEL
37	HWRACK-35PPB	922	1	S-COVER-R
38	HWRACK-35PPB	923	1	S-COVER-L
39	HWRACK-35PPB	924	1	MOUNTING PLATE
40	HWRACK-35PPB	925	2	AIR FILTER
41	HWRACK-35PPB	926	1	TER-COVER
42	HWRACK-18PPB	902	1	RE-HOLDER
43	HWRACK-35PPB	927	2	F-CASE
44	HWRACK-35PPB	928	1	ACL- FILTER
45	HWRACK-35PPB	929	1	T-PLATE
46	HWRACK-18RPB	904	1	HBOARD-AS
47	HWRACK-35RPB	907	1	KIBAN-SUP

# **HITACHI**

**RAK-15QPB  
RAK-18RPB  
RAK-25RPB  
RAK-35RPB  
RAK-50RPB**

**HHAW NO.0089E-1**