


# 1D Wireless Barcode Scanner User Manual

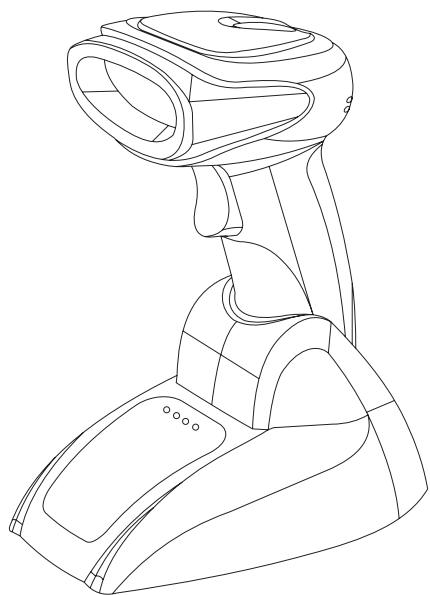

Factory Default

## Scan Mode



Automatic Successive Scanning



Automatic Flashing Mode

## Buzzer



Sounds OFF



Sounds ON

## Keyboard Mode

### Language Selection



USA



Germany



France

### Keyboard Case Control



Resume



Uppercase



Lowercase

### Prefix-suffix Setting



Add Prefix



Add Suffix



Before Characters Hide



After Characters Hide

### Suffix&Line feed Setting



Suffix-Enter



Suffix-Line feed



Suffix-Enter line feed



Suffix-TAB



Suffix-Space



Suffix Cancel

## Bluetooth Setting



Bluetooth Mode



Bluetooth Baud Rate



Enter Setting



Open a SPP Channel



Open a HID Channel



Disconnection Previous Connection



Auto reconnection



Save Bluetooth SPP Parameters Setting



Save Bluetooth HID Parameters Setting



Finish SPP Bluetooth settings



Finish HID Bluetooth Setting



Enter IOS Transmit Mode



Quit IOS Transmit Mode

## Instruction for Bluetooth Pair Mode

### ☑ Scanners pair with receiver

1、 Factory Default



2、 Bluetooth Mode



3、 Bluetooth Baud Rate



4、 Bluetooth Setting Mark



5、 Enter Setting



6、 Open SPP Channel



7、 Disconnect Previous Connection



8、 Scan Receiver MAC address code ( the code is on the case of receiver base)



9、 Automatic Connection ”



10、 Save Bluetooth SPP Parameters Setting



11、 Finished Bluetooth SPP setting



12、 Quit IOS Transmit Mode



### ☑ Bluetooth pair with IPAD and Mobiles

1、 Factory Default



2、 Bluetooth Mode



3、 Bluetooth Baud Rate



4、 Bluetooth Setting Mark



5、 Enter Setting



6、 Open HID Channel



7、 Disconnect Previous Connection



8、 Setting Bluetooth As Visible



9、 Automatic Connection



10、 Save Bluetooth HID Parameters Setting



11、 Finish Bluetooth HID setting



12、 Apple devices need to open the IOS Transmit Mode, Android or other devices please close it



Enter IOS Transmit Mode



Quit IOS Transmit Mode

13、 On IPAD or Mobiles , open Bluetooth and search till find NVC-MD-CS45 ,then pair

## Special Bar Codes Enable



CODE 11 Enable



CODE 39 Enable



FULL ASCII Enable



CODE 93 Enable



CODE 128 Enable



CODE 128 ISBT Enable



CODEBAR Enable



Interleaved 2 of 5 Enable



Industrial 2 of 5 Enable



Matrix 2 of 5 Enable



China Post Code Enable



MSI Enable



UPC-A Enable



UPC-E Enable



EAN-13 Enable



EAN-8 Enable