

USER GUIDE

About This User Guide

Pls read all the content of the user guide carefully to use the products safely and effectively. You are advised of keeping it properly for your using reference.

Disclaimer

Please do not dismantle the product or tear up the seal on it, otherwise we won't provide warranty or replacement service.

The pictures in this user guide are for reference only. If there are any pictures which not match the actual product, please take actual products as the standard. Updated information is subject to change without notice.

All information contained in this guide are protected by copyright, and our company reserves all rights. All or part of this guide is prohibited to excerpt, copy, bundle other products, or sell without the written permission from us.

2017 Guangzhou Yoko Electron Co., Ltd all rights reserved.

Service Information

For technical assistant or product service and repair, please go to www.chinayoko.com

Version Record

Version number	Version description	Version date
Barcode Scanner V2.13		
Built Time: NOV 7 2018 11:43:22	Initial version	2019-3-21
Barcode Scanner V2.13		
Built Time: Dec 30 2019 15:44:55	Add : EAN-8 Converted to EAN-13	2020-4-10

Catalogue

1、Product Introduction.....	9
1.1 Main feature	9
1.2 Unpack your device	9
1.3 Communication port(Not support RS232 interface for now)	9
1.4 Start-up, shutdown, standby and restart	10
1.5 Maintenance	10
1.6 Reading skills	10
2、Barcode Menu	11
2.1 Mark Setting.....	11
2.2 Setting barcodes	11
2.2.1 Enable/Disable Parameter Bar Code Scanning.....	11
2.2.2 Restore Factory Defaults	11
2.2.3 Scanner Firmware Version	12
2.2.4 Read user defaults	12
2.2.5 Interface	12
2.2.6 Serial port setting.....	13
2.2.7 Scanning Mode	15
2.2.8 Center Mode	15
2.2.9 Character Escape	15
2.2.11 Prefix	16
2.2.12 Suffix	16
2.2.13 Inverse code option	17

2.2.14 Virtual Keyboard	17
2.2.15 Operation system choice under virtual keyboard	18
2.3 Beeper and LED notifications	18
2.3.1 Beeper Volume	18
2.3.2 Beeper-Startup	18
2.3.3 Beeper-Good Read	18
2.3.4 Beeper Tone-Good Read	19
2.3.5 Beeper Duration-Good Read	19
2.3.6 Beeper-Error	19
2.3.7 LED	20
2.4 Same Barcode Scanning Interval setting	20
2.5 USB keyboard update speed setting	21
2.6 Enter and Line Feed Character Output (USB keyboard)	21
2.7 USB Keyboard Text-Transform	21
2.8 Keyboard layout setting	22
2.9 Symbolologies	25
2.9.1 Enable/disable all symbolologies	25
2.9.2 Codabar	25
2.9.3 Codabar start/ending character setting	25
2.9.4 Codabar Limitation Of Length	25
2.9.5 Code 39	26
2.9.6 Code 39 Check Bit	26

2.9.7 Code 39 Full ASCII	26
2.9.8 Code 39 Limitation Of Length	26
2.9.9 Code 32 (Code 39 Needs To Be Enabled)	27
2.9.10 Interleaved 2 of 5 (ITF5)	27
2.9.11 Interleaved 2 of 5 (ITF5) Check Bit	27
2.9.12 Interleaved 2 of 5 (ITF5) Length Setting	28
2.9.13 Interleaved 2 of 5 Limitation of length	29
2.9.14 Industrial 2 of 5 (4-24 Digits)	29
2.9.15 Industrial 2 of 5 Limitation of Length	29
2.9.16 Matrix 2 of 5 (4-24)	29
2.9.17 Matrix 2 of 5 Limitation of Length	30
2.9.18 Code 93	30
2.9.19 Code 93 Limitation of Length	30
2.9.20 Code 11	30
2.9.21 Code 11 Check Bit Output	31
2.9.22 Code 11 Check Bit Option	31
2.9.23 Code 11 Limitation of Length	31
2.9.24 Code 128	32
2.9.25 Code 128 Limitation Of Length	32
2.9.26 ISBT-128	32
2.9.27 GS1-128	32
2.9.28 UPC-A	33

2.9.29 UPC-A Check Bit	33
2.9.30 UPC-A to EAN-13	33
2.9.31 UPC-E	33
2.9.32 UPC-E Check Bit	34
2.9.33 UPC-E To UPC-A	34
2.9.34 EAN/JAN-8	34
2.9.35 EAN-8 Converted to EAN-13	34
2.9.36 EAN/JAN-13	35
2.9.37 UPC/EAN/JAN Extra-Code	35
2.9.38 EAN13 To ISBN	35
2.9.39 EAN13 To ISSN	36
2.9.40 GS1 DataBar (RSS14)	36
2.9.41 GS1 DataBar Limited	36
2.9.42 GS1 DataBar Expanded	36
2.9.43 PDF417	37
2.9.44 Micro PDF417	37
2.9.45 QR Code	37
2.9.46 Micro QR	37
2.9.47 Data Matrix	38
2.9.48 Aztec Code	38
2.10 User-Defined Prefix Setting	38
2.11 User-Defined Suffix Setting	39

2.12 Code ID	39
2.13 AIM ID Setting.....	40
APPENDIX.....	41
Appendix 1 Data and editing code.....	41
Appendix 2 Code type ID table.....	43
Appendix 3 Eyeball character ASCII table.....	44
Appendix 4 Operational character (USB keyboard)	45
Appendix 5 Operational character (serial port and USB-VCOM)	47
Configuration instruction and example.....	49

1、 Product Introduction

This user guide applies to HS-26, which identify 1D&2D barcodes by 2D image scanning pattern, and apply the complete set of patent technology developed by Guangzhou YOKO Electron Co., Ltd. The scanners above are of strong identification capability, and support automatic continuous scanning mode with fast and flexible scanning speed.

In this chapter, we will introduce the instruction of scanner with pictures, please compare to the scanner you bought when reading this user guide, which is good for your understanding. This chapter applies to regular users, maintenance personnel, and software developers.

1.1 Main feature

- * Complete independent research and development, possessing the complete set of patent, plug and play without the need to install driver.

- * Wide voltage design to avoid the data can't be transmitted due to voltage fluctuation.

- * 32-bit master chip equipped with patented software, the scanner can smoothly decode reflective, wrinkled, blurred, and colorful barcode, and can also normally scan in light and dark environment.

- * Adopt all tantalum capacitors and anti-oxidation optical technology, avoiding the problem of performance declining after long-term using.

1.2 Unpack your device

After you open the shipping carton containing the product, take the following steps:

- Take the accessories for scanner out from package.
- Check with the packing list to see if everything is complete and in good condition. If there are any damaged or missing components, please keep the original package and contact your supplier for after-sales service.

1.3 Communication port(Not support RS232 interface for now)

The scanner must be connected to a host to operate. Host can be a PC, POS machine, intelligent terminal with USB or RS-232 interface.

USB

USB interface on host



RS-232

RS-232 interface on host



1.4 Start-up, shutdown, standby and restart

Start-up: Connect host computer with scanner, which will automatically start-up and in working state.

Shutdown: Remove the data cable which is connected with scanner; remove the USB which is connected with host computer; remove the power adapter which is inserted into RS-232 serial port.

Standby: Scanner with automatic sleep standby function, if 30 minutes without work it will be in standby mode, but it will automatically start-up when barcode approach.

Restart: If the scanner crashes or doesn't respond, please switch it off and restart.

1.5 Maintenance

- * The window must be kept clean, the supplier do not bear the guarantee responsibility due to the improper maintenance.

- * Avoid the window being wear and tear or scratched by hard object

- * Use the hairbrush to remove the stain on the window

- * Clean the window with a soft cloth, such as lens cleaning cloth

- * Spraying liquid onto the window is prohibited.

- * Prohibit any cleaning solvents, except for the cleaning water.

1.6 Reading skills

If the barcode is small, it should be closer to the scanning window; if the barcode is large, it should be far away from the scanning window a little more, thus easier to be read correctly.

If the barcode is highly reflective (for example, the coated surface), you may need to tilt the barcode at an angle to successfully scan it.

Barcode scanning example:





Configuration Code Turn on

2、Barcode Menu

This model of laser desktop barcode scanner is designed to change settings by reading some special barcode, which we will give you a detailed introduction and show you all the barcodes for the corresponding setting in this section.

The greatest advantage of this setting method is direct, intelligible and user friendly.

2.1 Mark Setting



Enable Parameter Bar Code Scanning
(Default)

← Barcode

← Setting of Function

2.2 Setting barcodes

2.2.1 Enable/Disable Parameter Bar Code Scanning

When the configuration code is turn on, All configuration codes available;

When the configuration code is turn off, you need setting it.



Enable Parameter Bar Code Scanning (Default)



Disable Parameter Bar Code Scanning

2.2.2 Restore Factory Defaults



Restore Factory Defaults



Configuration Code Turn on

2.2.3 Scanner Firmware Version



Firmware Version

2.2.4 Read user defaults

Save the current menu settings as user-defined menu settings.



Save User Defaults

You can restore the menu settings for the user-defined menu settings.



Restore User Defaults

2.2.5 Interface

This desktop scanner support USBKB、USB to serial port、serial port interface。

You can set USB PC KB、USB MAC KB interface by scanning below barcode。



USB KB (Default)



USB MAC KB

You can set serial port interface by scanning below barcode。



Serial Port

You can set USB to serial port interface by scanning below barcode. (Need drive, please contact the sales)



Configuration Code Turn on



USB To Serial Port

2.2.6 Serial port setting

2.2.6.1 Baud rate setting



Baud Rate 4800



Baud Rate 9600 (Default)



Baud Rate 38400



Baud Rate 19200



Baud Rate 57600



Baud Rate 115200

2.2.6.1 Serial Data Bit, Stop Bit, Check Bit Configuration



7 data bits, 1 stop bits, no check bit



Configuration Code Turn on



7 data bits, 1 stop bits, even check bit



7 data bits, 1 stop bits, odd check bit



7 data bits, 2 stop bits, no check bit



7 data bits, 2 stop bits, even check bit



7 data bits, 2 stop bits, odd check bit



8 data bits, 1 stop bits, no check bit

(Default)



8 data bits, 1 stop bits, even check bit



8 data bits, 1 stop bits, odd check bit



8 data bits, 2 stop bits, no check bit



Configuration Code Turn on



8 data bits, 2 stop bits, odd check bit



8 data bits, 2 stop bits, even check bit

2.2.7 Scanning Mode



Manual Scanning Model(Default)



Enable Automatic Recognition Mode

2.2.8 Center Mode

When enable center mode, the scanner only read the barcode at the center of the scanning light.

Default to disable



Disable Center Mode (Default)



Enable Enter Mode

2.2.9 Character Escape



Enable Character Escape



Disable Character Escape (Default)

2.2.10 GS Control character substitution(Enable character escape first)





Configuration Code Turn on

Not replaced

The output character "Ç" must Enable virtual keyboard first



Replace With Ç



Replace With |



Replace With ^]



Replace With]



Replace With <GS>

2.2.11 Prefix



No Prefix



Prefix As STX

2.2.12 Suffix



No Suffix



Configuration Code Turn on



Add Enter



Add Tab



Add Enter+Tab



Add ETX

2.2.13 Inverse code option

(Only 1D/DataMatrix/Aztec)



Only Decode Normal Code (Default)



Only Decode Inverse Code



Decode Both Normal Code And Inverse Code

2.2.14 Virtual Keyboard



Disable Virtual Keyboard (Default)



Enable Virtual Keyboard



Configuration Code Turn on

2.2.15 Operation system choice under virtual keyboard



WINDOWS (Default)



MAC OS



LINUX

2.3 Beeper and LED notifications

2.3.1 Beeper Volume



Volume Low



Volume High (Default)

2.3.2 Beeper-Startup



Disable



Enable (Default)

2.3.3 Beeper-Good Read



Enable Beep After Good Read



Configuration Code Turn on



Disable Beep After Good Read (Default)

2.3.4 Beeper Tone-Good Read



Low Tone



Medium Tone (Default)



High Tone

2.3.5 Beeper Duration-Good Read



Long Duration (Default)



Short Duration

2.3.6 Beeper-Error

You will hear 4 continue alarm sounds when data upload failure, one single alarm sound means scan indistinguishableness barcode.



Alarm Sound Low Pitch (Default)



Configuration Code Turn on



Alarm Sound Middle Pitch



Alarm Sound High Pitch

2.3.7 LED



Good-Read LED Off



Good-Read LED On (Default)

2.4 Same Barcode Scanning Interval setting

By default, the interval time between first scanning and second scanning for same barcode is 750ms. To avoid being repeatedly with a barcode, you can set the scan interval.



300ms



500ms



750ms (Default)



1s



Configuration Code Turn on



2s

2.5 USB keyboard update speed setting

There barcode is used to set the update speed when scanner is in USB keyboard pattern. If the performance of your PC is lower, we suggest you choose slow update speed to make sure the scanner update the right data.



Slow Update Speed (Default)



Middle Update Speed



Fast Update Speed

2.6 Enter and Line Feed Character Output (USB keyboard)



Only 0A(LF) Line Feed



Only 0D(CR)Line Feed (Default)



Both 0A(LR) And 0D(CR) Line Feed

2.7 USB Keyboard Text-Transform





Configuration Code Turn on

Normal Output (Default)



Case Reversal



All Caps



Lower Case

2.8 Keyboard layout setting



English (United States)



French (France)



Italian (Italy)



Italian 142 (Italy)



German (Germany)



Spanish (Spain)



Configuration Code Turn on



Spanish (Latin America)



Greek (MS)



Finnish



Japanese



Russian (MS)



Russian (typewriter)



Arabic (101)



Irish



Polish (214)



Configuration Code Turn on



Polish (Programmers)



Dutch (Netherlands)



Czech (QWERTZ)



Portuguese (Portugal)



Portuguese (Brazil)



Swedish (Sweden)



Turkish Q



Turkish F



Greek (MS)



French (Belgium)



Configuration Code Turn on

2.9 Symbologies

2.9.1 Enable/disable all symbologies

Enable all barcode might slow down scanner decode speed. We suggest enable the barcode you need based on your scene. Enable all barcode is default



Enable All Symbologies



Disable All Symbologies

2.9.2 Codabar



Enable Codabar



Disable Codabar

2.9.3 Codabar start/ending character setting



Don't Send Codabar Start/Ending Character (Default)



Send Codabar Start/Ending Character

2.9.4 Codabar Limitation Of Length



Codabar Min Length (0~50 bits)



Configuration Code Turn on



Codabar Max (0~50 bits)

2.9.5 Code 39



Enable Code 39



Disable Code 39

2.9.6 Code 39 Check Bit



Disable Code 39 Check (Default)



Enable Code 39 Check Don't Send Check Bit



Enable Code 39 Check Send Check Bit

2.9.7 Code 39 Full ASCII



Enable Full ASCII



Disable Full ASCII (Default)

2.9.8 Code 39 Limitation Of Length



Configuration Code Turn on



Code 39 Min Length (0~50 Bits)



Code 39 Max Length (0~50 Bits)

2.9.9 Code 32 (Code 39 Needs To Be Enabled)



Enable Code 32



Disable Code 32

2.9.10 Interleaved 2 of 5 (ITF5)



Enable ITF25



Disable ITF25

2.9.11 Interleaved 2 of 5 (ITF5) Check Bit



Disable ITF25 Check (Default)



Enable ITF25 Check Don't Send Check Bit





Configuration Code Turn on

Enable ITF25 Check Send Check Bit

2.9.12 Interleaved 2 of 5 (ITF5) Length Setting



ITF25 No Fixed Length (4-24) (Default)



ITF25 Fixed Length of 6 Digitals



ITF25 Fixed Length of 8 Digitals



ITF25 Fixed Length of 10 Digitals



ITF25 Fixed Length of 12 Digitals



ITF25 Fixed Length of 14 Digitals



ITF25 Fixed Length of 16 Digitals



ITF25 Fixed Length of 18 Digitals





Configuration Code Turn on

ITF25 Fixed Length of 20 Digits



ITF25 Fixed Length of 22 Digits



ITF25 Fixed Length of 24 Digits

2.9.13 Interleaved 2 of 5 Limitation of length



Interleaved 2 of 5 Min Length (0~50 Bits)



Interleaved 2 of 5 Max Length (0~50 Bits)

2.9.14 Industrial 2 of 5 (4-24 Digits)



Enable Industrial 2 of 5



Disable Industrial 2 of 5

2.9.15 Industrial 2 of 5 Limitation of Length



Industrial 2 of 5 Min Length (0~50 Bits)



Industrial 2 of 5 Max Length (0~50 Bits)

2.9.16 Matrix 2 of 5 (4-24)



Configuration Code Turn on



Enable Matrix 2 of 5



Disable Matrix 2 of 5

2.9.17 Matrix 2 of 5 Limitation of Length



Matrix 2 of 5 Min Length (0~50 Bits)



Matrix 2 of 5 Max Length (0~50 Bits)

2.9.18 Code 93



Enable Code 93



Disable Code 93

2.9.19 Code 93 Limitation of Length



Code 93 Min Length (0~50 Bits)



Code 93 Max Length (0~50 Bits)

2.9.20 Code 11



Configuration Code Turn on



Enable Code 11



Disable Code 11 (Default)

2.9.21 Code 11 Check Bit Output



Enable Code 11 Check Bit Output



Disable Code 11 Check Bit Output (Default)

2.9.22 Code 11 Check Bit Option



Disable Code 11 (Default)



Code 11 One Check Bit



Code 11 Two Check Bits

2.9.23 Code 11 Limitation of Length



Code 11 Min Length (0~50 Bits)



Configuration Code Turn on



Code 11 Max Length (0~50 Bits)

2.9.24 Code 128



Enable Code 128



Disable Code 128

2.9.25 Code 128 Limitation Of Length



Code 128 Min Length (0~50 Bits)



Code 128 Max Length (0~50 Bits)

2.9.26 ISBT-128



Disable ISBT 128



Enable ISBT 128

2.9.27 GS1-128



Enable GS1-128



Configuration Code Turn on



Disable GS1-128

2.9.28 UPC-A



Enable UPC-A



Disable UPC-A

2.9.29 UPC-A Check Bit



Send UPC-A Check Bit (Default)



Don't Send UPC-A Check Bit

2.9.30 UPC-A to EAN-13



Enable UPC-A to EAN-13



Disable UPC-A To EAN-13 (Default)

2.9.31 UPC-E



Enable UPC-E



Configuration Code Turn on



Disable UPC-E

2.9.32 UPC-E Check Bit



Send UPC-E Check Bit (Default)



Don't Send UPC-E Check Bit

2.9.33 UPC-E To UPC-A



Enable UPC-E To UPC-A



Disable UPC-E To UPC-A (Default)

2.9.34 EAN/JAN-8

 


Enable EAN/JAN-8



Disable EAN/JAN-8

2.9.35 EAN-8 Converted to EAN-13



Enable EAN-8 Converted to EAN-13



Configuration Code Turn on



Disable EAN-8 Converted to EAN-13

2.9.36 EAN/JAN-13



Enable EAN/JAN-13



Disable EAN/JAN-13

2.9.37 UPC/EAN/JAN Extra-Code



Ignore UPC/EAN/JAN Extra-Code (Default)



Decode UPC/EAN/JAN Extra-Cod



Adapt UPC/EAN/JAN Extra-Code

2.9.38 EAN13 To ISBN



Enable EAN13 To ISBN



Disable EAN13 To ISBN (Default)



Configuration Code Turn on

2.9.39 EAN13 To ISSN



Enable EAN13 To ISSN



Disable EAN13 To ISSN (Default)

2.9.40 GS1 DataBar (RSS14)



Enable GS1 DataBar



Disable GS1 DataBar

2.9.41 GS1 DataBar Limited



Enable GS1 DataBar Limited



Disable GS1 DataBar Limited

2.9.42 GS1 DataBar Expanded



Enable GS1 DataBar Expanded



Disable GS1 DataBar Expanded



Configuration Code Turn on

2.9.43 PDF417



Enable PDF417



Disable PDF417

2.9.44 Micro PDF417



Enable Micro PDF417



Disable Micro PDF417

2.9.45 QR Code



Enable QR



Disable QR

2.9.46 Micro QR



Enable Micro QR



Disable Micro QR



Configuration Code Turn on

2.9.47 Data Matrix



Enable Data Matrix



Disable Data Matrix

2.9.48 Aztec Code



Enable Aztec



Disable Aztec

2.10 User-Defined Prefix Setting

Output



Enable User-Defined Prefix Output



Disable User-Defined Prefix Output (Default)

Edit



Clear All User-Defined Prefix



User-Defined Prefix

(After scan this code you can set the prefix you want based on the data and barcode in table ID)



Configuration Code Turn on

2.11 User-Defined Suffix Setting

Output



Enable User-Defined Suffix Output



Disable User-Defined Suffix Output (Default)

Edit



Clear All User-Defined Suffix



User-Defined Suffix

(After scan this code you can set the prefix you want based on the data and barcode in table ID)

2.12 Code ID

Output



Disable CODE ID (Default)



Enable CODE ID Before Barcode

 


Enable CODE ID After Barcode



Configuration Code Turn on

Edit



User-Defined CODE ID

(After scan this code you can set the prefix you want based on the data and barcode in table ID)



Clear All User-Defined CODE ID

2.13 AIM ID Setting



Disable AIM ID (Default)



Enable AIM ID Before Barcode



Enable AIM ID After Barcode



Configuration Code Turn on

APPENDIX

Appendix 1 Data and editing code



1



0



2



3



4



5



6



7



8



9



Configuration Code Turn on



B



A



D



C



F



 
E



Save



Cancel All Data Read Before



Cancel Current Setting



Cancel The Data Read Last Time



Appendix 2 Code type ID table

Code type	HEX	CODE ID(default)
All codes	99	
Codabar	61	a
Code128	6A	j
Code32	3C	<
Code93	69	i
Code39	62	b
Code11	68	h
EAN		
EAN-13	64	d
EAN-8	44	D
GS1		
GS1 DataBar	79	y
GS1 DataBar Limited	7B	{
GS1 DataBar Expanded	7D	}
GS1-128 (EAN-128)	49	I
2 of 5		
Interleaved 2 of 5	65	e
Matrix 2 of 5	6D	m
Industry 2 of 5	66	f
UPC		
UPC-A	63	c
UPC-E	45	E
Aztec Code	7A	z
DataMatrix	77	w
PDF417	72	r
Micro PDF417	52	R
QR Code	73	s
Micro QR Code	73	s



Appendix 3 Eyeball character ASCII table

decim	hexadecim	character	decim	hexadecim	characte	decim	hexadeci	charact
32	20	<SPACE	64	40	@	96	60	`
33	21	!	65	41	A	97	61	a
34	22	“	66	42	B	98	62	b
35	23	#	67	43	C	99	63	c
36	24	\$	68	44	D	100	64	d
37	25	%	69	45	E	101	65	e
38	26	&	70	46	F	102	66	f
39	27	‘	71	47	G	103	67	g
40	28	(	72	48	H	104	68	h
41	29	)	73	49	I	105	69	i
42	2A	*	74	4A	J	106	6A	j
43	2B	+	75	4B	K	107	6B	k
44	2C	,	76	4C	L	108	6C	l
45	2D	-	77	4D	M	109	6D	m
46	2E	.	78	4E	N	110	6E	n
47	2F	/	79	4F	O	111	6F	o
48	30	0	80	50	P	112	70	p
49	31	1	81	51	Q	113	71	q
50	32	2	82	52	R	114	72	r
51	33	3	83	53	S	115	73	s
52	34	4	84	54	T	116	74	s
53	35	5	85	55	U	117	75	u
54	36	6	86	56	V	118	76	v
55	37	7	87	57	W	119	77	w
56	38	8	88	58	X	120	78	x
57	39	9	89	59	Y	121	79	y
58	3A	:	90	5A	Z	122	7A	z
59	3B	;	91	5B	[	123	7B	{
60	3C	<	92	5C	\	124	7C	
61	3D	=	93	5D	]	125	7D	}
62	3E	>	94	5E	^	126	7E	~
63	3F	?	95	5F				



Appendix 4 Operational character (USB keyboard)

<i>decimal</i>	<i>hexadecimal</i>	<i>Corresponding key value (disable CODE ID)</i>	<i>Corresponding key value (enable CODE ID)</i>
0	00	retain	Ctrl+@
1	01	Insert	Ctrl+A
2	02	Home	Ctrl+B
3	03	End	Ctrl+C
4	04	Delete	Ctrl+D
5	05	PageUp	Ctrl+E
6	06	PageDown	Ctrl+F
7	07	ESC	Ctrl+G
8	08	Backspace	Backspace
9	09	Tab	Tab
10	0A	Enter (The configuration of CRLF processing decide how it express)	Ctrl+J
11	0B	Caps Lock	Ctrl+K
12	0C	Print Screen	Ctrl+L
13	0D	Enter (The configuration of CRLF processing decide how it express)	Enter
14	0E	Scroll Lock	Ctrl+N
15	0F	Pause/Break	Ctrl+O
16	10	F11	Ctrl+P
17	11	Direction key ↑	Ctrl+Q
18	12	Direction key ↓	Ctrl+R
19	13	Direction key ←	Ctrl+S
20	14	Direction key →	Ctrl+T



Configuration Code Turn on

21	15	F12	Ctrl+U
22	16	F1	Ctrl+V
23	17	F2	Ctrl+W
24	18	F3	Ctrl+X
25	19	F4	Ctrl+Y
26	1A	F5	Ctrl+Z
27	1B	F6	ESC
28	1C	F7	Ctrl+\
29	1D	F8	Ctrl+]
30	1E	F9	Ctrl+^
31	1F	F10	Ctrl+_



Appendix 5 Operational character (serial port and USB-VCOM)

decimal	hexadecimal	character
0	00	NUL
1	01	SOH
2	02	STX
3	03	ETX
4	04	EOT
5	05	ENQ
6	06	ACK
7	07	BEL
8	08	BS
9	09	HT
10	0A	LF
11	0B	VT
12	0C	FF
13	0D	CR
14	0E	SO
15	0F	SI
16	10	DLE
17	11	DC1
18	12	DC2
19	13	DC3
20	14	DC4
21	15	NAK
22	16	SYN
23	17	ETB



Configuration Code Turn on

24	18	CAN
25	19	EM
26	1A	SUB
27	1B	ESC
28	1C	FS
29	1D	GS
30	1E	RS
31	1F	US



Configuration instruction and example

Example for user-defined prefix and suffix:

You can edit 10 characters as prefix or suffix. (In order to make sure the prefix and suffix can output normally, please enable user-defined prefix or suffix first)

Example 1.1: Add XYZ to all type of barcode as prefix. Look up appendix 2, you can find that the HEX value for all codes is “99”. Look up appendix 3, the HEX value for XYZ is “58,59,5A”. First scan “user-defined prefix” in 2.11 edit, then the scanner will have two sounds like “D...D...”, then scan 9, 9, 5, 8, 5, 9, 5, A, and save, the setting accomplished.

If you want to change the prefix or suffix you set before you save the setting, you can scan “cancel the data read last time” or “Cancel all data read before” to reset. If you want to give up setting scan “Cancel current setting”.

Example 1.2: Add Q to QR code as prefix.

Look up appendix 2, you can find that the HEX value for QR code is “73”. Look up appendix 3, the HEX value for Q is “51”. First scan “user-defined prefix” in 2.11 edit, then the scanner will have two sounds like “D...D...”, then scan 7, 3, 5, 1, and save, the setting accomplished.

Example 1.3: Cancel user-defined prefix in QR code

When you edit user-defined prefix and suffix, it will cancel the prefix and suffix you set if you scan “user-defined prefix” or “user-defined suffix” and add no character and save.

For example, cancel user-defined prefix in QR code, first scan “user-defined prefix”, then scan 7,3, and save. The prefix in QR code has been canceled.

Note: If there is a prefix for all type of barcode, after you done the operation above, the QR code will have the prefix you set for all type barcode.

If you need to cancel all prefix or suffix for all type of barcode, please scan “clear all user-defined prefix” and “clear all user-defined suffix”

USB update speed setting example

If the PC is weak properties, it is easy to have error of transmission and you need to set USB keyboard update speed to low speed, like 50ms (user-defined speed)

First, scan “User-defined update speed” then scan 5,0 in appendix 1 and save.

Guangzhou Yoko Electron Co.,Ltd

Address: No.4 Changrong Road,Huangpu District,Guangzhou,
Guangdong Province,China

TEL: 020-8206 5617

FAX: 020-82065420

<http://www.chinayoko.com/>

