# Service Manual

Direct Drive Automatic Turntable System

SL-1600MK2

(M), (MC)



- The model SL-1600MK2 (M) is available in U.S.A. only.
- The model SL-1600MK2 (MC) is available in Canada only.

#### TECHNICAL SPECIFICATIONS

(Specifications are subject to change without notice.) (Weighs and dimensions shown are approximate.)

General

Power supply:

120V, 50 or 60Hz

Power consumption: Dimensions:

18.5W 45.3 x 14.9 x 39.9 cm

 $(W \times H \times D)$ 

(17-27/32"x5-7/8"x15-45/64")

Weight:

10 kg (22 lb.)

Turntable section

Type:

Quartz direct drive Automatic turntable

Auto start Auto return Auto stop Repeat play

Drive method:

Direct drive

Motor: Turntable platter:

Brushless DC motor Aluminum diecast

Diameter 33.2 cm (13-5/64 inches)

Turntable speeds:

Weight 2 kg (4.4 lb.) 33-1/3 rpm and 45 rpm

Pitch control:

±6% range

Starting torque:

1.5 kg·cm (1.3 lb·in)

Build-up characteristics: 0.7 s. (90° rotation) to 33-1/3 rpm

Braking system:

Electronic brake

load torque:

0% within 1.0 kg·cm (0.87 lb·in)

Wow and flutter:

Speed change due to

0.01% WRMS (\*)

This rating refers to turntable assembly alone, excluding effects of record, cartridge or tonearm, but including

platter. Measured by obtaining signal from built-in frequency generator of motor assembly.

0.025% WRMS (JIS C5521)

Universal

±0.035% peak (IEC98A Weighted) -56 dB (IEC 98A Unweighted)

-78 dB (IEC 98A Weighted)

Tone arm section

Type:

Rumble:

Effective length:

Arm height adjustment

range:

Overhang:

Effective mass:

Tracking error angle:

 $0-6 \, \text{mm}$ 15 mm (19/32")

230 mm (9-1/16")

12 g (without cartridge) Within 2°32' at the outer groove

of 30 cm (12") record

Within 0°32' at the inner groove

Less than 7 mg (lateral, vertical)

of 30 cm (12") record

Friction: Stylus pressure

Offset angle:

adjustment range:

Applicable cartridge

weight range:

0 - 2.5 g

 $6 - 10 \, \mathrm{g}$ 

13.5–17.5 g (including headshell)

(with auxiliary weight):

9.5 - 13 g

(including headshell) 17 - 20.5q

(with shell weight):

3.5 - 6.5 g11–14 g (including headsell)

7.5 g

Headshell weight:

**Technics** 

Panasonic Company **Division of Matsushita Electric** Corporation of America One Panasonic Way, Secaucus, New Jersey 07094


Panasonic Hawaii, Inc. 320 Waiakamilo Road, Honolulu, Hawaii 96817

Matsushita Electric of Canada Ltd. 5770 Ambler Drive, Mississauga, Ontario L4W 2T3


## **■ CONTENTS**


LOCATION OF CONTROLS	REFERENCE VOLTAGE AND WAVEFORM
LOCATION OF CONTROLS	AT EACH IC
DISASSEMBLY PROCEDURE	TERMINAL GUIDE OF TRANSISTOR AND IC 26
ADJUSTMENTS (Electrical)	CONTROL CIRCUIT BOARD
ADJUSTMENTS (Tone arm)	DRIVE CIRCUIT BOARD
FEATURE	SCHEMATIC DIAGRAM (Control Circuit Board) 29 ~ 30
TECHNICAL GUIDE	TONE ARM DRIVE CIRCUIT BOARD
TROUBLE SHOOTING GUIDE	SCHEMATIC DIAGRAM (Tone Arm Drive Circuit Board) . 33 ~ 34
ADJUSTMENT FOR AUTOMATIC RETURN POSITION 15	EXPLODED VIEW (Main Base) 35 ~ 30
TIMING CHART OF TONE ARM DRIVE CONTROL 16	REPLACEMENT PARTS LIST (Main Base and
MN1400PA	Bottom Base Parts)
BLOCK DIAGRAM (Peiphery micro computer)18	EXPLODED VIEW (Bottom Base)
BLOCK DIAGRAM	EXPLODED VIEW (Tone Arm and Arm Base) 40 ~ 4
REPLACEMENT PARTS LIST (Electrical Parts)	REPLACEMENT PARTS LIST (Tone Arm and Arm
SCHEMATIC DIAGRAM (Drive Circuit Board) 23 ~ 24	Base Parts)

## **LOCATION OF CONTROLS**

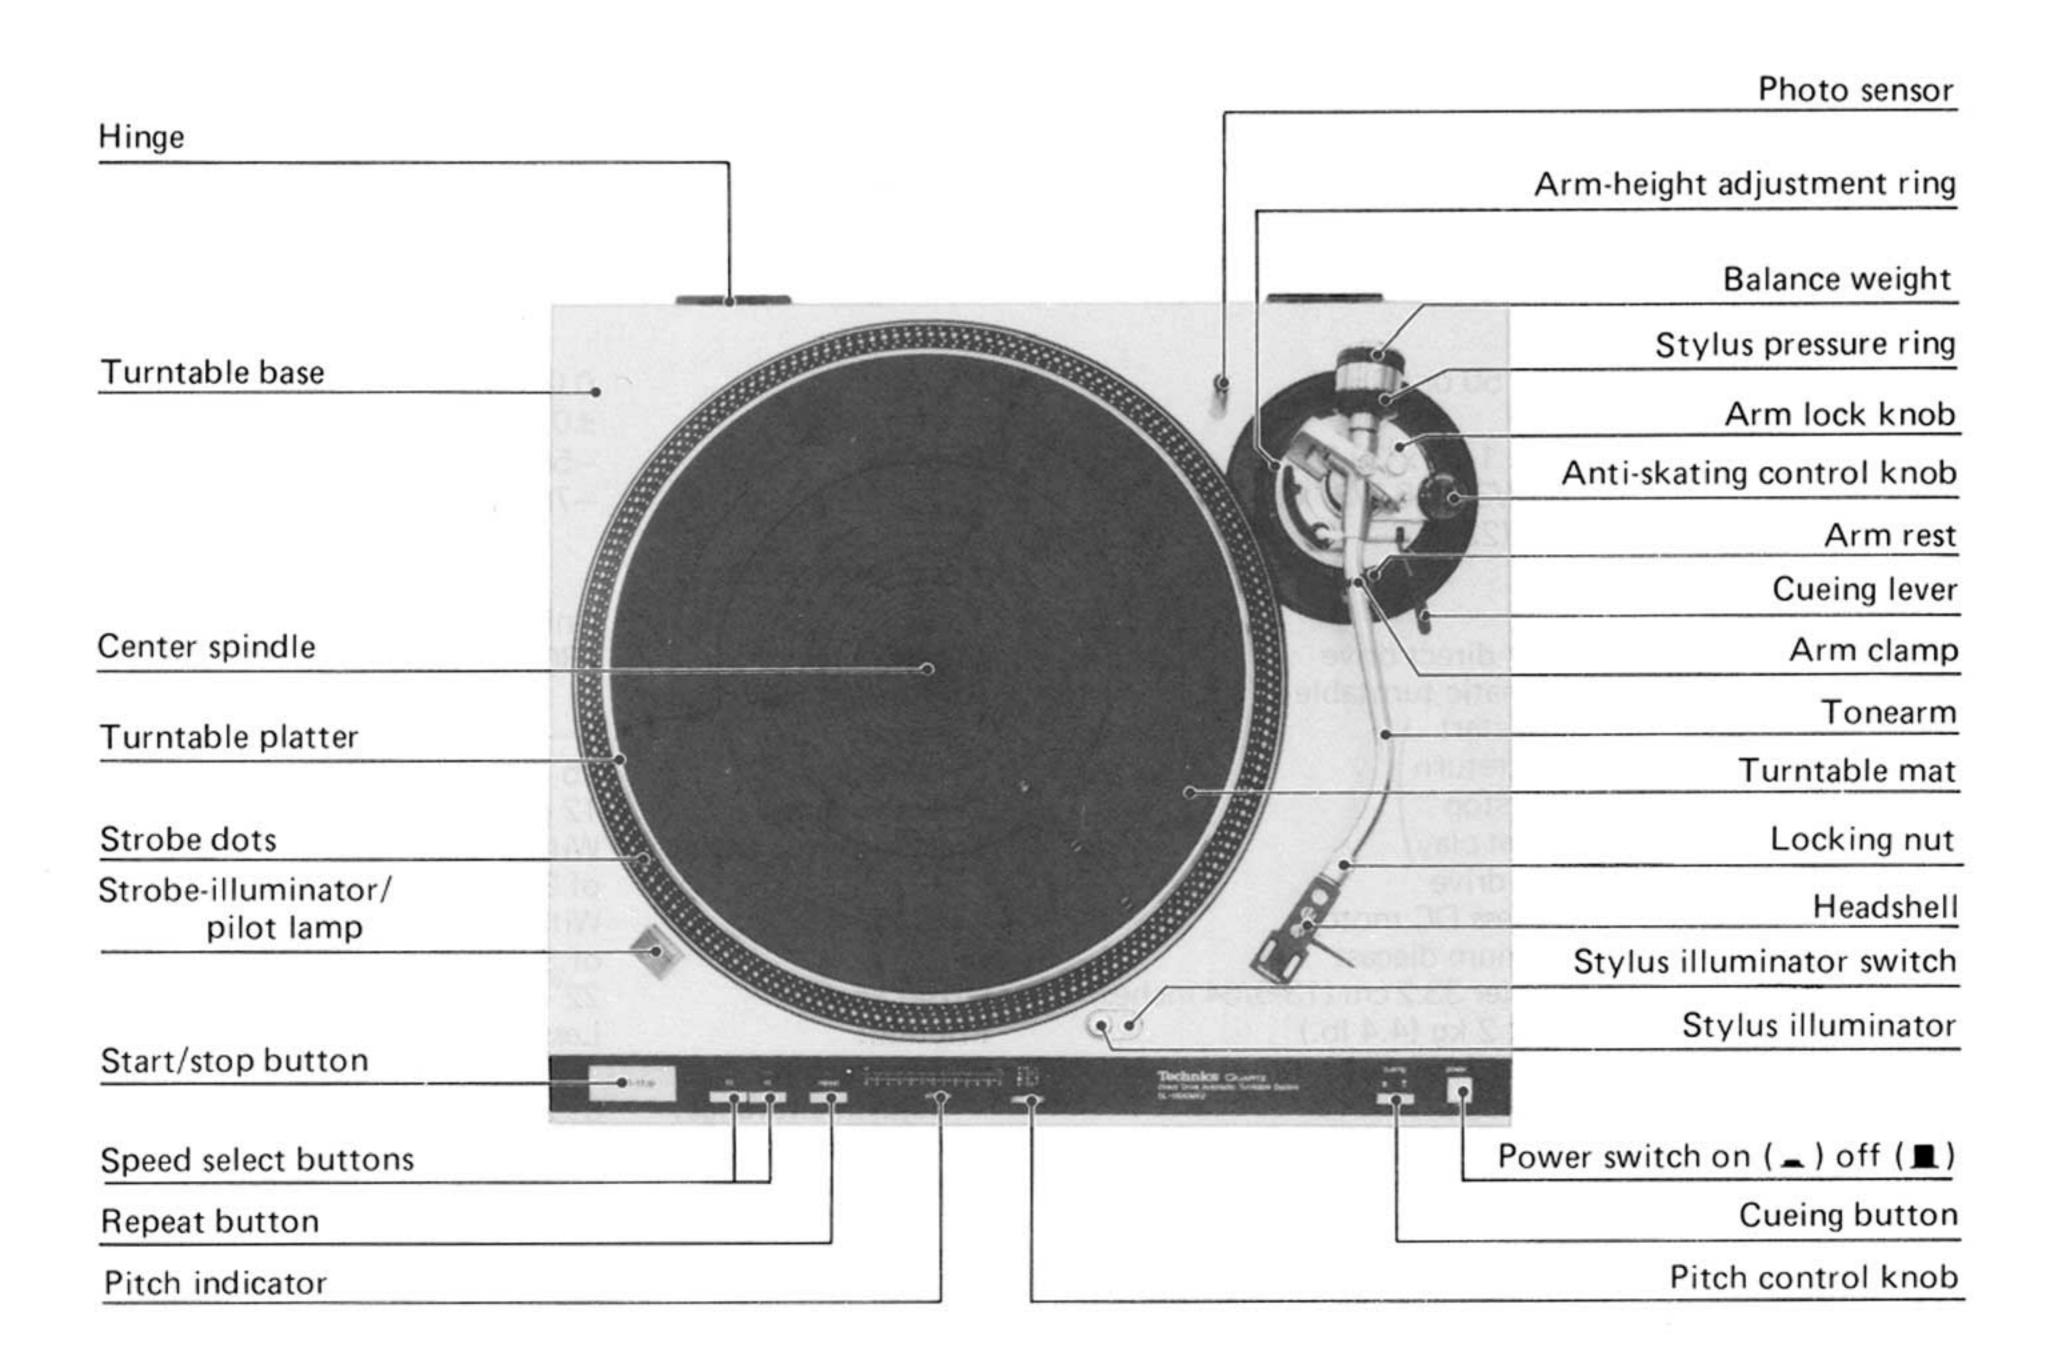

## ■ LOCATION OF CONTROLS

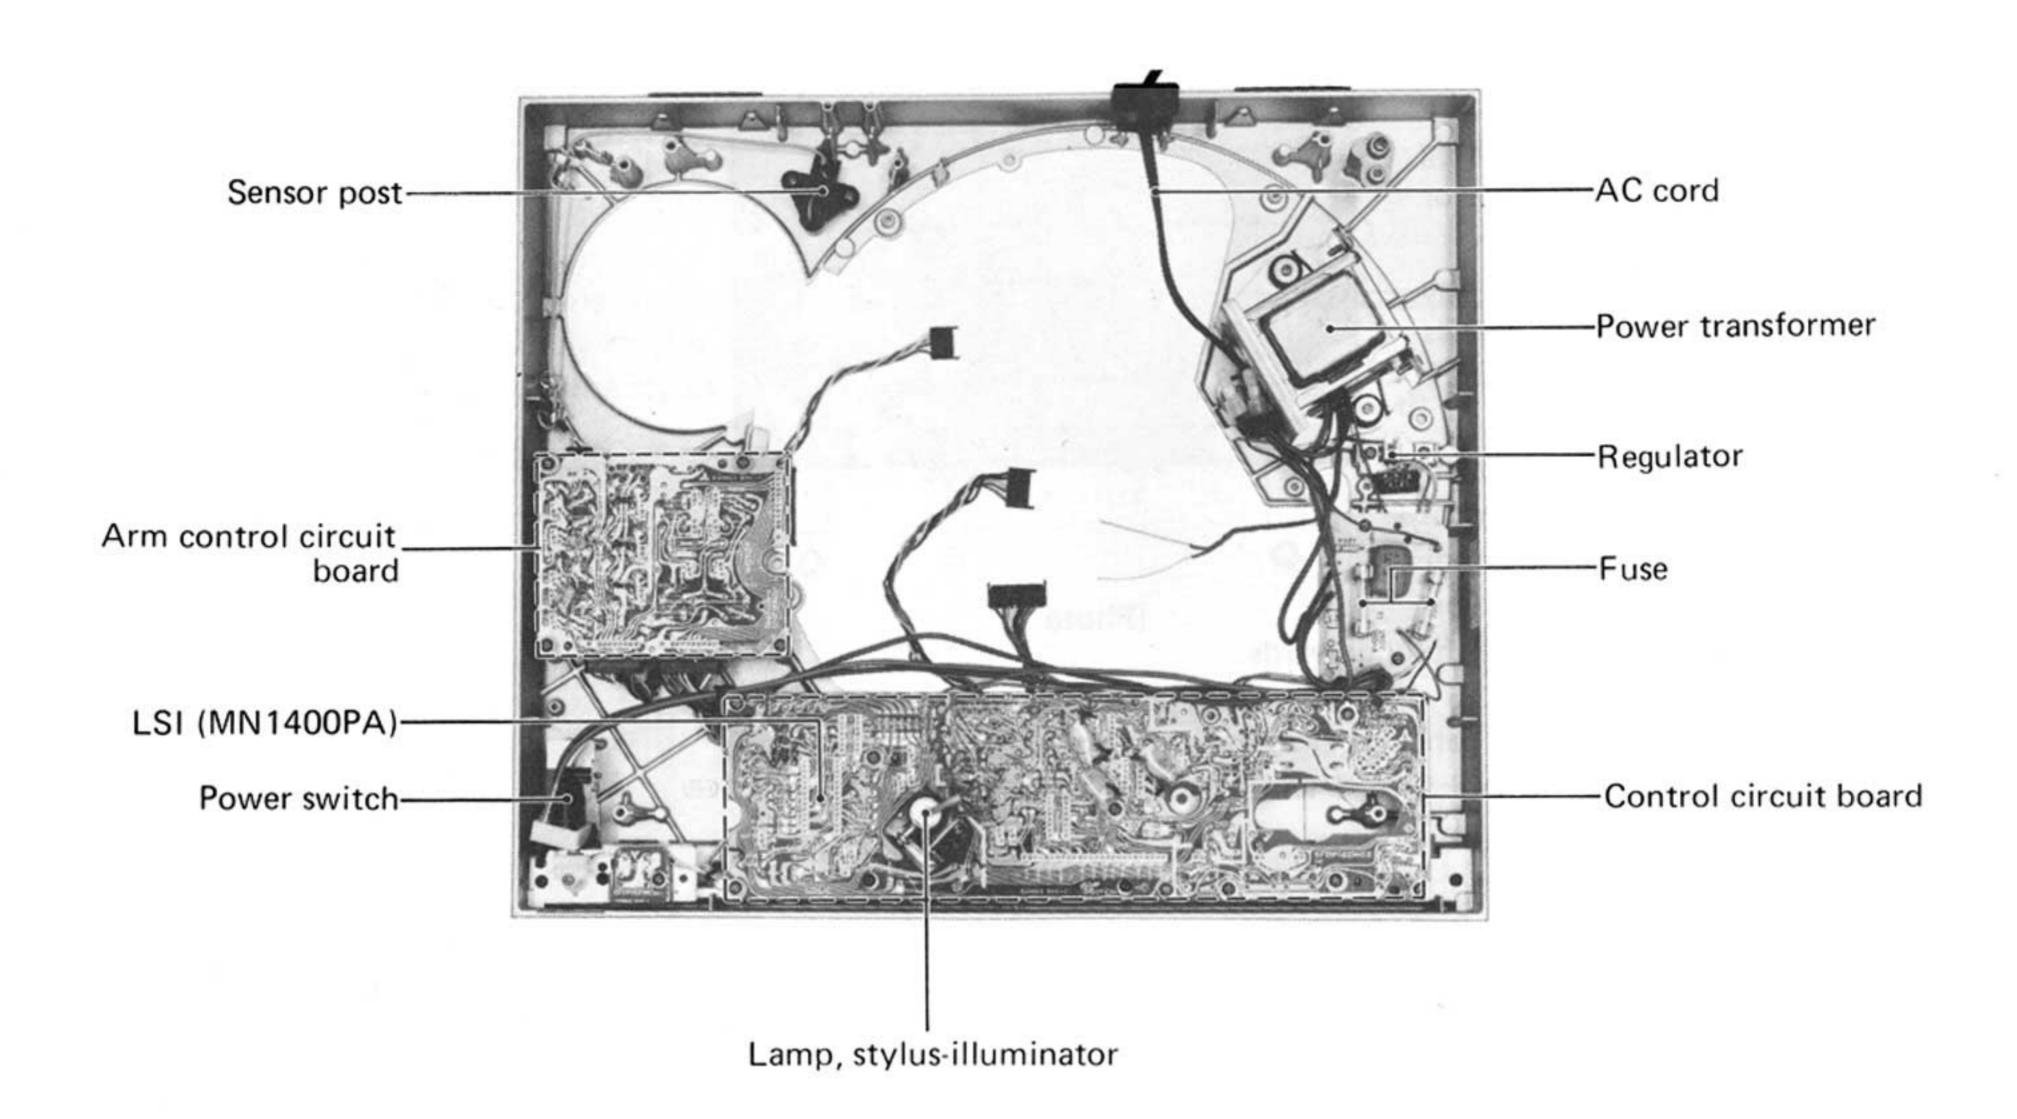


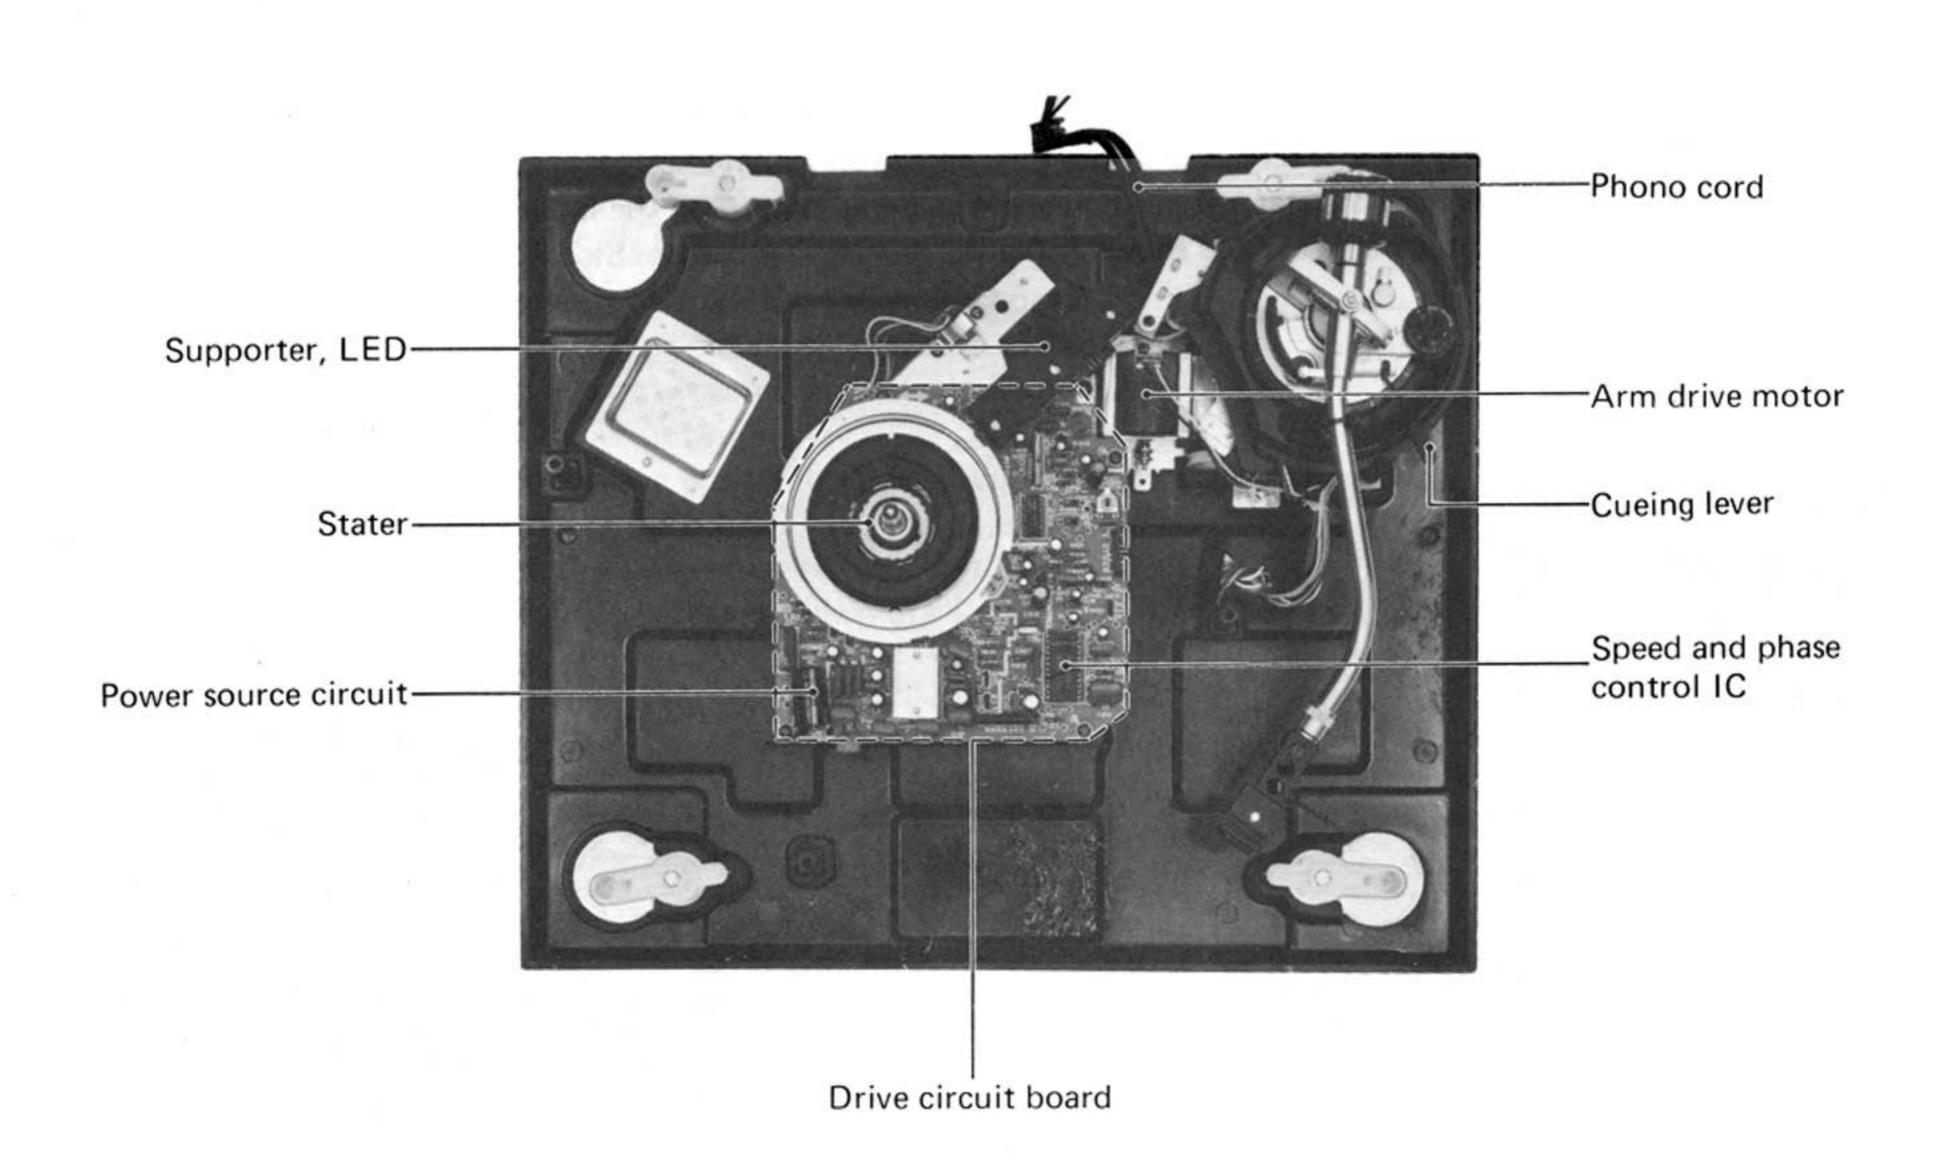


## DISASSEMBLY PROCEDURE

#### How to remove main base ass'y and bottom base ass'y


- 1. Clamp tone arm to the arm rest.
- 2. Remove head shell and turntable platter.
- Close dust cover.
- 4. Turn unit upside down taking special care not to damage or scrach the dust cover.
- 5. Remove 6 screws (a) of the audio insulator and 2 screws of the phono cord clamper as shown in Photo 1.
- 6. Holding the player firmly with both hands, to prevent separation of upper section (bottom

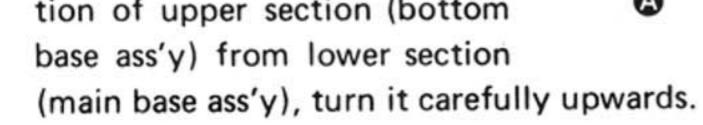


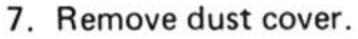


- 8. Remove 5 screws of the panel cover as shown in Photo 2.
- 9. Remote 4 connectors ( and 2 read wires ( from power transformer as shown in Photo 3.
- 10. To move the main base ass'y from the bottom base ass'y, turn cueing lever upward and move tone arm towards center of spindle.

The main base ass'y can be lifted up essily.

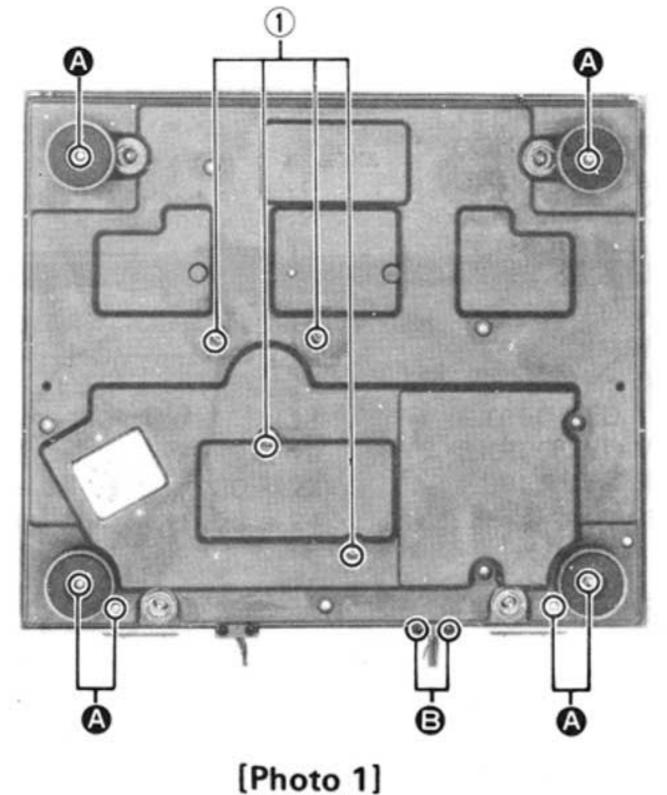

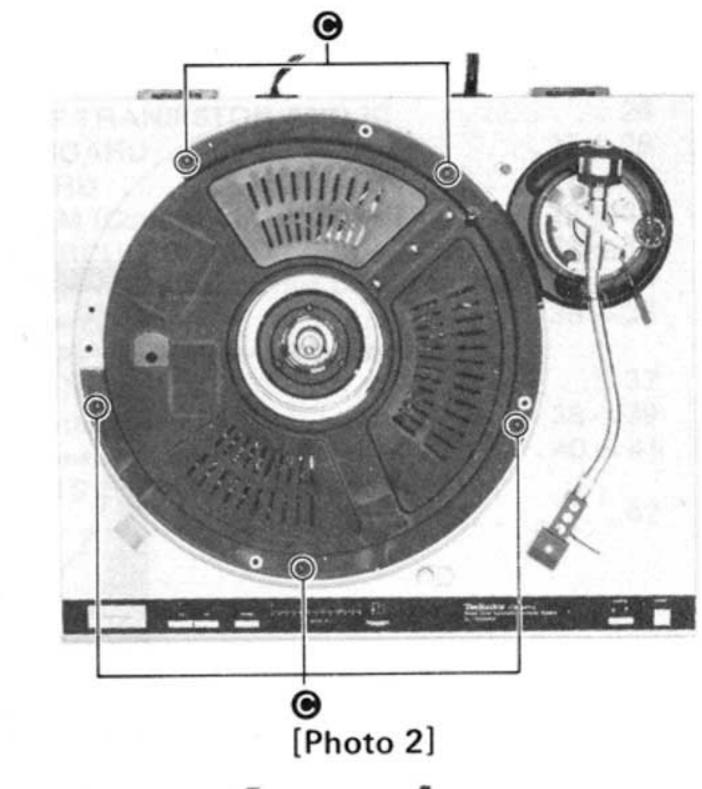


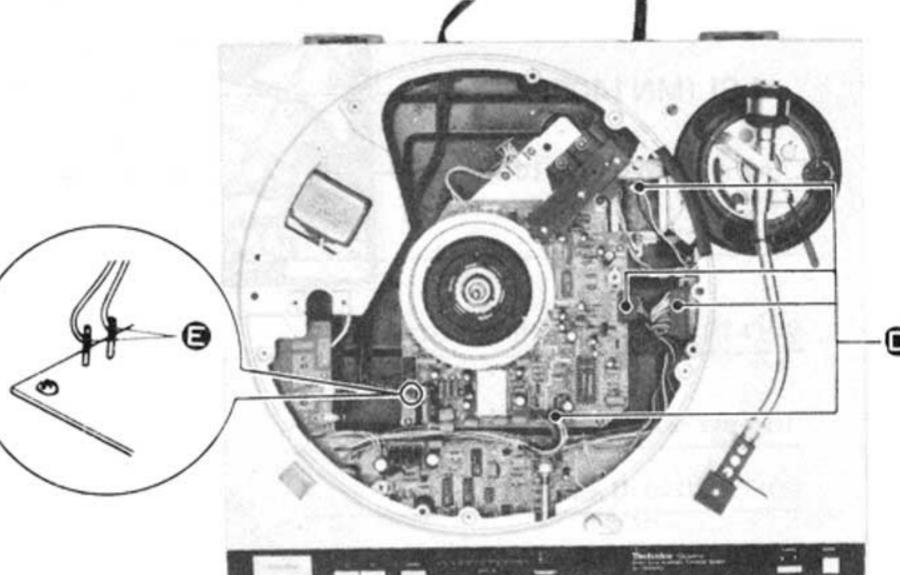


[Photo 3]

#### How to remove drive circuit p.c.b. and stater frame coil

- 1. Remove main base ass'y and bottom base ass'y.
- 2. Remove 3 screws 🖨 of the drive circuit p.c.b. and 3 screws 😉 of the stater frame cover as shown in Photo 4.
- 3. Remove 2 screws (a) of transistor and 2 screws (b) of the LED case as shown in Photo 4.
- 4. Disconnect 18 soldered parts of the stater frame coil and 4 soldered parts of the F.G detector coil as shown in Fig. 2.
- 5. Remove 3 screws of the stater frame ass'y as shown if Fig. 1.

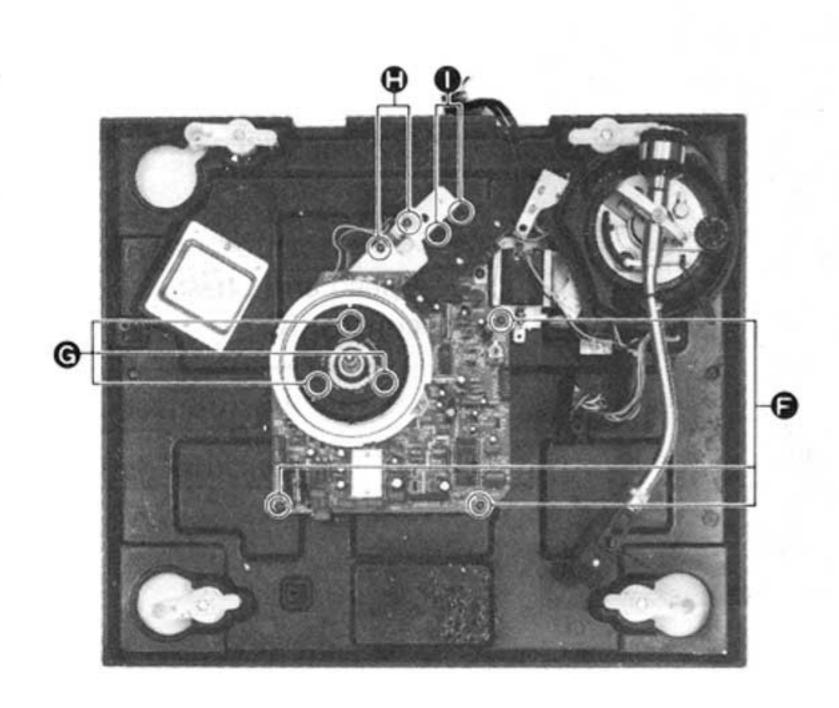


[Photo 4]

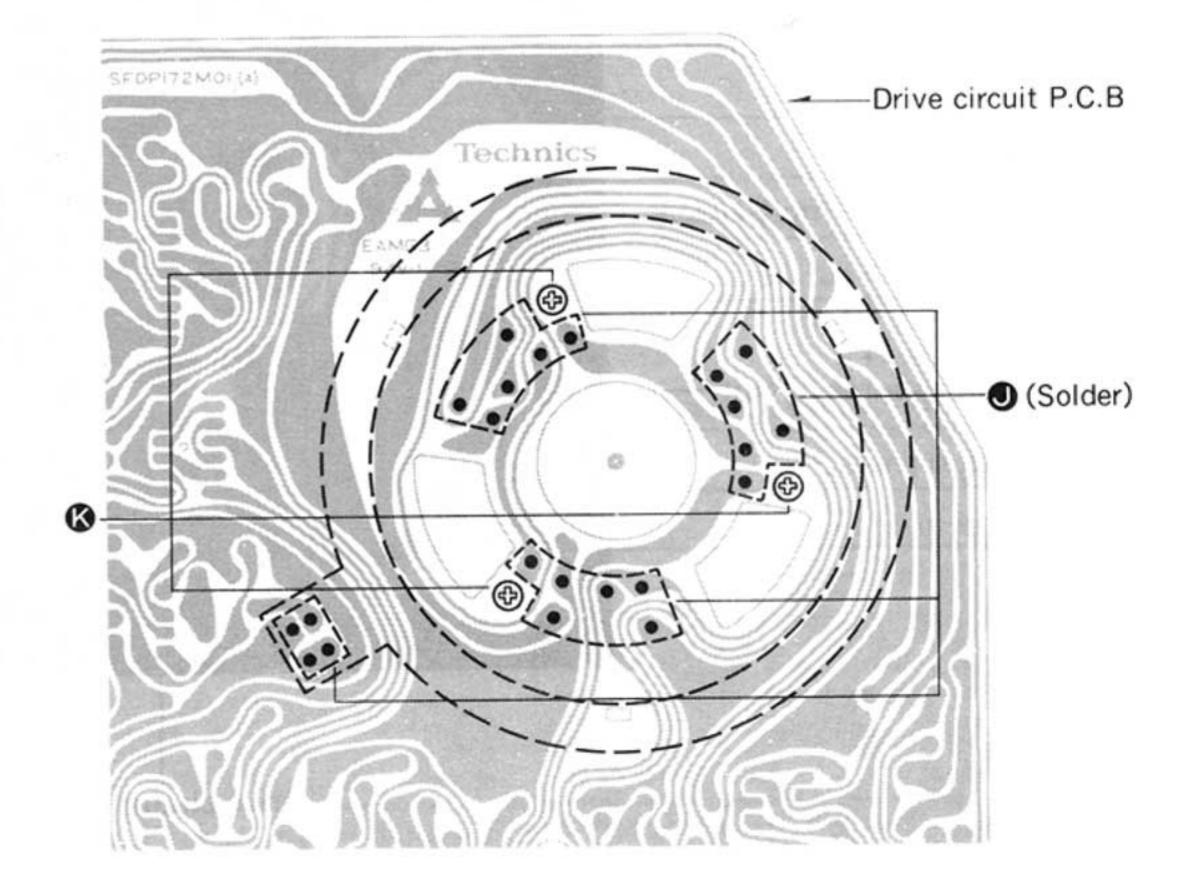


[Fig. 1]


# How to remove control circuit p.c.b. and stylus-illuminator lamp

- Remove main base ass'y and bottom base ass'y.
- 2. Remove 11 screws of the control circuit p.c.b. as shown in Fig. 2.
- Remove 2 screws of the power switch bracket as shown in Fig. 2.
- Set up the control circuit board as shown in Fig. 3. Then remove the 2 screws of the stylus illuminator mounting plate. (Fig. 3).
- To replace the stylus illuminating lamp, remove the setscrew of the lamp case (Fig. 4) and detach the lamp case, then the stylus illuminating lamp can be replaced.

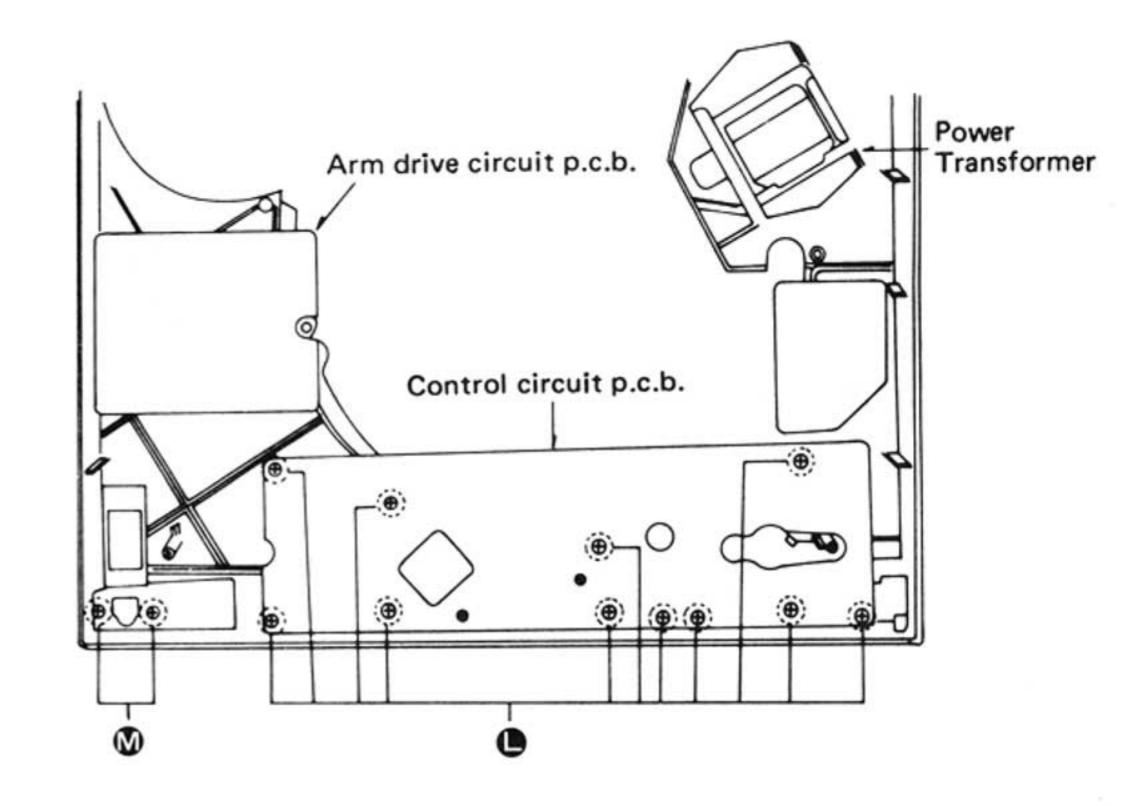


[Fig. 2]

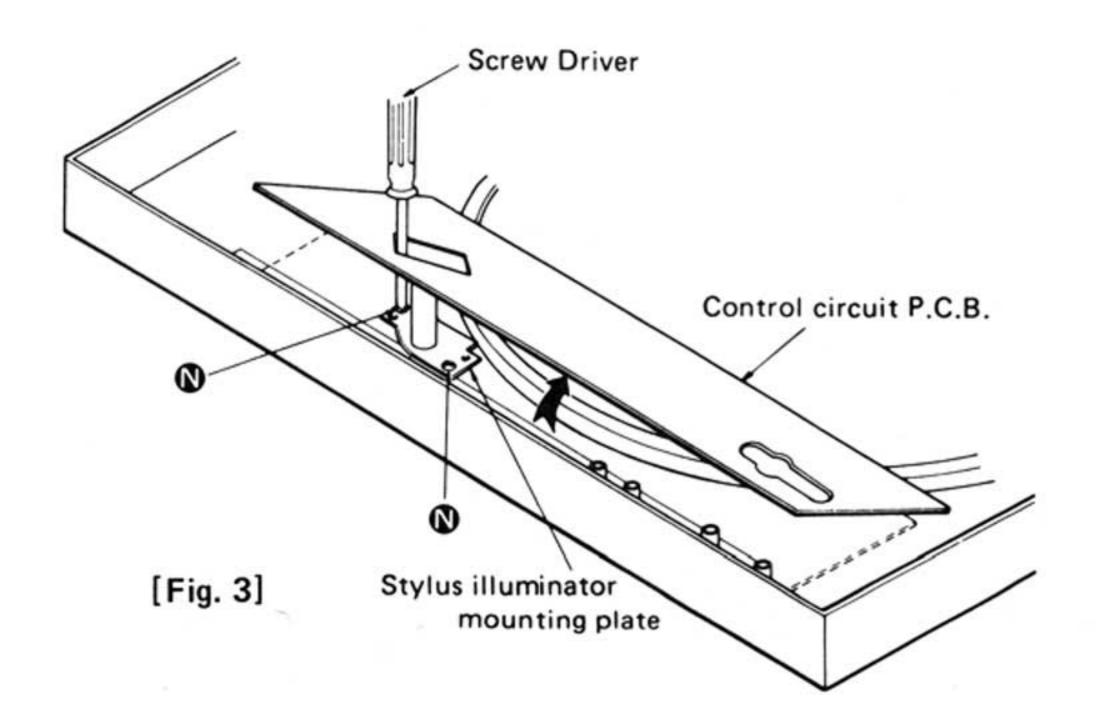

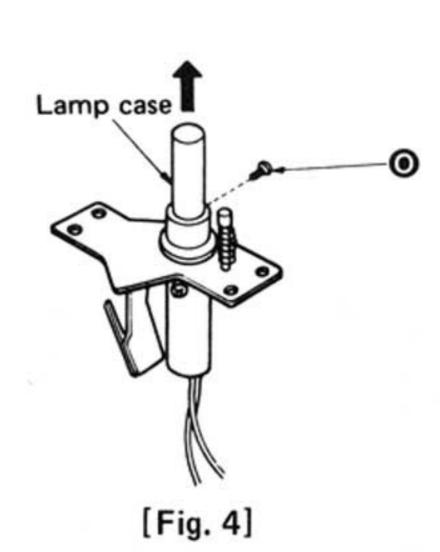



#### How to remove tone arm

- 1. Remove 4 screws P of the tone arm base ass'y as shown in Photo 5.
- 2. Remove 1 screw @ of the shiuld plate as shown in Photo 6.
- 3. Disconnect soldered of the phono cord reads.
- 4. Remove 2 screws @ of the arm drive motor plate as shown in Photo 6.
- 5. Remove 2 screws 6 of the tone arm fixing plate ass'y as shown in Photo 7.
- 6. Remove 3 screws To of the movable base assembly as shown in Photo 8.
- 7. Remove 2 screws **O** of the tone arm as shown in Photo 9.
- 8. To remove the pick-up base plate, remove the arm lift height adjusting screw and the arm lift.
- 9. Remove 1 screws **and** 1 circlip **o** of the position fix plate as shown in Photo 9.
- 10. Remove 2 screws of the pick-up base plate as shown in Photo 9.
- 11. Remove 2 screws of the cueing lever switch as shown in Photo 9.

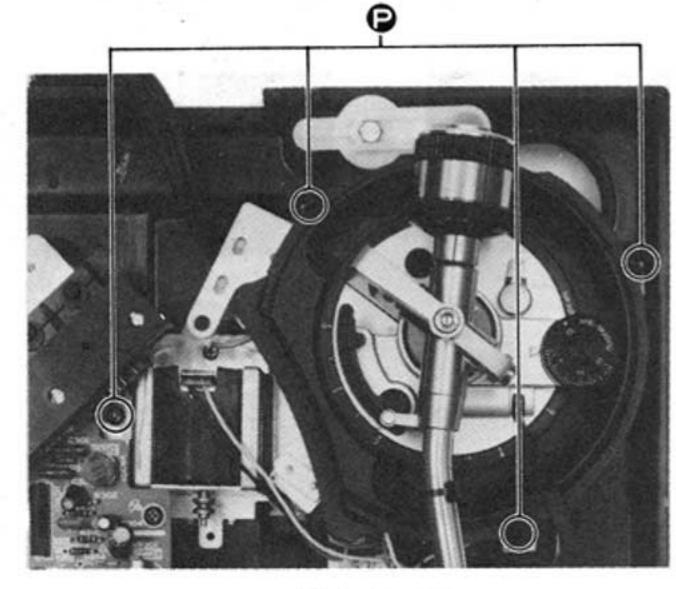


[Photo 5]

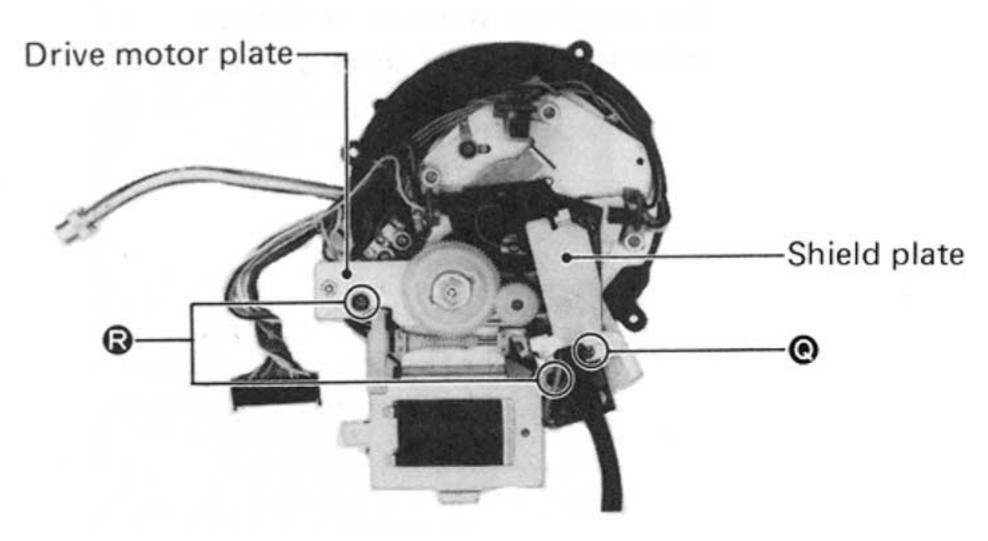

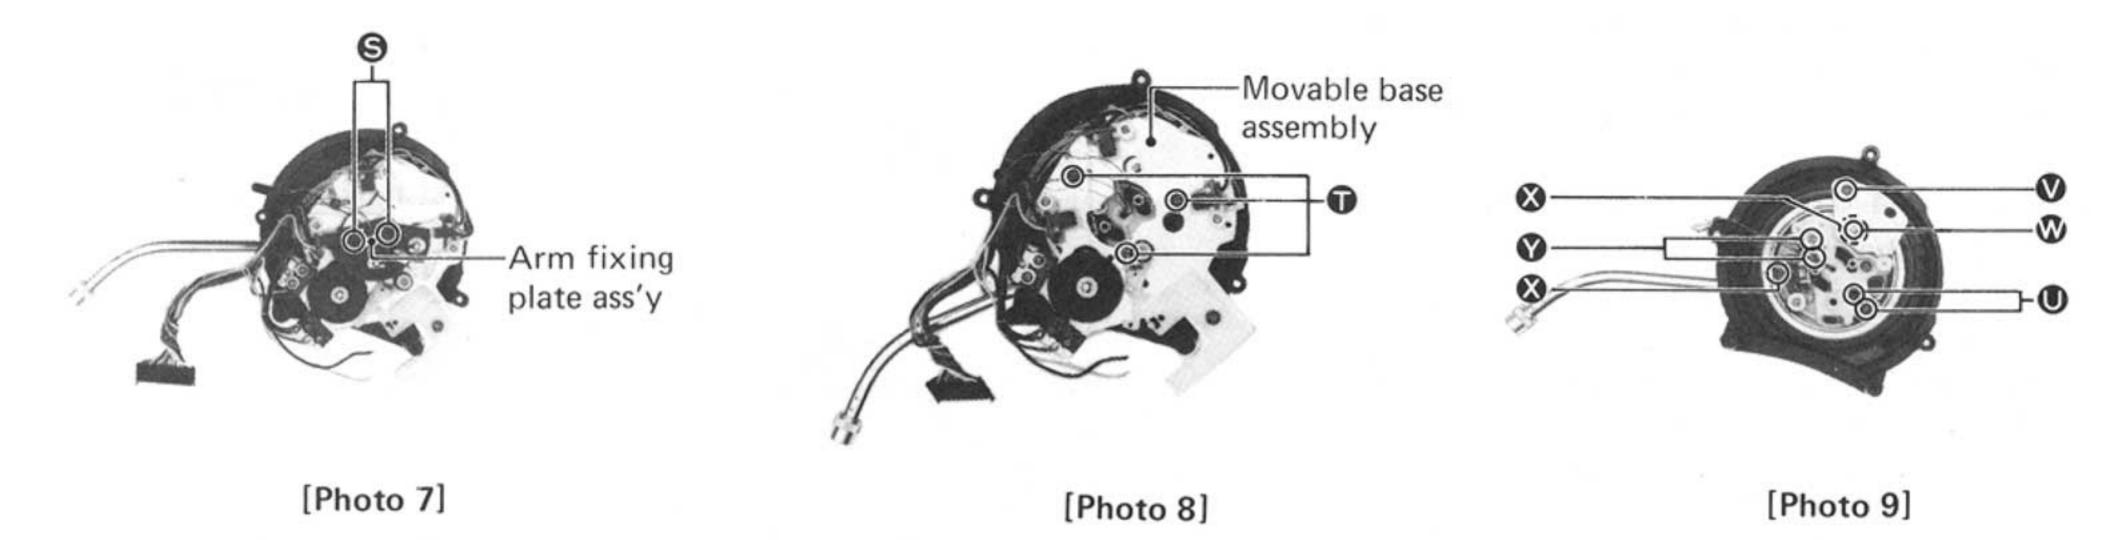


#### **Arm Base Assembling Procedure**

- Attach the control ring to the arm base seat.
   (The control ring should be rotated counterclockwise.)
- 2. Completely tighten the control ring, and then loosen it  $1.5 \sim 2.5$  turns to set the scale to "3". (See photo 10.)
- 3. Hold the arm base and set the red line mark on the arm base to the scale near "2", then turn the arm base clockwise. (See photo 11.)
  - Note) Take care not to allow deflection of the predetermined positions of the control ring and arm base seat.

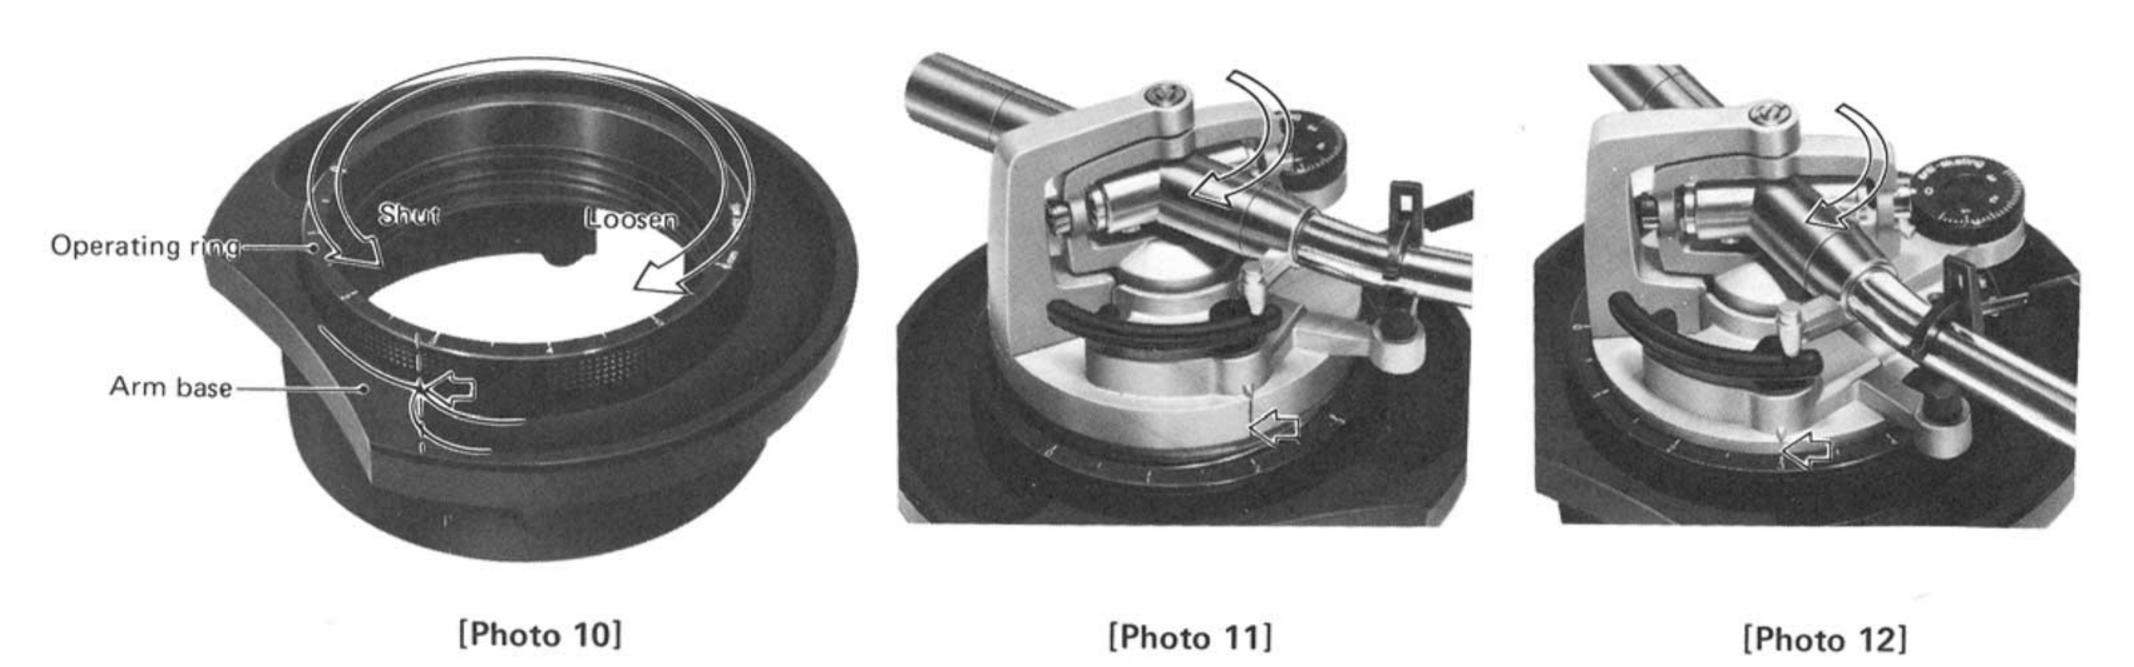

- Adjust the arm base so that the red line mark on the arm base is set to the scale "3" of the control ring. (See photo 12). Next, secure the position fix plate with two setscrews. (See photo 9.)
- 5. Rotate the control ring and make sure that the arm base shifts within the range of 0 ~ 6mm.
  (See photo 13 A, B.) If it does not shift within the specified range, the arm base position is deflected. In that case, disassemble the parts and check as specified in step 3.

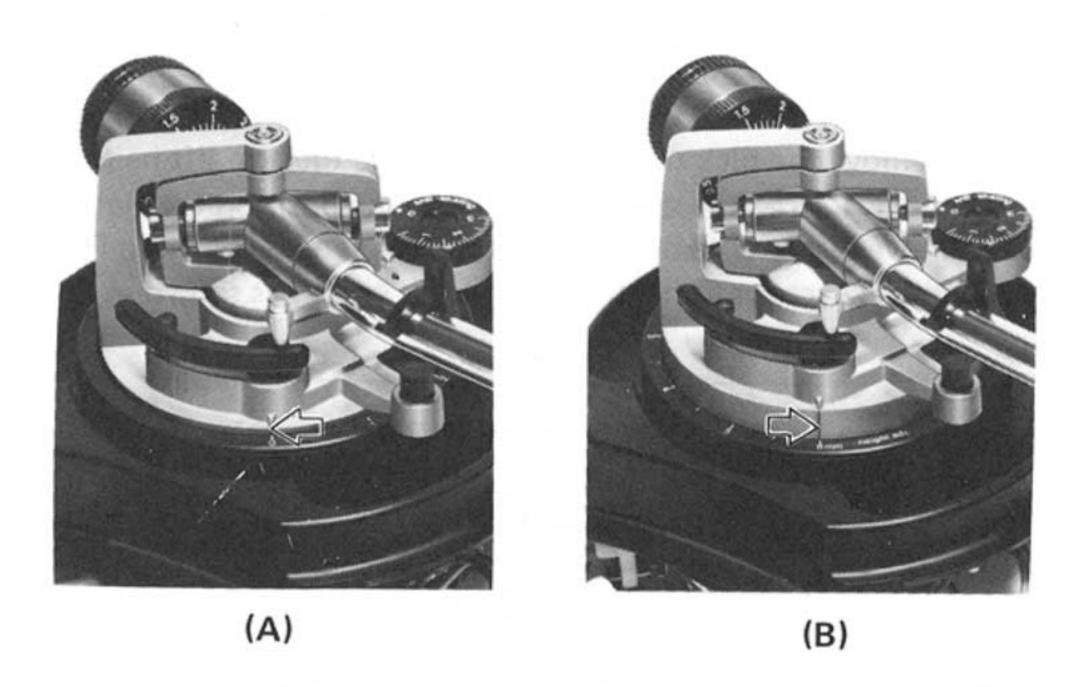


[Photo 13]

#### How to install the drive circuit board assembly

The circuit board assembly can be detached by removing the 4 setscrews ① shown in Photo. 1. When installing it onto the bottom base assembly after adjustment and repair, follow the procedure mentioned below.

- Temporarily tighten the 4 setscrews ①.
   (Refer to Photo 1.)
- 2. Adjust so that the center spindle is aligned to the center of the turntable provided with equal clearances ② as in Fig. 5.
- 3. Completely tighten the 4 setscrews ①, taking care not to allow deflection of the center spindle.

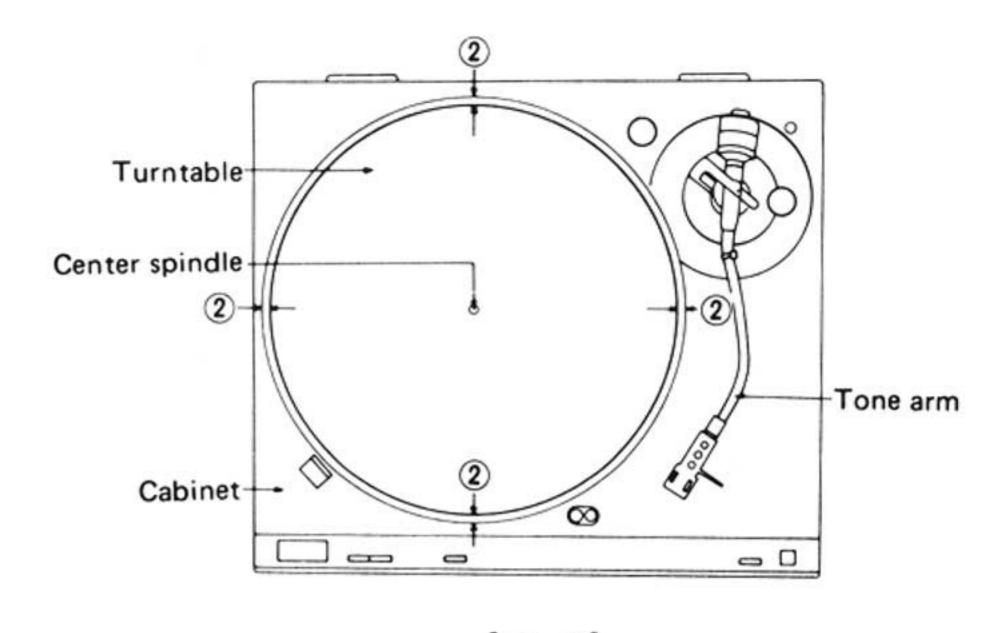

[Fig. 5]

## ADJUSTMENTS (Electrical)

Notes: • Make the following adjustments after replacing parts such as IC's, transistors, diodes, etc.

Condition of the set

1. Power switch . . . . . ON

2. Pitch control . . . . . Center position


3. Speed selector switch . . . . 33 r.p.m.


Instruments to be used

Frequency counter

	Adjustment	connection Points	Adjustment Points	Adjustment Method
Α	Adjustment of pitch control ±0% (PITCH)	Frequency counter + -> TP27 - GROUND	VR301	<ol> <li>Pitch control switch to center position.</li> <li>Adjust VR301 for 262.08 kHz ±0.05 kHz of frequency.</li> </ol>
В	Adjustment of pitch control LED (GAIN)	Frequency counter + -> TP27> GROUND	VR425	Adjust pitch control switch for 269.94 kHz of frequency.      Adjust VR425 so that the LED (pitch indicator plus 3%) lights up.      center      +
С	Braking adjustment (BRAKE)		VR201	Adjust VR201 for complete stop within 120°~270° after stop signal initiated.  (turntable becomes free a few seconds after stop.)

#### ADJUSTMENT POINTS

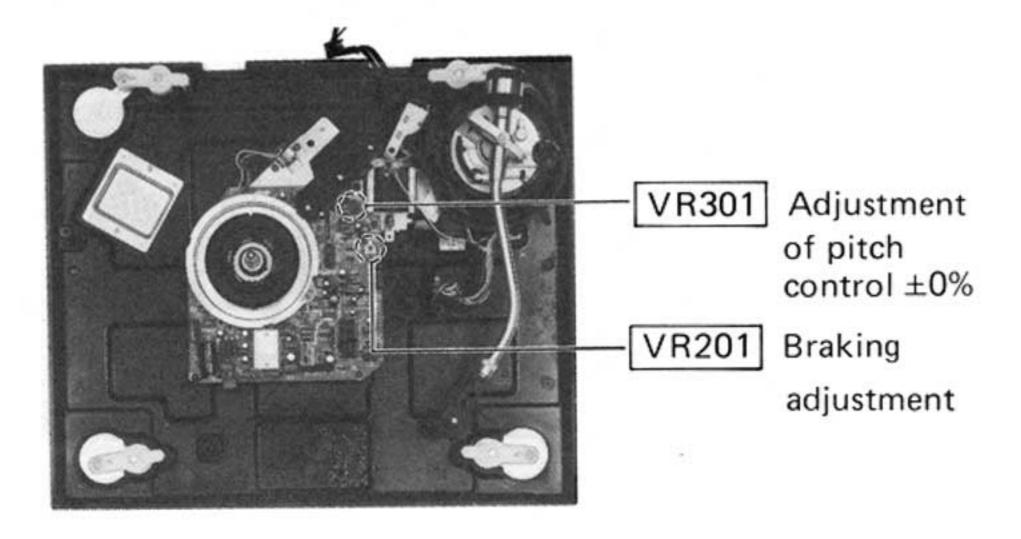

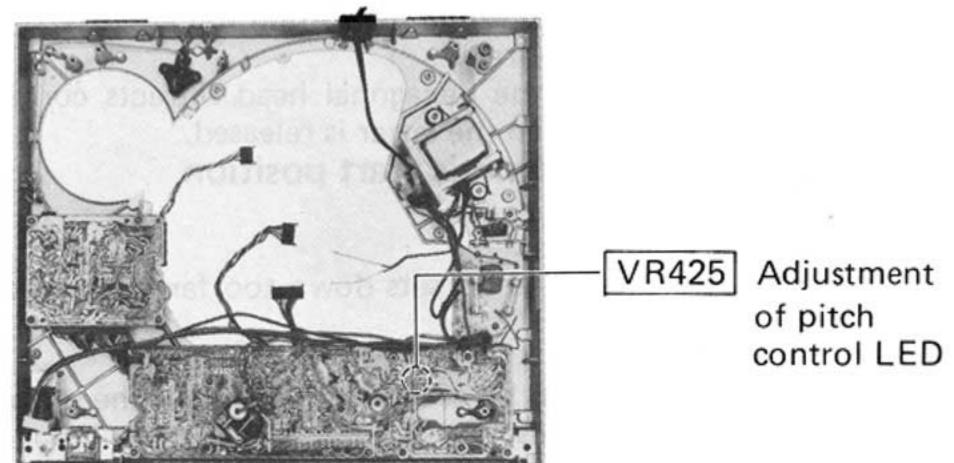

## ■ ADJUSTMENTS (Tone arm)

# Pitch control (fine adjustment of speed) (See Photo 14 and 15.)

As soon as power is applied to the unit by depressing the power switch (-) the LED lamp lights up indicating that the unit is on.

When the pitch control knob is clicked to position "0", the regular speed (33-1/3 or 45 r.p.m.) is held, and this condition is indicated by the green LED lamp.

However the pitch control feature of this unit allows speed variation of up to -6%. Proper speed variation can be selected while watching the red LED lamp and the scale reading on the pitch indicator. Please note that the scale reding on the pitch indicator shows only an approximate percentage. If LED lamps light ou at two locations (e.g. at positions [2] and [3]), it shows that pitch variation is in the tange of When the strobe dots in 4 stage marked at the peripheral edge of the turntable appear to be stationary, variation of individual pitches is shown. (See Photo 15.)

#### Note:

The strobe-illumination of this unit employs a strobeilluminator LED synchronized with the precise quartz frequency.

For fine adjustment of the turntable speed be sure to effect the adjustment according to the LED illumination. The LED illumination is not synchronized with fluorescent lamps.

# Adjustment of muting timing (height of arm lift) (See Photo 16 and 17.)

This unit is fitted with a muting feature which is used to cut off irritating noise caused at the moment the stylus is brought down on or lifted ou from the disc surface.

Muting timing can be adjusted by the height of the arm lift, a clearance between the stylus tip and the disc surface while th thetop of the tonearm is at the "up" position ( $\mathbf{x}$ ) by depressing the cueing switch button. The height of the arm lift was adjusted to a range of 8-13 mm before shipment from the factory. (See Photo 16.) Perform the adjustment in the following manner when adjustment is needed for the cartridge being used.

when adustment is needed for the cartridge being used.

- To begin wirh, protect the tip of the stylus with the stylus cover.
- Turn off the power switch(\( \blacksquare{1} \)) so that the turntable should not move.
- The top of the adjust screw is hexagonal.

While holding the arm lift down, turn the adjust screw.

Remomber to depress the arm lift downwards in turning the adjust screw. (See Photo 17.)

## If recorded sound cannot be reproduced at once after the stylus was lowered on to the disc surface.

try to adjust the timing by turning the adjust screw counterclockwise and thus increasing the distance between the stylus tip and the disc surface.

## In case irritating noise is generated when the stylus is lowered on to the disc surface.

decrease the distance by turning the adjust screw clockwise.

#### Note:

As the adjusting screw has a hexagonal head, be sure to make the adjustment while depressing the arm lift, or the screw will not move freely.

Also be sure that the hexagonal head retracts correctly into the arm lift when the latter is released.

# Adjustment for automatic start position (See Photo 18.)


(Remove the rubber cap)

In case where the stylus tip sets down too far in the record groove.


#### –rotate clockwise.

In case where the stylus tip sets down outside of the record.

-rotate counterclockwise.

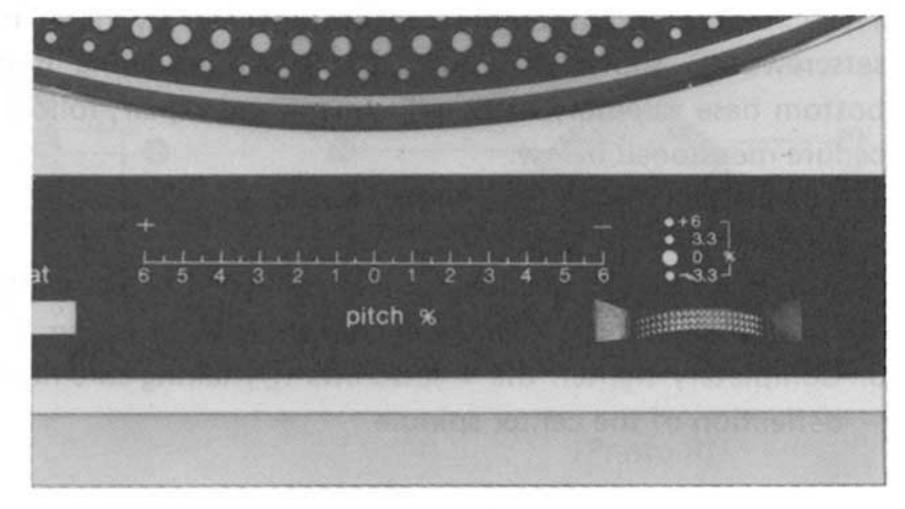


[Photo 14]

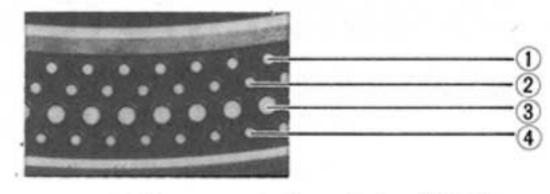


- 1) appears stationary at the pitch of +6%
- 2 appears stationary at the pitch of +3.3%
- 3 appears stationary at the pitch of 0%
- ④ appears stationary at the pitch of −3.3%


[Photo 15]

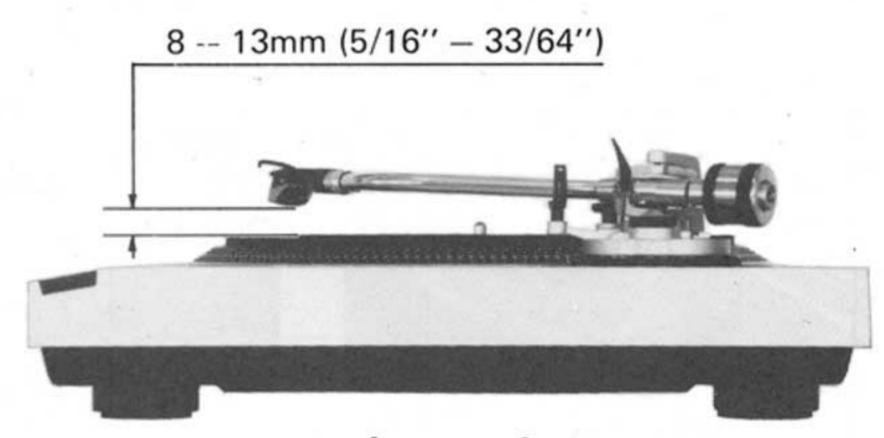

[Photo 16]

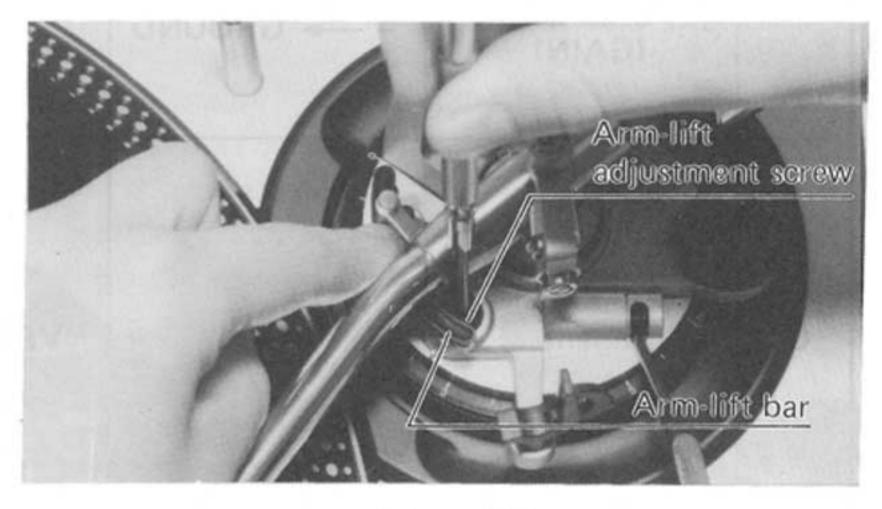

[Photo 17]

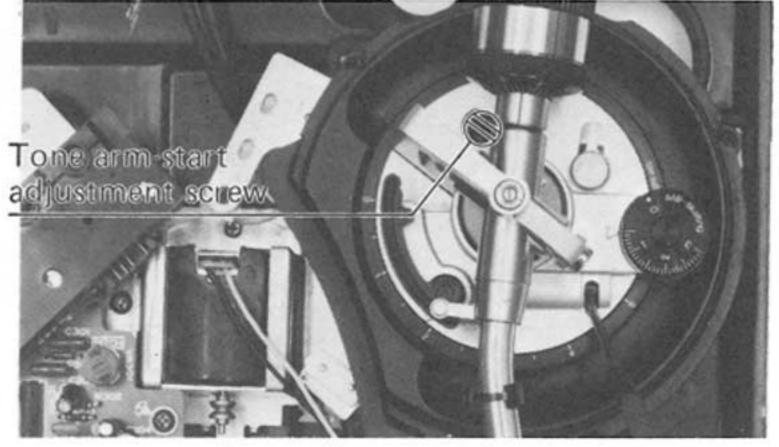

[Photo 18]

### **■ FEATURES**

Direct-drive full-auto player using 4-bit, 1-chip microcomputer (MN 1400PA)

- (1) Automatic detection of record diameter.
- (2) Automatic control of tone-arm operation.
- (3) Detection of final groove, auto return, auto repeat.
- (4) Additional function to prevent faulty operation.

#### Record Size Select

This is a record diameter detecting function using an optical non-contact system: The turntable is provided with a prism to detect the record disc when the prism is interrupted by the disc. Three infrared LED's are arranged in the panel under the turntable, which are individually lit with pulse, checking the output of the light sensor located besid the arm base on the LED control signal through the software, in order to judge the size (30 cm, 25 cm, 17 cm) of the record. Thus, this is an autmatic version of size setting, conventionally based on manual reset.

#### Auto Start

When the tone-arm is on the arm rest, pushing the start/stop key causes the record side detection to be performed. Then, the tone-arm is turned to the outermost periphery of the record disc and is lowered at that point. If no disc is on the turntable, then the start instruction is cancelled and the tone-arm is shifted back onto the arm rest.

#### Auto Return

It includes two photo-interrupters provided at the tonearm driving mechanism and an end detector based on a non-contac system using a variable slit, which is of position detecting type to select the photo interrupter in accordance with the record size (30/25 cm, 17 cm). When the final groove of the record is detected, the tone-arm moves up and returns to the arm rest.

#### Auto Repeat

With this function set at ON, the tone-arm is lowered at the outermost periphery of the record in order to repeat the performance, When this function is OFF, the tone-arm returns onto the arm rest to terminate the performance.

#### Auto Cut

When the start/stop key is pushed during performance, the tone-arm returns onto the arm rest thus terminating the performance. In this case, the Auto Repeat is forced to turn "OFF" requiring no manual release.

#### Cueing


This is a double cueing system by which the cueing operation can be done by both the key switch provided at the front control panel and the cueing lever located at the tone-arm stand. When either key switch or cueing lever is operated, the tone-arm is moved by the arm driving motor. Operating the key switch causes the cueing lever to move because it is interlocked with the tone-arm.

## ■ TECHNICAL GUIDE

#### Tone arm drive control . . . . . . Mechanical


The mechanism is the combination of one each of DC motor, planetary gear, and cam, and the tone arm is turned and moved up and down by a motor. By the driving circuit of an electronic governor, the motor is controlled so as to turn in both forward and reverse divections respectively in two speeds. For the rotation and speed change, the output of E port (E00 and E02) is used. Since the turning and also the up-down motion are controlled by a motor, the motor rotation and speed shall be decided while monitoring the condition of the mechanism. For this, two limit switches are provided, and the signal is connected to AI2, AI3, and by the combination "ON", "OFF" of these switches, the mechanism condition is monitored.


Three interrupters are provided to detect the position for tone arm turning, and each one of the interrupters is combined with a shutter place so as to detect the outer peripheral position (30cm, 25cm, 17cm), and the end position (30cm/25cm common, 17cm). The output signals are connected to B port (BIO  $\sim$  BI2) respectively and are processed as 3-bit parallel deta.

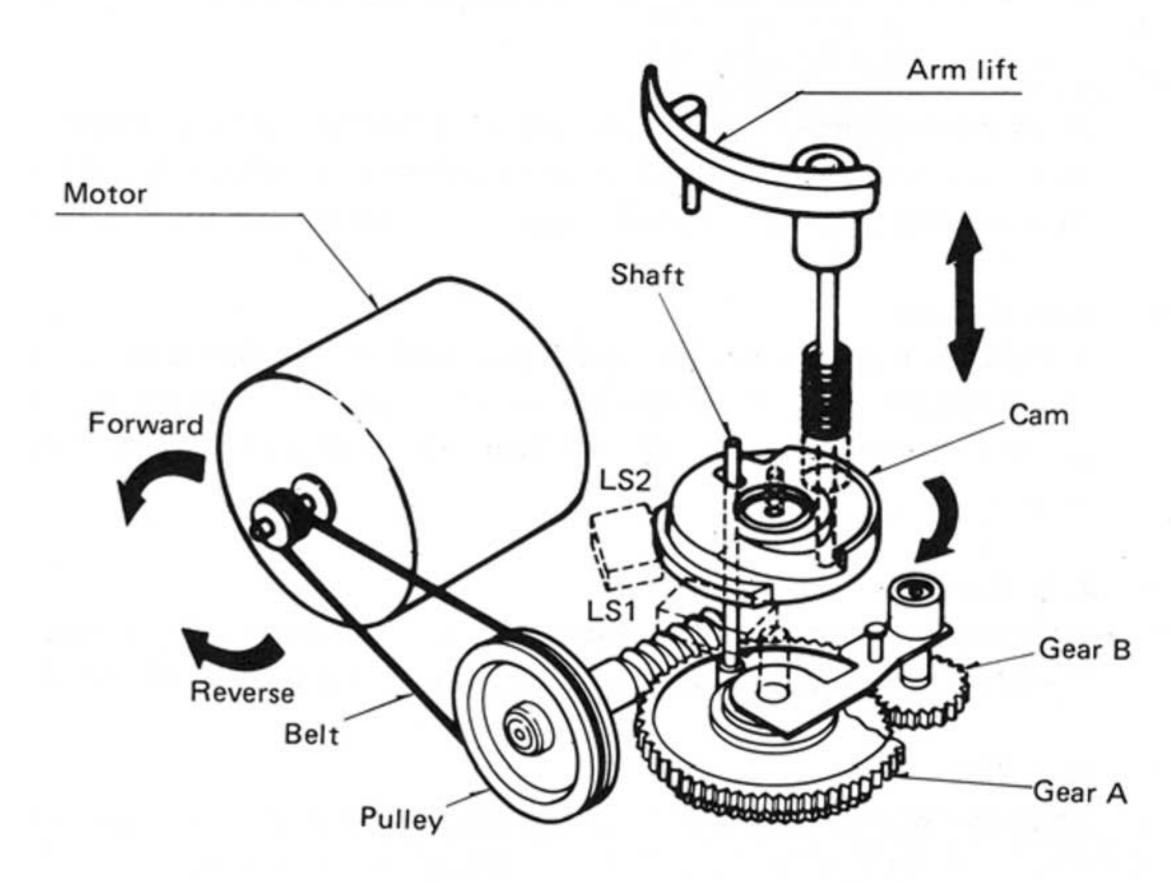


#### Auto Start


Motor rotates in forward direction and the power is transmitted by belt, and the worm attached to the pulley rotates gear A in the direction of the arrow. Then the cam is rotated in the same direction by the shaft fixed on the gear, causing the limit switch to shift its position from Fig. 1 to Fig. 2, when the arm lift is raised to move the tone-arm upward.

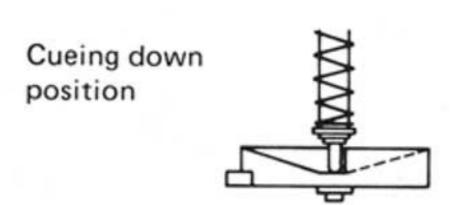


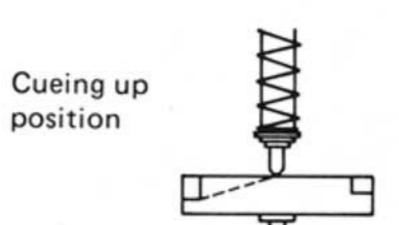

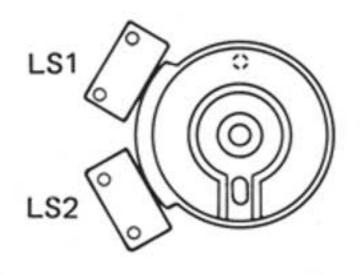

[Fig. 1]

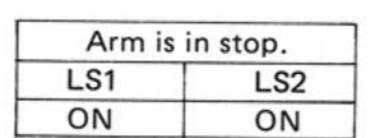


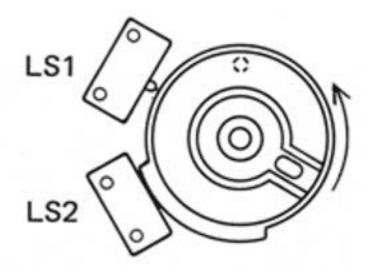



[Fig. 2]

Arm is m	Arm is moving up.				
LS1	LS2				
OFF	ON				

- When tone-arm moves up, the cam is fixed at the position as in Fig. 3. Subsequently, the mechnism operates to move the tone-arm onto the record disc. It is illustrated in Fig. 4.
- 3) When the shaft reaches point (a) to push the operation plate, the rubber roller simultaneously touches the outside of the fixed plate being combined with the arm, thus giving a rotational force to move the arm onto the record disc.

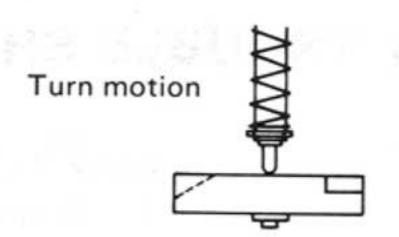


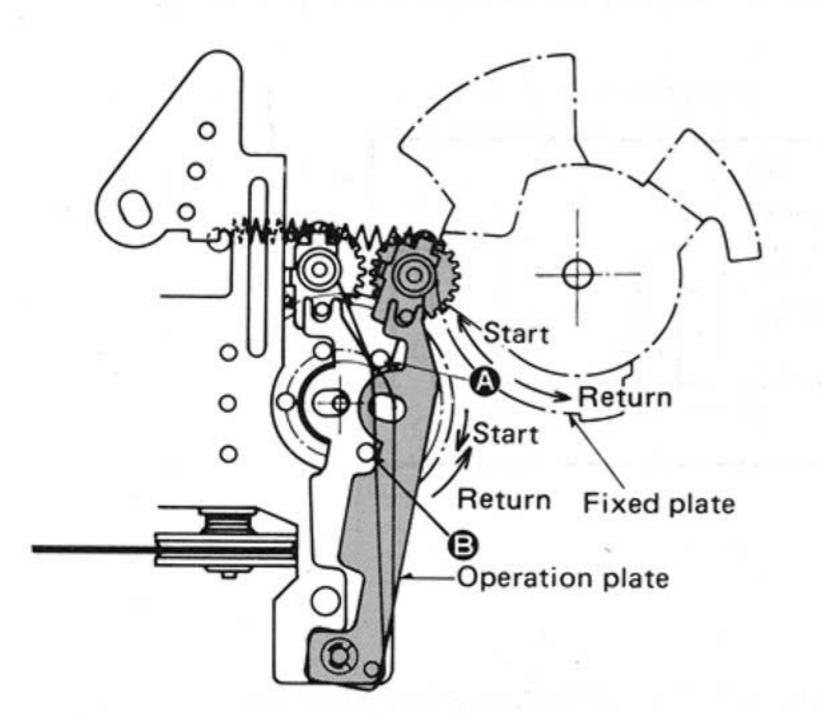

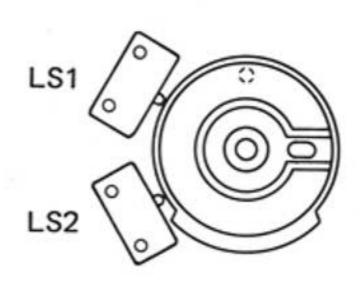


[Fig. 3]


	t highest tion.
LS1	LS2
OFF	OFF

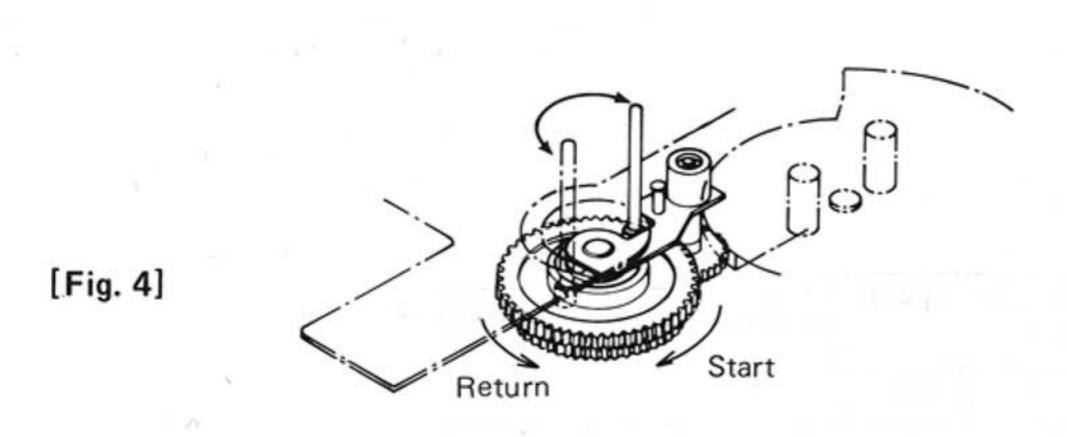



- 4) The arm stops at the specified position according to the detection of record size, and then moves down onto the record disc. The movements of the cam for this operation can be followed up by referring to Fig. 3 Fig. 2 Fig. 1. The cam remains still in the position of Fig. 1 during performance of the record.
- 5) When the end position is detected after performance of the record, the arm must be moved up. To achieve the purpose, the cam is rotated in reverse direction to raise the lift. (Fig. 5)

When the lift reaches the highest position, the shaft touches the position (3) in Fig. 4, pressing the operation plate to give a reverse rotational force to the fixed plate (in arm returning direction), then the arm slowly returns to the rest position. The cam position during its return motion is shown in Fig. 6.

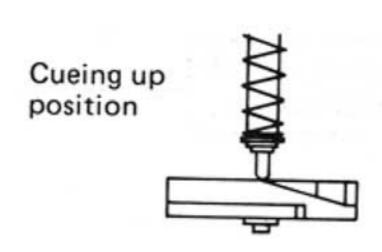

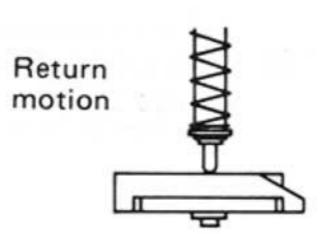

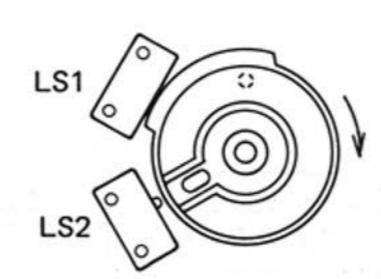

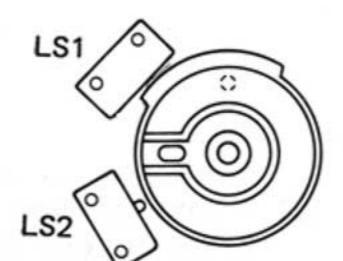

[Fig. 5]

Arm is moving up. (Return motion)

LS1 LS2


ON OFF

[Fig. 6]

tion)
.S2
FF
L

- 7) When the arm comes above the rest, the photo interrupter becomes "L" level, then instruction is given for lowering the arm.
  - The cam operates to shift the arm onto the rest as illustrated in Fig. 6 Fig. 5 Fig. 1.

#### Muting switch

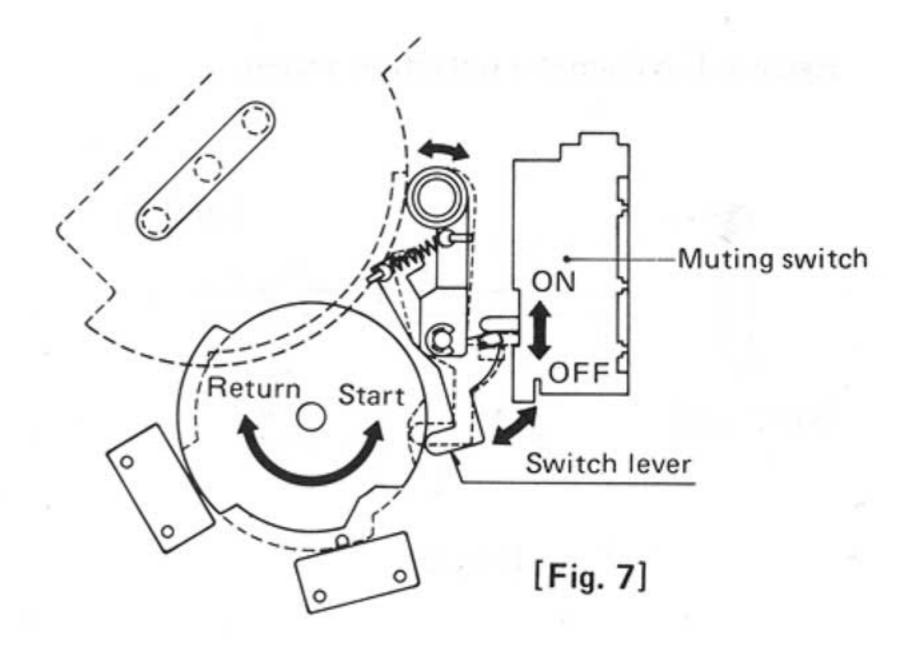

Tone-arm drive control - Electrical

#### 1) High-speed forward operation

When E00 is at "H" level, the base potential of Q901 increases, causing the emitter potential to increase as well. The base potential of Q902 is low beause E01 is at "L" level, therefore the emitter potential is low. Consequently, potential difference is generated between the emitters of Q901 and Q902, and then about 7V is applied to the motor thus causing the motor to rotate at a high speed in the forward direction.

#### 2) Low-speed forward operation

When both E00 and E02 become "H" level, R909 is ignored. Then, the base bias of 905 is enhanced because the level difference between R905 and R907 becomes greater, causing the collector potential to decrease. Accordingly, the emitter potential of Q903 also tends to decrease, so the voltage applied to the motor is lowered to about 5V.


#### 3) High-speed and low-speed reverse operation

Changing the input position makes reverse operation possible in accordance with the same procedure as in paragraphs 1 and 2.


#### 4) Stop motion

If both point ♠ and ♠ are at "L" level, current flows through D1 and D2 to the base of Q901 and Q902. As the potential difference is OV between ♠ and ♠ points, the motor does not turn.

Motor operation	Point	Point (3)	Point
Stop	L	L	L
Forward high speed	н	L	L
Reverse high speed	L	Н	L
Forward low speed	н	L	Н
Reverse low speed	L	Н	Н

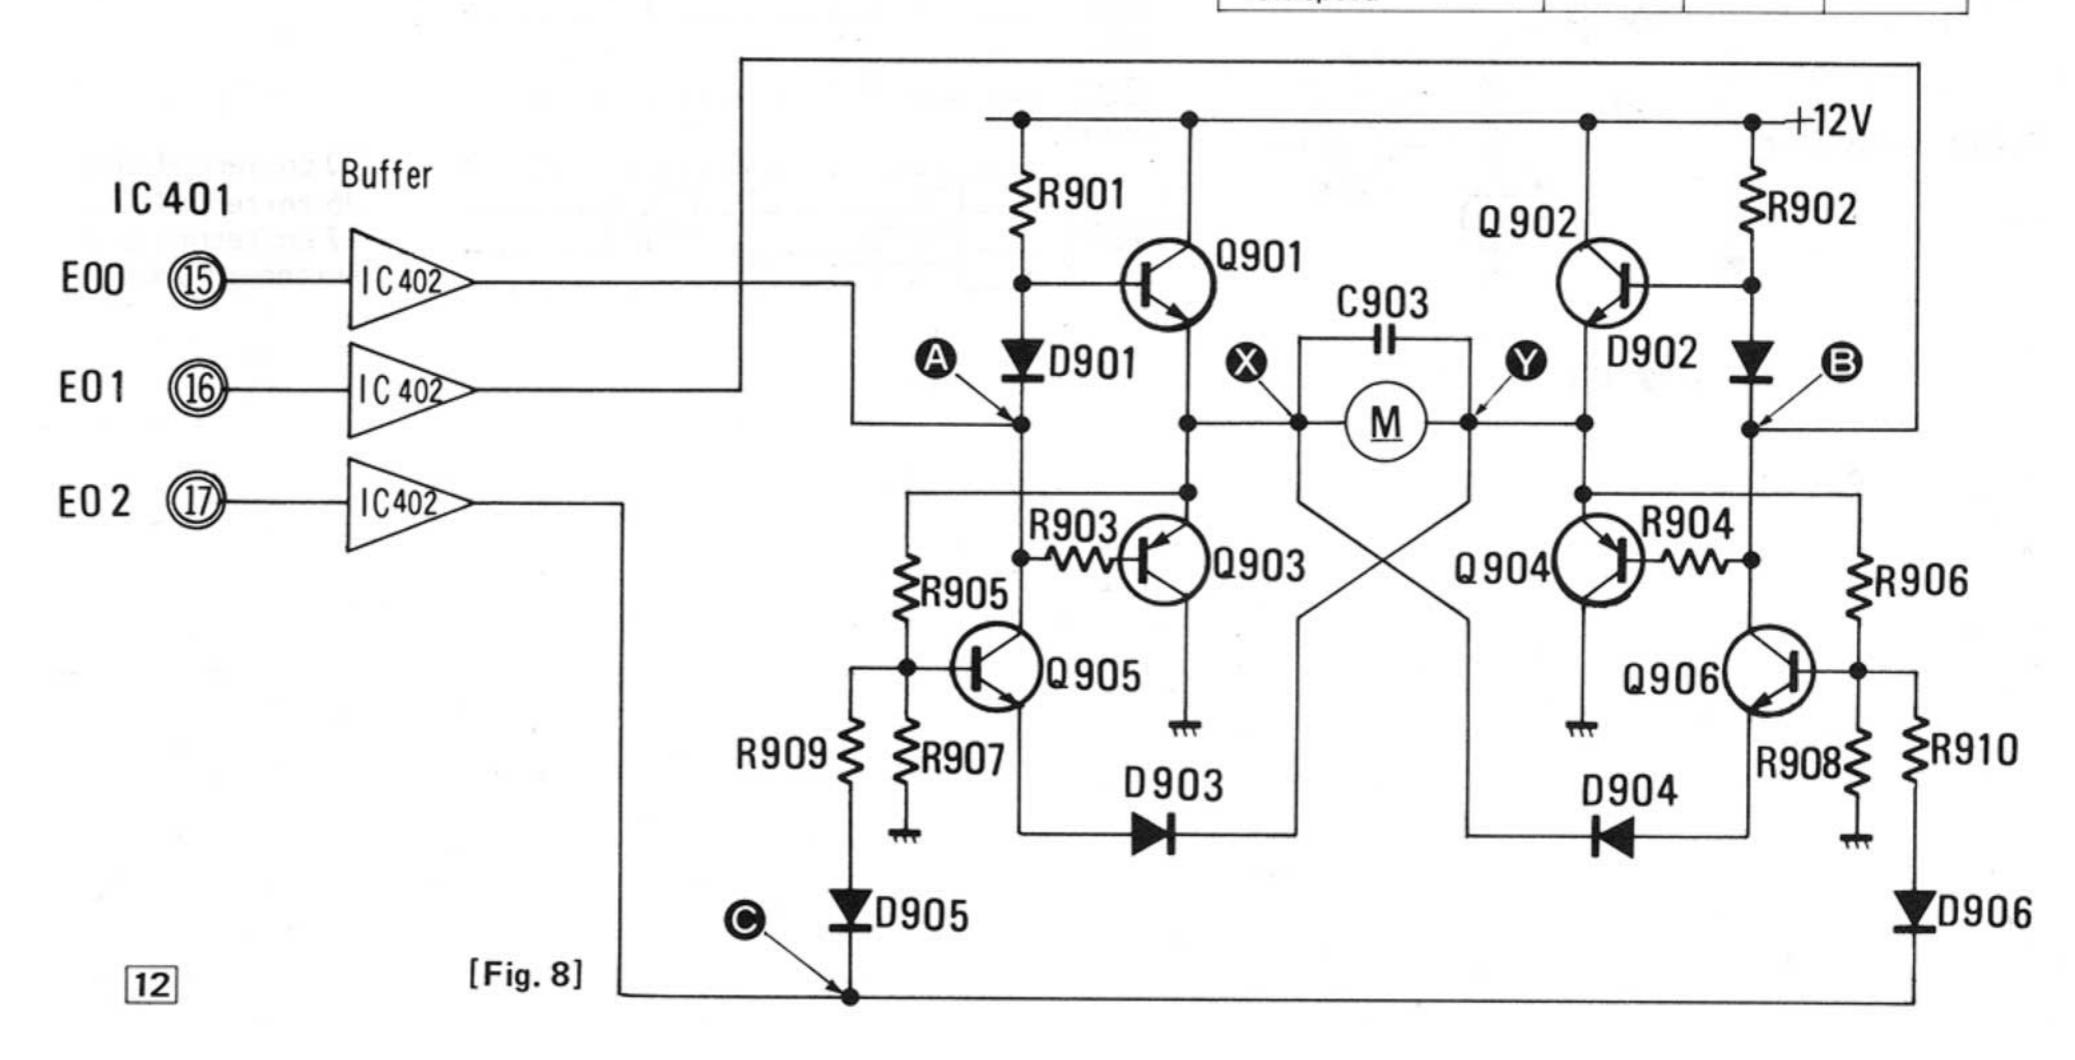

#### Record disc diameter detection system

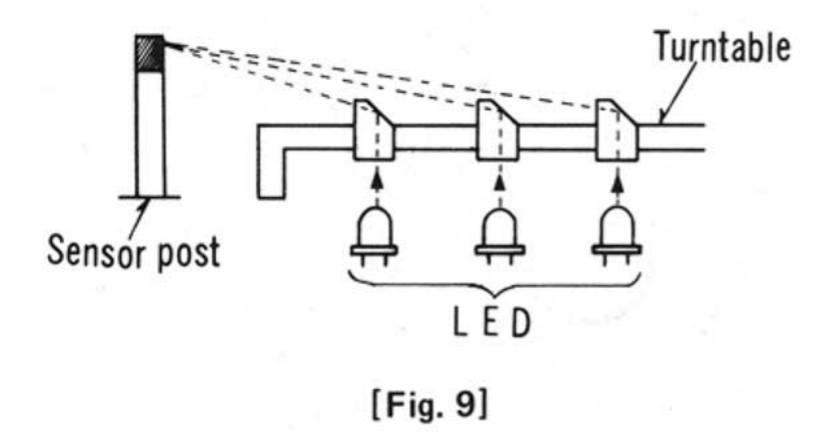


The record disc diameter detection mechanism of optical non-contact type by the prism provided on turn-table to detect the shielding when a record disc is placed on the table. Three inflared LEDs are provided in the panel under the turn-table tobe turned on by pulse signal one after another. The size of record disc (30 cm, 25 cm or 17 cm) is judged by the corss reference between the light sensor at a side of the arm base and ON control signal of LED by a soft-ware method thus the size setting made so far by manual presetting is improved to automatic setting.


#### LED indicating circuit

Three LEDs are connected to D port (D00 - D02) through beffuers, and by the output of D ports, the LEDs are turned on one after another with the intervals of 20  $\mu$ s. The signal from the light sensor is converted into the pulse signal of TTL level by the pulse amplifier. Since the illumination time of LEDs is only 20  $\mu$ s, the pulse width of the obtained pulse signal is also 20  $\mu$ s at the most. If the LEDs are connected to ordinary input ports, the timing to execute the input command may possibly be delayed due to the variation of the hardware transmission delay time. With this equipment, this problem is solved by using the SNS 1 input having a non-synchronous latch.

The disc size detection prisms are provided 120° apart at three points on the turn table and at least one of the three prisms shall pass over the LED for size detection. If the turn table is locked manually, therefore, erroneous detection of disc size may result. An interlock mechanism is provided to prevent disc size detection unless the turn table turns in normal condition. For this purpose, BI3 is used as the input terminal to convert the current thourgh DD motor into TTL level as the input signal.

If the signal from D port is at "L" level, Q401 is "OFF", and +12V is applied on point, therefore, Q907 is also at "OFF". At "H" level, both transistors are turned ON so LED is on.

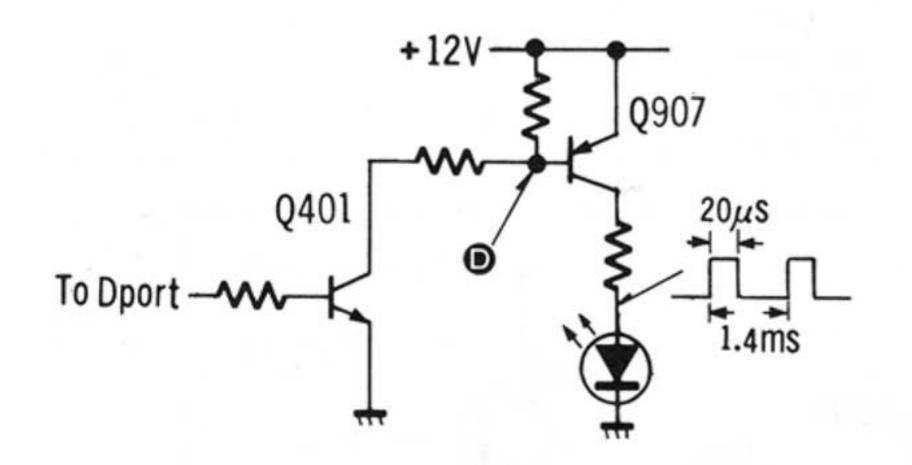

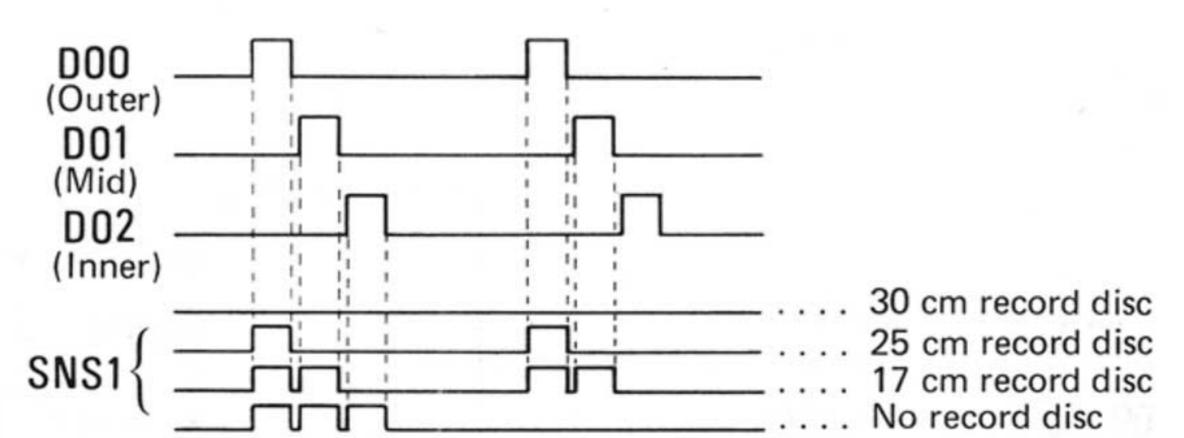


[Fig. 10]

## ■ TROUBLE SHOOTING GUIDE

Check the following points before strating repair.

- Connectors and wire connections are perfect.
- 2. With power switch turned ON, 33 r.p.m., pitch indication LED and strobe LED light up.
- 3. With power switch turned ON, the waveforms of pins 5 and 6 of IC401 are as shown in Fig. 11.

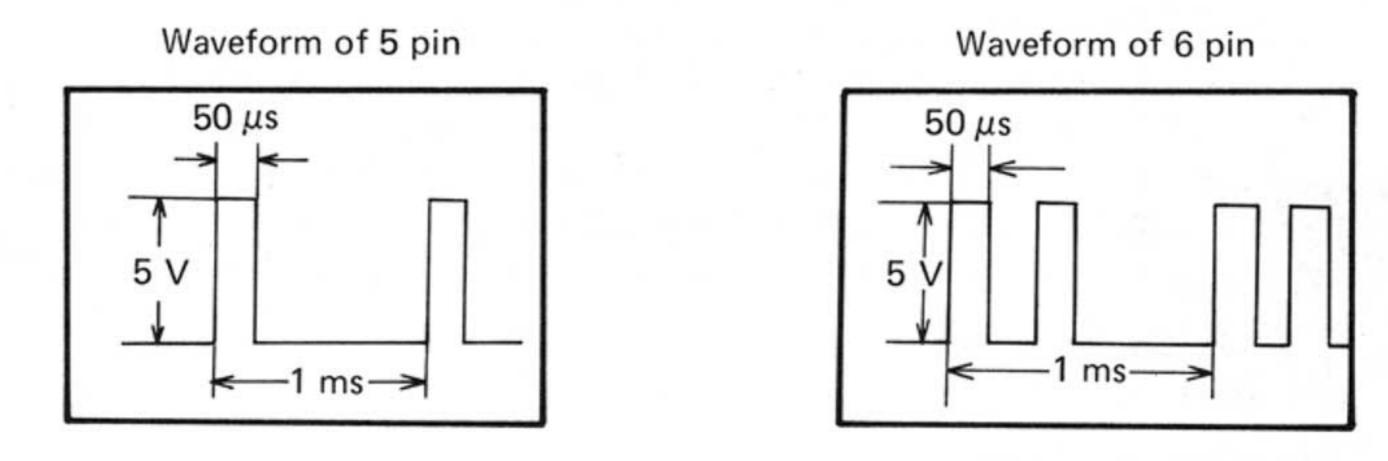


[Fig. 11]


#### [Note]

If a defect is found in the above check, the power supply circuit, IC401 or IC402 may be defective.


#### Defective operation (Arm drive circuit)

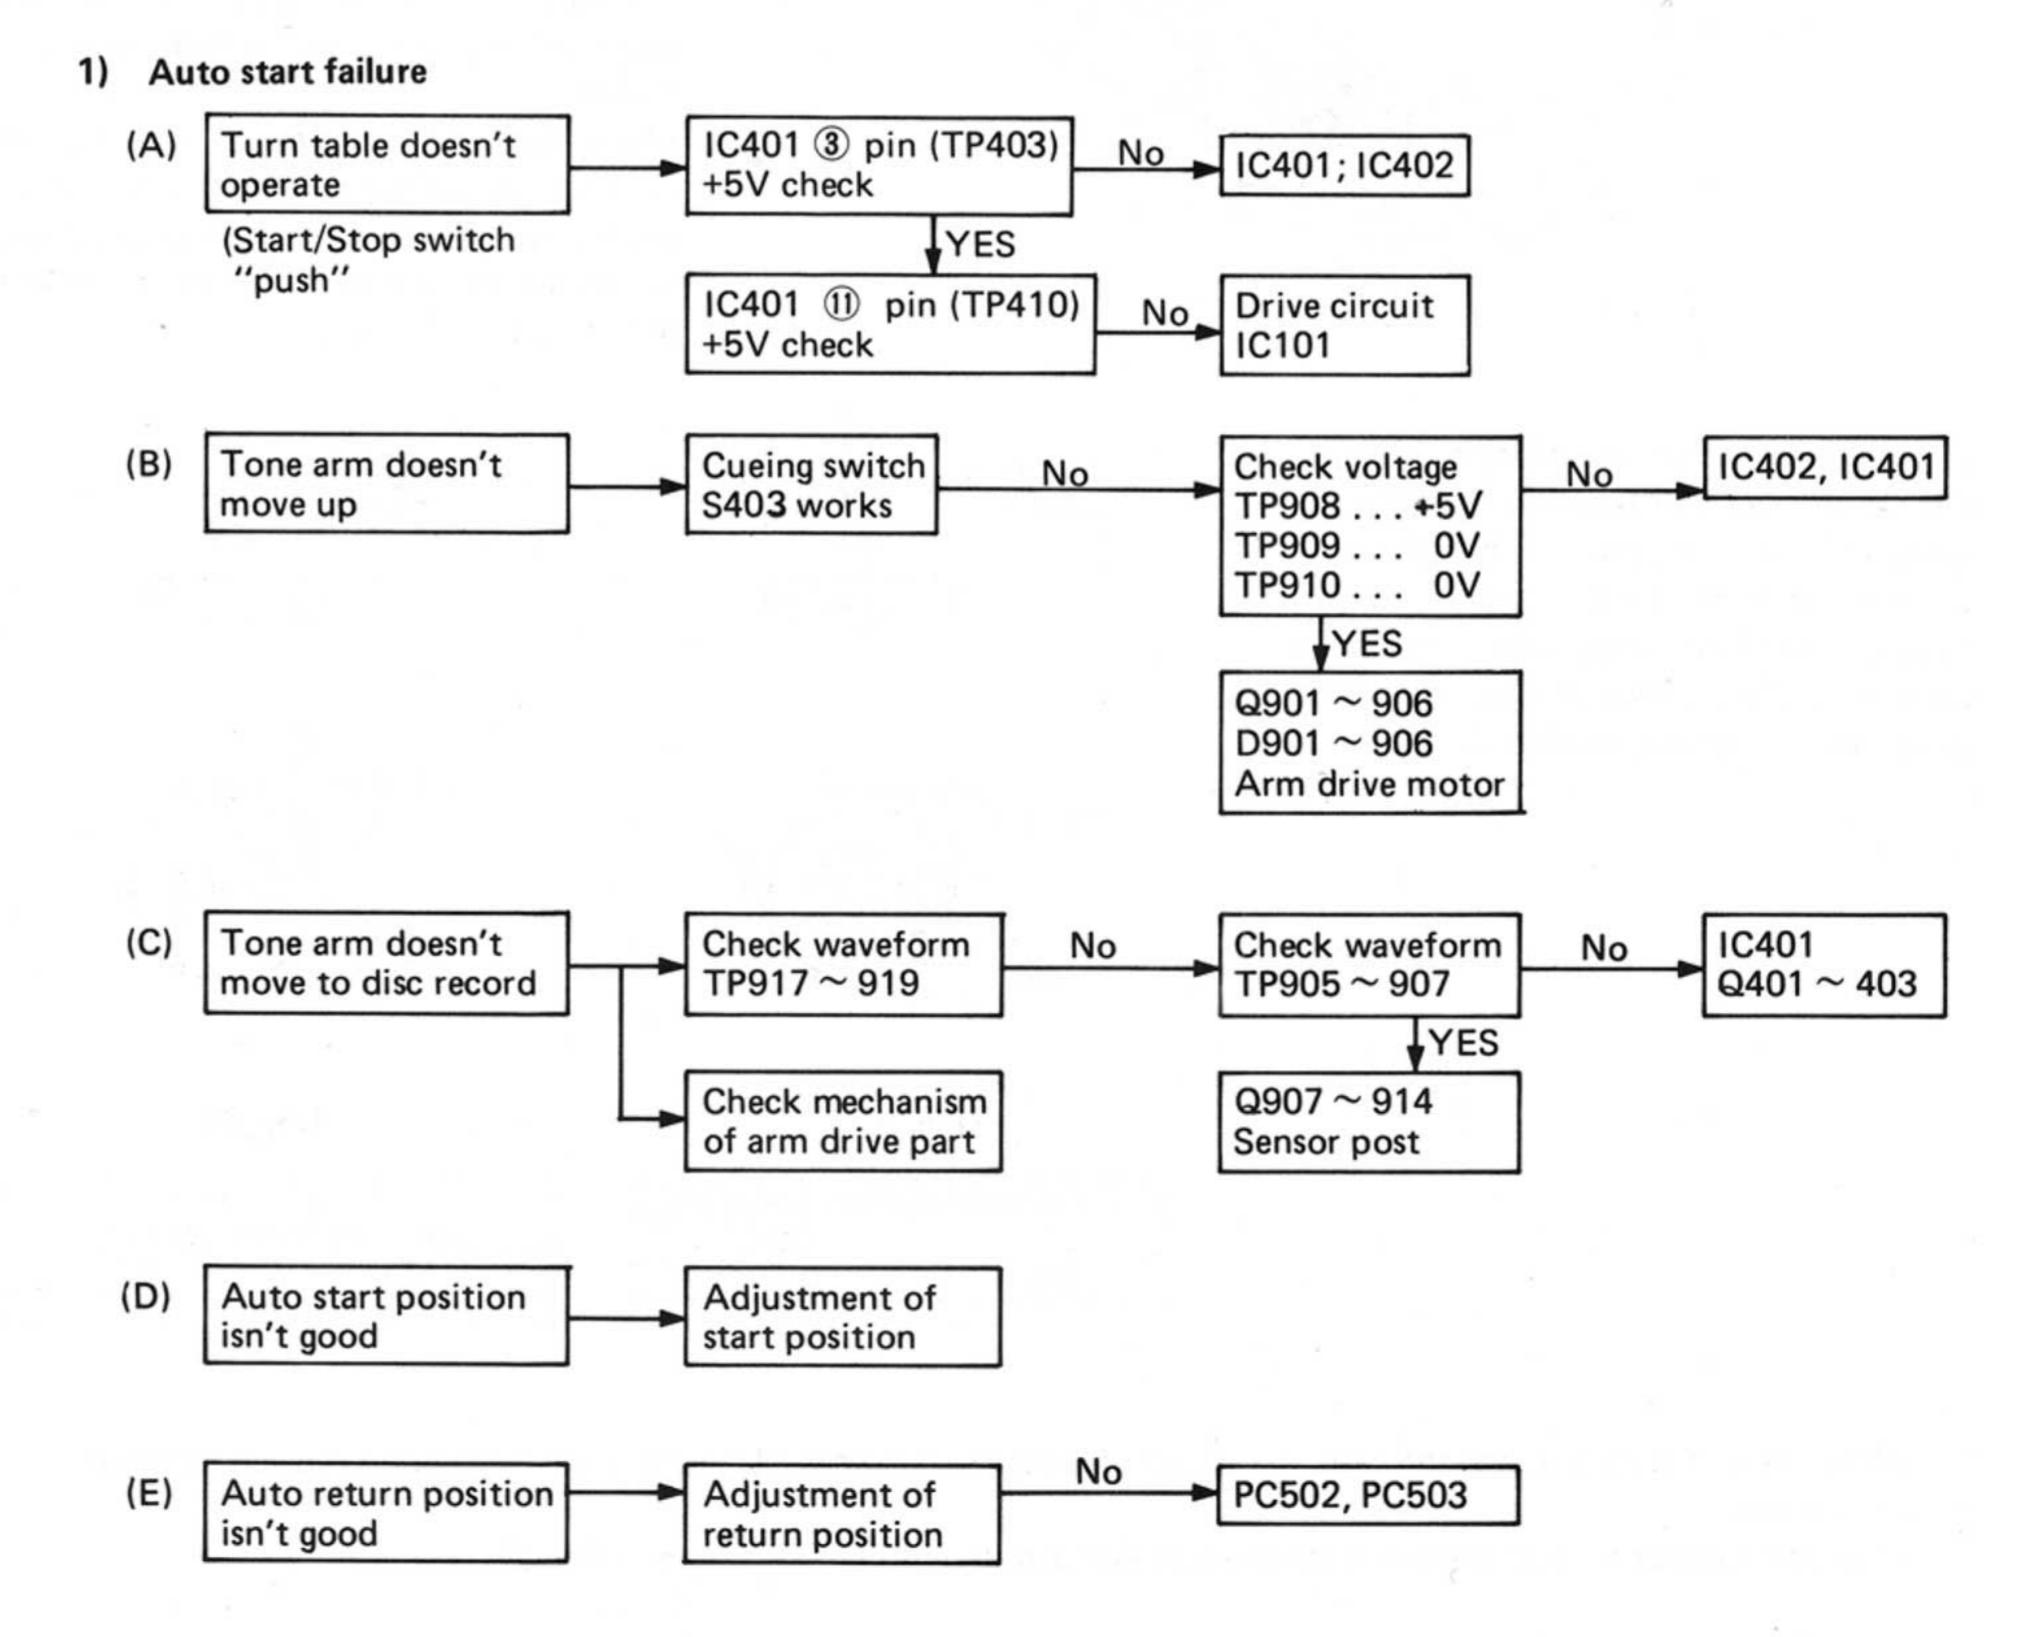


#### 2) Runaway operation

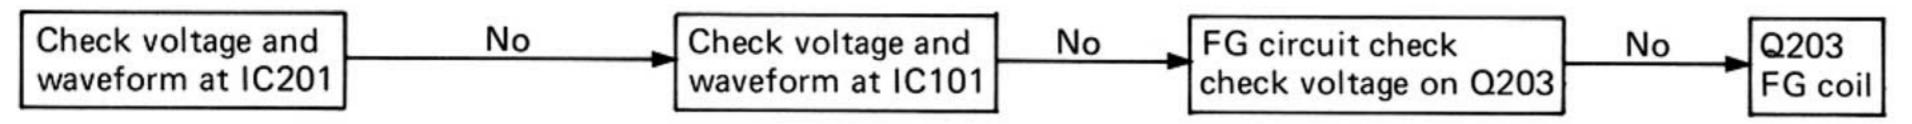


#### 3) Turntable rotates abnormally

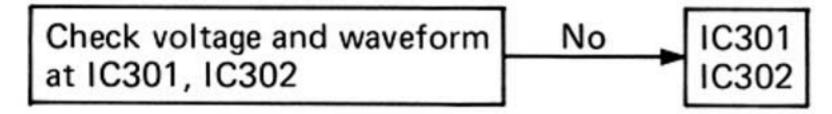

#### 4) Pitch control malfunction

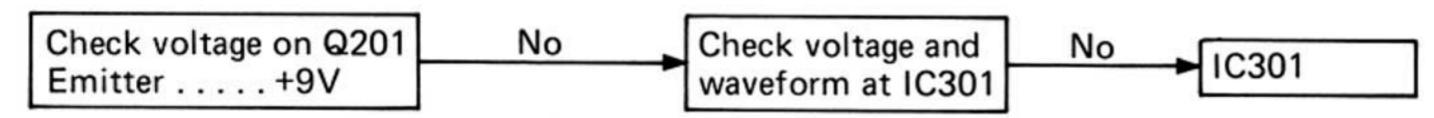

#### 5) Pitch control - LED not illuminating

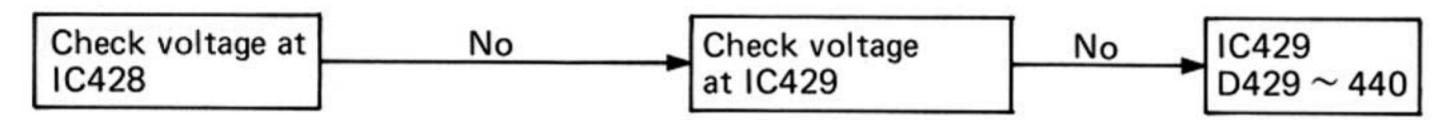

#### ADJUSTMENT FOR AUTOMATIC RETURN POSITION

(Remove the rubber cap)

#### 17 cm disc record (See photo 19)

In case where the tone arm tends to return before the playing has finished.

#### .... rotate counterclockwise.

In case where the tone arm fails to return after the last groove of the record has been played.

.... rotate clockwise


#### 25 cm, 30 cm record (See photo 20)

In case where the tone arm tends to return before the playing has finished.

.... rotate countercolckwise.


In case where the tone arm fails to return after the last groove of the record has been played.

record)

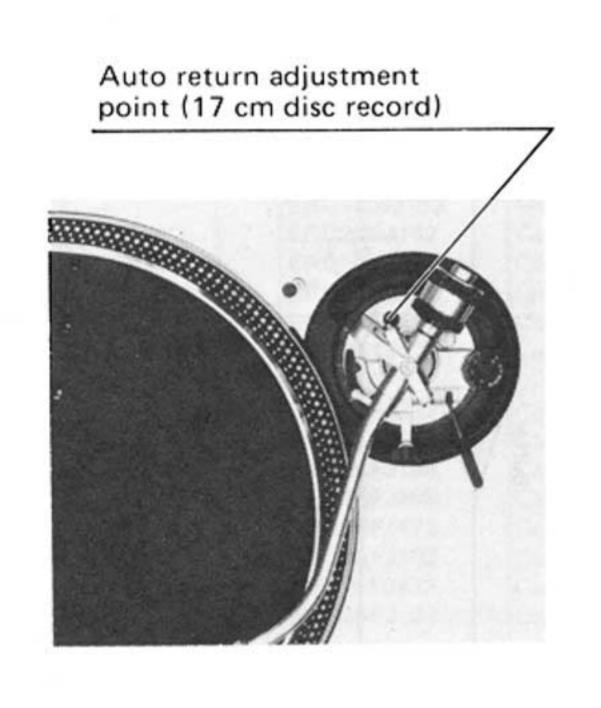

Auto return adjustment

point (25 cm, 30 cm disc

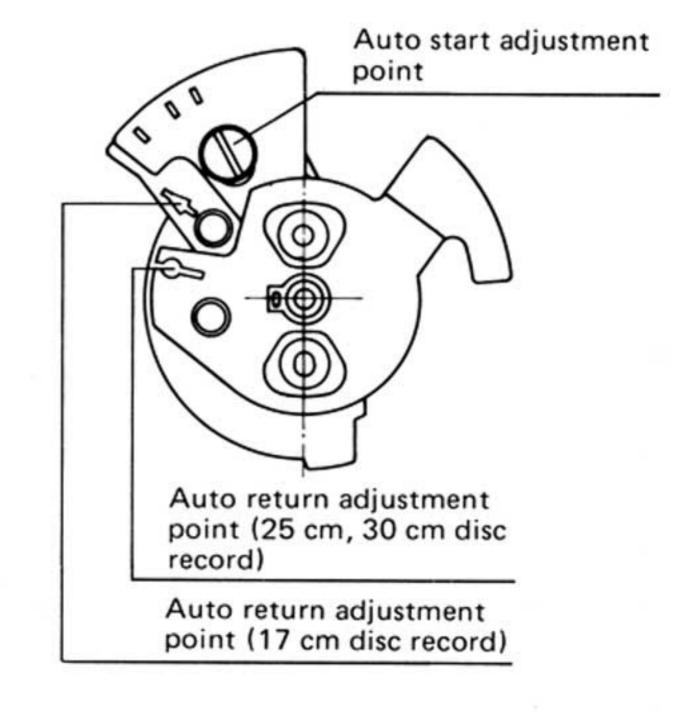


[Photo 19]


[Photo 20]

[Fig. 12]

## ■ TIMING CHART OF TONE ARM DRIVE CONTROL

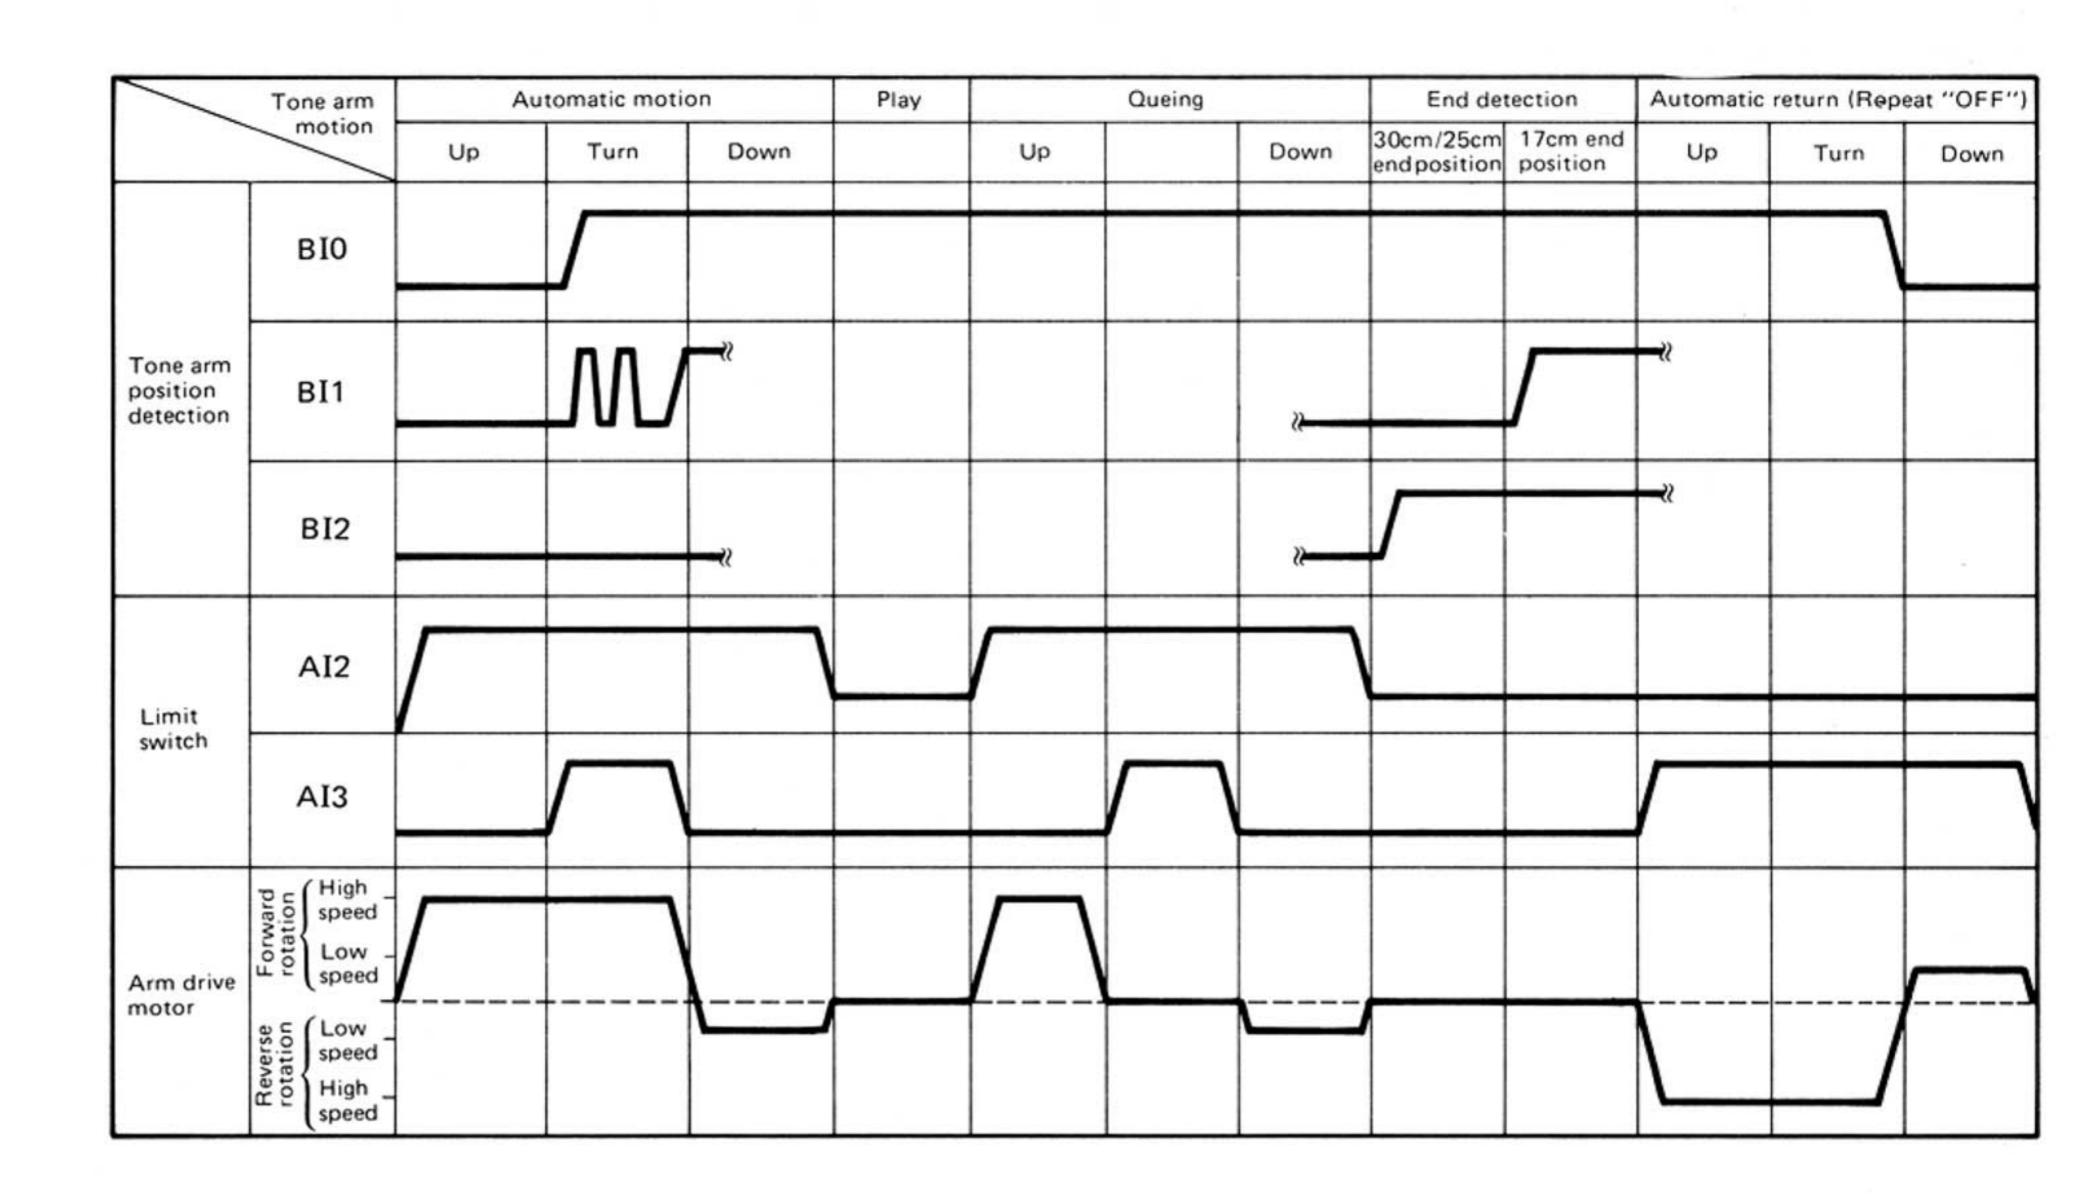



## **■ FLOW CHART OF AUTO START MOTION**

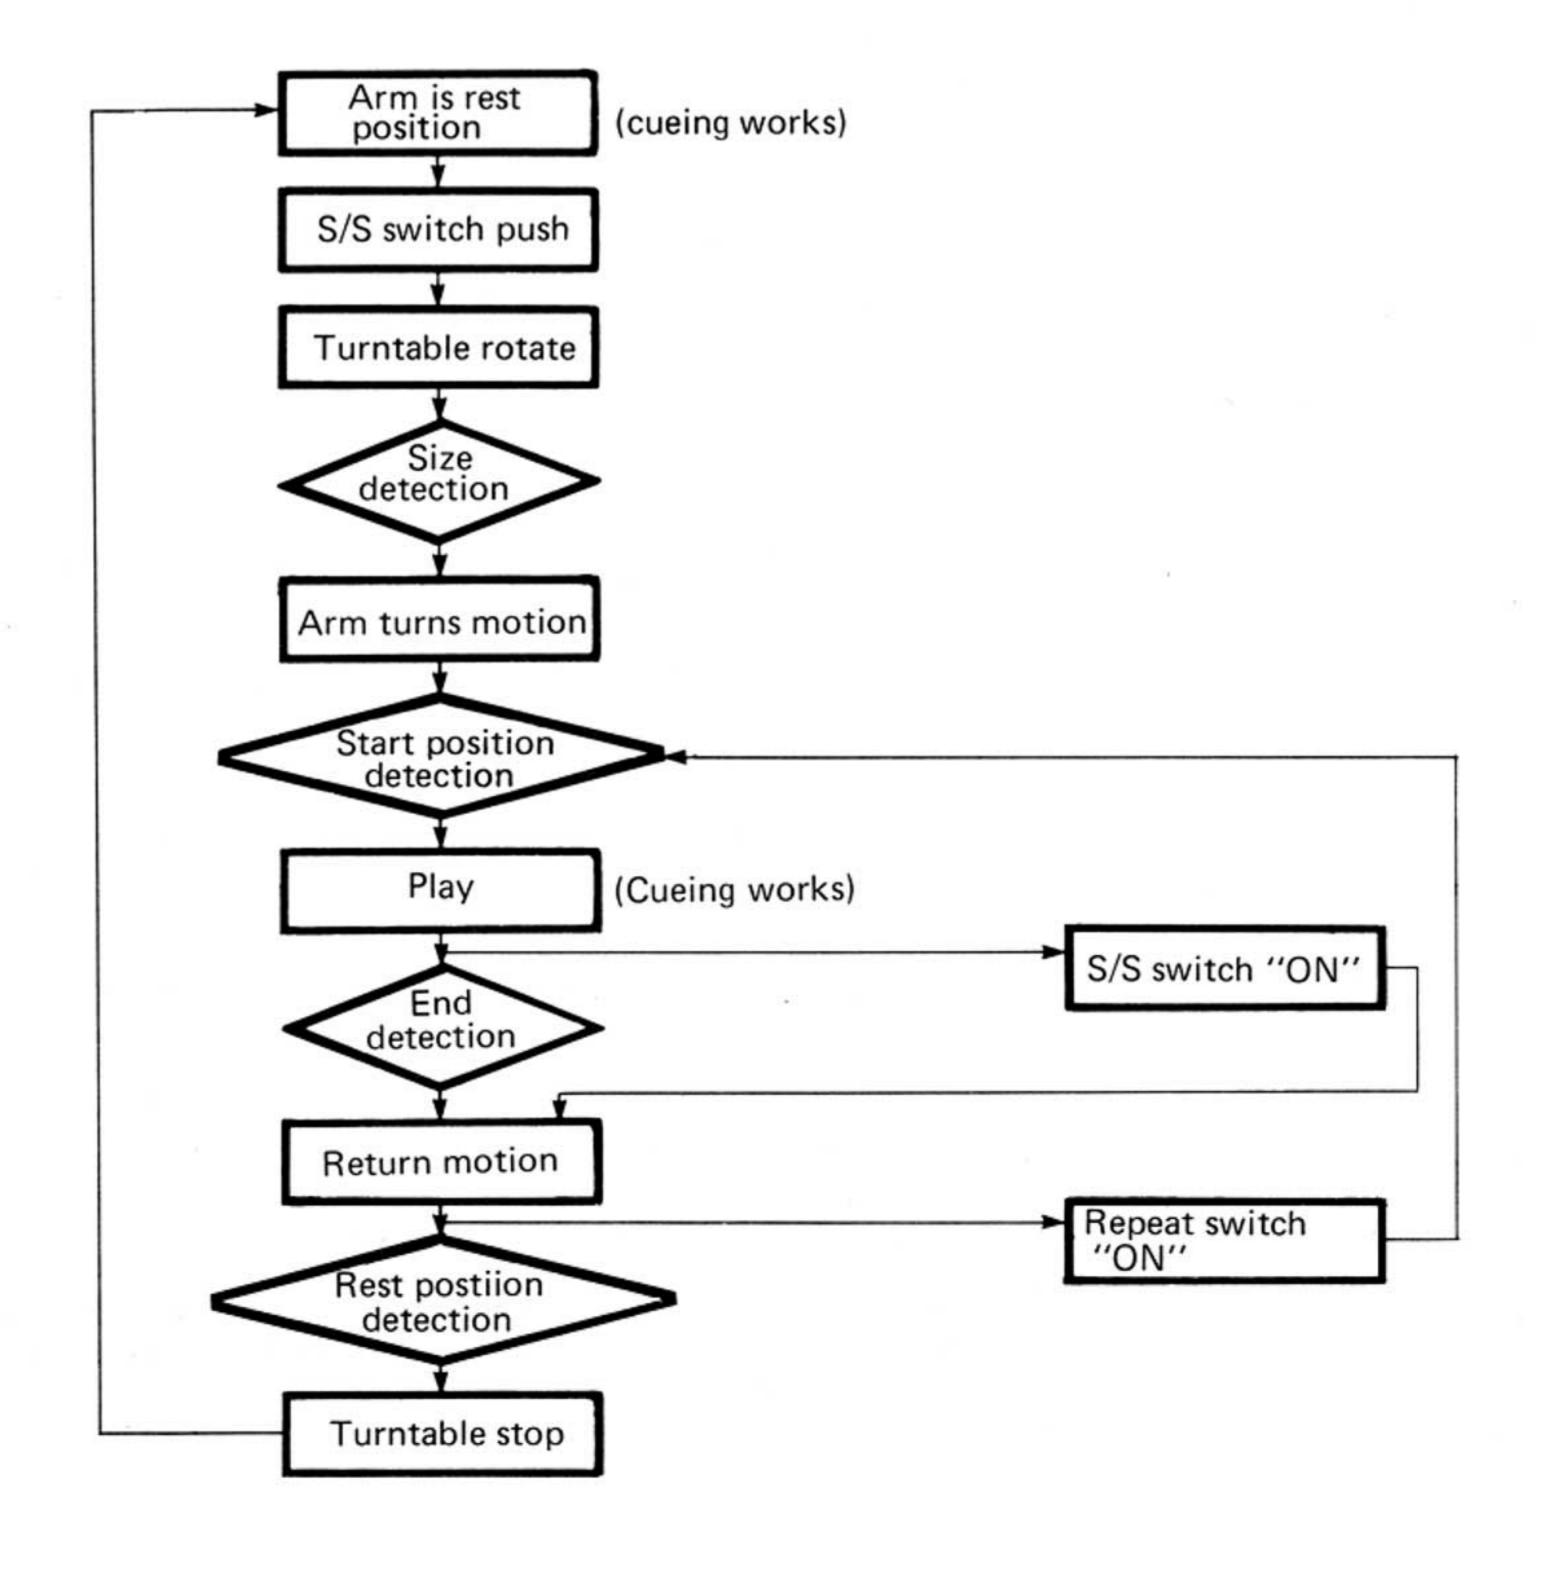

## **■ MN1400PA**

Pin No.	Symbol	Name	Function			
1	Vss	Ground	Reduction to earthing potentiona (Normally 0V)			
2	Ço9	Repeat	LED lamp switch for repeat indication. "H" level at ON.			
3	Co8	Start/Stop	Start-Stop control Signal. "H" level at start.			
. 4	Co7		No provided to this set.			
5	Co6	Start/Stop and repeat	For start-stop instructions.			
6	Co5	Cueing	When the cueing lever switch is turned to up direction, AI1 and this terminal are shorted.			
7	AI3	Limit switch	Doth in indicate //LI// lovel at avainance			
8	AI2	Limit switch	Both in indicate "H" level at cueing up.			
9	AI1	Cueing	Input terminal for cueing (2 motions).			
10	AIO	Start/Stop	Input terminal for start-stop and re			
11	BI3	Start detection	The terminal to check if the turntable is in rotation. "H" level during rotation.			
12	BI2	End detection	When the pulse for end defection of LP record is give, the level is turned to "H" and the arm return motion follows.			
13	BI1	End detection	Like BI2 terminal, end detection of EP record is made by BI2 terminal and this terminal.			
14	BIO	Rest	"L" level when the arm is on the rest and "H" level if the ar out of the rest.			
15	E00	Motor drive				
16	E01	Motor drive	Instruction is given to the arm and the driven motor (Forward rotation, reverse rotation, low speed, high, speed)			
17	E02	Motor drive				
18	E03		Not used for this set.			
19	TST	Test	Normally used at "L" level to test the discrete unit of micro computer.			
20	RST	Reset input terminal	Turn this terminal to "L" level, then the micro computer is reset.			
21	SNS0	Sensor	This is connected to ground for use.			
22	SNS1	Sensor	The input from the photo sensor is given as a pulse.			
23	D00	LED drive				
24	D01	LED drive	The output terminal to generate the inflared ray, LED			
25	D02	LED drive				
26	D03		Not used for this set			
27	VDD	Power input terminal	V <sub>DD</sub> voltage is applied. (Standard +5V)			
28	osc	Oscillator input terminal	The combination of a resistor and a capacitor as the terminal to generate clock signal, and the required clock is obtained by the oscillation circuit which contains LSI.			

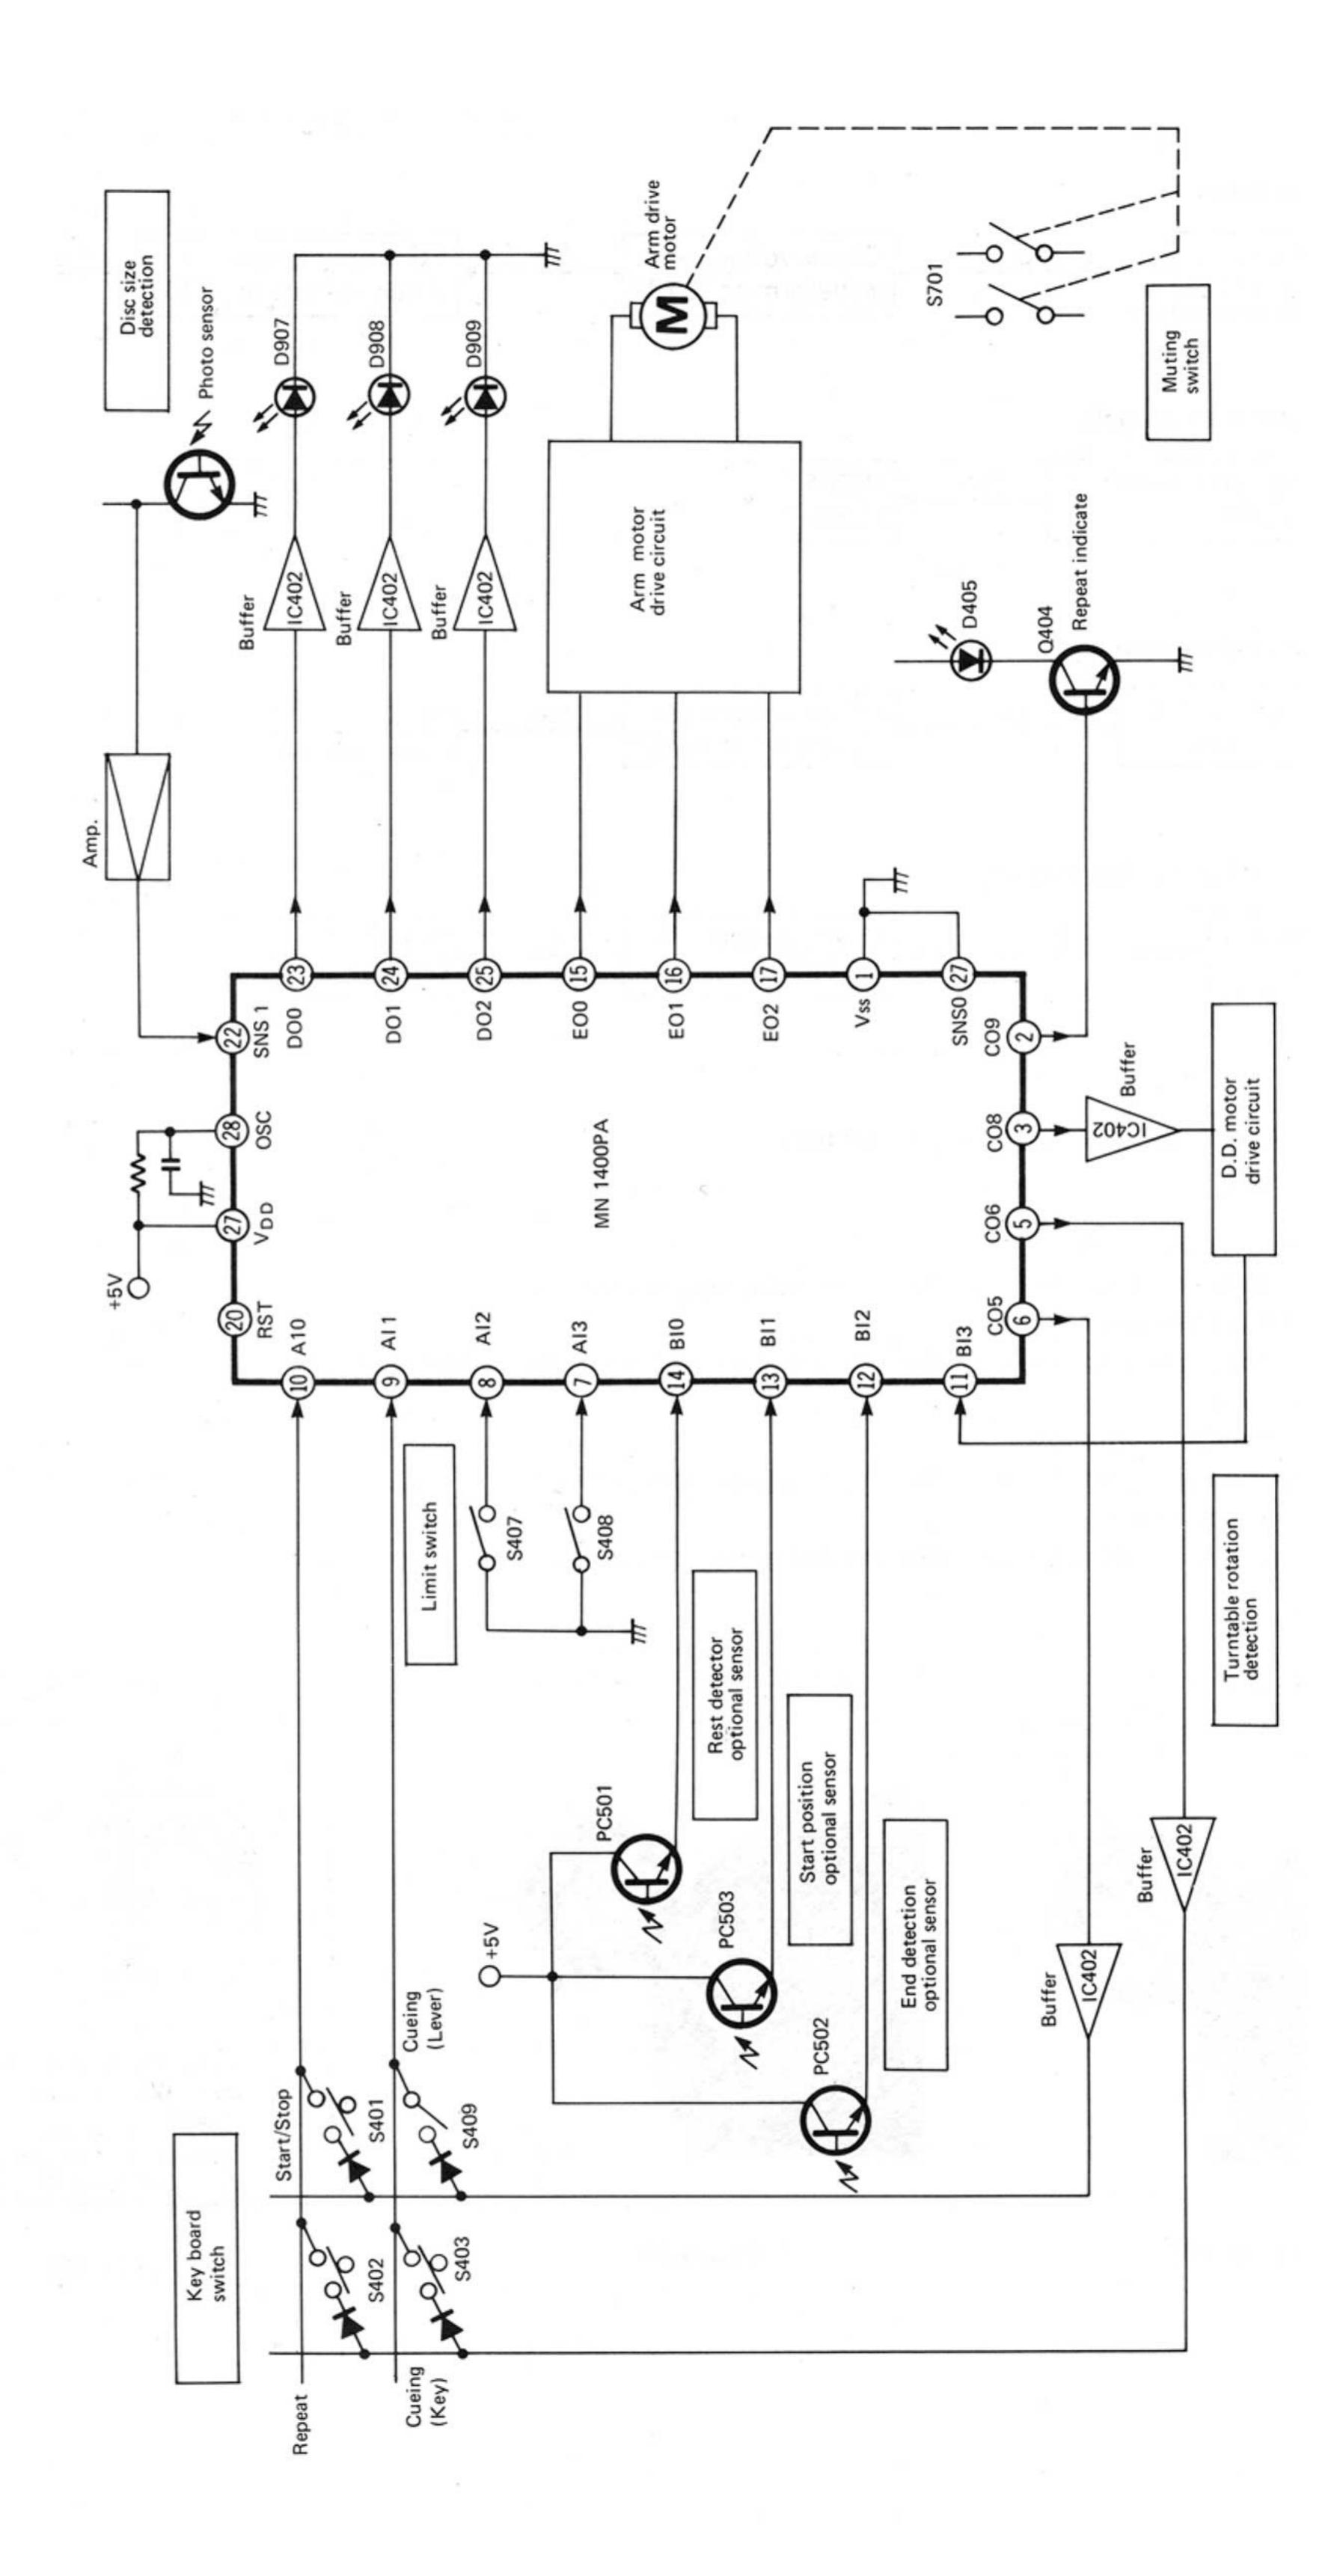

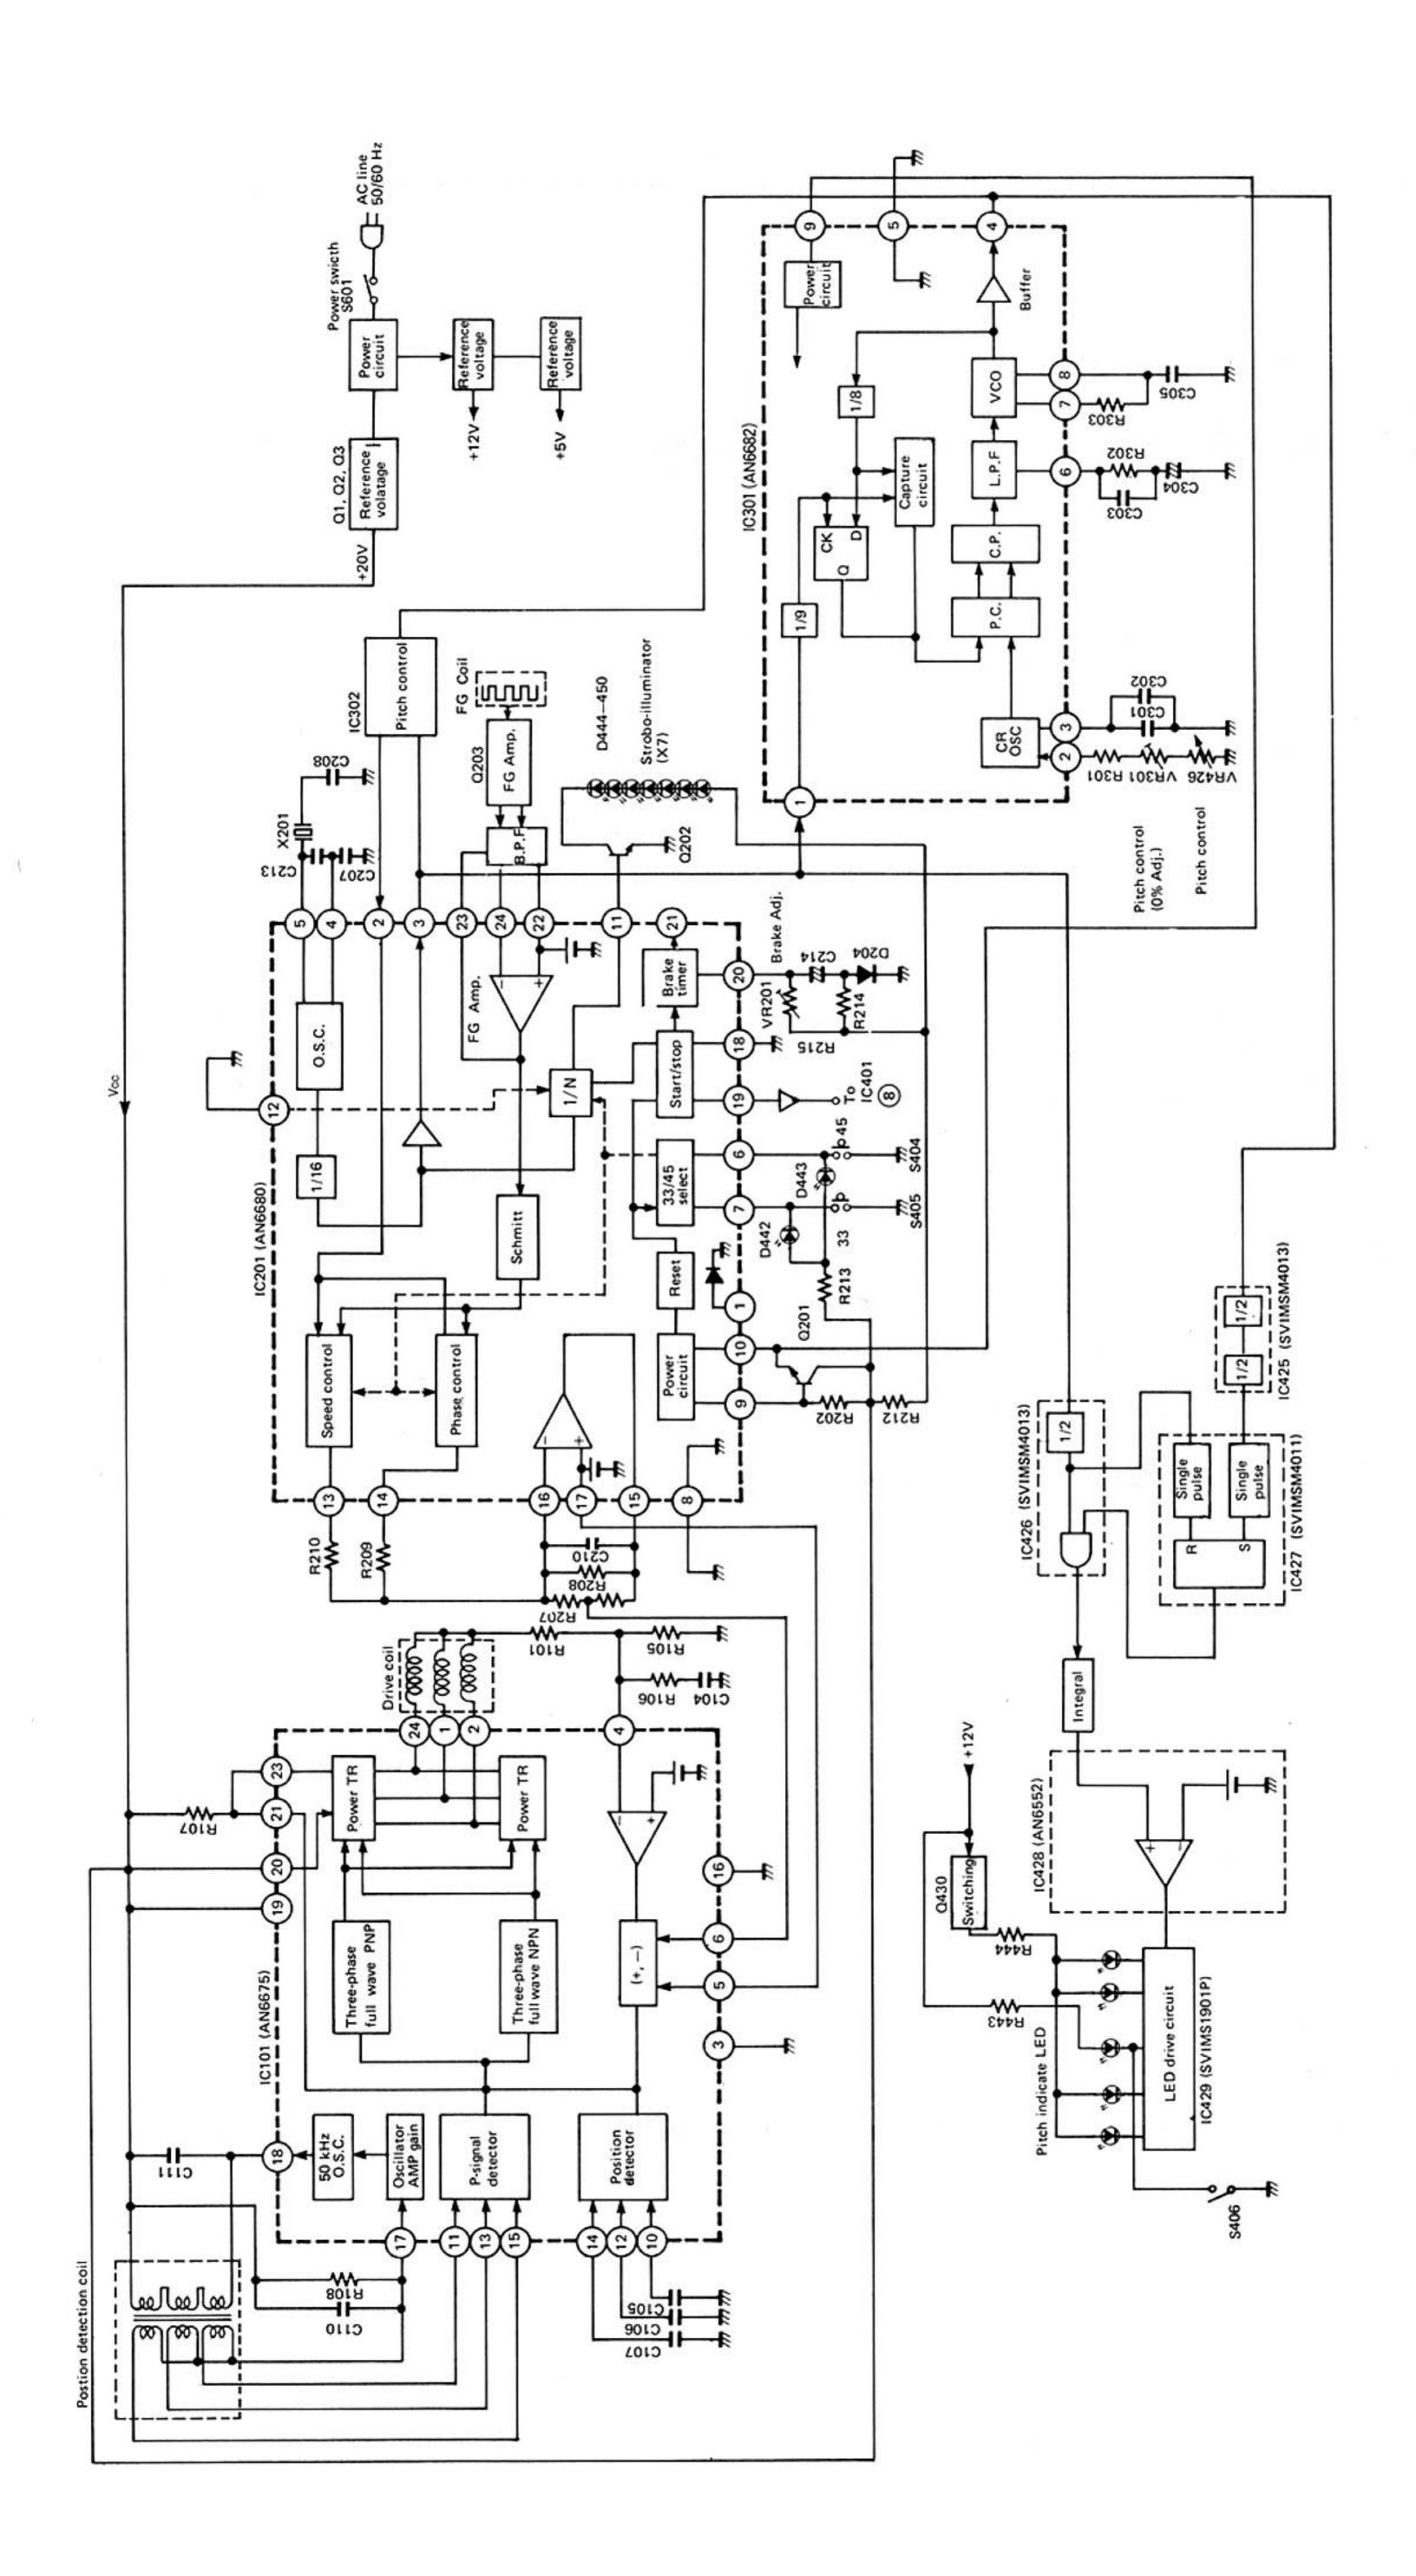

## ■ REPLACEMENT PARTS LIST (Electric Parts)


- Notes: 1. Part numbers are indicated on most mechanical parts.
  - Please use this part number for parts orders.
  - 2. A indicates that only parts specified by the manufacture be used for safety.

Ref. No.		Part No.	Part Name & Description
С	_		•
C1		SVIUPC14312	Integrated Circuit (Reference Voltage)
C2		SVIFS7805C	Integrated Circuit (Reference Voltage)
C101	-	AN6675	Integrated Circuit (Drive)
C201		AN6680	Integrated Circuit (Control)
			[
C301		AN6682	Integrated Circuit (Control)
C302, 427	1	SVIMSM4011	Integrated Circuit (CMOS)
C401		MN1400PA	Integrated Circuit (Micro Computer)
C402	l	SVIM53217P	Integrated Circuit (Buffer)
C425, 426	I	SVIMSM4013	Integrated Circuit (CMOS)
	1		
2428		AN6552	Integrated Circuit
429		SVIMS1901P	Integrated Circuit
RANSISTORS	_		
1	- 3	2SD389A-Q	Transistor
22, 3, 102, 202		2SD637	Transistor
A CONTRACTOR OF THE PARTY OF TH			The state of the s
2101		2SB641	Transistor
2201		2SC1846-R	Transistor
2203		2SC1328-T	Transistor
2401 ~ 406.		2SD636	Transistor
7441700		20000	1.0.0000
425, 426,428,			
429		100 presidente 21	
2427		2SC1047-C	Transistor
2430		2SB641	Transistor
2901, 902		2SD638	Transistor
2903, 904, 907, 908, 909		2SB643	Transistor
		200020	Tennoistas
905, 906 910 ~ 914		2SD636	Transistor
DIODES	L .		
	1 A	01/04/07	Described and the second secon
01,3	Δ	SVDS1RBA20Z	Rectifier
02, 301		MA1051	Diode, 5V Zener
0101		20A90	Diode
5010500 arazan			
102, 204		MA162A	Diode
0401 ~ 404		MA162A	Diode
425, 427, 428,	1	And the second second second second	
451		01/00/ 0000	Links English St. 1
0405, 429~434, 436 ~ 441,		SVDGL-9PR2	Light Emitting Diode
442, 443			
5.00000 m		******	0:-4-
0426		MA26TO-A	Diode
D435		SVDGL-9NG2,	Light Emitting Diode
0444 ~ 450		SVDGD4205ALC	Light Emitting Diode
901 ~ 906		MA162A	Diode
907 ~ 909		SVDGL-520	Light Emitting Diode
CRYSTAL			
X201		SVQU306115	Crystal, 4.19328MHz Oscillator
OWER TRANS	SEOF	RMFR	
T1	Δ	SLT60EU6B	Power Transformer
LAMP			
L1		SFDN172-01	Lamp, Stylus-illuminator
		31 DIV172-01	Lamp, Stylus-mullimator
FUSE			
F1	Δ	XBAS2A0305	Fuse, 350mA
2	Δ	XBA2F06NU100	Fuse, 600mA
VARIABLE RE	SIST	ORS	
MINDLE KE	JIJI	UNO	
R201	_	EVLS3AA00B54	Braking Adjustment, 50 kΩ (B)


Ref. No.		Part No.	Part Name & Description					
VR301 VR425 VR426 (S406)		EVMH1GA00B53 EVTS3MA00B52 EVHJXB001A24	Pitch Control $\pm 0\%$ Adjustment, $5 \text{ k}\Omega$ (B) Pitch Control, $20 \text{ k}\Omega$ (B)					
SWITCHES			(41			1.1		
S401 ~ 405 S407 ~ 408 S409 S601 S701 S801	Δ	EVQP5R04K SFDSD2MSC SFDSD2MSL13C SFDSSS5GL2 SFDSHSW0665B SFDSD2MSL-C	Switch, Power					
PHOTO INTE	RRUP	TERS						
PC501	1	ON1128	Photo Interru	ntor				
PC502, 503		ON1128 ON1128SK	Photo Interru Photo Interru	A. C.				
RESISTORS								
R1	1.7	ERD25FJ562	Carbon,	5.6kΩ,	1/4W,	± 5%		
R2		ERD25FJ682	Carbon,	6.8kΩ,	1/4W,	± 5%		
Ř3		ERD25FJ272	Carbon,	$2.7k\Omega$ ,	1/4W,	± 5%		
R4,		ERD25FJ471	Carbon,	470Ω.	1/4W,	± 5%		
R5 R101		ERD25FJ471 ERD25FJ103	Carbon,	470Ω,	1/4W,	± 5%		
R102		ERX1ANJ4R7	Carbon, Metal Film,	$10k\Omega$ , $4.7k\Omega$ ,	1/4W, 1/4W,	± 5% ± 5%		
R103		ERD25FJ472	Carbon,	4.7kΩ,	1/4W,	± 5%		
R104		ERD25TJ473	Carbon,	47kΩ.	1/4W,	± 5%		
R105		ERD25FJ103	Carbon,	10kΩ,	1/4W,	± 5%		
R106	- 1	ERD25FJ150	Carbon,	15Ω,	1/4W,	± 5%		
R107		ERX1ANJ1R5	Metal Film,	$1.5\Omega$ ,	1/4W,	± 5%		
R108		ERD25FJ103	Carbon,	$10k\Omega$ ,	1/4W,	± 5%		
R109, 110		ERX1ANJ4R7	Metal Film,	$4.7\Omega$ ,	1/4W,	± 5%		
R111		ERD25TJ473	Carbon,	47kΩ,	1/4W,	± 5%		
R112		ERD25FJ222	Carbon,	120kΩ,	1/4W,	± 5%		
R113 R201	1	ERD25TJ153 ERG1ANJ561	Carbon,	15kΩ,	1/4W,			
R202		ERD25FJ103	Metal Oxide, Carbon,	560Ω, 10kΩ,	1/4W, 1/4W,	± 5% ± 5%		
R203		ERD25FJ470	Carbon,	47Ω,	1/4W,	± 5%		
R204		ERD25FJ272	Carbon,	2.7kΩ,	1/4W,	± 5%		
R205		ERD25TJ124	Carbon,	120kΩ,		± 5%		
R206		ERD25TJ183	Carbon,	18kΩ,	1/4W,	± 5%		
R207		ERD25TJ563	Carbon,	56k $\Omega$ ,				
R208		ERD25TJ224	Carbon,	220kΩ,		± 5%		
R209	1	ERD25TJ154	Carbon,	150kΩ,		± 5%		
R210 R211	4	ERD25TJ183 ERD25FJ103	Carbon,	18kΩ,	1/4W,	± 5%		
R212		ERD25FJ103	Carbon,	10kΩ, 120Ω,	1/4W, 1/4W,	± 5% ± 5%		
R213		ERD25FJ122	Carbon,	1.2kΩ,	1/4W,			
R214		ERD25TJ223	Carbon,	22kΩ,	1/4W,	± 5%		
R215		ERD25FJ472	Carbon,	4.7kΩ,	1/4W	± 5%		
R216		ERD25TJ154	Carbon,	150kΩ,	1/4W,	± 5%		
R217	-	ERD25TJ223	Carbon,	$22k\Omega$ ,	1/4W,	± 5%		
R218 R219		ERD25FJ102 ERD25FJ332	Carbon, Carbon,	1kΩ, 3.3kΩ,	1/4W, 1/4W,	± 5% ± 5%		
R220		ERD25FJ221	Carbon,	220Ω,	1/4W,	± 5%		
R221		ERD25FJ471	Carbon,	470Ω,	1/4W.	± 5%		
R222		ERD25FJ391	Carbon,	390Ω,	1/4W,	± 5%		
R301		ERO25CKF3301	Metal Film,	3.3kΩ,	1/4W,	± 5%		
R302		ERD25FJ471	Carbon,	470Ω,	1/4W,	± 5%		
R303		ERD25FJ822	Carbon,	8.2kΩ,	1/4W,	± 5%		
R304 R306	14	ERD25FJ152 ERD25TJ223	Carbon,	1.5kΩ,	1/4W,	± 5%		
R307		ERD251J223	Carbon, Carbon,	$22k\Omega$ , $3.9k\Omega$ .	1/4W, 1/4W,	± 5% ± 5%		
R308		ERD25TJ473	Carbon,	$47k\Omega$ ,	1/4W,	± 5%		
R309	793	ERD25TJ223	Carbon,	22kΩ,	1/4W,	± 5%		
R401		ERD25FJ331	Çarbon,	330Ω,	1/4W,	± 5%		
R402		ERD25TJ223	Carbon,	$22k\Omega$ .	1/4W	± 5%		

Ref. No.		Part No.	Part Na	ame & Desc	cription	
R403, 404		ERD25FJ102	Carbon,	1kΩ,	1/4W,	± 5%
R405, 406		ERD25FJ222	Carbon,	$2.2k\Omega$ ,	1/4W,	± 5%
3407, 408	1	ERD25FJ472	Carbon,	4.7kΩ,	1/4W,	± 5%
3409	1	ERD25FJ472	Carbon,	$4.7k\Omega$ .		
R410, 411		ERD25TJ104	Carbon,			
3412		ERD25TJ473	Carbon,	47kΩ,	1 - The Control of th	
3413		ERD25FJ102	Carbon,	1kΩ,		
R414		ERD25FJ472		4.7kΩ,	3040355	
3415, 416		ERD25TJ223	Carbon,	22kΩ.	1/4W,	
			Journal,		.,,	_ 0.0
R417		ERD25TJ223	Carbon,	$22k\Omega$	1/4W,	± 5%
3418		ERD25TJ183		18kΩ,		
3419		ERD25TJ123	Carbon,	12kΩ,	1/4W.	± 5%
R420	1	ERD25FJ102	A STATE OF THE STA	1kΩ,		± 5%
3421		ERD25FJ222	Carbon,	$2.2k\Omega$	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
3422		ERD25FJ150	Carbon,	15Ω,	1/4W,	
R426, 427	1	ERD25FJ103	Carbon,	10kΩ,	1/4W,	
R428		ERD25FJ103	200 0000	10kΩ,		
R430		ERD25FJ103	Carbon,	- 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1		
1430		END2913223	Carbon,	22kΩ,	1/4W,	± 5%
R431		ERD25FJ103	Carbon,	10kΩ,	1/4W,	± 5%
8432		ERD25FJ103	Carbon,	10kΩ,		
R433		ERD25TJ223	Carbon,	22kΩ,		
R434		ERD25TJ473	Carbon,	47kΩ,	100000000000000000000000000000000000000	
R435		ERD25FJ102	Second Color of Color	1kΩ,		
3436		ERD25TJ104	Per Change Control (Control (C	100kΩ,		
3437		ERD25FJ152		1.5kΩ,		200
3438		ERD25FJ562	Carbon,	5.6kΩ,		
3439		ERO25CKF1802		18kΩ,	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
R440		ERO25CKF4303	Metal Film,	430kΩ,	1/4W,	± 2%
2441		EDDSEE 1403	Corbon	101-0	1 / 4147	1 500
R441		ERD25FJ103	Carbon,	10kΩ,		
R442		ERD25FJ471	Carbon,	470Ω,		
R443		ERD25FJ101	Carbon,	100Ω,		
3444		ERD25FJ681	Carbon,	680Ω,	and the second s	
R445		ERD25FJ102	Carbon,	1kΩ,	1/4W,	
R446		ERD25FJ222	Carbon,	$2.2k\Omega$ ,	1/4W,	± 5%
R447		ERD25TJ123	Carbon,	12kΩ,	1/4W,	± 5%
R448		ERD25FJ103	Carbon,			
R449		ERD25FJ152	Carbon,		The second secon	
R450		ERD25FJ821		820Ω,		
R451		ERD25TJ473	Carbon,		and the state of t	
R455		ERD25FJ561	Carbon,			
R601	Δ	ERD50FJ4R7	Carbon,		100 Page 100	
R901, 902	- M	ERD25FJ102	Carbon,			
R903, 904		ERD25FJ102				
			Carbon,			
R905, 906		ERD25FJ332	Carbon,			
R907, 908		ERD25FJ222	Carbon,			
R909, 910		ERD25FJ332	Carbon,			
R911		ERG1ANJ150	Metal Oxide,		14 19 1 T. 14 10 Th. 10 10 10	
R912, 913		ERD25FJ102	Carbon,			
R914		ERG1ANJ150	Metal Oxide,			
R915, 916		ERD25FJ102	Carbon,	1kΩ,	1/4W,	± 5%
R917		ERG1ANJ150	Metal Oxide,			
R918, 919		ERD25FJ102	Carbon,		140 150 150 150 150 150 150 150 150 150 15	
R920		ERD25FJ331	Carbon,		The second secon	
R921		ERD25FJ101	Carbon,			
R922		ERD25FJ471	Carbon,	470Ω.	1/4W,	± 5%
R923		ERD25TJ474	Carbon,	470kΩ,	1/4W,	
				,		_ 0/
R924		ERD25FJ332	Carbon,	3.3kΩ,	1/4W,	± 5%
R925		ERD25TJ474	Carbon,	470kΩ,	1/4W,	
R926		ERD25FJ102	Carbon,	1kΩ,	1/4W,	
R927		ERD25FJ103	Carbon,	10kΩ,	1/4W,	
R928		ERD25FJ472	Carbon,	4.7kΩ,	1/4W,	
R929		ERD25FJ103	Carbon,	10kΩ,	1/4W,	
R930		ERD25FJ472	Carbon,	$4.7k\Omega$ ,	1/4W,	
R931, 932		ERD25FJ103	Carbon,	4.7kΩ,	1/4W,	± 5%
			Joan Boll,	10011,	1,444,	1 5%
CAPACITORS						
21		ECEB1HS471	Electrolytic,	470µF,	50V	
	-				V 400 Table 10 Table	
C2		ECEA1VS330	Electrolytic,	33µF,	35V	


Ref. No.	Part No.		Part Name & Description				
C4, 5		ECEB1VS331	Electrolytic,	330µF,	35V		
C6		ECQM1H104KZ		0.1µF,	50V,	±10%	
C7		ECEA1CS221	Electrolytic,	220µF,	16V		
C8		ECEA0JS471	Electrolytic,	470µF,	6.3V		
C9		ECQM1H104KZ	Polyester,	0.1µF,	50V,	±10%	
C101, 102		ECEA1VS330		33μF,	35V		
C103		ECEA1VS330	Electrolytic,	33μF,	35V		
C104, 105		ECQM1H104KZ	Polyester,	0.1μF,	50V,	±10%	
C106, 107		ECQM1H104KZ		$0.1\mu F$ ,	50V,	±10%	
C108		ECEA1ES101	Electrolytic,		25V		
C109, 110		ECQM1H104KZ		0.1μF,	50V,	±10%	
C111		ECQM1H562KZ	Polyester,	0.0056µF,		±10%	
C112 C201		ECEA1JS4R7 ECEA1CS330		4.7μF, 33μF,	63V 16V	- 1	
C202, 203		ECEA50Z1		1μF,	50V	- 1	
C204		ECQM1H473KZ	Polyester,	0.047µF,	50V,	±10%	
C205		ECEA1AS221	Electrolytic,		10V	210%	
C206		ECEA50Z1	Electrolytic,	1μF,	50V		
C207		ECCD1H101K	100	100pF,	50V,	±10%	
C208		ECCD1H390K	Ceramic,	39pF,	50V,	±10%	
C209		ECEA1ES101	Electrolytic,	100μF,	25V		
C210		ECQM1H224KZ	Polyester,	$0.22 \mu F$ ,	50V,	±10%	
C211		ECQM1H473KZ		$0.047 \mu F$	50V,	±10%	
C212		ECEA50Z3R3	Electrolytic,	3.3µF,	50V		
C213		ECCD1H471K	Ceramic,	470pF,	50V,	±10%	
C214		ECEA1ES101	Electrolytic,	100μF,	25V	- 1	
C215		ECEA50Z1	Electrolytic,	1μF,		- 1	
C216		ECEA1ES470	Electrolytic,			+80 0	
C217		ECKD1H104ZFZ	Ceramic,	0.1μF,		+80 % -20 %	
C301, 302 C303		ECQK1123FZ ECEA50Z1	Polyester, Electrolytic,	0.012μF, 1μF,	125V, 50V	±1%	
C304		ECEA1HS100	Electrolytic,		50V	- 1	
C305		ECQM1H222KZ	Polyester,	0.0012µF,		±10%	
C306		ECEA50Z1	Electrolytic,	1μF,	50V	10/0	
C401		ECEA1CS330	Electrolytic,	33μF,	16V	1	
C402		ECKD1H104ZF	Ceramic,	0.1µF.	50V,	+80%	
C403		ECCD1H101K	Section 19 and 1	100pF,		±10%	
C436		ECKD1H473ZF	Ceramic,	0.047µF,	Action and the second second second	±10%	
C437		ECKD1H223ZF	Ceramic,	$0.022 \mu F$ ,		+80 <sub>%</sub> -20 <sup>%</sup>	
C438		ECKD1H473ZF	Ceramic,	$0.047 \mu F$ ,	50V,	±10%	
C425, 426		ECCD1H101K	Ceramic,	100pF,		±10%	
C427, 428	1	ECCD1H101K	Ceramic,	100pF,	50V,	±10%	
C429, 430		ECQM1H473KZ	Polyester,	0.047μF,	50V,	±10%	
C431		ECEA1HS100	Electrolytic,	10μF,	50V	+80	
C433, 434		ECKD1H104ZFZ	Ceramic,	0.1μF,	50V,	+80% -20%	
C435		ECKD1H104ZFZ	Ceramic,		50V,	+80% -20%	
C601 [M]	<b>A</b>	ECQF1A473MD	Polypropylene				
C601 [MC]	Δ	ECQU1A473MD	Polyester,		125V,	±20%	
C901, 902 C903		ECQM1H103KZ	Polyester,		50V,	±10%	
C904		ECEA1CS221	Polyester,	0.1μF,	50V,	±10%	
C905		ECKD1H104ZF	Electrolytic, Ceramic,		16V,	+80%	
C906		ECSF 16E 10ZB	Tantalum,	0.1μF, 10μF,	125V, 16V	+80% -20%	
		ECQM1H102KZ	Polyester,	0.01µF,	50V,	±10%	
C907, 909 C908		ECKD1H102KB	Ceramic,		50V,	±10%	
C910		ECEA1HS100	Electrolytic,	10μF,	50V		
C911, 912		ECKD1H104ZFZ	Ceramic,	0.1µF,	50V,	±10%	
C913		ECKD1H104ZFZ	Ceramic,	0.1µF,	50V,	±10%	
C914, 915		ECKD1H102KB	Ceramic,	0.001µF,	50V,	±10%	
	-						
	_				-		

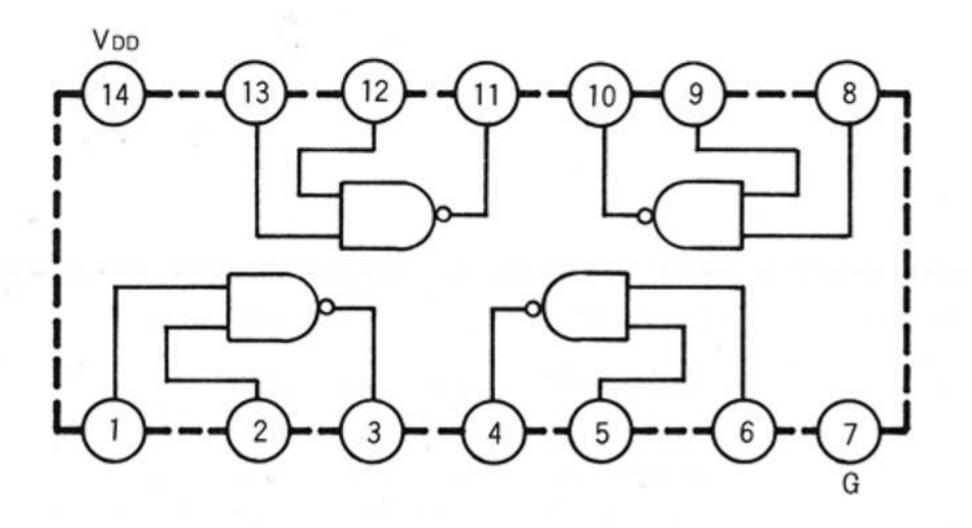


#### IC302, 427 (SVIMSM4011)

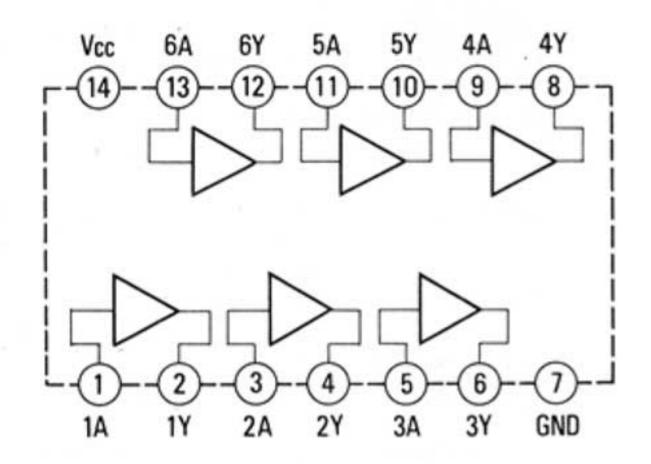

#### IC402 (SVIM53217P)

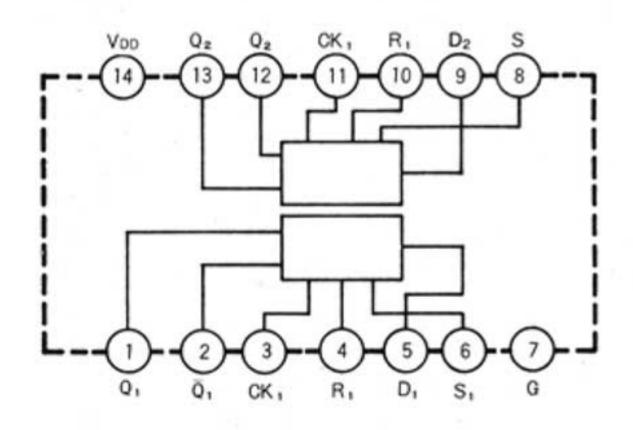

#### IC425, 426 (SVIMSM4013)

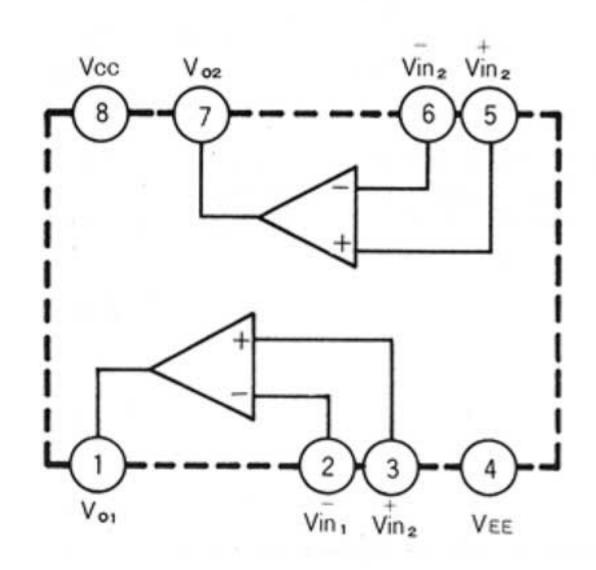


IC428 (AN6552)

#### NOTES:

- 1. **S401**: Stop switch in "OFF" position. (not-push condition)
- 2. **S402**: Repeat switch in "OFF" position. (notpush condition)
- 3. **S403**: Cueing key switch in "OFF" position. (not-push condition)
- Speed selector switch (33r.p.m.) in "OFF" 4. **S404**: position. (not-push condition)
- Speed selector switch (45r.p.m.) in "OFF" 5. **S405**: position. (not-push condition)
- 6. **S406**: Pitch control switch in "ON" position.
- (center position). Cueing-up detector switch in "ON" posi-7. **S407**:
- tion. (Arm Lift-down position) Cueing-down detector switch in "ON" 8. **S408**:
- position. (Arm Lift-down position)
- 9. **S409**: Cueing Lever Switch in "OFF" position.
- 10. **S601**: Power switch in "ON" position.
- 11. **S701**: Muting switch in "OFF" position.
- Stylus-illuminator switch in "OFF" posi-12. **S801**: tion.
- Indicated voltage values are the voltage when the arm lift is at a stop in the lowest position.
- 14. Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.
- 15. This schematic diagram may be modified at any time with the developent of new technology.

#### IMPORTANT SAFETY NOTICE

THE SHADED AREA ON THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL TURES IMPORTANT FOR SAFETY. WHEN SERVICING IT IS ESSENTIAL THAT ONLY MANUFACTUR'S SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SHADED AREAS OF THE SCHEMATIC.

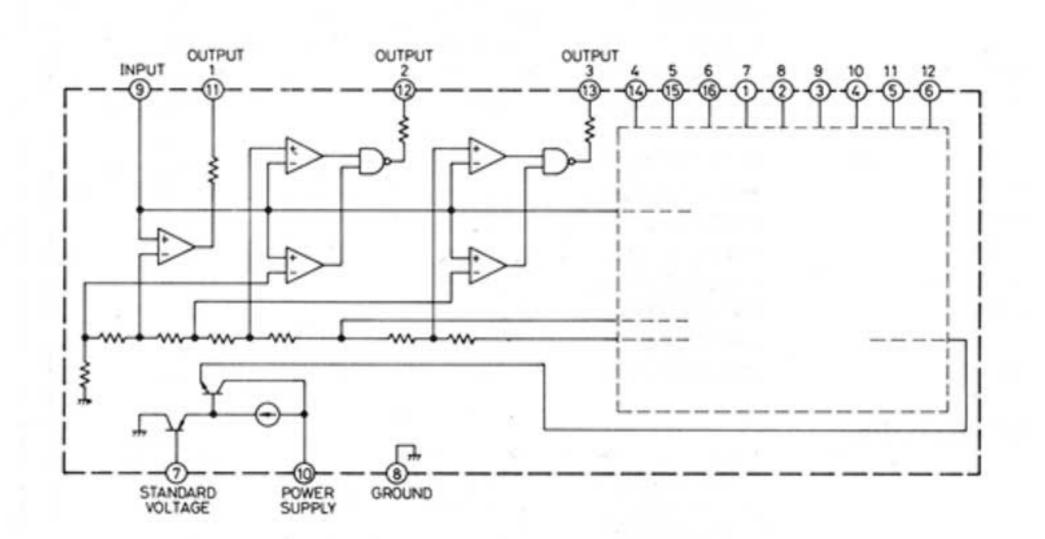

IC429 (SVIMS1901P)

## ■ SCHEMATIC DIAGRAM (Drive Circuit Board) Q101 Q101 Q102 2SB641 2SD637 SVDS1RBA20Z To control circuit ① 600mA 2SD389 → To control circuit ® terminal ➤ To control circuit ② terminal Q203 2SC1328 Q2, 3 2SD637 AC 120 V (50/60 Hz) OA90 W 2.2¥ \$.2¥ D102 MA150 SVDRD5.1EBS C108 25V100 R107 1.5 (1W) R206 18K R108 10K C205 6V220 R208 220K SVIMSM4011 R204 2.7K R209 150K ₹.7 7.7 Brake adj. C111 0.0056 R205 120K C206 50V1 VR201 50KB R211 10K R214 22K IC201 AN6680 IC101 AN6675 IC301 AN6682 To control circuit ® terr 560 (1**W**) R202 10K TP27 TP26 \_\_\_\_\_ -هه-京中 Pitch control C302 0.012 ±0% adj. C209 16V100 R105 10K 18 Q202 2SD637 To control circuit ⑥ terminal ← → To control circuit ① terminal To control circuit ⑤ terminal ← To control circuit 2 terminal To control circuit 4 terminal To control circuit 7 terminal To control circuit 3 terminal To control circuit 6 terminal To control circuit 2 terminal To control circuit (5) terminal To control circuit 1 terminal

## ■ REFERENCE VOLTAGE AND WAVEFORM AT EACH IC

## IC101 (AN6675)

	Start	Stop		Start	Stop		Start	Stop
1	10V	1.7V						20,43
2	10V	1.7V	12	15v	15V	18	Same as at right	16V
3	0 <b>V</b>	0V				10	Same as at right	20V
4	5V	1.7V		**************************************	20µs			1
(5)	5V	5V	13	15∨	15V	19	20V	20V
6	5V	6.6V		•	•	20	20V	20V
7	0V	0V	14)	15V	15V	21)	20V	20V
8	5V	5V		<b>1</b>	20µs	22	1.4V	0V
9	0V	0V	(15)	<b>*************************************</b>	20µs	23	20V	20V
(0)	~~~±	15V		•	<u> </u>	24)	10V	1.7V
10	15V	13 V	16	0V	0V			
	anani		17)	15V	15V	1		
11)	154	15V				1		
	•	•						

#### IC201 (AN6680)

	Start	Stop		Start	Stop		Start	Stop
1	2.5V	2.5V	8	0V	0V	16	5V	2.5V
2	Same as at right	4µs	9	10V	10V	17)	5V	5V
			10	9V	9V	18	0V	0V
					+ 10ms + +	19	7V	0.14V
			(1)	Same as at right	0.8v	20	0.4V	5.8V
3	Same as at right					21)	1.5V	0.2V
			(12)	0 <b>V</b>	0V	22	3V	3V
4	Same as at right	0.24µs - 5V	13)	1 1 5v	0.2V	23	1V 20ms 3V	3V
(5)	Same as at right	0.24µ6	(14)	20ms 5v	20ms - 1 2.5v	24)	2.8V	2.8V
6	3.4V	3.4V	(15)	5v 55v	8V			
7	0V	0 <b>V</b>	1					,

## IC301 (AN6682)

	Start	Stop		Start	Stop		Start	Stop
1)	Same as at right	14 1 3 V	4	Same as at right	4.8v	8	Same as at right	0.4V WWW 1.8V
			(5)	0V	0V	9	9V	9V
2	Same as at right	2V	6	3.9V	3.9V			
3	Same as at right	0.2ms 1V/\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	7	Same as at right	4 μs			

## IC302 (SVIMSM4011)


	Start	Stop		Start	Stop		Start	Stop
		448			+ 446 +- 1	9	0.6V	0.6V
1	Same as at right	J. T.	(5)	Same as at right	5∨	10	5V	5V
						(1)	5V	5V
2	5V	5V	6	5V	5V	12	0.6V	0.6V
	Same as at right  Same as at right  Same as at right	-1 4µs - 1	7	0V	0V	13	0.6V	0.6V
3		Same as at right	448 T 5v	14)	5V	5V		
4	5V	5V						

## Q202 (2SD637)


	Start	Stop
E	0V	0V
С	Same as at right	10ms
В	Same as at right	0.8V

# TERMINAL GUIDE OF TRANSISTOR AND IC


SVIμPC14312	AN6675	AN6680			
123	13 12 12 12 13 12	13 12 12 12 12 12 12 12 12 12 12 12 12 12			
AN6682	SVIMSM4011	SVIMSM4013			
123456789					
AN6552	SVIMS1901P	2SD389			
8 5	9 8	BCE			
2SD637, 2SD638, 2SD636, 2SB641,	2SC1846	2SC1328, 2SC1047			
2SB643	E CB	E C B			
MN1	MN1400PA				
28 25	7777777777 20. 15	132			

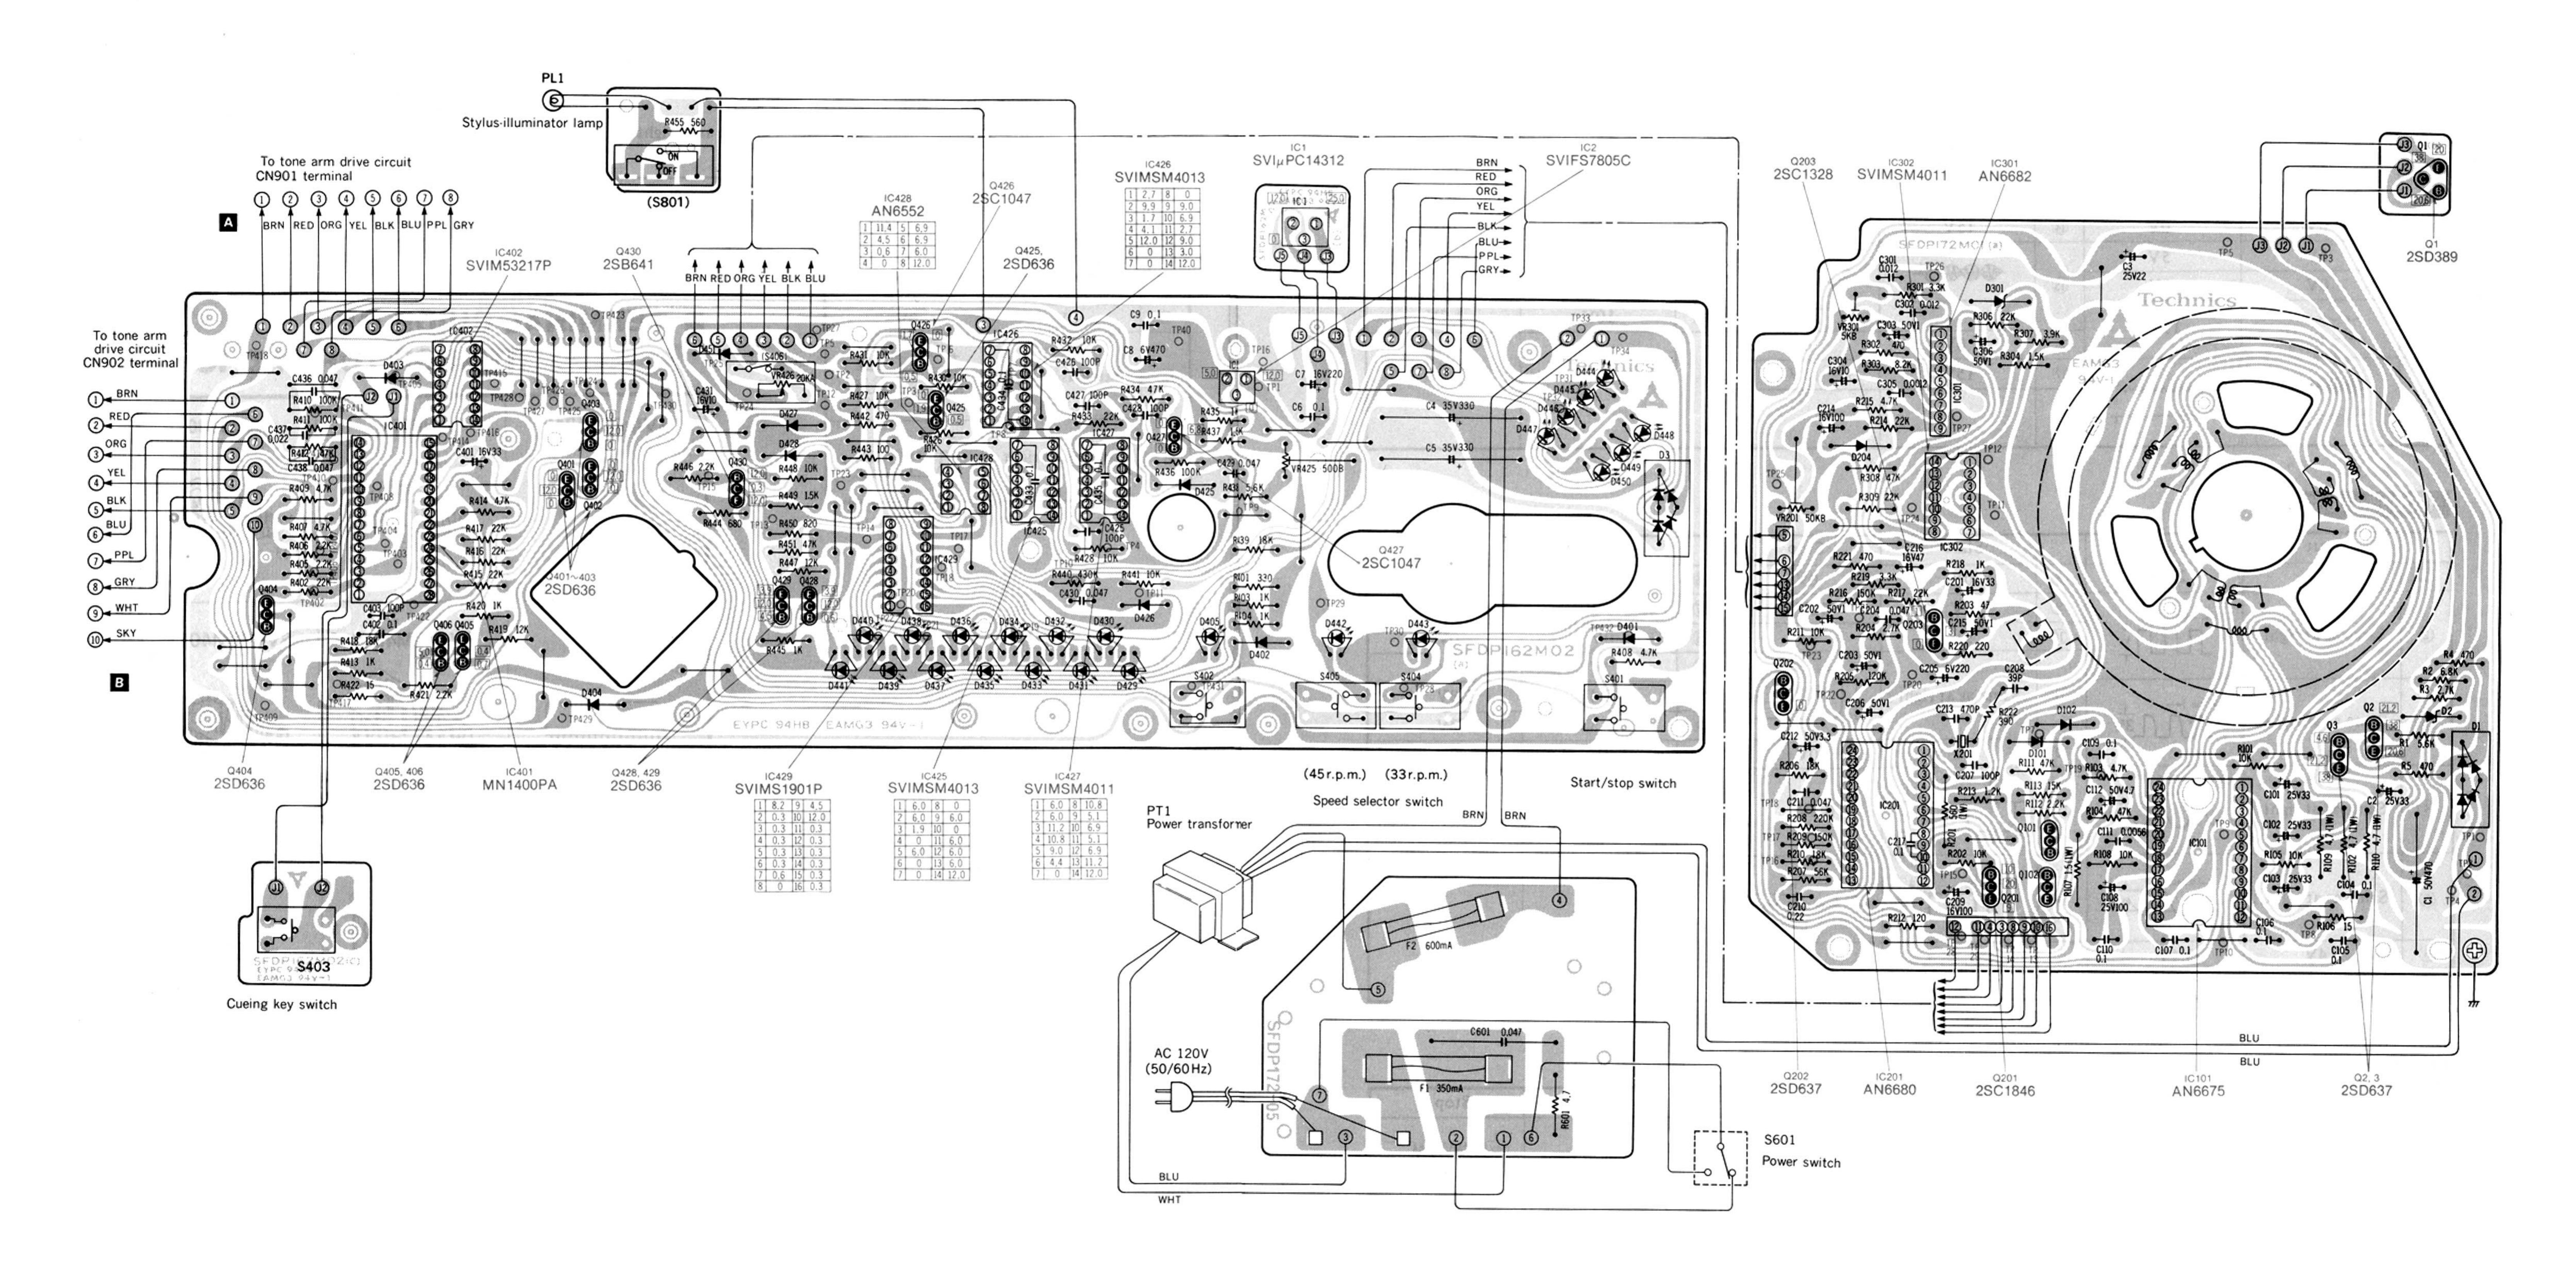

# ■ SCHEMATIC DIAGRAM (Control Circuit Board)

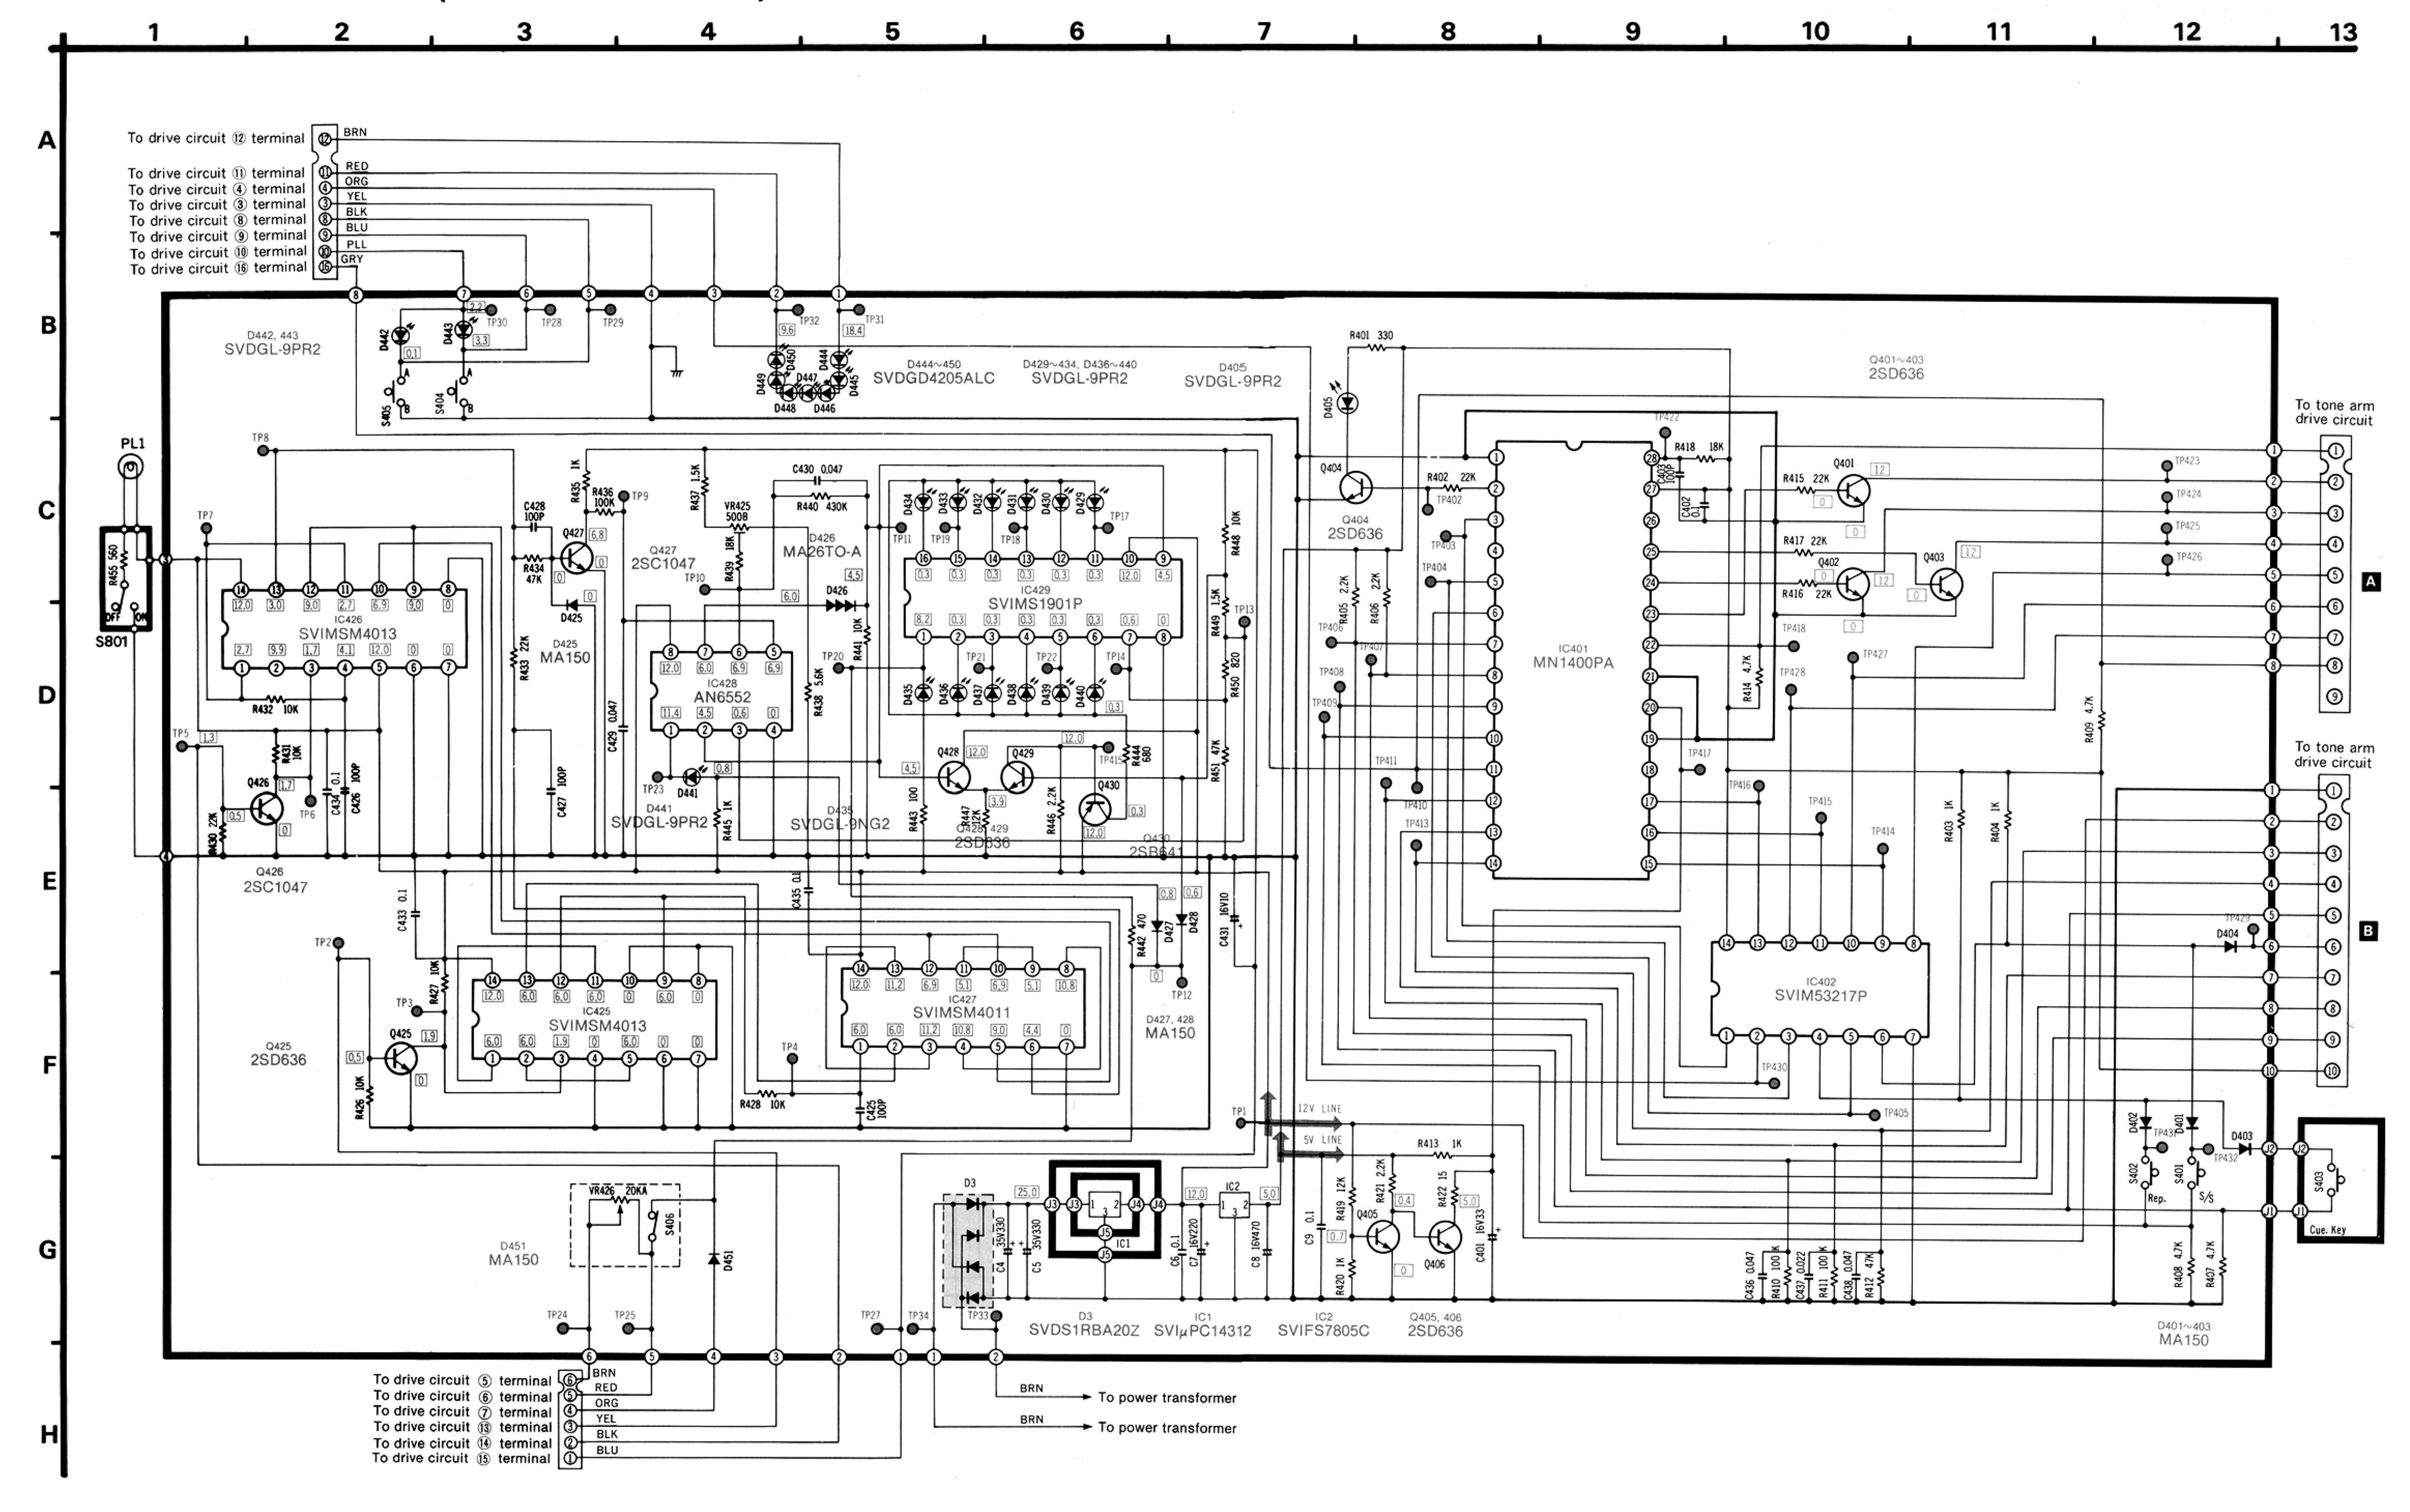

## ■ TONE ARM DRIVE CIRCUIT BOARD

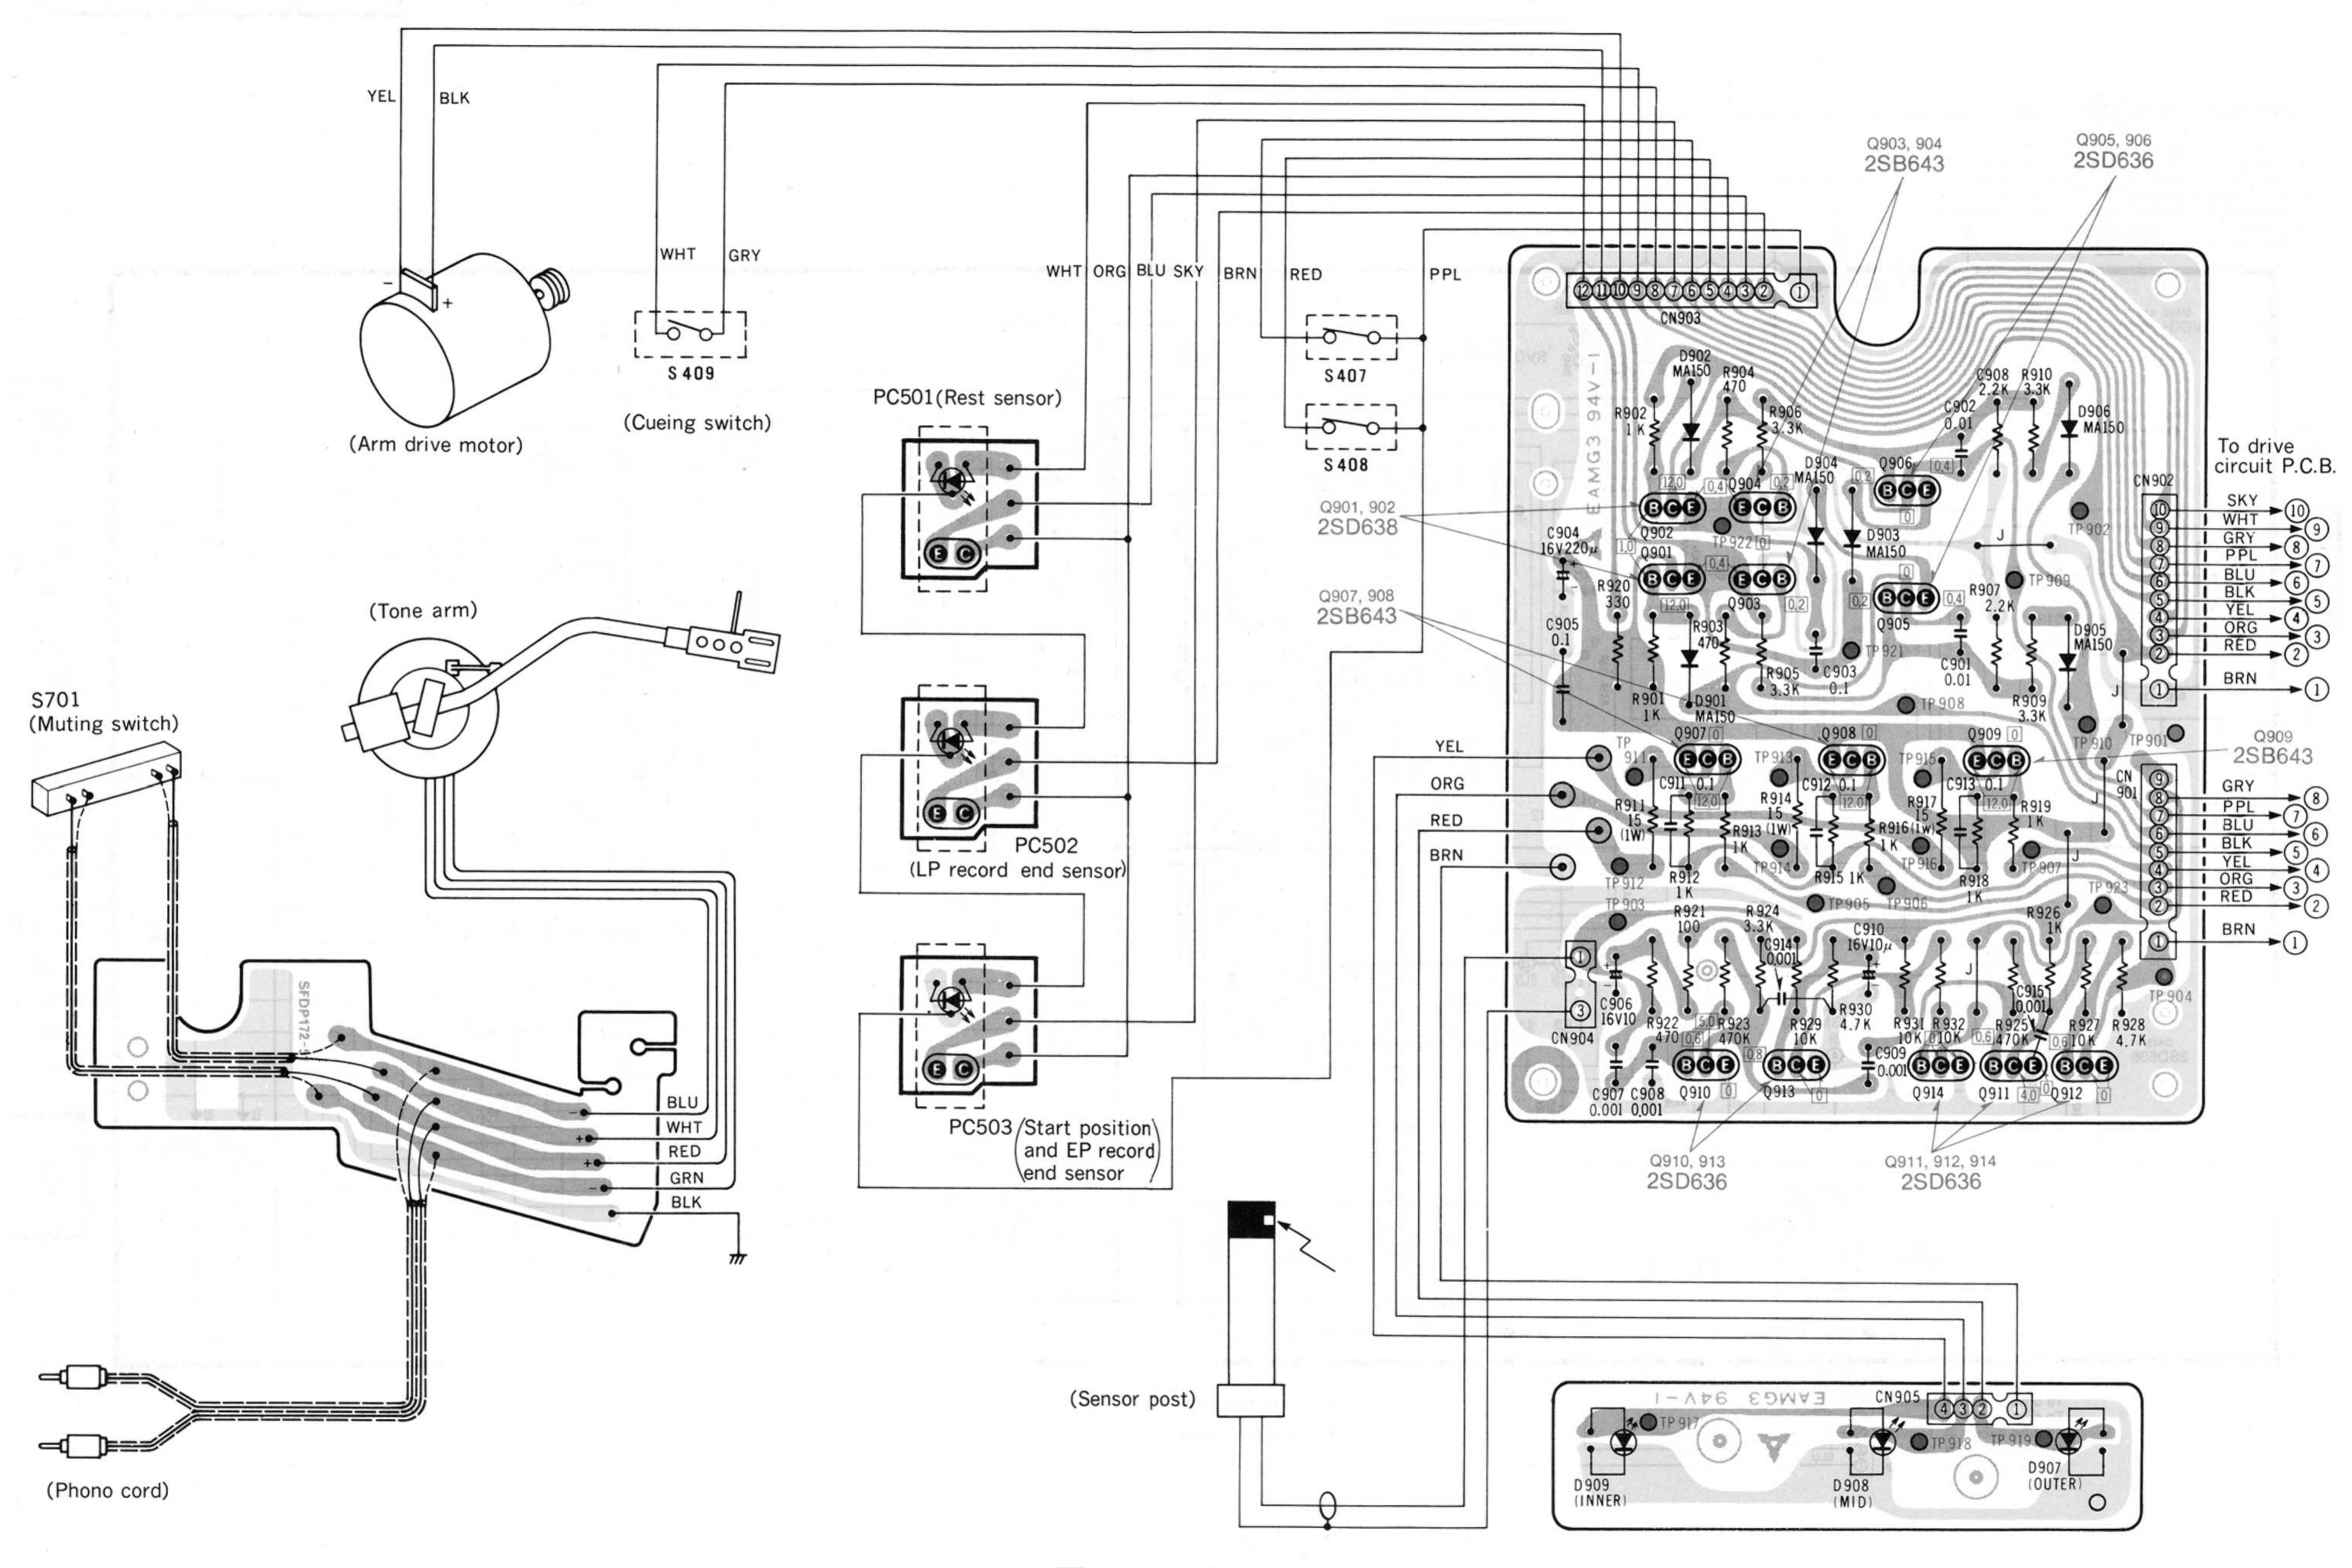

#### ■ SCHEMATIC DIAGRAM (Tone Arm Drive Circuit Board) Q910 2SD636 Q911 Q912 Q907 2SB643 Q908 2SB643 Q909 2SB643 2SD636 2SD636 R 921 100 R 926 1K R 922 1 470 **≤** R927 10K Photo. TR. R911 \$15 (1W) R916 1 K C 910 16V10μ = CN 901 Q914 2SD636 2SD636 ● TP904 To control circuit (1) terminal D ● TP905 To control circuit (2) terminal ● TP906 To control circuit ▲ ③ terminal ← Q901 2SD638 Q902 ● TP907 2SD638 To control circuit 4 terminal ●TP908 R 920 330 12 WHT To control circuit A ⑤ terminal ← D901~906 MA150 R901 ₹ TP 921 ₹ R 902 11 BLK To control circuit ▲ 6 terminal ← ●TP910 TP 922 PC501 To control circuit A 7 terminal ← (Rest sensor) ●TP923 **→** D 902 To control circuit ▲ ® terminal ← D 901 🛨 PC501 % S 409 ON1128 8 GRY 7 SKY R 906 3.3 K CN 902 PC502 (LP record \ 0.4 R904 470 C 902 0.01 To control circuit 11 terminal (4) RED \$407 ORG \$408 C 901 ● TP902 12V LINE R 909 [ 3.3K € ₹ 8910 ₹ 3.3 K 3 BLU 777 D904 BI 2(END) D 903 777 PC503 To control circuit ■ 4 terminal -BLK R 908 **₹** 2.2 K D905 (Start position) and EP record BIO (REST) **▼**D906 To control circuit ■ 5 terminal -\end sensor To control circuit ■ 6 terminal ◄ CO5(LIFT) PC502, 503 To control circuit ■ 7 terminal < ON1128SK BI 1(LEAD)IN To control circuit ■ ® terminal -To control circuit (9) terminal ←

2SD636

D901~906

MA150

5V LINE


2SB643

Q906 2SD636

Q904

2SB643

## **■ EXPLODED VIEW (Main Base)**

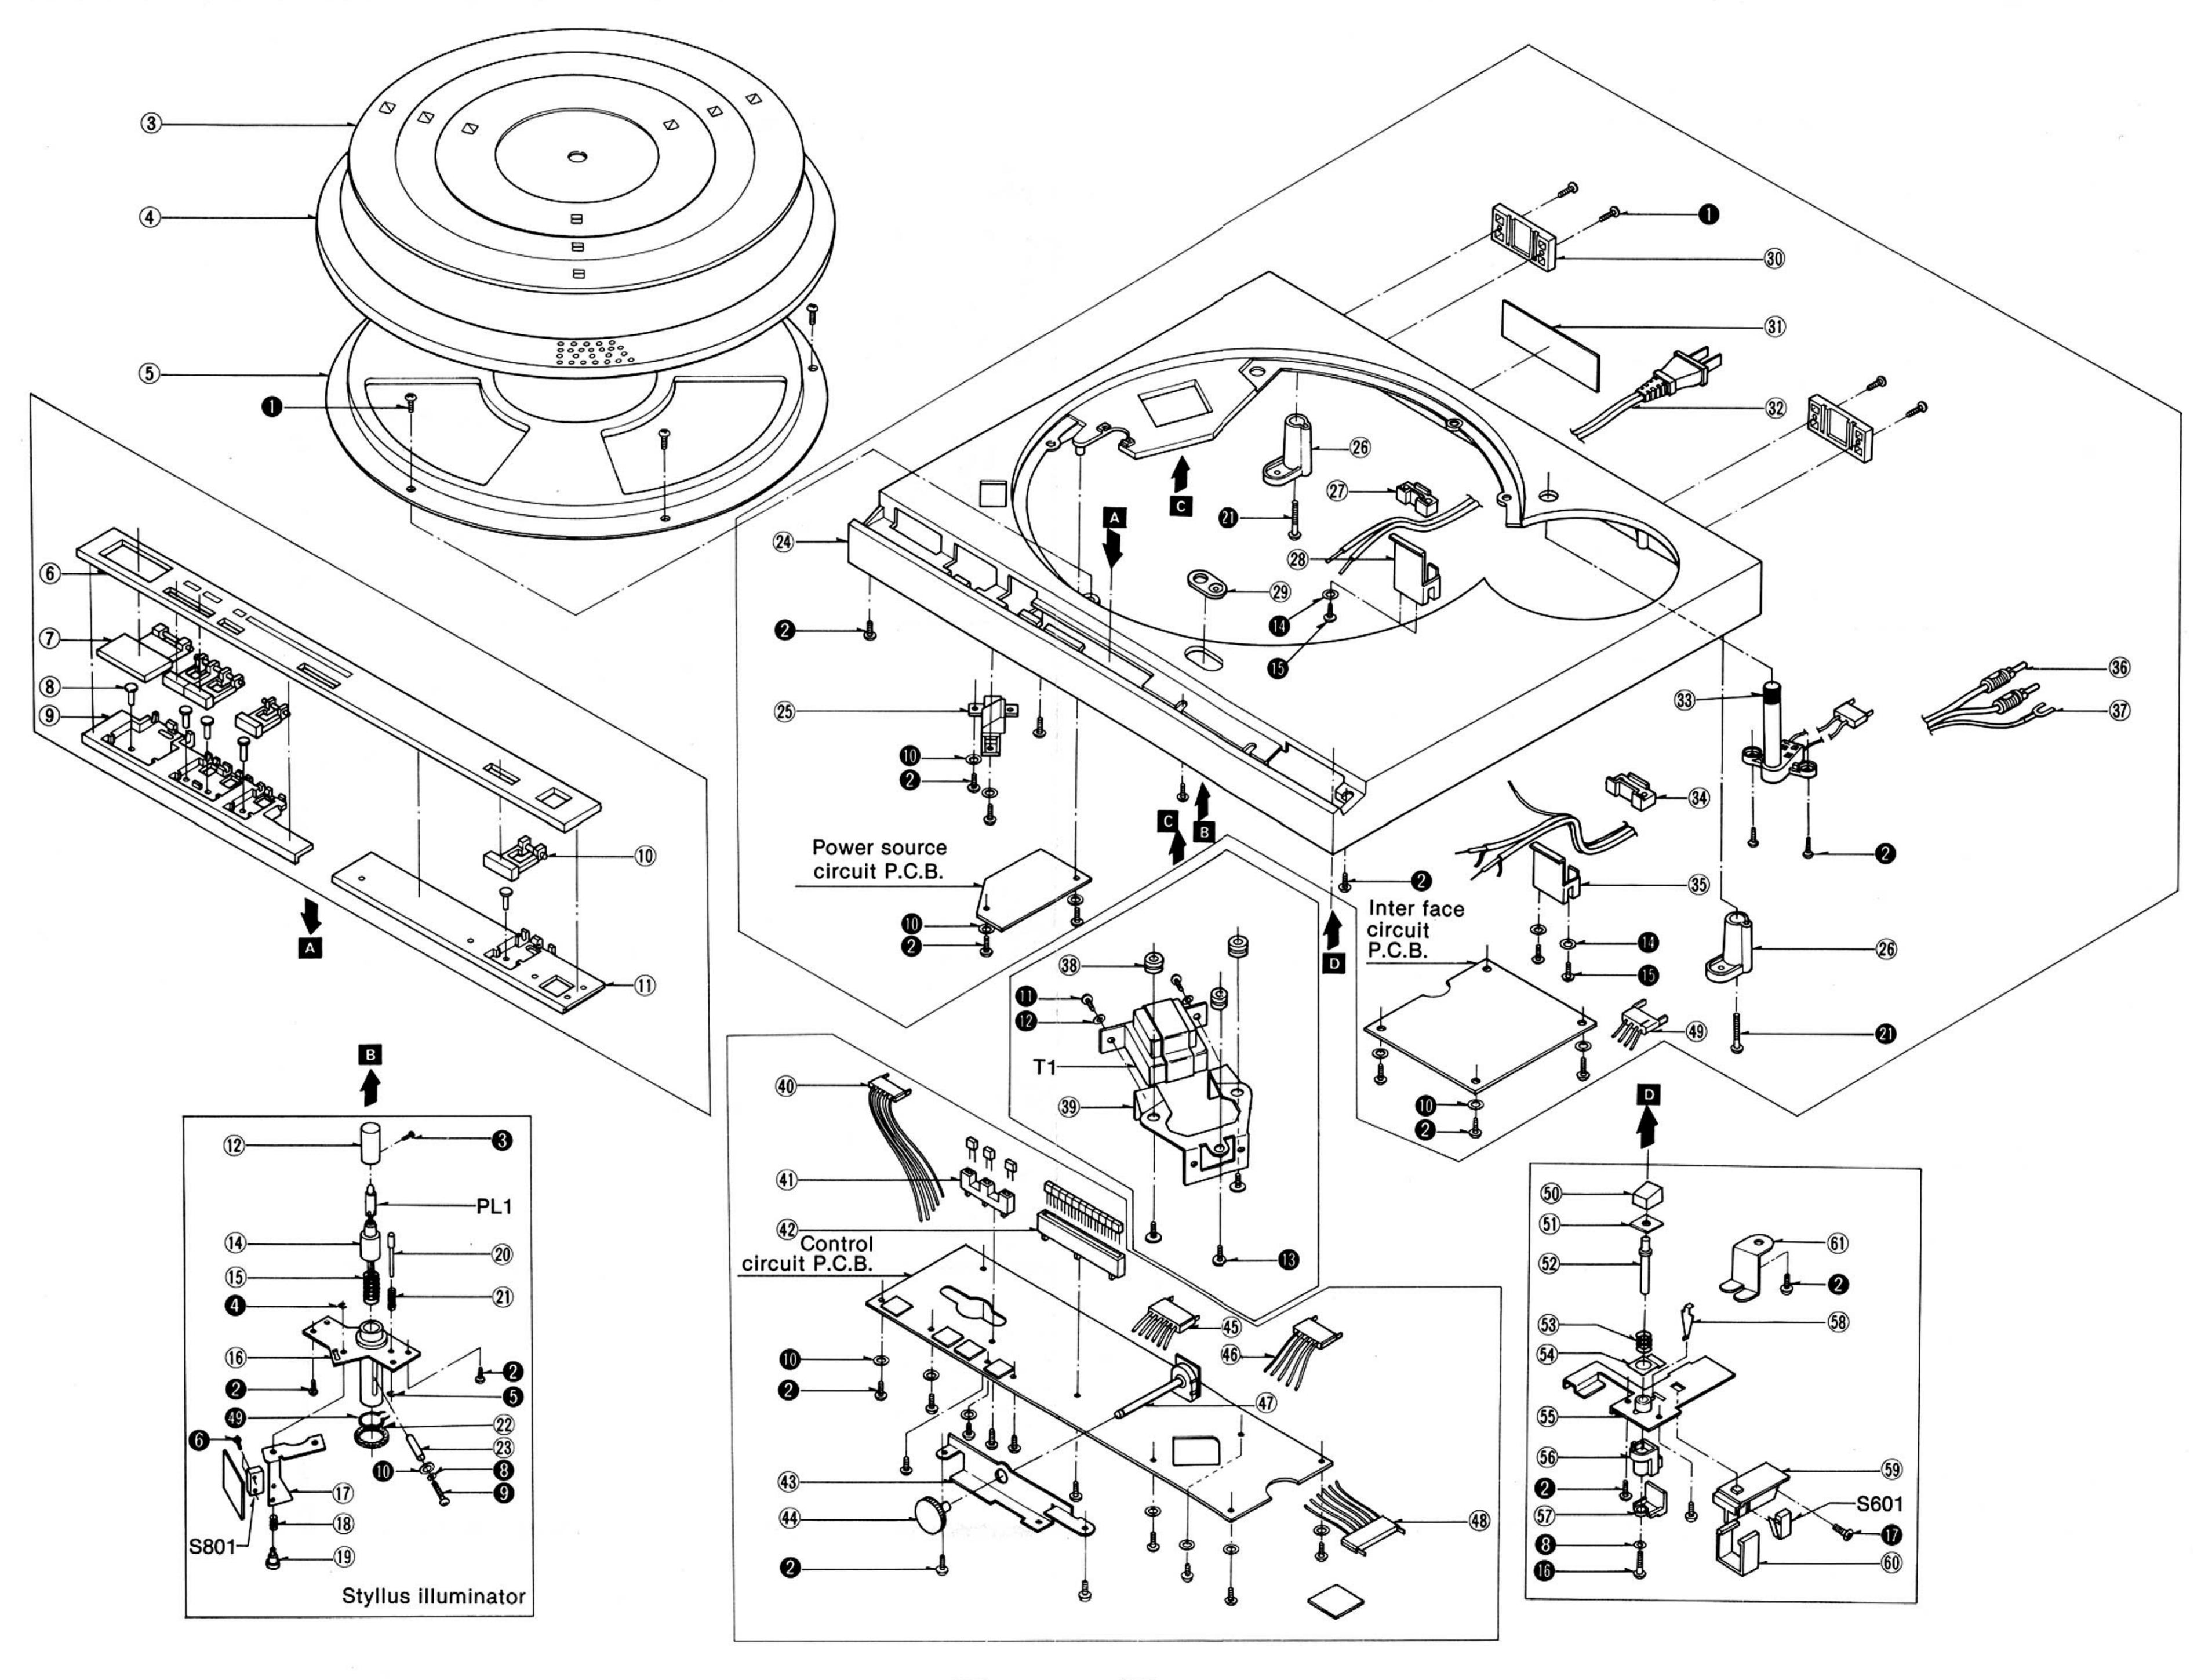

## ■ REPLACEMENT PARTS LIST (Main Base and Bottom Base Parts)


Notes: 1. Part numbers are indicated on most mechanical parts.

Please use this part number for parts orders.


2. A indicates that only parts specified by the manufacture be used for safety.

Ref. No.		Part No.	Part Name & Description	Ref. No.	Part No.	Part Name & Description
CABINET and	CHA	SSIS PARTS		56	SFUM001-11	Cam, Power Siwtch
1	Т —	CEAD 172 015	D C	57	SFUM132-07	Cam, Power Switch
2		SFAD172-01E	Dust Cover	58	SFUP001-12	Bracket, Power Switch
2		SFAT172-01A	Hinge	59		
3		SFTG162-01	Turntable Mat		SFUM132-05	Holder, Power Switch
4		SFTE162-01Z	Turntable	60	SFUM132-06	Holder, Power Switch
5	1	SFUM172-05	Cover, Turntable	61	SFUP172-12	Plate, Power Switch
6	1	SFUM162-01	Panel, Operation	62	SFMGQ20-01	Cover, Stater Frame Ass'y
7	1	SFKT162-01	Button, Start/Stop	63	SFMG520-31A	Stater Frame
8		SFUM172-11	Pin, Switch	64	SFMZ172-01E	FG Detector Coil Ass'y
0	1	SFUM172-03		65	SFMZQ20-01A	Shaft, Stater Frame Ass'y
10			Bracket (B), Operation Panel			oner, otator i tamo 7,55 y
10	1	SFKT172-03	Button, Speed Select, Cueing & Repeat	66	SFUP172-05	Bracket States From M'to Blots
		35005130		67		Bracket, Stater Frame M'tg Plate
11		SFUM172-02	Bracket (A), Operation Panel		SFUM162-06	Supporter, LED
12	1	SFKK172-01	Cover, Lamp	68	SFUM172-06	Insulator (A)
13	1	SFDN172-01	Lamp	69	SFXW172-01	Washer
14		SFXB172-02	Boss, Drive	70	SFXW172-02	Washer
15		SFQA172-01	Spring, Drive Boss	71	SFGA170-01	Insulator Rubber
16		SFUP172-01E	Plate Assembly, Stylus Illuminating Lamp	72	SFQC170-01	Spring, Insulator
17				73	SFXG170-02E	Nut
10	1	SFUP172-03	Plate, Lock Operation	74	SFUM172-01	
18		SFQA001-02	Spring, Lock Operation Plate Pin	LLVS-80		Insulator Cup
19		SFXJ172-05	Pin, Lock Operation Plate M'tg	75	SFGA172-01	Insulator (C)
20		SFXJ172-01	Pin, Lock Canceler	70	0.5110100	
	1			76	SFUP132-01	Cover, Power Transformer
21	1	SFQA520-01	Spring, Lock Canceler Pin	77	SFUM172-12	Spacer, Clamper
23	1	S FXO172-01	Pin, Guide	78	SFAU172-01	Cover, Bottom
24		SFAC162-01	Cabinet	79	SFUM172-13	Spacer, Tone Arm
25	4	SFUM130-01		80	SFUZ172-04	Rubber Cushion, Insulator
	1		Cover Neon	81	SFPRT17201K	Rest Ass'y
26	1	SFAZ172-01	Supporter, Insulator	82	SFPKD17203	Arm Base
27	1	SFUM170-06	Spacer, AC Cord	83		
28		SFUM170-05	Clamper, AC Cord	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	SFPKB17201S	Ring, Operation
29	1	SFUM172-04	Ornament, Stylus Illuminating Lamp	84	SFPKD17201	Bracket, Arm Base
30		SFUM170-07	Case, Hinge Ass'y	85	SFGK132-01	Cap, Rubber
31 [M]		SFNN162M01	Name Plate			
	1			86	SFPAB17206	Knob, Anti-skate Force Control
31 [MC]	1	SFNN162C01	Name Plate	87	SFMH172-51E	Motor Assembly
32	Δ	RJA9YA	AC Cord	88	SFGZ172-52	Cover, Motor Assembly
	43			89	SFGB172-51	Belt
33	1	SFUM162-03Z	Sensor Post	90	SFUP172-58	The state of the s
34	1	SFUM170-06	Spacer, Phono Cord	01		Bracket, Worm Assembly
35	1	SFUM170-11	Clamper, Phono Cord	91	SFUG172-53E	Worm Assembly
36	1	SFDH028-01	Phono Cord	92	SFUP172-55	Bracket, Motor
37	1	SFEL028-01E	Ground Wire	93	SFXJ172-52	Shaft, Sub-Active Plate
38	1	SFGC132-01	Rubber, Power Transformer	94	SFUP162-51E	Sub-Active Plate
39	1	SFUP132-03	Plate, Power Transformer	95	SFUK172-51E	Plate, Motor
40		SFDJ162-01E	Connector, 8 Pin			
\$1.50 	1	0.00.00	Commercial, Crim	96	SFQH172-51	Spring, Motor Plate
11	1	SFUM172-10	Spacer (B) Spaced Splacetor LED	97	SFUP172-51A	Main Active Plate
12			Spacer (B), Speed Selector LED	98	SFUG162-52E	Gear Ass'y
	1	SFUM172-09	Spacer (A), Speed Selector LED	99	SFUM172-61	Phono P.C.B
13	1	SFUP172-06	Bracket, Pitch Control Plate	100		
14		SFKT172-04	Knob, Pitch Control		SFUP172-56	Plate, Shield
45	1	SFDJ172-01E	Connector, 6 Pin	101	SFPCC31001K	Head Shell
16		SFDJ162-02E	Connector, 9 Pin	102	SFPAM17201K	Tone Arm
17		SFDJ162-03E	Connector, 10 Pin	103	SFPWG17201K	Balance weight
18		SFUP172-09	Bracket, Volume Shaft	104	SFXG829-1	Screw
50		SFKT172-01	Button, Power Switch	105	SFPRT17202K	Lift Assembly
51		SFUZ172-03	Spacer, Power Switch Button			THE PROPERTY SECTION
150		0.02172-03	Spacer, i ower Switch Button	106	SFQA829-03	Spring, Lift
2		0EV 1470.00	01-4-0	107	SFPZB17202	Knob, Lock
52		SFXJ172-03	Shaft, Power Switch Button	108	SFPAB13202	
53		SFQA172-02	Spring, Power Switch			Knob, Lift
54		SFUP172-04	Supporter, Power Switch Plate	109	SFPAB16201K	Tone Arm Ass'y
	1-	SFUP172-02E	Bracket, Power Switch M'tg Plate A'ssy	110	SFPJL16203E	Plate, Lift
55		31 01 1/2-026	Dideket, Tower Switch Wild Flate A SSV	111	SFPZB17203K	Plate, Condition

## ■ EXPLODED VIEW (Bottom Base)

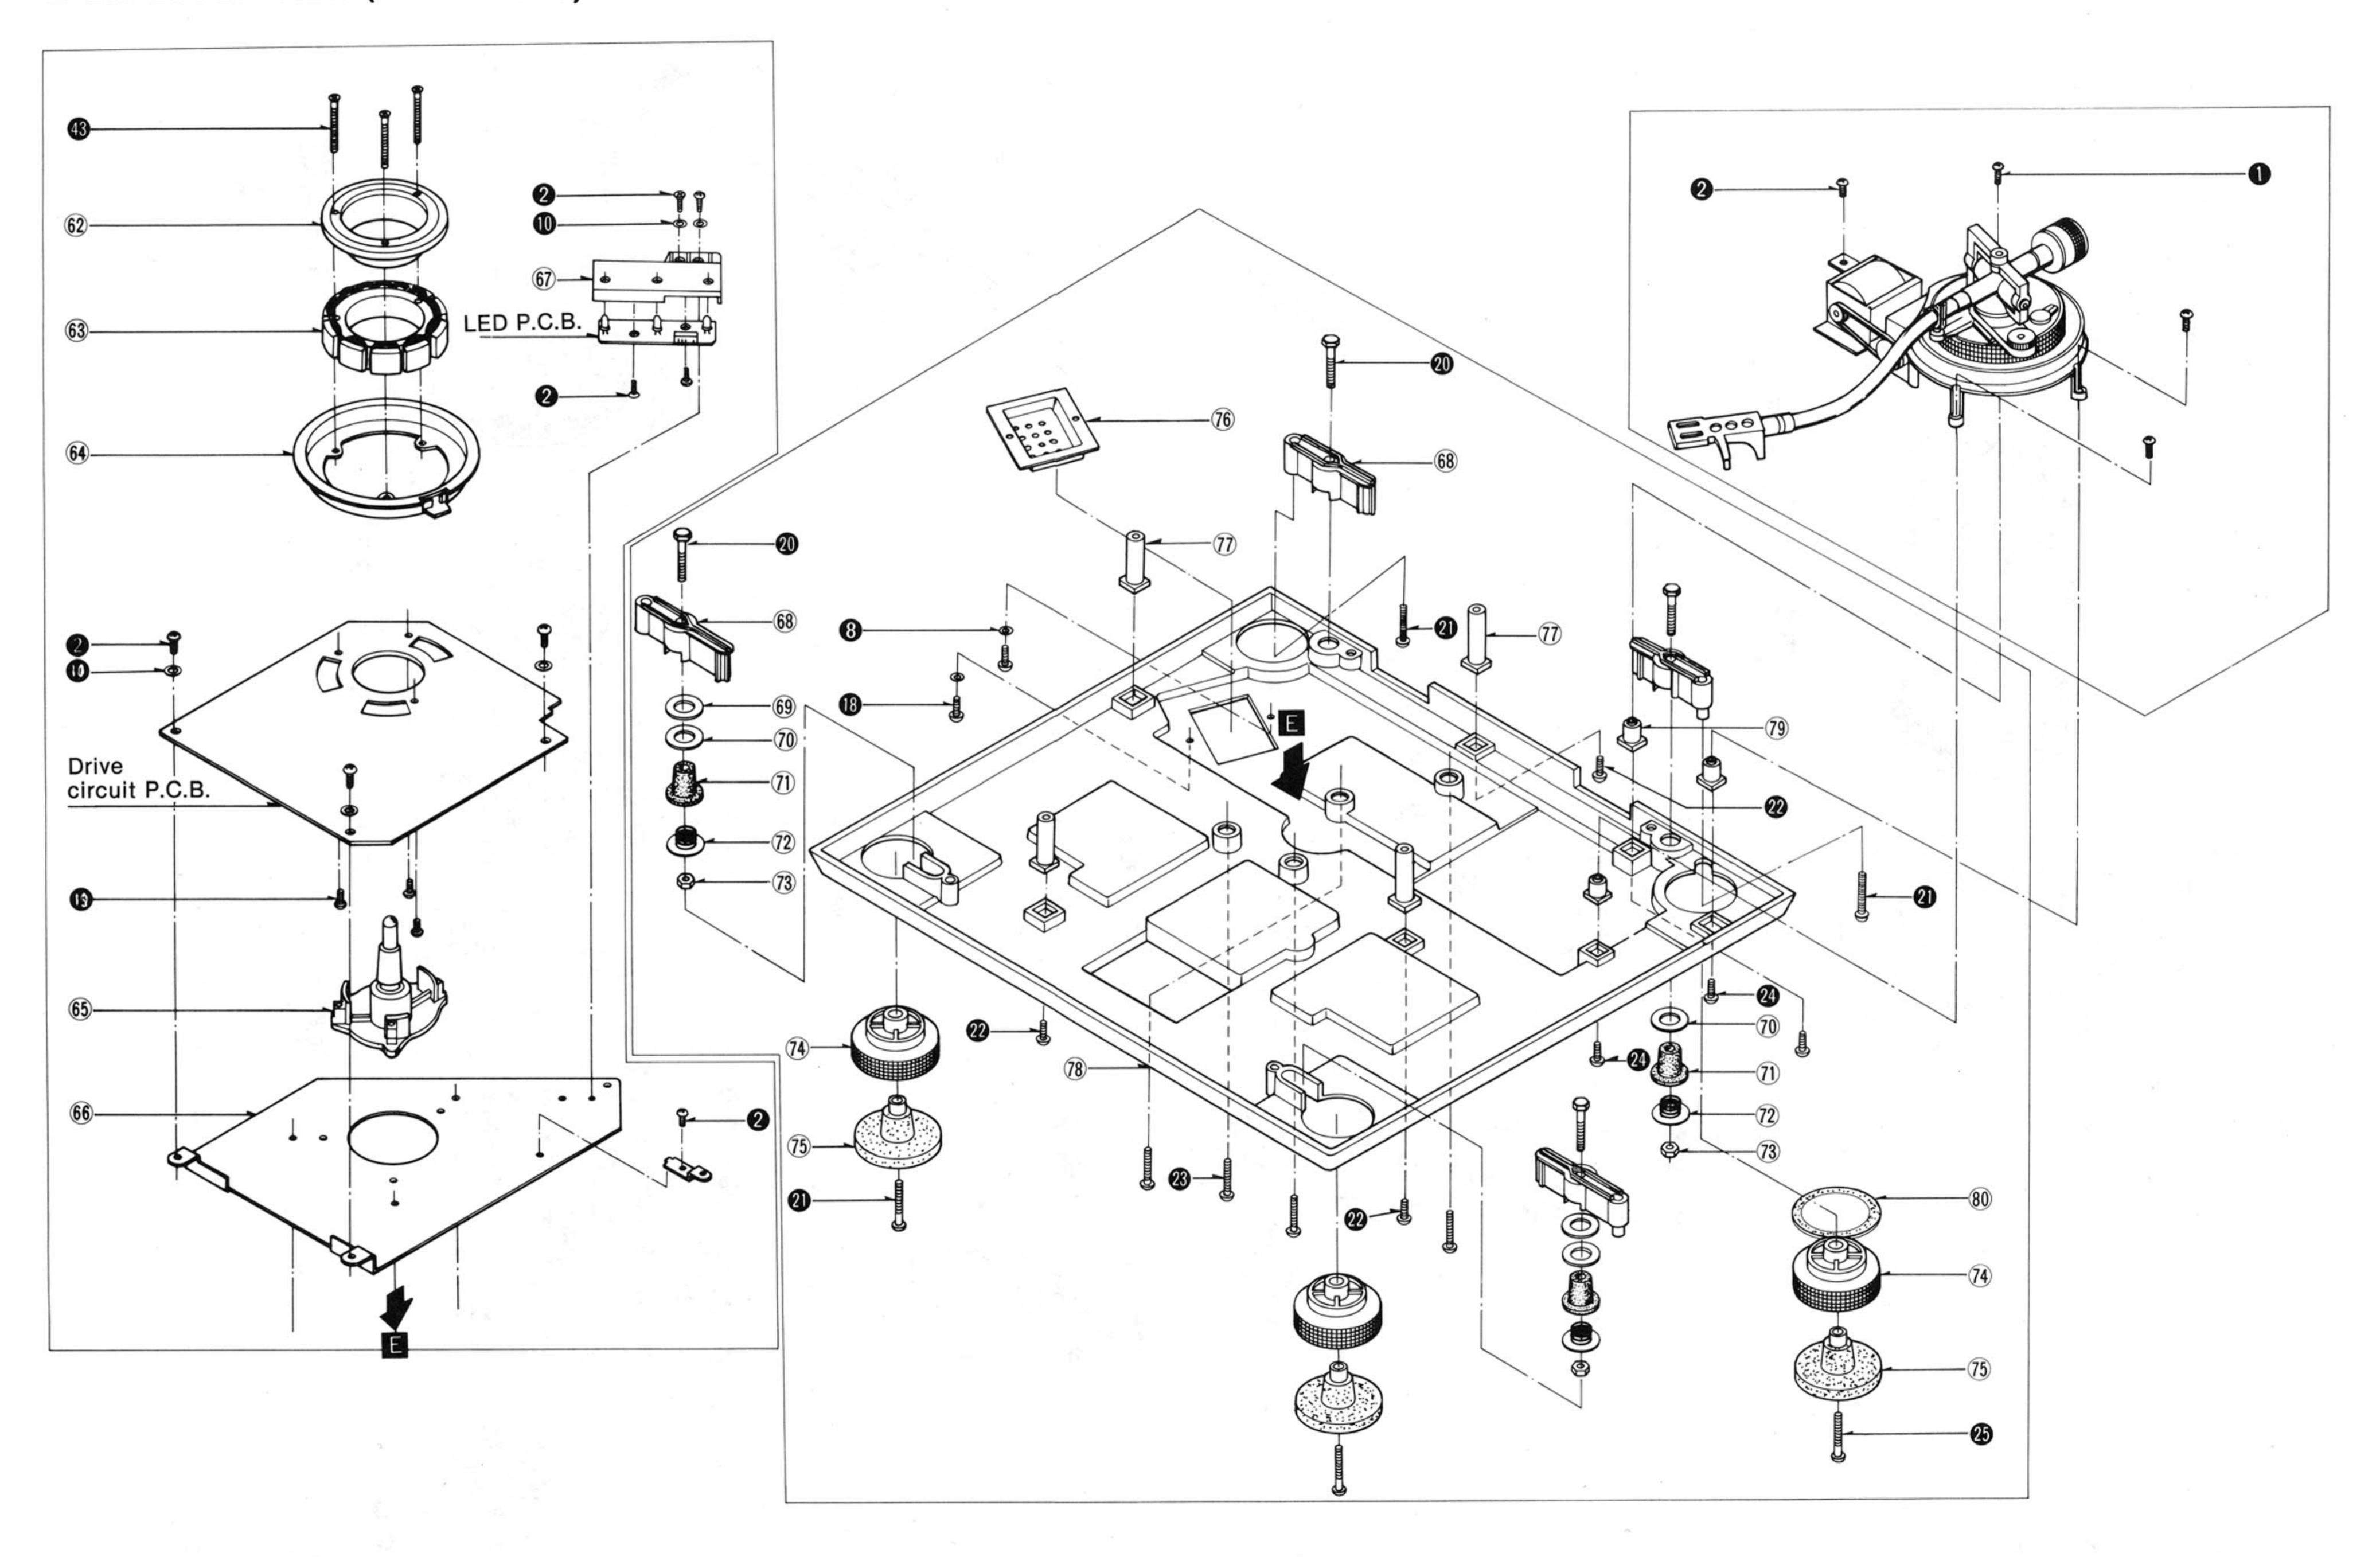

# ■ EXPLODED VIEW (Tone Arm and Arm Base)

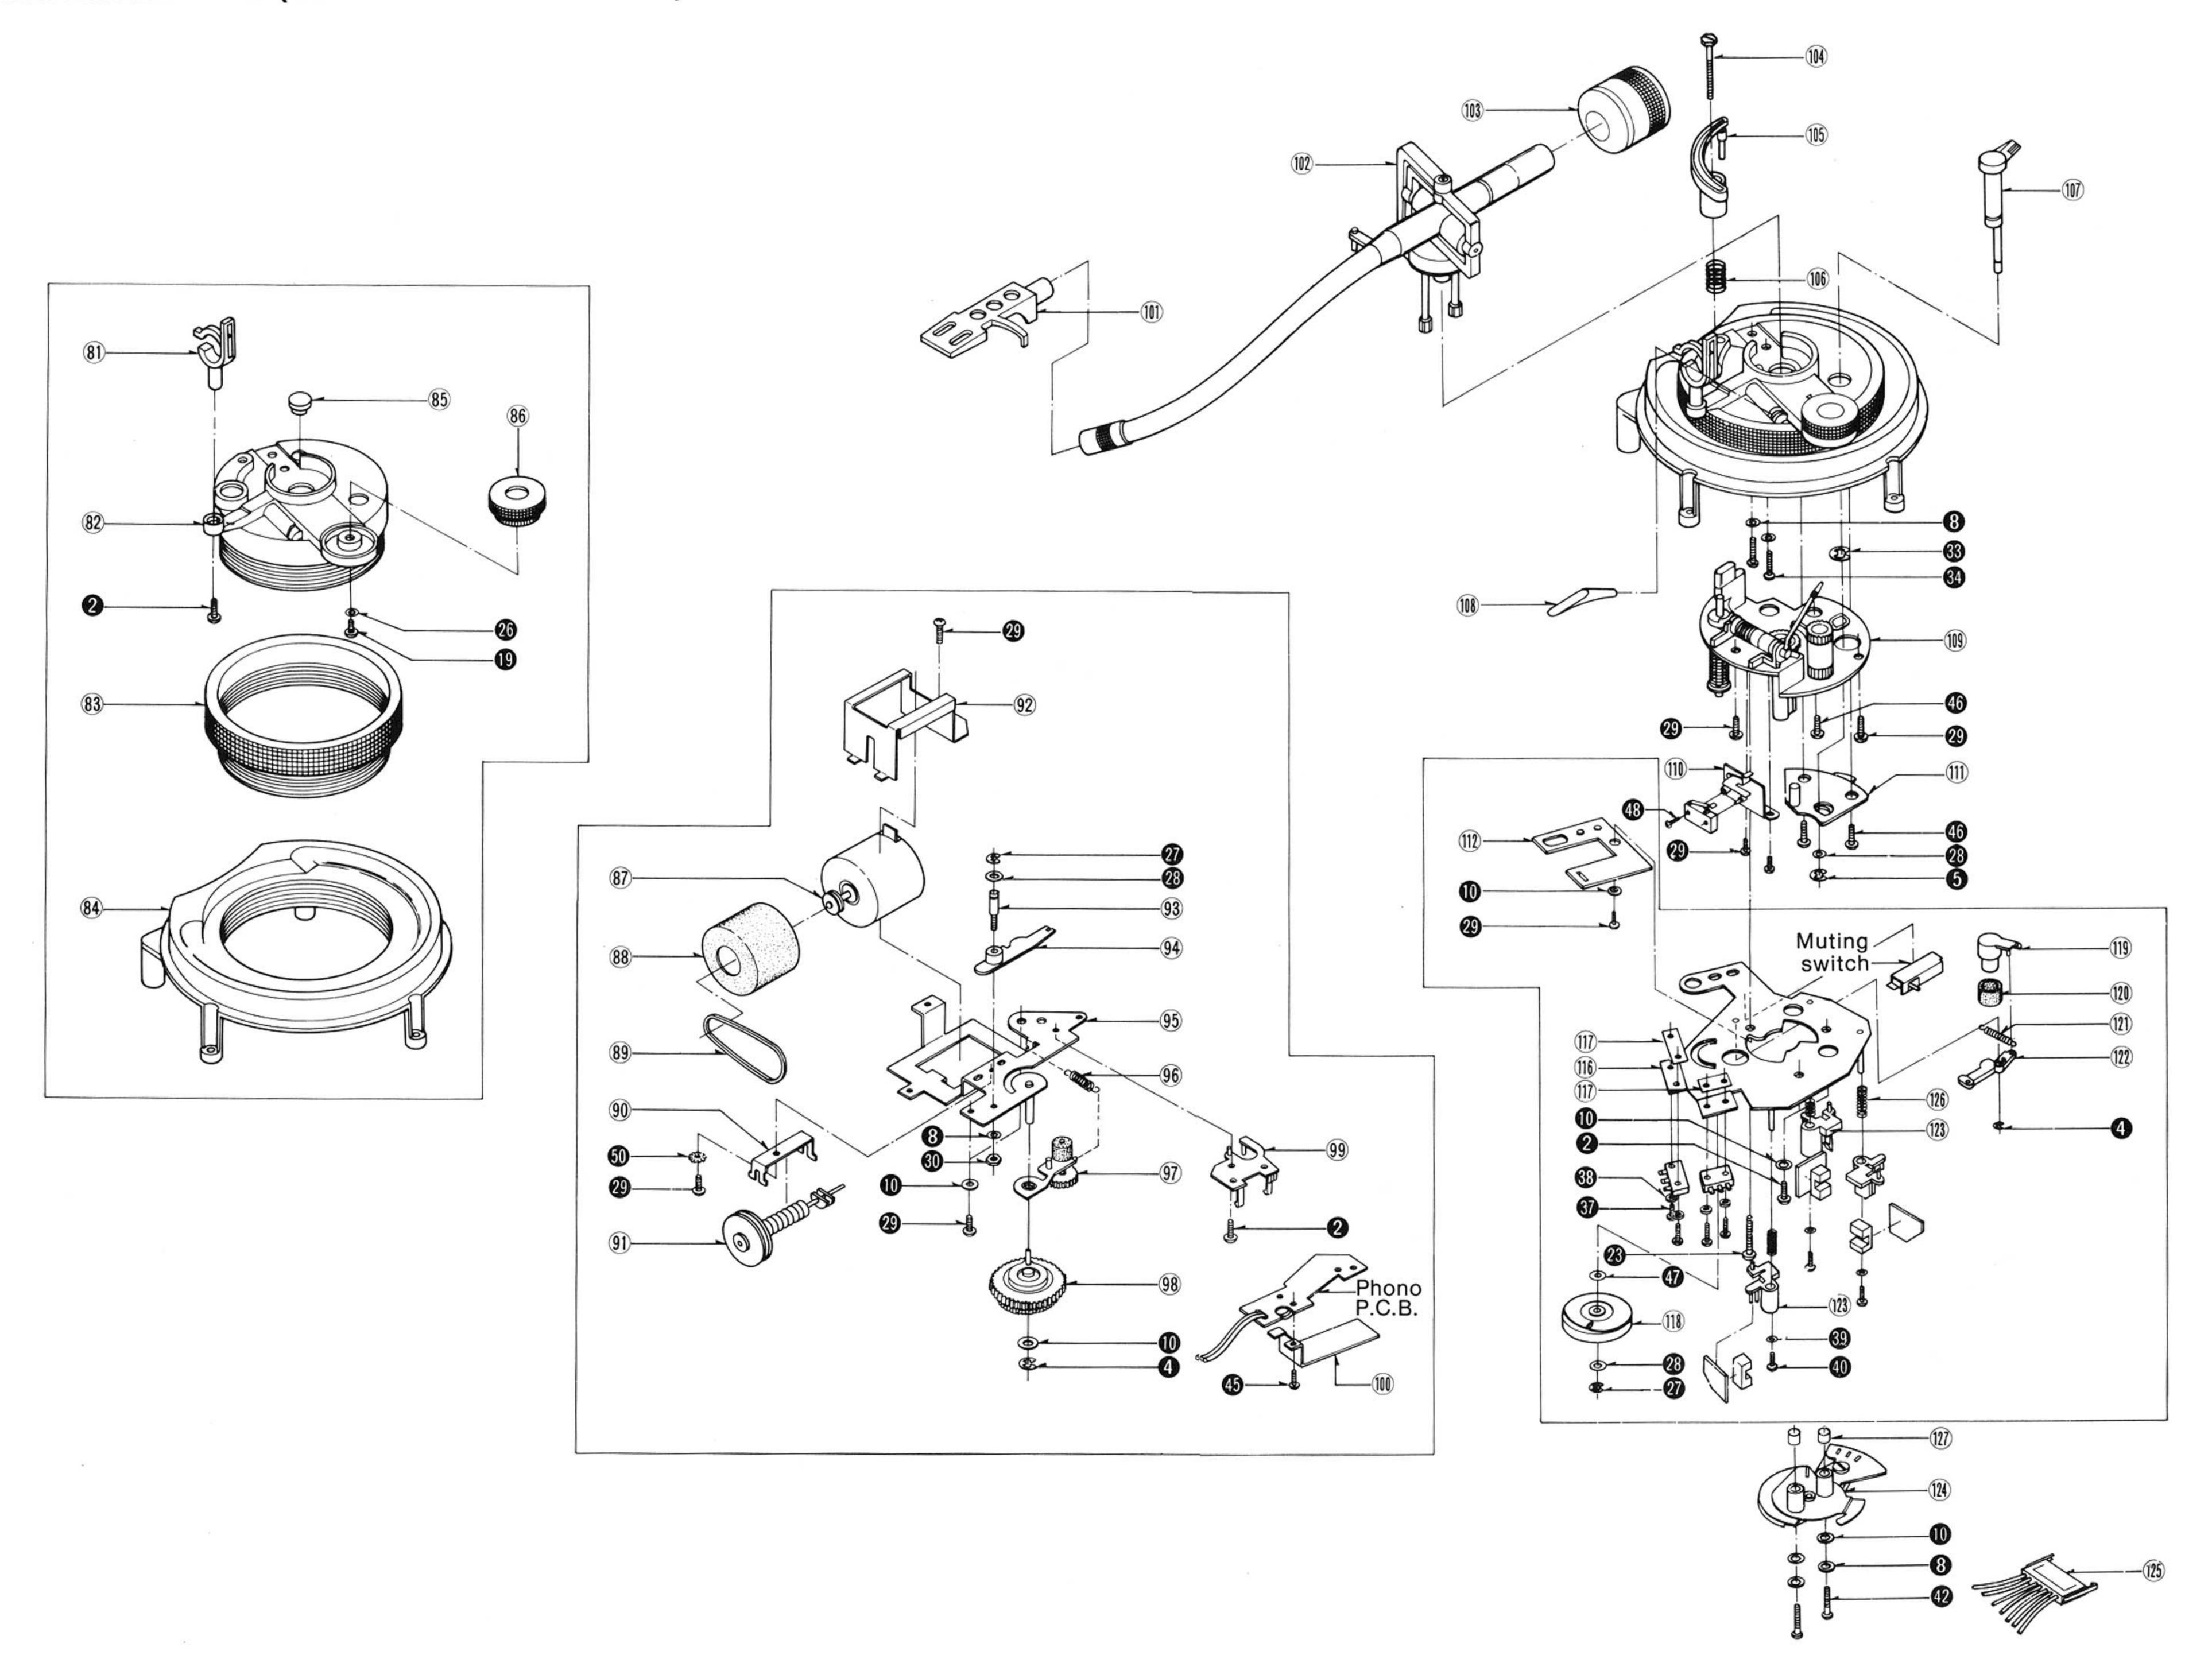

## ■ REPLACEMENT PARTS LIST (Tone Arm and Arm Base Parts)

Notes: 1. Part numbers are indicated on most mechanical parts.

Please use this part number for parts orders.

2. A indicates that only parts specified by the manufacturer be used safety.

Ref. No.	Part No.	Part Name & Description
112	SFUM172-58	Base, Muting Switch
***	05111172 525	Diete Astrol
116	SFUK172-52E	Plate, Actual
117	SFUP172-59	Bracket, Switch
118	SFUM172-55	Cam, Lift
119	SFUM172-57	Lever, Brake
120	SFGT172-51	Rubber
121	SFQH172-52	Spring
122	SFUM172-56	Lever, Muting
123	SFUM172-59	Holder, Rest Sersor
124	SFUM162-51A	Toner arm Fixing Plate Ass'y
125	SFDJ162-51E	Connector, 12P
126	SFQA172-52	Spring
SCREWS, WAS	HERS and CIRCLIPS	
D	XTN3+8BFZ	Screw
0 0 0 0 0 0	XTN3+8B	Screw
<b>3</b>	XSN17+3FY	Screw
9	XUC2FT	Circlip
9	XUC25FT	Circlip
6	XSN2+8	Screw
8	XWA3B	Washer
9	XSN3+14	Screw
0	XWG3	Washer
_	V7114.40D	
0 0 0 0	XTN4+10B	Screw
w O	XWA4B	Washer
w	SFXG132-02	Washer
<b>o</b>	XWG3FZ	Screw
0	XTN3+14BFZ	Screw
(i) (i)	XSN3+10S	Screw
0	XTN3+16B	Screw
®	XSN3+10S	Screw
(B) (Q)	XTN26+6B	Screw
<b>@</b>	XVG4C30	Screw
<b>@</b>	XTN4+25B	Screw
•	VTV/4+14B	Corour
9	XTV4+14B	Screw
9	XTN3+25B	Screw
9	XTN4+12B	Screw
0 0 0 0	XTN4+45B	Screw
9	XWG26	Washer
9	XUC3FT	Circlip
<b>@</b>	XWE4A10BW	Washer
@	XTN3+6B	Screw
0	XNG3ES	Nut
•	XTV3+8B	Screw
<b>3</b>	XUC5FT	Circlip
<b>®</b>	XSN3+8S	Screw
<b>3</b>	XSN23+12	Screw
<u>o</u>	XWA26B	Washer
<u></u>	XWE26BW	Washer
MATERIAL PROPERTY.		

XSN26+6 XSN3+23BVS SFXGQ20-02 XUB14FT XTN3+12B SFPEV17202	Screw Screw Circlip
XSN3+23BVS SFXGQ20-02 XUB14FT XTN3+12B	Screw
SFXGQ20-02 XUB14FT XTN3+12B	Screw
XUB14FT XTN3+12B	
XTN3+12B	Circip
SFPEV17202	Screw
	Screw
SFXW910-08	Washer
XSN23+8	Screw
XUB14FY	Circlip
хмсзв	Washer
SFNU162M01	Instruction Book
	Instruction Book
	Adaptor, 45 r.p.m.
	Nut, Cartridge
	Washer, Cartridge
	Screw, Cartridge
	Screw, Cartridge
SFK0135-01	Overhang, Gauge
SFPZB3501	Shell Weight
SFHP162M01	Carton
	Carton
	Pad, Front
	Pad, Rear
	Pad, Top
	Pad, Turntalbe
	Polyethylene Cover, Turntable Unit
SFYH60X60	Polyethylene Cover, Dust Cover
SFYH60X60	Polyethylene Cover, Turntable
	Polyethylene Cover, Parts
SFYF05A06	Polyethylene Cover, 45 Adaptor & Weigh
	SFNU162M01 SFNU162C01 SFWE212-01 SFPEN3302 SFPEW9601 SFCZV8801 SFPEV9801 SFKO135-01 SFPZB3501 SFHP162C01 SFHH172-01 SFHH172-01 SFHD172-01 SFHD172-02 SFHD172-02 SFHD172-02 SFYH60X65