

SERVICE MANUAL

**DIRECT DRIVE
STEREO TURNTABLE
PL-71
KUT**

CONTENTS

1. SPECIFICATIONS	3
2. OPERATIONS	4
3. PRINCIPLE OF MOTOR OPERATION	5
4. ADJUSTMENT	6
5. EXPLODED VIEW AND PARTS LIST	
5.1 Mechanism	7
5.2 Operation Mechanism Assembly (PXA-008-B)	11
5.3 Packing	12
5.4 Accessory Parts	14
6. SCHEMATIC DIAGRAMS P.C. BOARD PATTERN AND PARTS LIST	
6.1 Schematic Diagrams	15
6.2 Power Supply Circuit Assembly	16



1. SPECIFICATIONS

Phono Motor and Turntable

Motor	Brushless DC servo-Direct-drive motor
Speed	Two speeds: 33-1/3 rpm, 45 rpm
Wow and flutter	0.05% (WRMS) or less
S/N	60 dB or more (in case of using Pioneer cartridge model PC-50)
Turntable platter	31 cm diam, Aluminum alloy

Tonearm

Tonearm type	Static balance, S-shape, pipe arm
Effective arm length	224mm
Overhang	14.5mm
Usable cartridge weight	4g (MIN) to 32g (MAX)
Available of any cartridge conforming to EIA standard.	

Subfunctions

Anti-skating force control	
Lateral balancer	
Hinges (Free-adjustable)	
Height-adjustable arm	
Large-size shock absorbers	
Arm elevator	
Speed fine adjusters (33-1/3 rpm, 45 rpm: for use in turntable speed adjustment with stroboscope and strobolight)	

Others

Power requirements	AC 120V, 50/60Hz
Power consumption	5.2W (MAX)
Outer dimensions	480(W) x 410(D) x 185(H)mm 18-7/8(W) x 16-1/8(D) x 7-1/4(H)in.
Weight	11.0 kg, 24 lb 3 oz


Accessory Group

45 rpm adaptor (with overhang gauge)	1
Screwdriver	1
Output cord (Connection cord)	1
Weight plate (Cartridge weight-adjustable)	1
Cartridge mounting screws	10
Cartridge mounting nuts	2
Cartridge mounting washers	2
Operating instructions	1

2. OPERATIONS

STROBOSCOPE

The proper part of the stroboscope band to read illuminated by the strobolight depends upon the frequency of the power sources and record speeds as below.

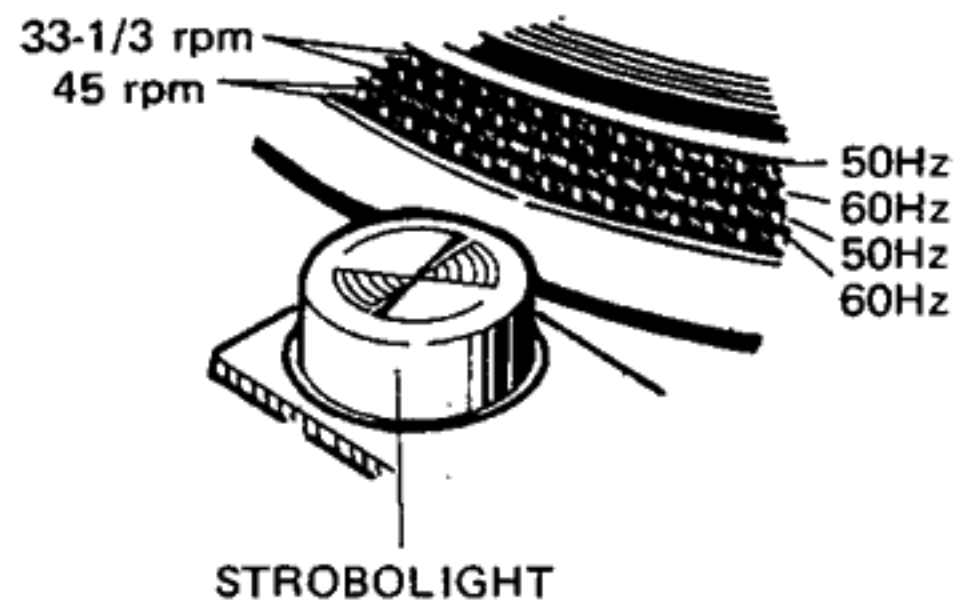


ARM ELEVATOR

This is a lever for controlling the up-and-down movement of the tonearm.


Setting the ARM ELEVATOR up, the arm head will be floated from the surface of the record. Setting the ARM ELEVATOR down, the arm head will be quietly descended on the surface of the record.

This is a convenient device for cueing in any portion of the record without fear of scratching the record surface.

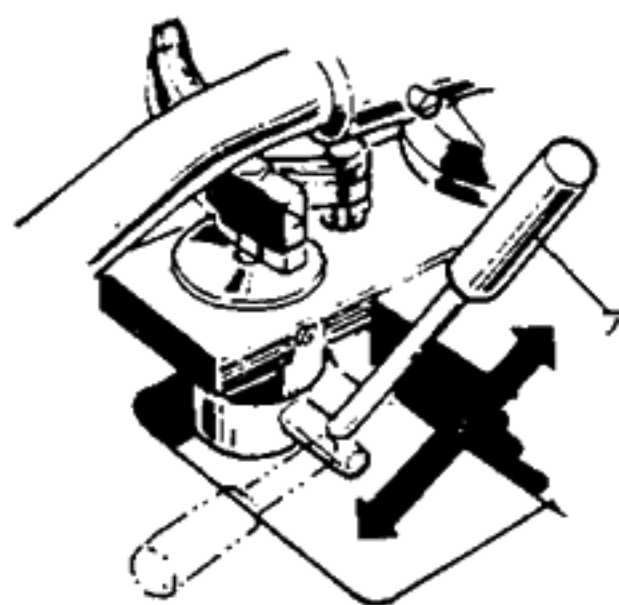


POWER "OFF" SWITCH

Push this button for turning off.

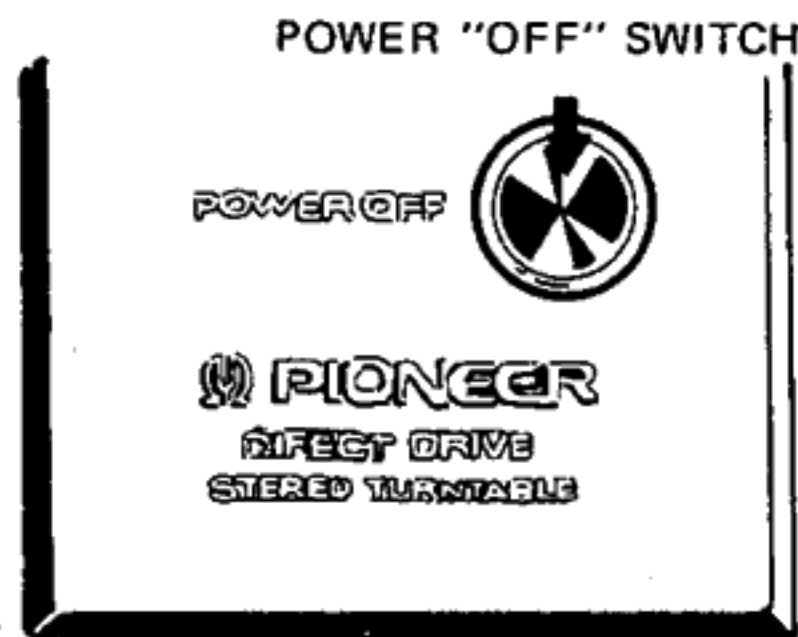

SPEED CONTROL KNOBS

With either of the speed selectors pressed, watch the appropriate stroboscope band and strobolight. Adjust the precise speed (so that the band appears to stand still) by turning the speed control knobs. Turn toward + (clockwise) for faster speed, toward - (counterclockwise) for slower. When the stroboscope appears to stand still, the speed is correct.

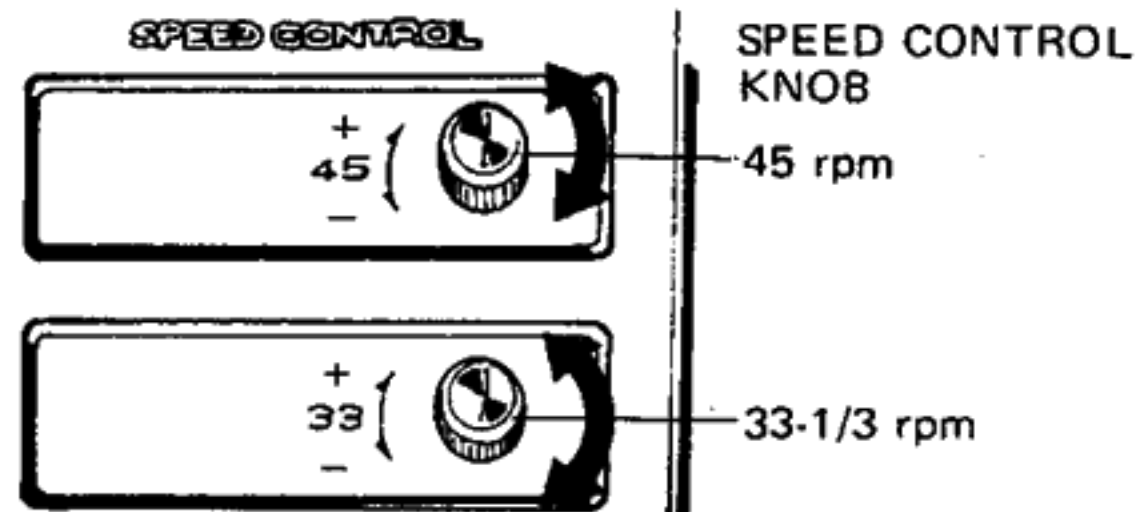


45 RPM BUTTON

Push this button for playing a 45 rpm speed record. Simultaneously the power will be turned on.

33-1/3 RPM BUTTON

Push this button for playing a 33-1/3 rpm speed record.

Simultaneously the power will be turned on.

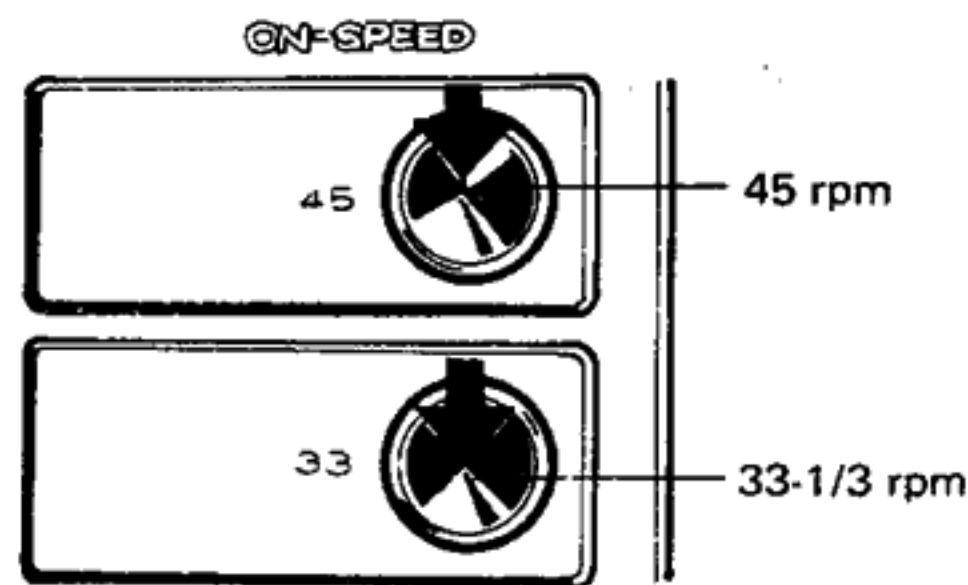

3. PRINCIPLE OF MOTOR OPERATION

Construction of motor control for the PL-71 is depicted in Fig. 2

1. Applying power sets the oscillator into operation. Output of this circuit passes to the pole position detecting circuit (L1~L6).
2. Here, assume that coupling between L1 and L4 is the tightest. Voltage induced in L4 is rectified and applied to Q106/Q109 in the driver.
3. Q109 in turn conducts and causes current to flow in the associated drive coil (A-1). The rotor moves in the direction shown by arrow in Fig. 1. The magnetic pole affixed to the rotor induces a voltage proportional to rotor movement, in the sensing coil (A-4).
4. Voltage induced in A-4 is rectified by a diode in the speed sensor and applied to Q103 in the control stage. This point is also fed from the reference voltage generator (voltage E_s) through a fine speed control pot.
5. Voltage applied to the base of Q103 in the control stage controls current that flows in Q104.
6. Q104 serves as a constant current source for Q106 through Q111 in the driver and therefore controls current flow in the drive coils.
7. When ambient temperature change causes driver current to rise, the speed of rotation increases above the rated value. Q104 current increases and Q106~Q111 currents decrease. As a result, the speed of rotation falls off.

Pole Position Detector

Fig. 1 shows a simplified view of the drive and sense coils. With power applied and coupling between L1 and L4 high, Q109 causes current to flow through A-1. As a result, the rotor end of coil A-1 becomes a south pole (S1) and attracts N1. The rotor moves in the direction shown by arrow. Coupling factor between L2 and L5 increases and operation of Q110 causes current to flow in coil A-2. Pole S2 attracts pole N2 and rotor rotation continues. In the same manner, S3 attracts Pole N3. Continuation of this process causes the rotor to turn on a steady basis.

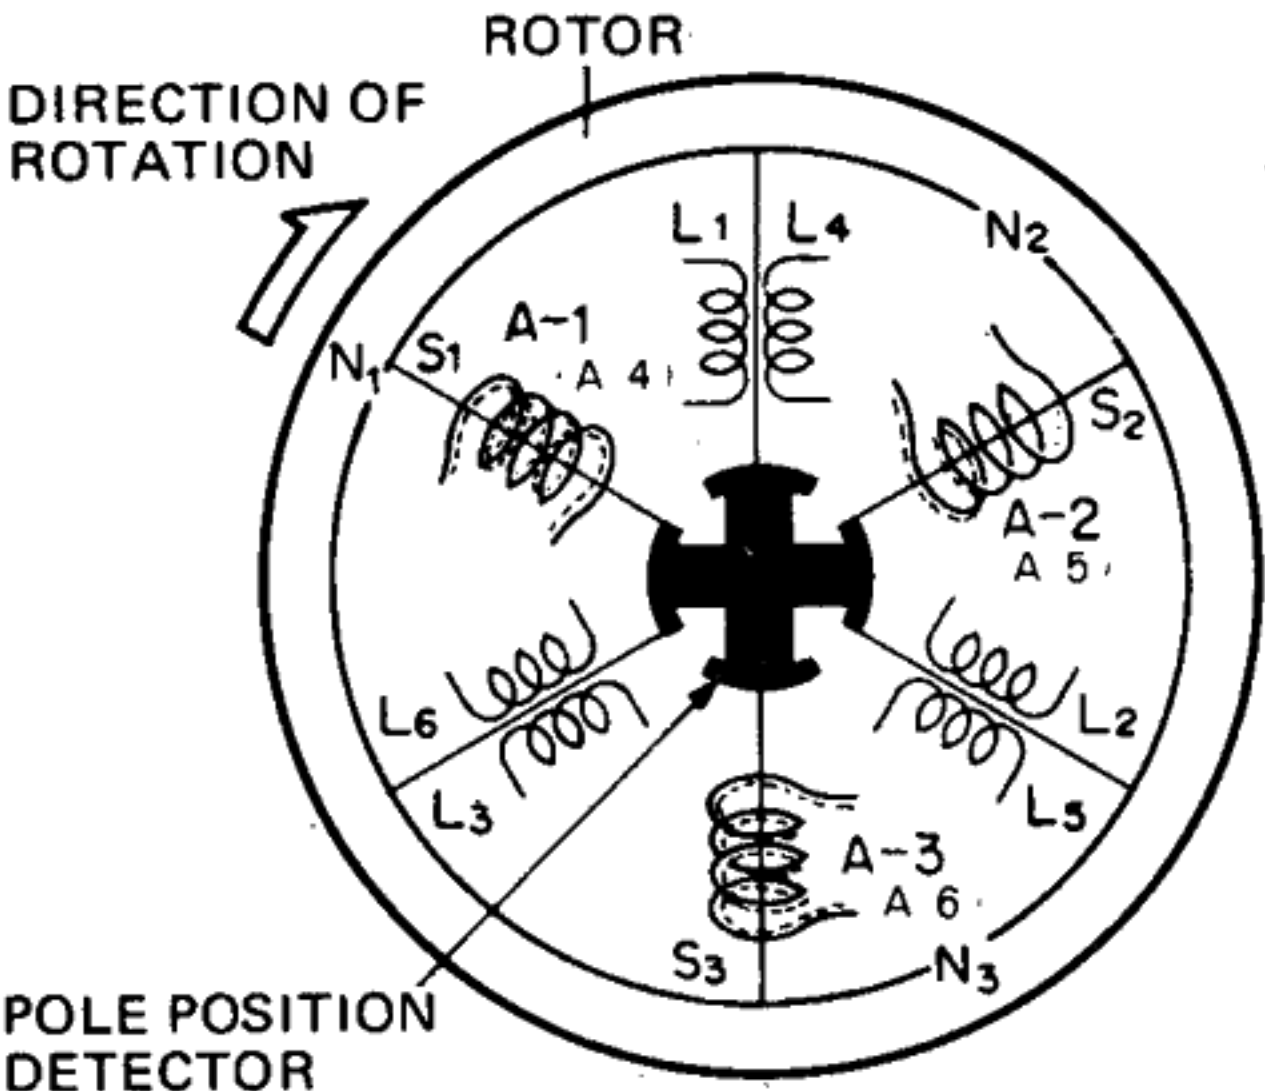


Fig. 1

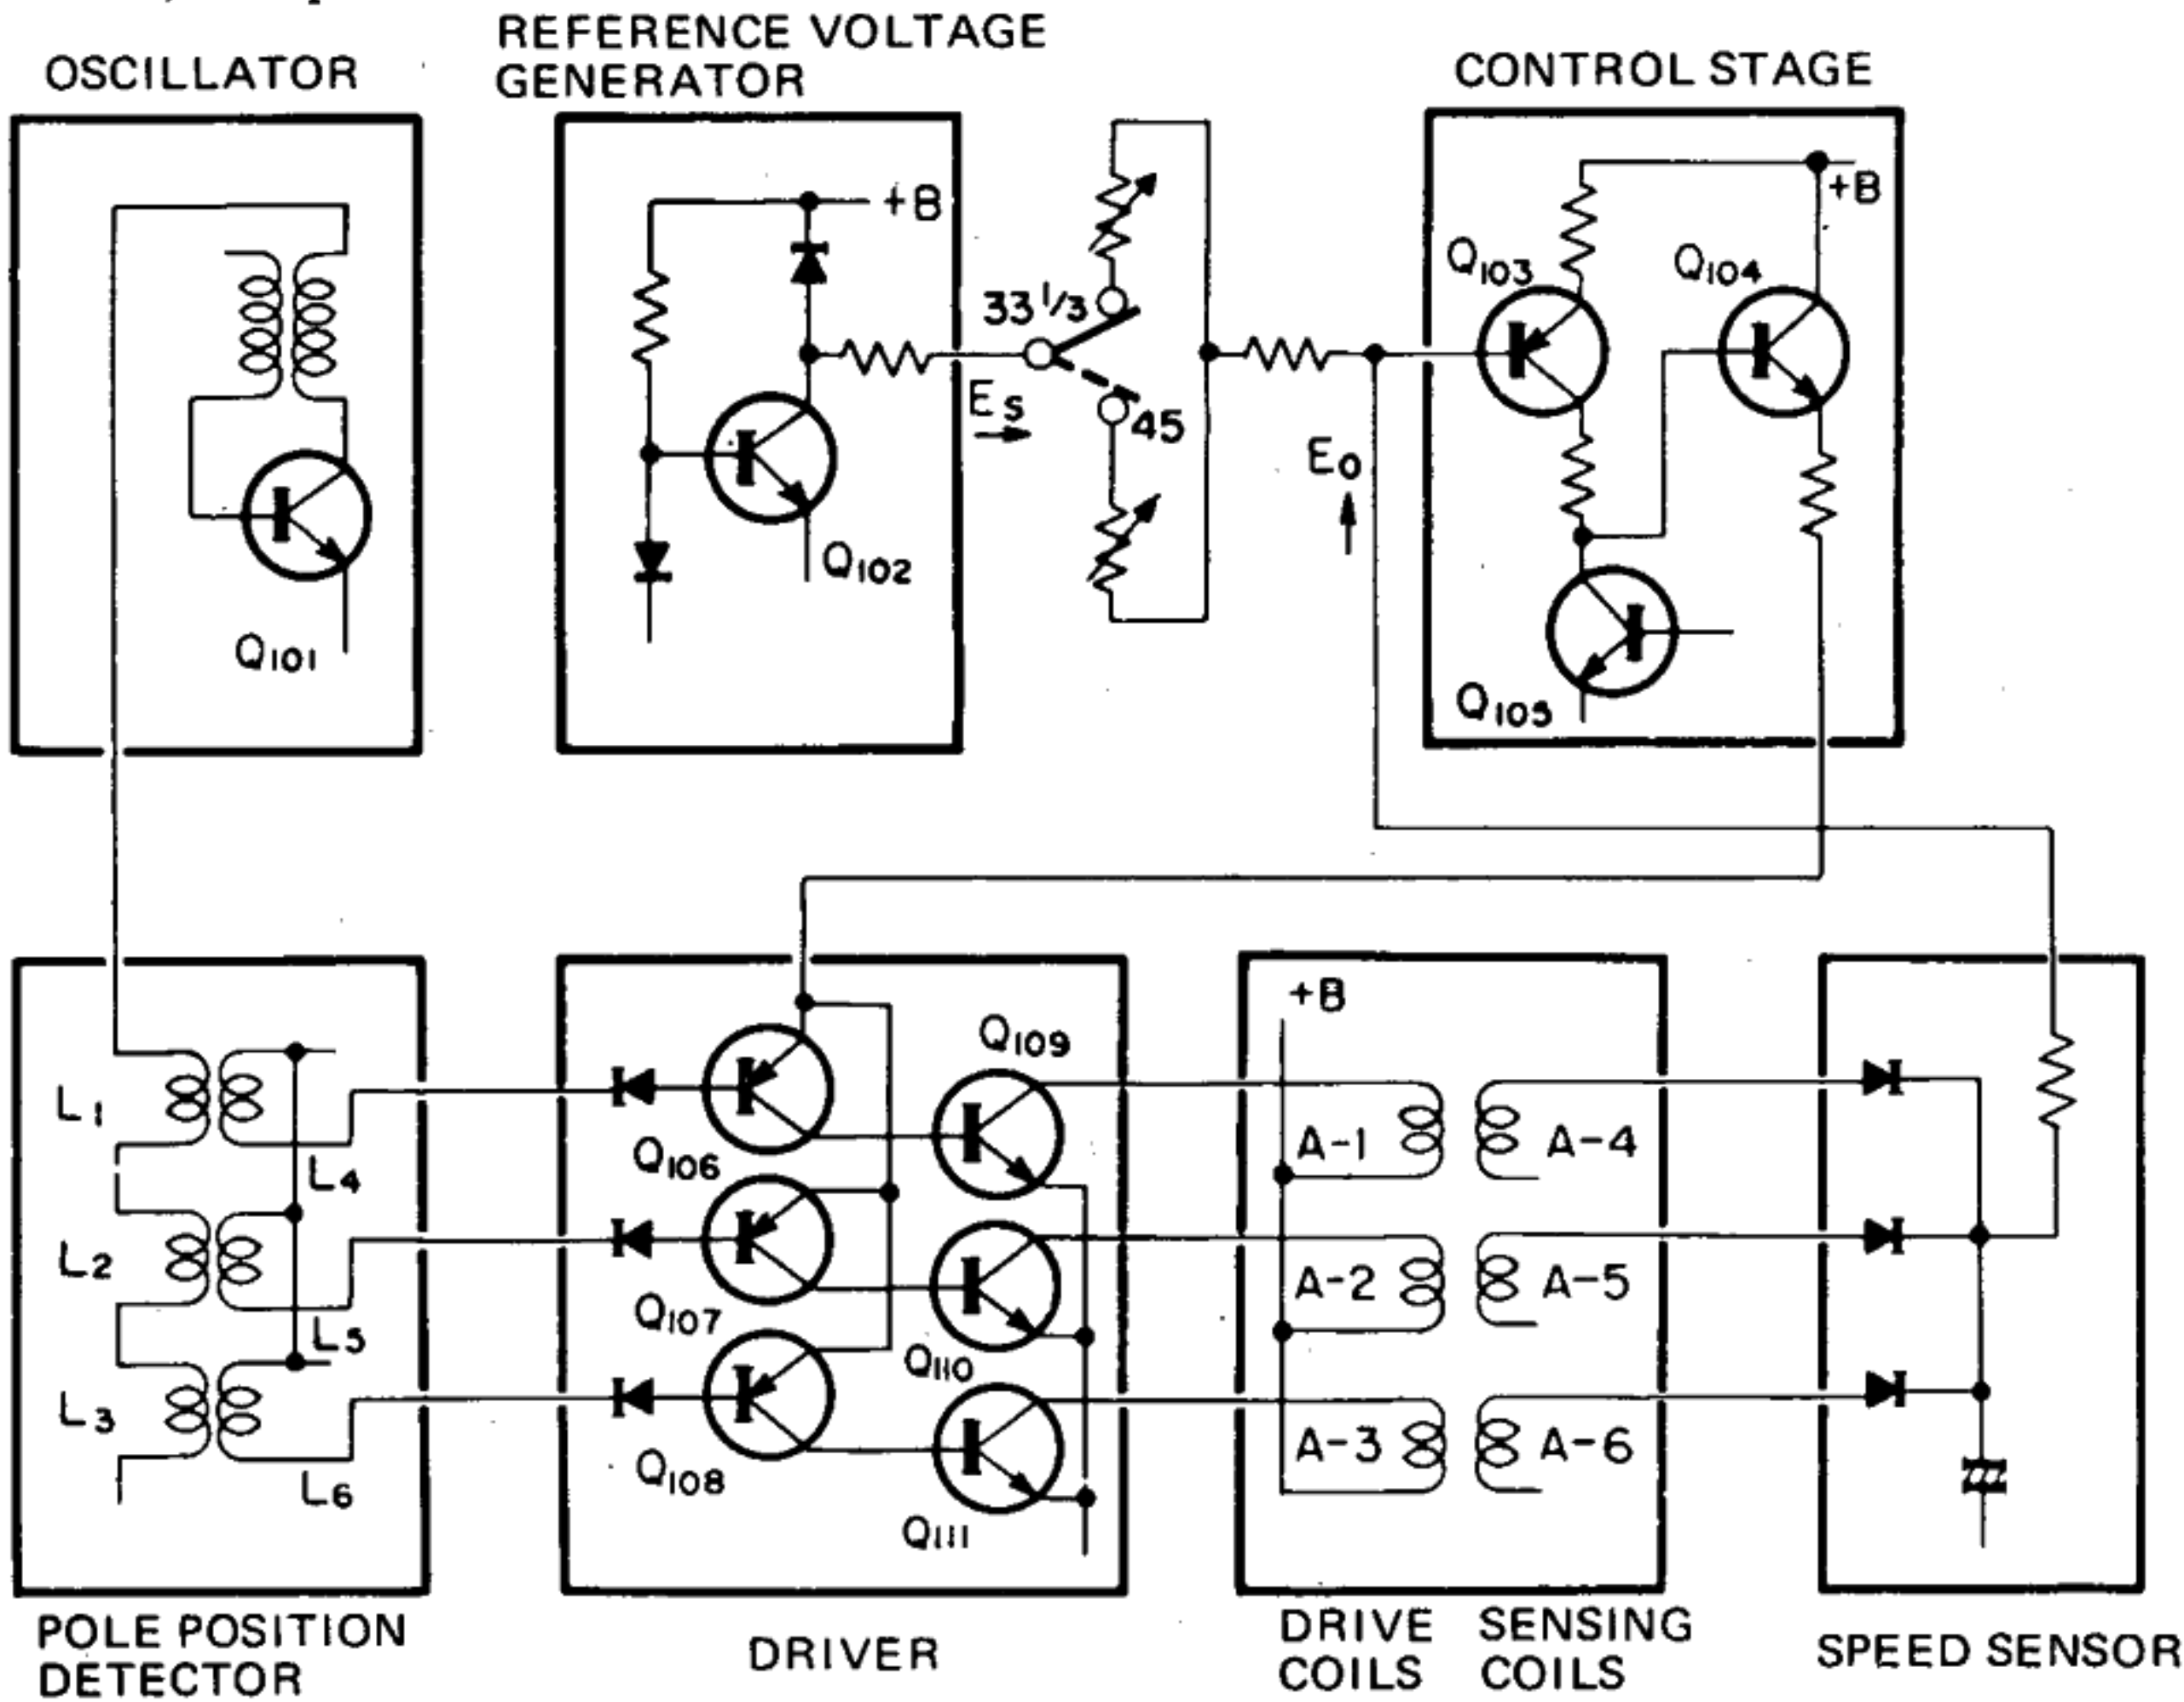


Fig. 2

4. ADJUSTMENT

When adjustment of the fine speed control does not give a satisfactory speed, adjust the motor in accordance with the following procedure.

1. Remove the bottom cover.
2. Set the fine speed control to the midposition.
3. While observing the edge of the turntable platter with a strobe, adjust screws inside the motor as shown in Fig. 3.
4. Alternate switching between 33-1/3 and 45 rpm speeds while making adjustment. Make sure that both speeds are correct.

Selection of Line Voltage

If model PL-51 does not agree with the line voltage of your service area, set the unit to the proper line voltage as follows:

1. Remove the bottom cover, now you can see the terminal board (Fig. 4).
2. Unsolder the lead (White) from the terminal.
3. Solder the lead (White) to the terminal of your local line voltage.

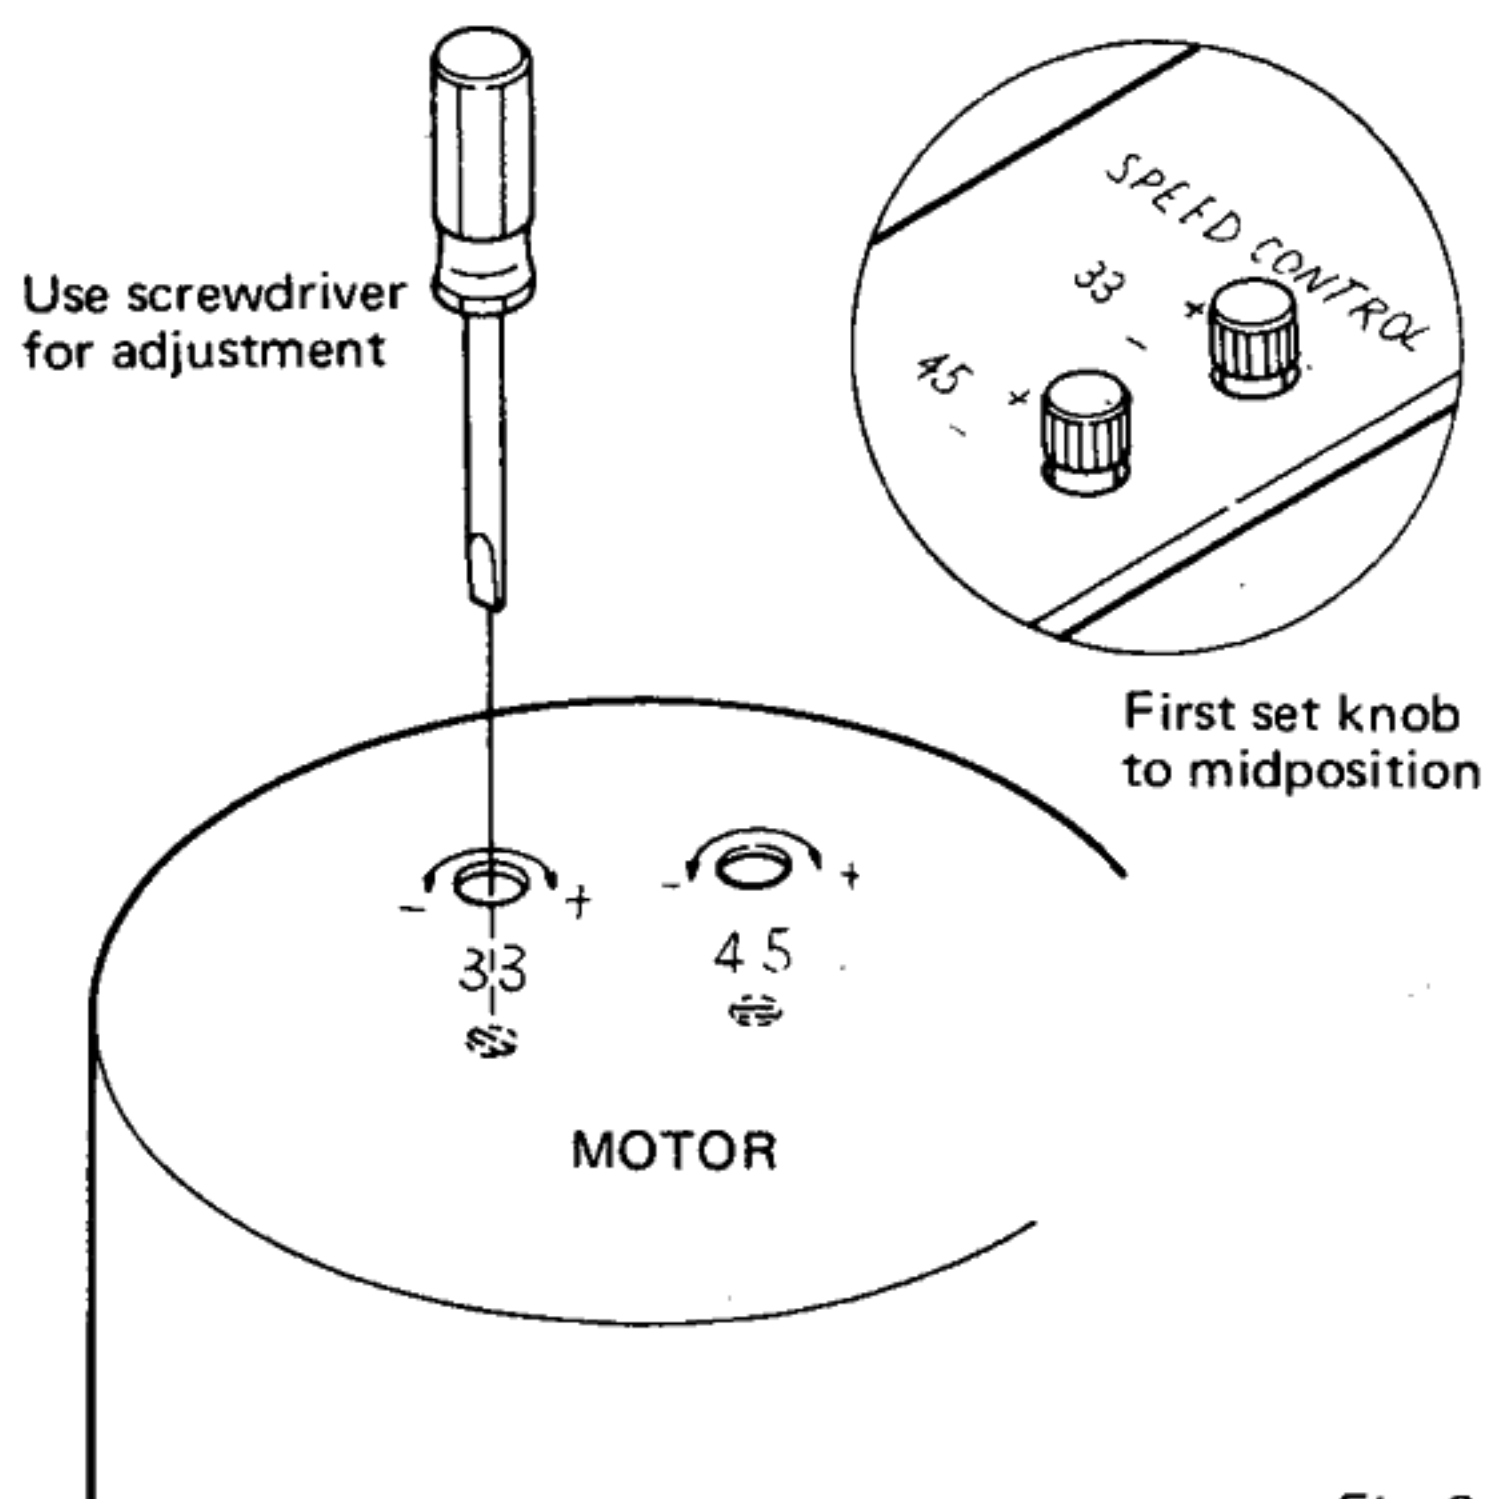


Fig. 3.

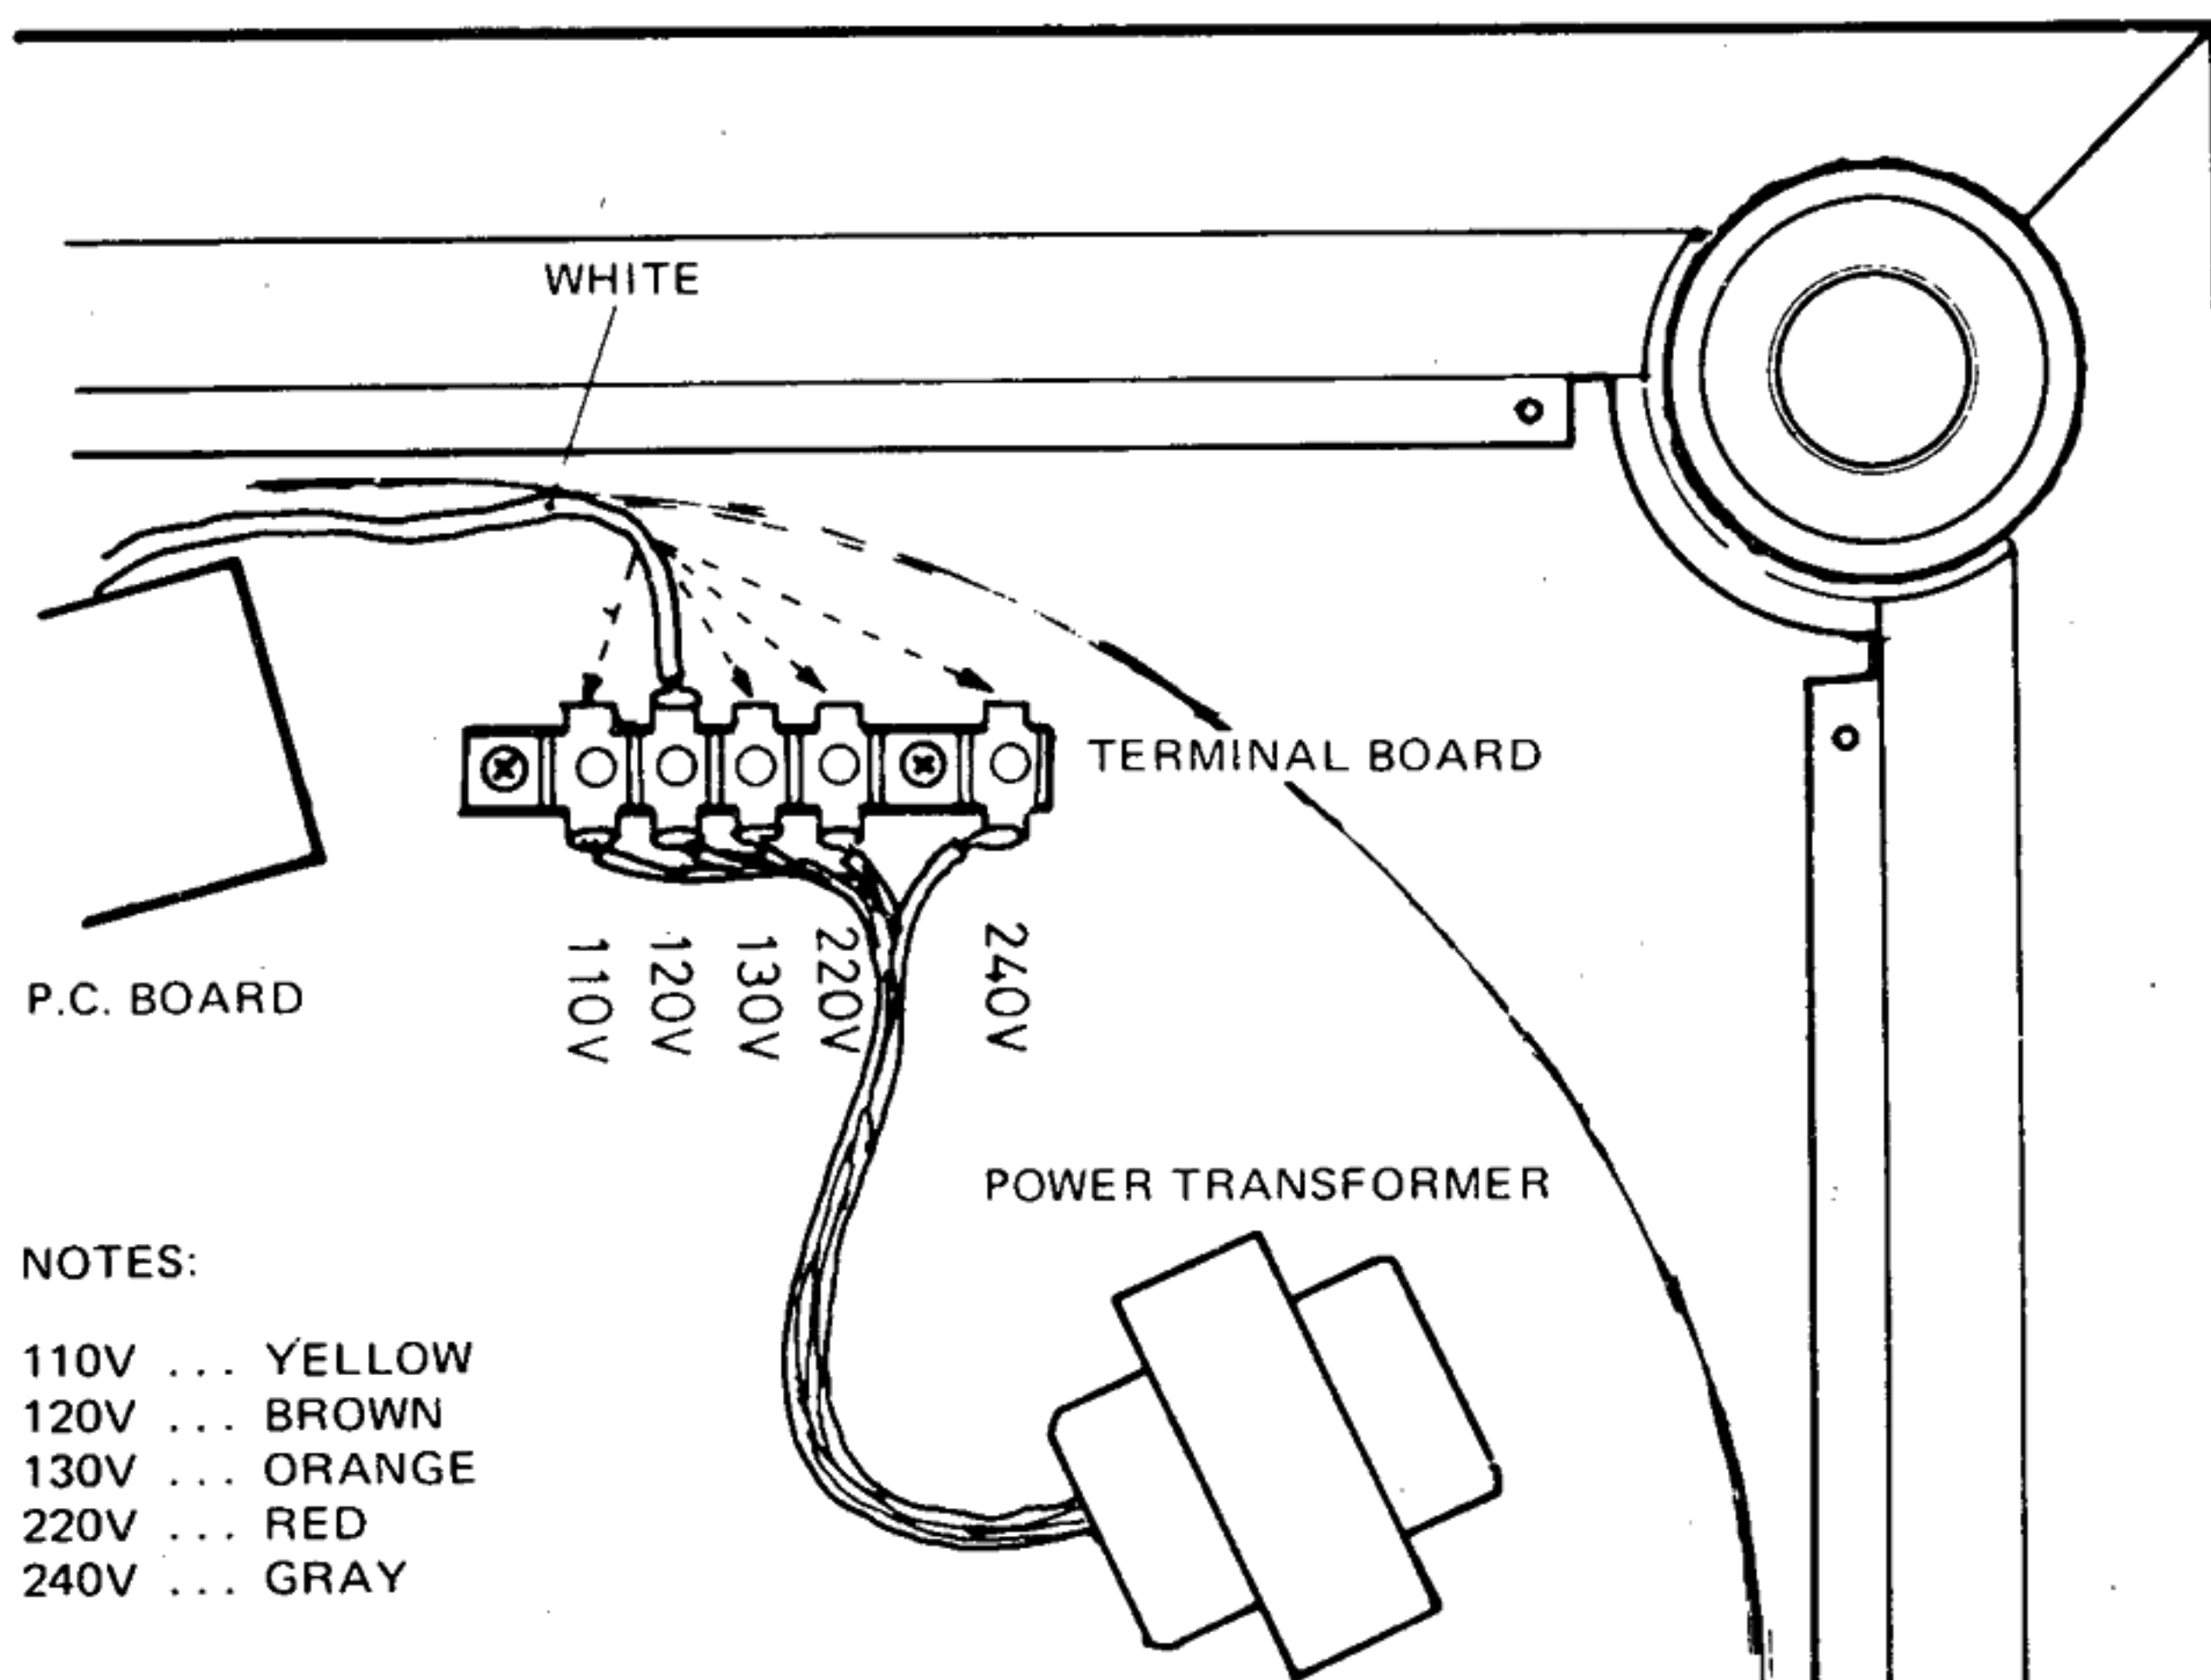


Fig. 4


5.1 MECHANISM

Exploded view diagram of a circular mechanical assembly. The components are labeled as follows:

- 2 - 1**: Top flange with concentric rings.
- 2 - 2**: Bottom flange with concentric rings.
- 3**: A circular plate with three small holes.
- 4**: A central cylindrical component with a flange.
- 5**: A central cylindrical component with a flange.
- 6**: A large circular plate with a central hole and multiple mounting points.
- 7**: A central cylindrical component with a flange.
- 8**: A rectangular plate with four mounting points.
- 9**: A small cylindrical component.
- 10**: A small cylindrical component.
- 11**: A small cylindrical component.
- 12**: A small cylindrical component.
- 13**: A small cylindrical component.
- 21**: A small cylindrical component.

Fasteners and labels:

- PSA M4×10**: Screws for the top flange.
- T·M3×5**: Screws for the central cylindrical component.
- W. M3.1×13**: Screws for the large circular plate.
- T M3×8**: Screws for the rectangular plate.
- T M3×6**: Screws for the small cylindrical components.
- PSA M4×15**: Screws for the bottom flange.

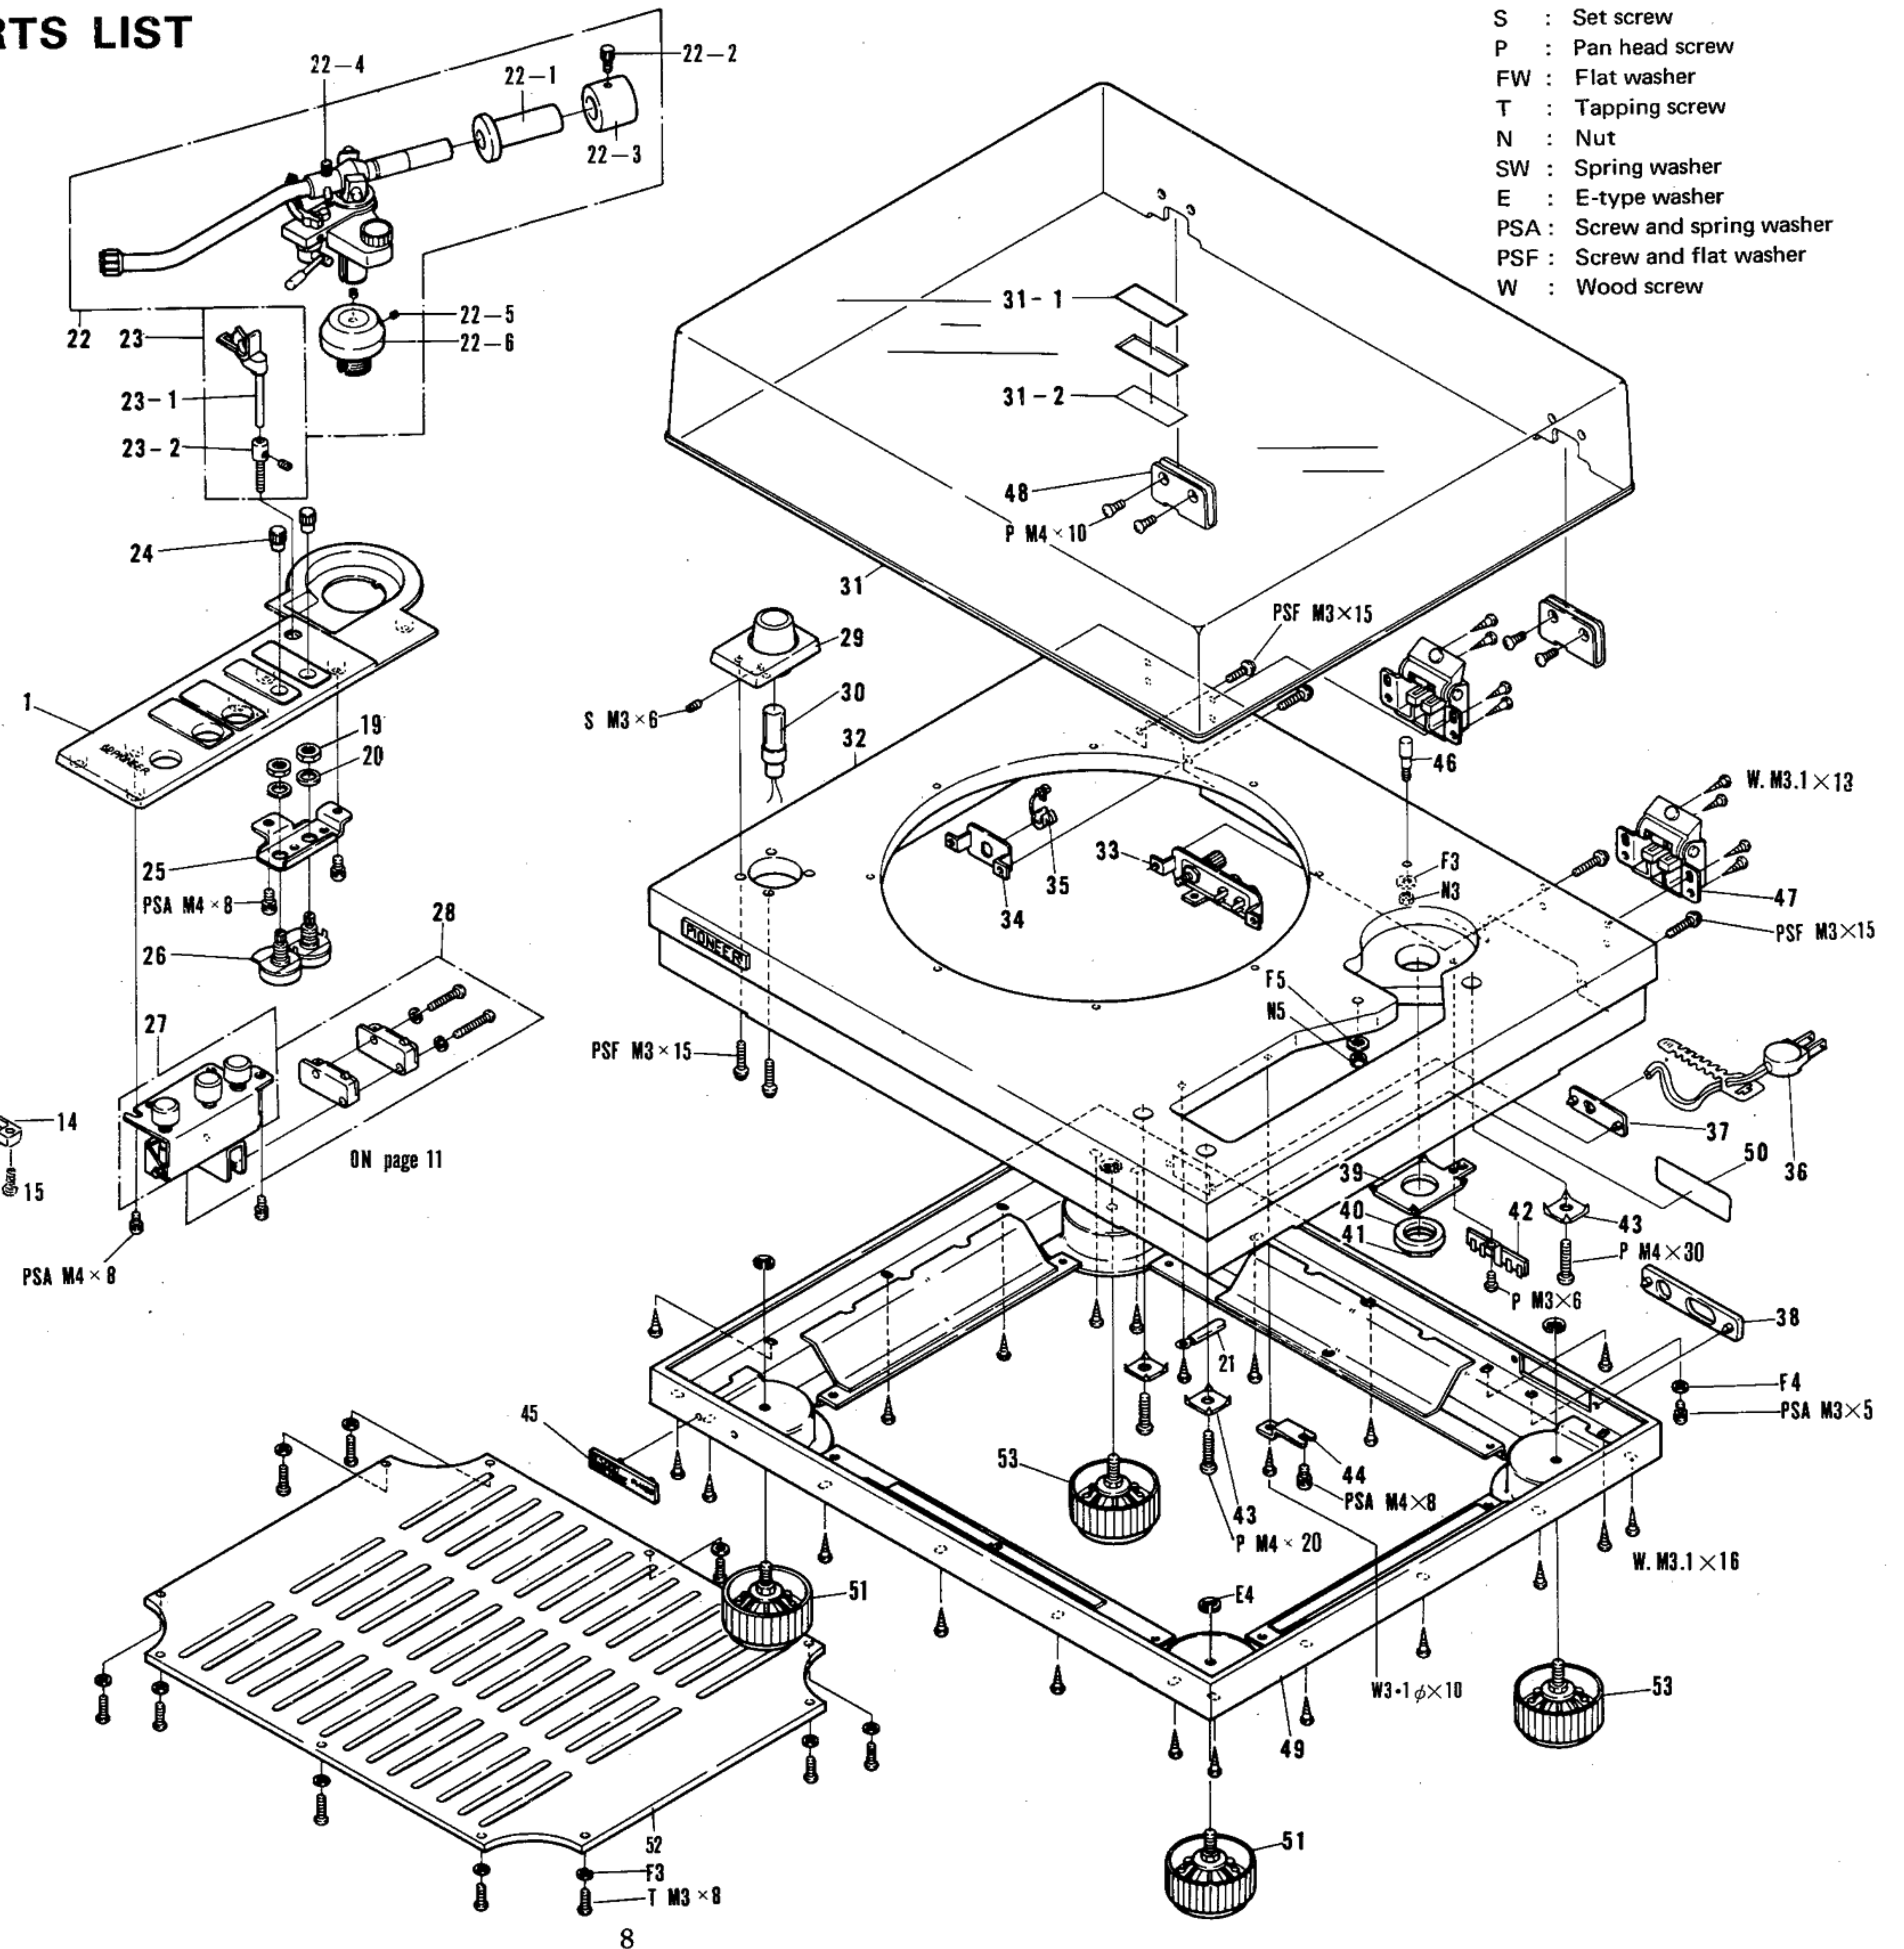


NOTICE: Any parts asterisked(*) are subject to being not supplied.

Key No.	Description	Part No.	
1	Control panel	PAM-014-A	
2*	Rubber mat assembly	KEA-019-0	
2-1	Ring	KAH-007-A	
2-2	Rubber mat	KEB-058-A	
3	Turntable platter	PNR-013-0	
4	Motor cover	PNW-021-A	
5	Motor	KXM-021-G	
6*	Motor panel	KNA-572-F	
7	Power transformer	KTT-015-0	
8	Power supply circuit assembly	KWR-030-E	
9*	Grand cord assembly	KDX-006-A	
10	Transformer base rubber (A)	KEB-063-0	
11	Transformer holder	KNA-603-A	
12*	Boss	KNK-186-A	
13	Power P.C. board assembly	KNP-054-C	
14	Terminal board (5P)	KKE-006-B	
15	Panhead screw M4 x 12		
19	Nut M9	B71-004-0	
20	Washer	M45-086-A	
21*	Cord fixer	KEX-004-A	
22	Tonearm assembly	PPD-504-0	
22-1	Weight sleeve	KXA-688-D	
22-2	Weight-fasten screw	KXA-689-A	
22-3	Main weight	KLA-632-B	
22-4	Lateral crooked bar-held screw	KBA-040-A	
22-5	Set screw M4 x 8		
22-6	Arm stand	KLA-710-B	
23	Arm rest assembly	PXA-019-A	
23-1*	Arm rest unit	PNW-027-A	
23-2*	Rest stand	KLA-716-0	
24	Knob ... speed control	KLA-518-A	
25*	Variable resistor mounting angle	KNA-715-0	
26	Variable resistor	KCS-007-0	
27	Function button assembly	KXB-040-0	
28	Switch assembly	PXA-008-A	
29	Strobo lamp cover	KXB-015-C	
30	Strobo lamp	PEL-001-0	
31	Dust cover	KNK-266-A	
31-1*	Name plate A	KAM-042-0	
31-2*	Name plate B	A55-013-A	
32	Upper board	KMM-077-F	
33	Output terminal assembly	KXA-571-F	
34*	Plate	KNA-522-C	
35	Power cord grommet	E32-056-0	
36	AC cord	KDG-011-0	

NOTICE: Any parts asterisked(*) are subject to being not supplied.

Key No.	Description	Part No.	
37	Name plate C	KNK-253-D	Including key No. 51 ~ 53
38	Name plate D	KNK-254-C	
39	Plate	KNA-763-0	
40	Washer ring	B22-646-0	
41	Nut	KLA-748-0	
42	1L-4P terminal	KKC-021-0	
43	Claw washer	KBE-002-A	
44*	Angle	KNA-716-0	
45	Name plate E	KAM-092-0	
46	Adaptor pin	KLA-588-0	
47	Hinge assembly	KXA-603-A	
48	Lock plate	N61-084-0	
49	Under board	KNA-629-E	
50*	Name plate F	PAL-027-0	
51	Insulator assembly (G)	KXA-796-B	
52	Bottom cover	KMS-074-0	
53	Insulator assembly (H)	KXA-797-B	

POWER P.C. BOARD

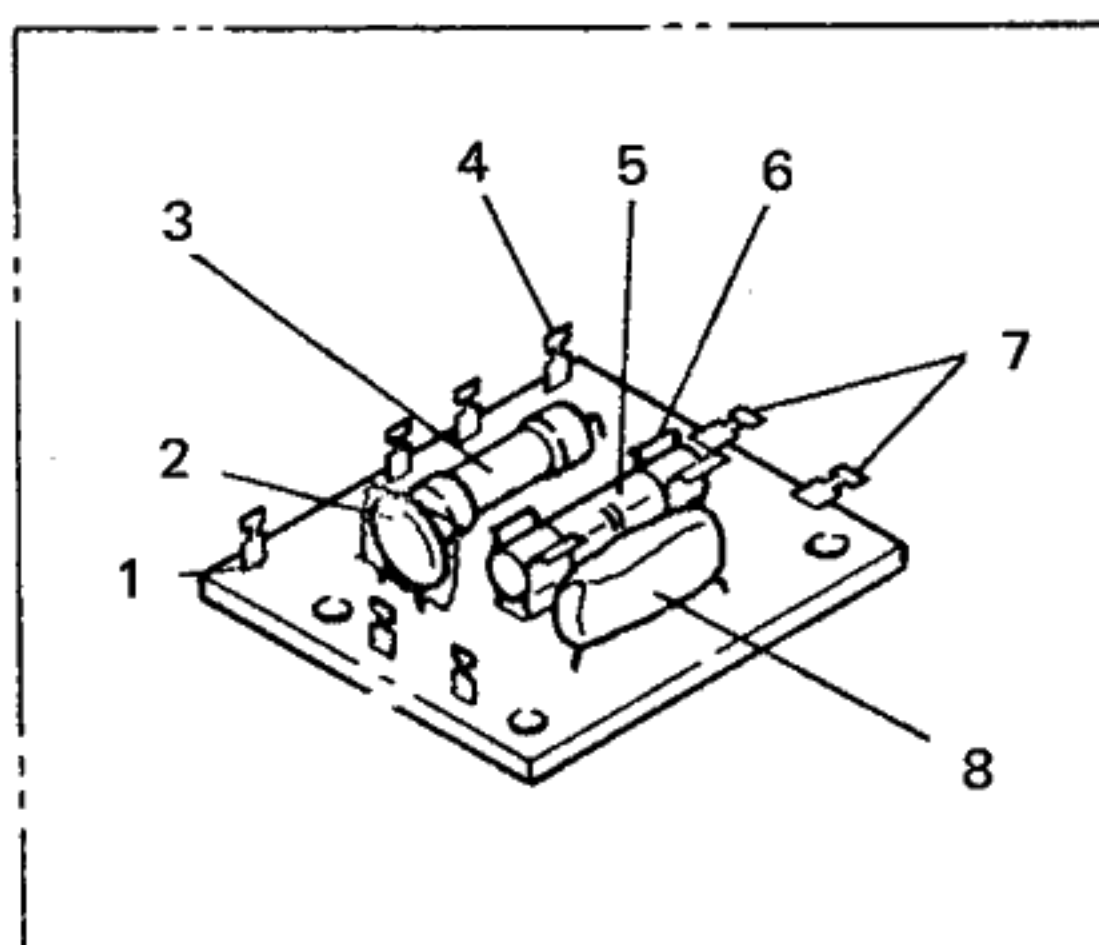


Parts List

NOTICE: Any parts asterisked(*) are subject to being not supplied.

Key No.	Description	Part No.	
1	Power P.C. board assembly	KNP-054-C	
2	Capacitor 0.01 μ F 1.4kV	C43-003-0	
3	Metal oxide 3.9k 3W	RS3P 392J	
4*	Terminal (B)	KNK-222-0	
5	Fuse 0.3A	E21-030-0	
6	Fuse holder	K91-006-0	
7*	Terminal (L-shaped)	K28-003-0	
8	Capacitor 0.033 μ F	KCE-009-0	


5.2 OPERATION MECHANISM ASSEMBLY (PXA-008-B)

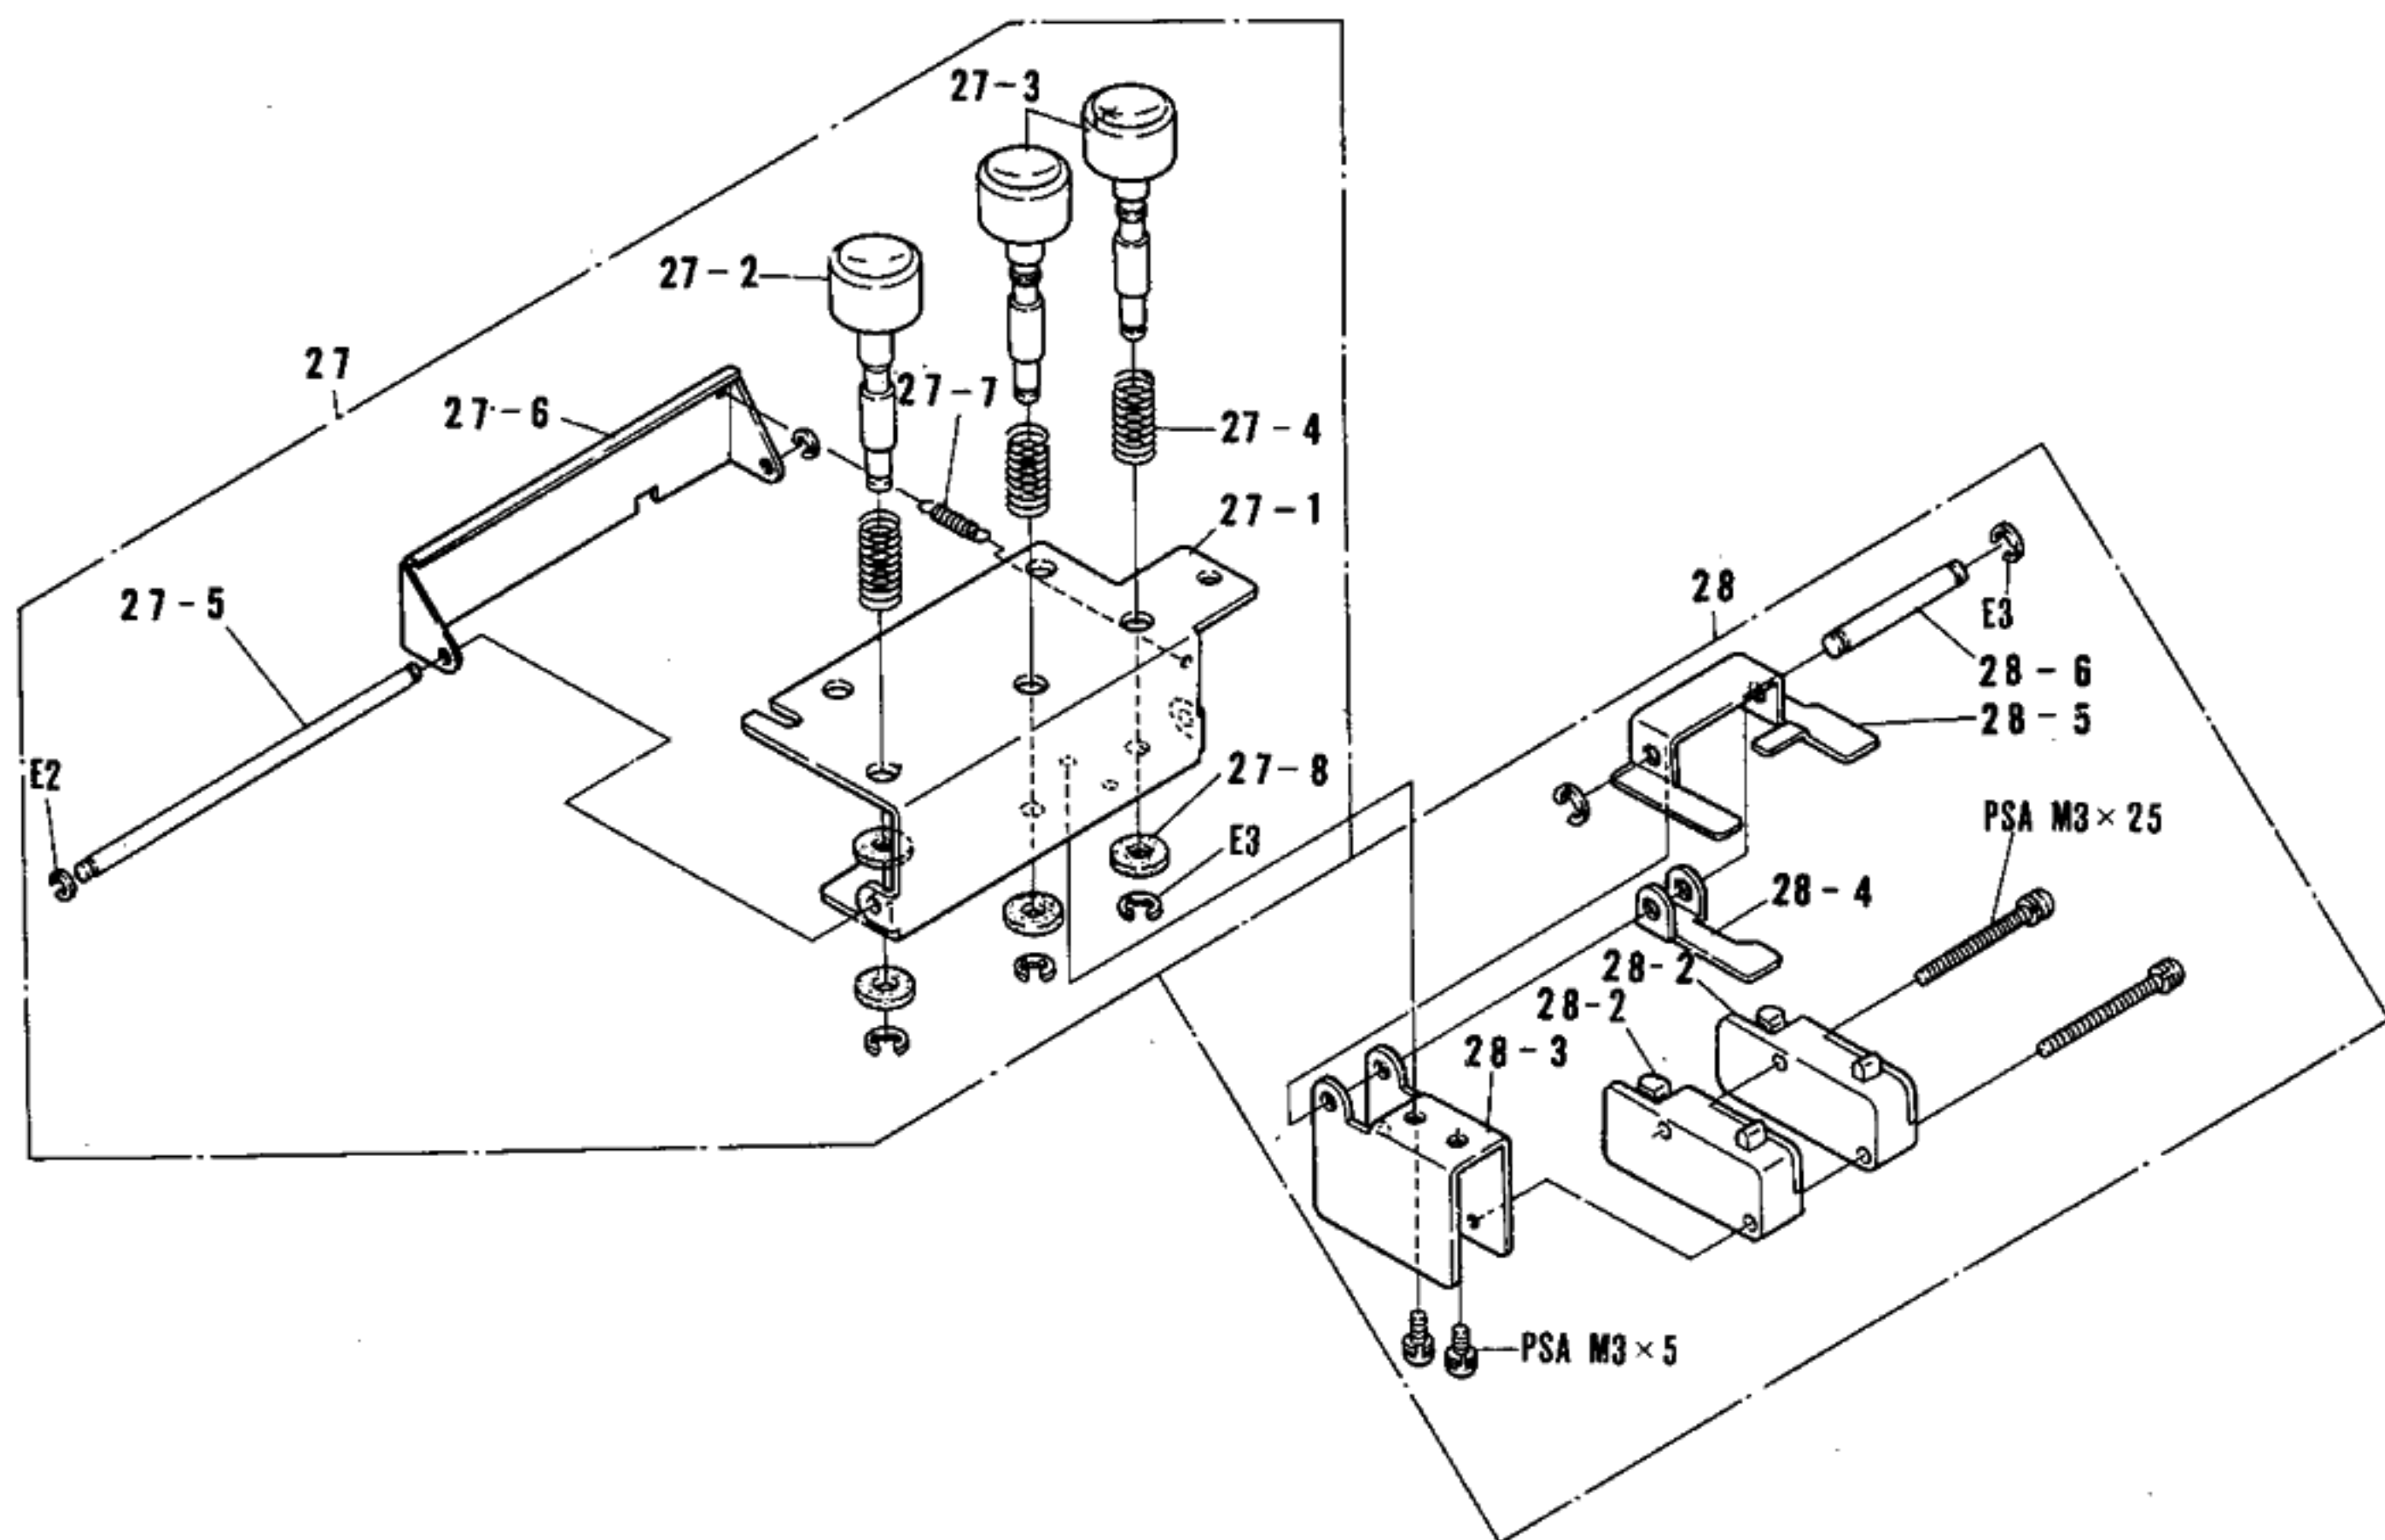

NOTICE: Any parts asterisked(*) are subject to being not supplied.

Key No.	Description	Part No.	
27	Function button assembly	KXB-040-0	
27-1*	Angle	KNA-138-C	
27-2	Button A assembly (power OFF)	KXB-041-0	
27-3	Button B assembly (speed selector)	KXB-042-0	
27-4	Spring	KBH-099-0	
27-5*	Shaft	KLA-141-0	
27-6*	Button stopper angle	KNA-144-B	
27-7	Spring	KBH-029-D	
27-8	Rubber washer	KNK-109-0	
28	Switch assembly	KXB-063-F	
28-2	Microswitch	KSF-023-0	
28-3*	Microswitch mounting angle	PNB-014-0	
28-4*	Plate A	KNA-730-0	
28-5*	Plate B	KNA-731-0	
28-6*	Shaft	KLA-727-0	


5.3 PACKING

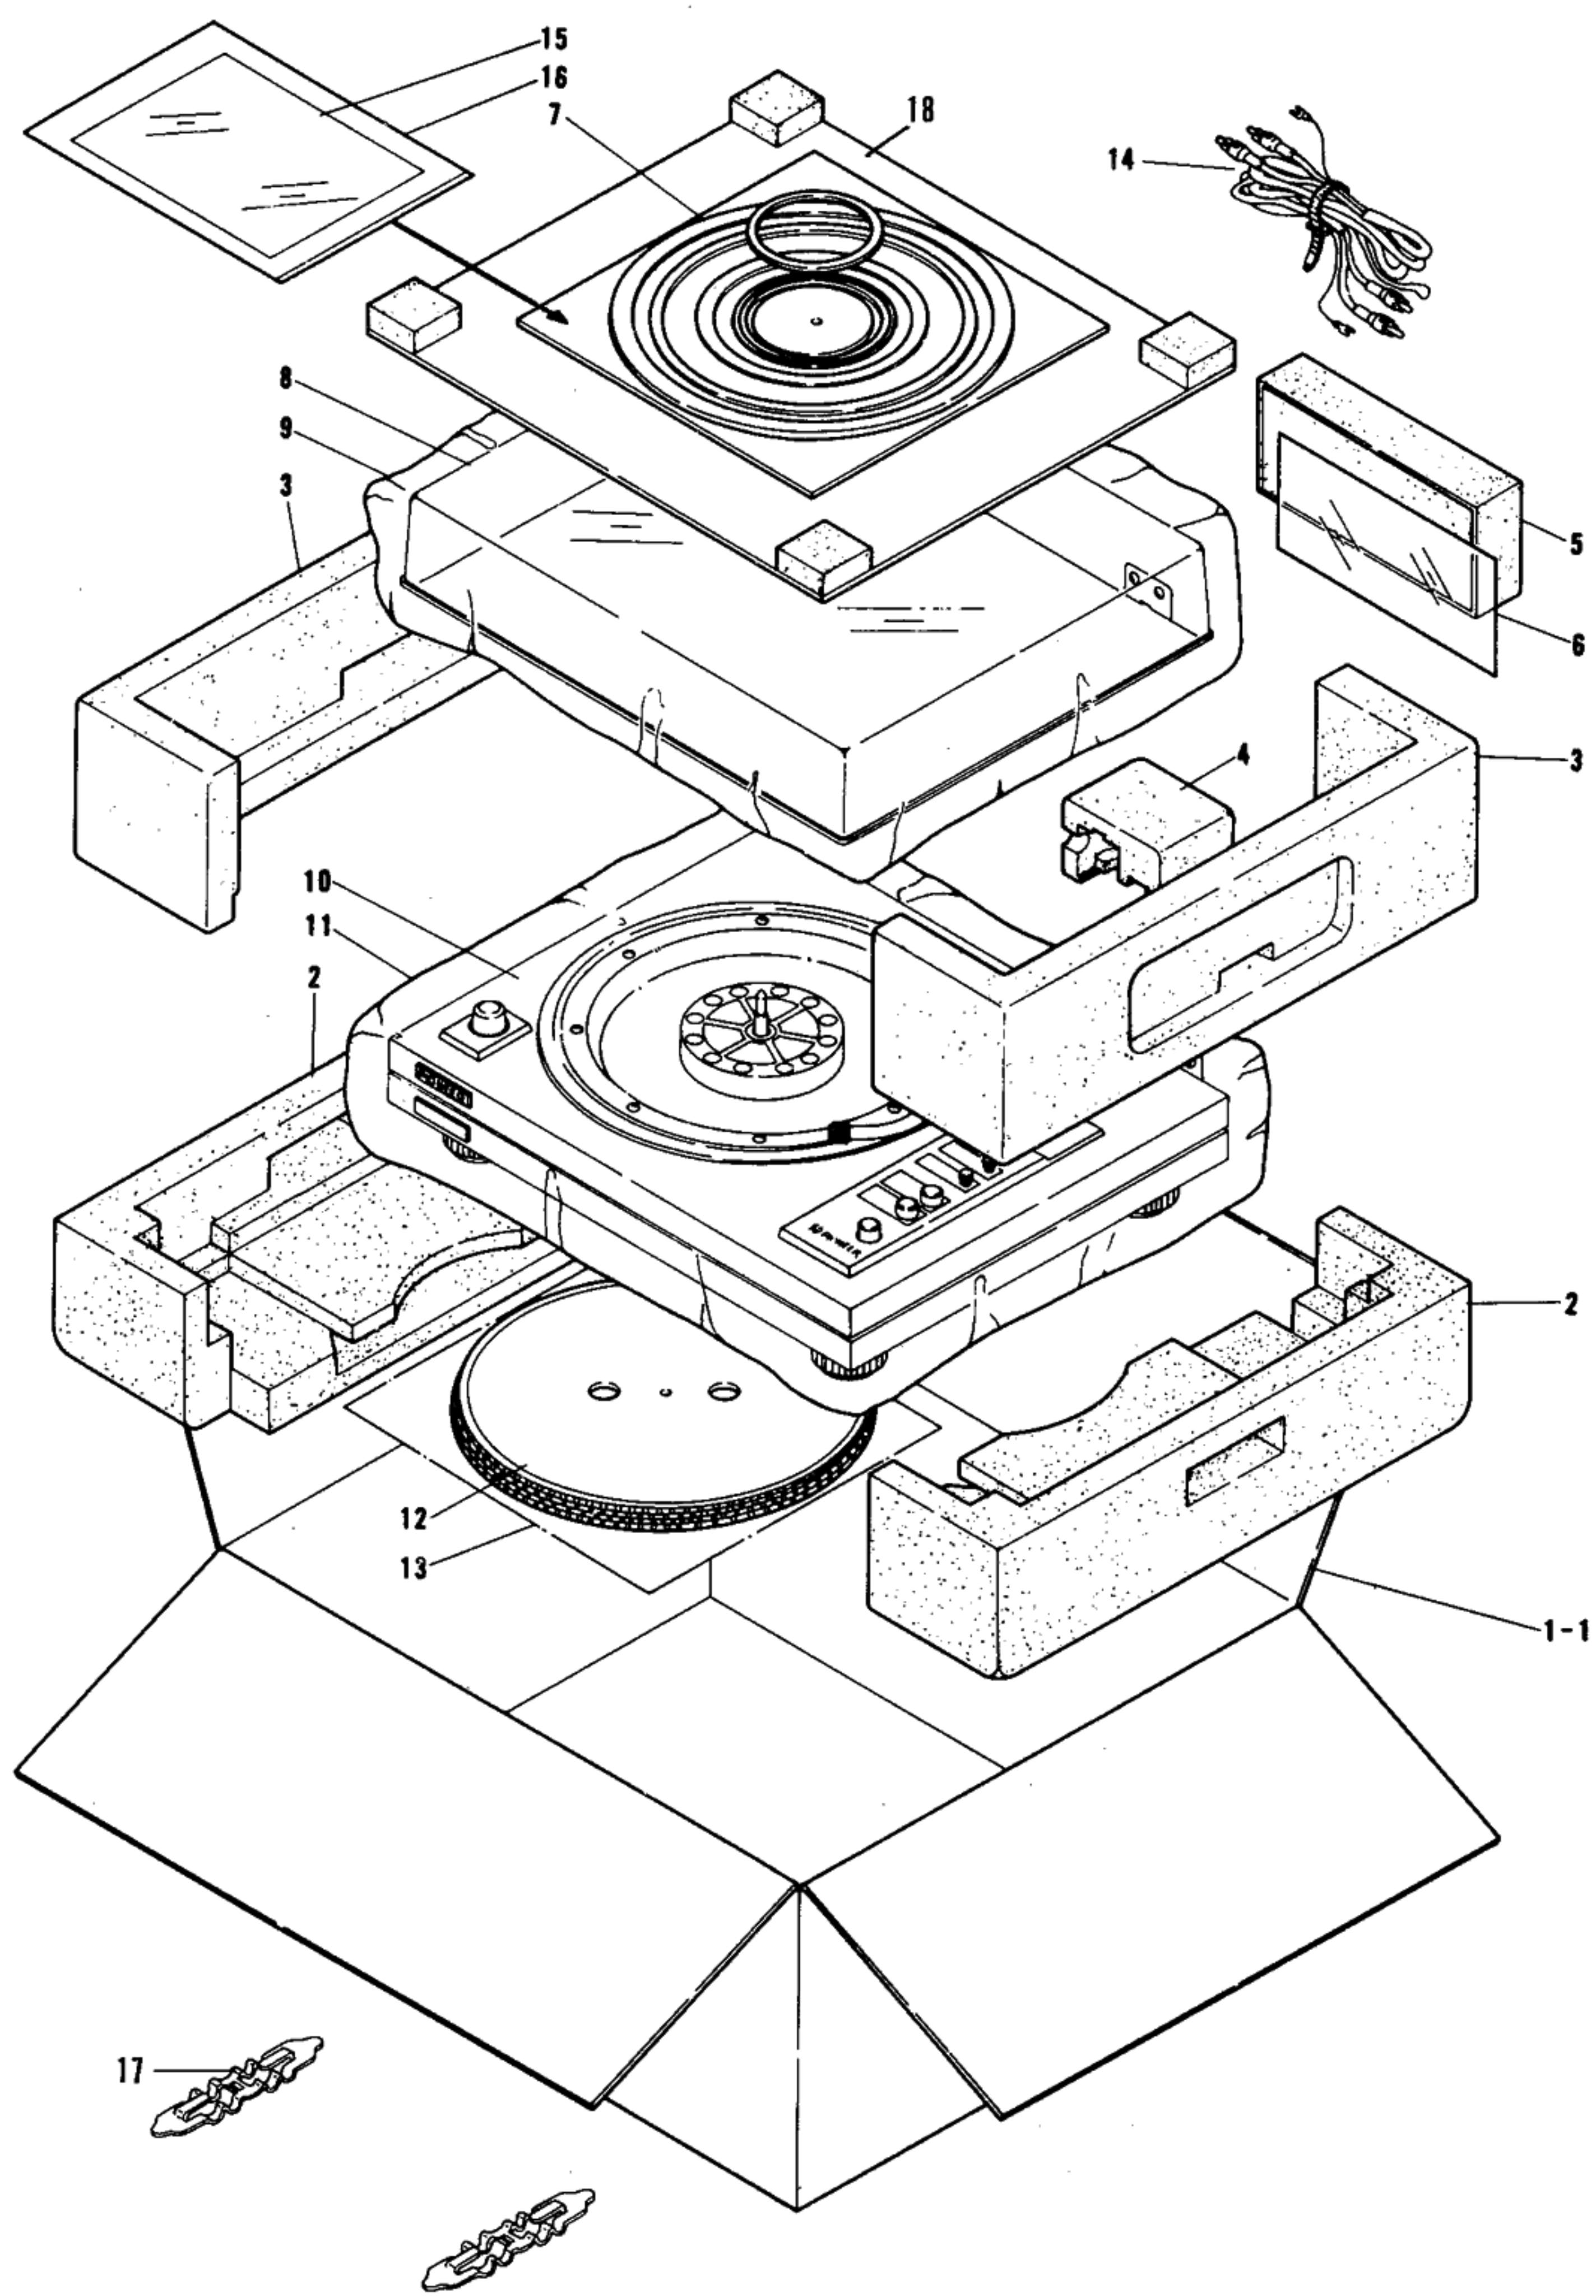

NOTICE: Any parts asterisked(*) are subject to being not supplied.

Key No.	Description	Part No.	
1	Packing case	PHG-036-0	
2	Styrorector B	KHA-227-A	
3	Styrorector A	KHA-226-B	
4	Tonearm packing	KHA-233-A	
5	Parts box	KHX-030-0	
6	Parts box cover	KHX-002-0	
7*	Rubber mat assembly	KEA-019-0	
8	Dust cover	KNK-266-A	
9*	Vinyl bag		
10*	PL-71		
11	Vinyl bag	H56-603-0	
12	Turntable platter	PNR-013-0	
13*	Vinyl bag		
14	Output cord assembly	PDE-003-A	
15	Operating instructions	KRB-069-A	
16*	Vinyl bag		
17	Packing case flap stopper	KNK-403-0	
18	Top cardboard	KHC-059-0	

5.4 ACCESSORY PARTS

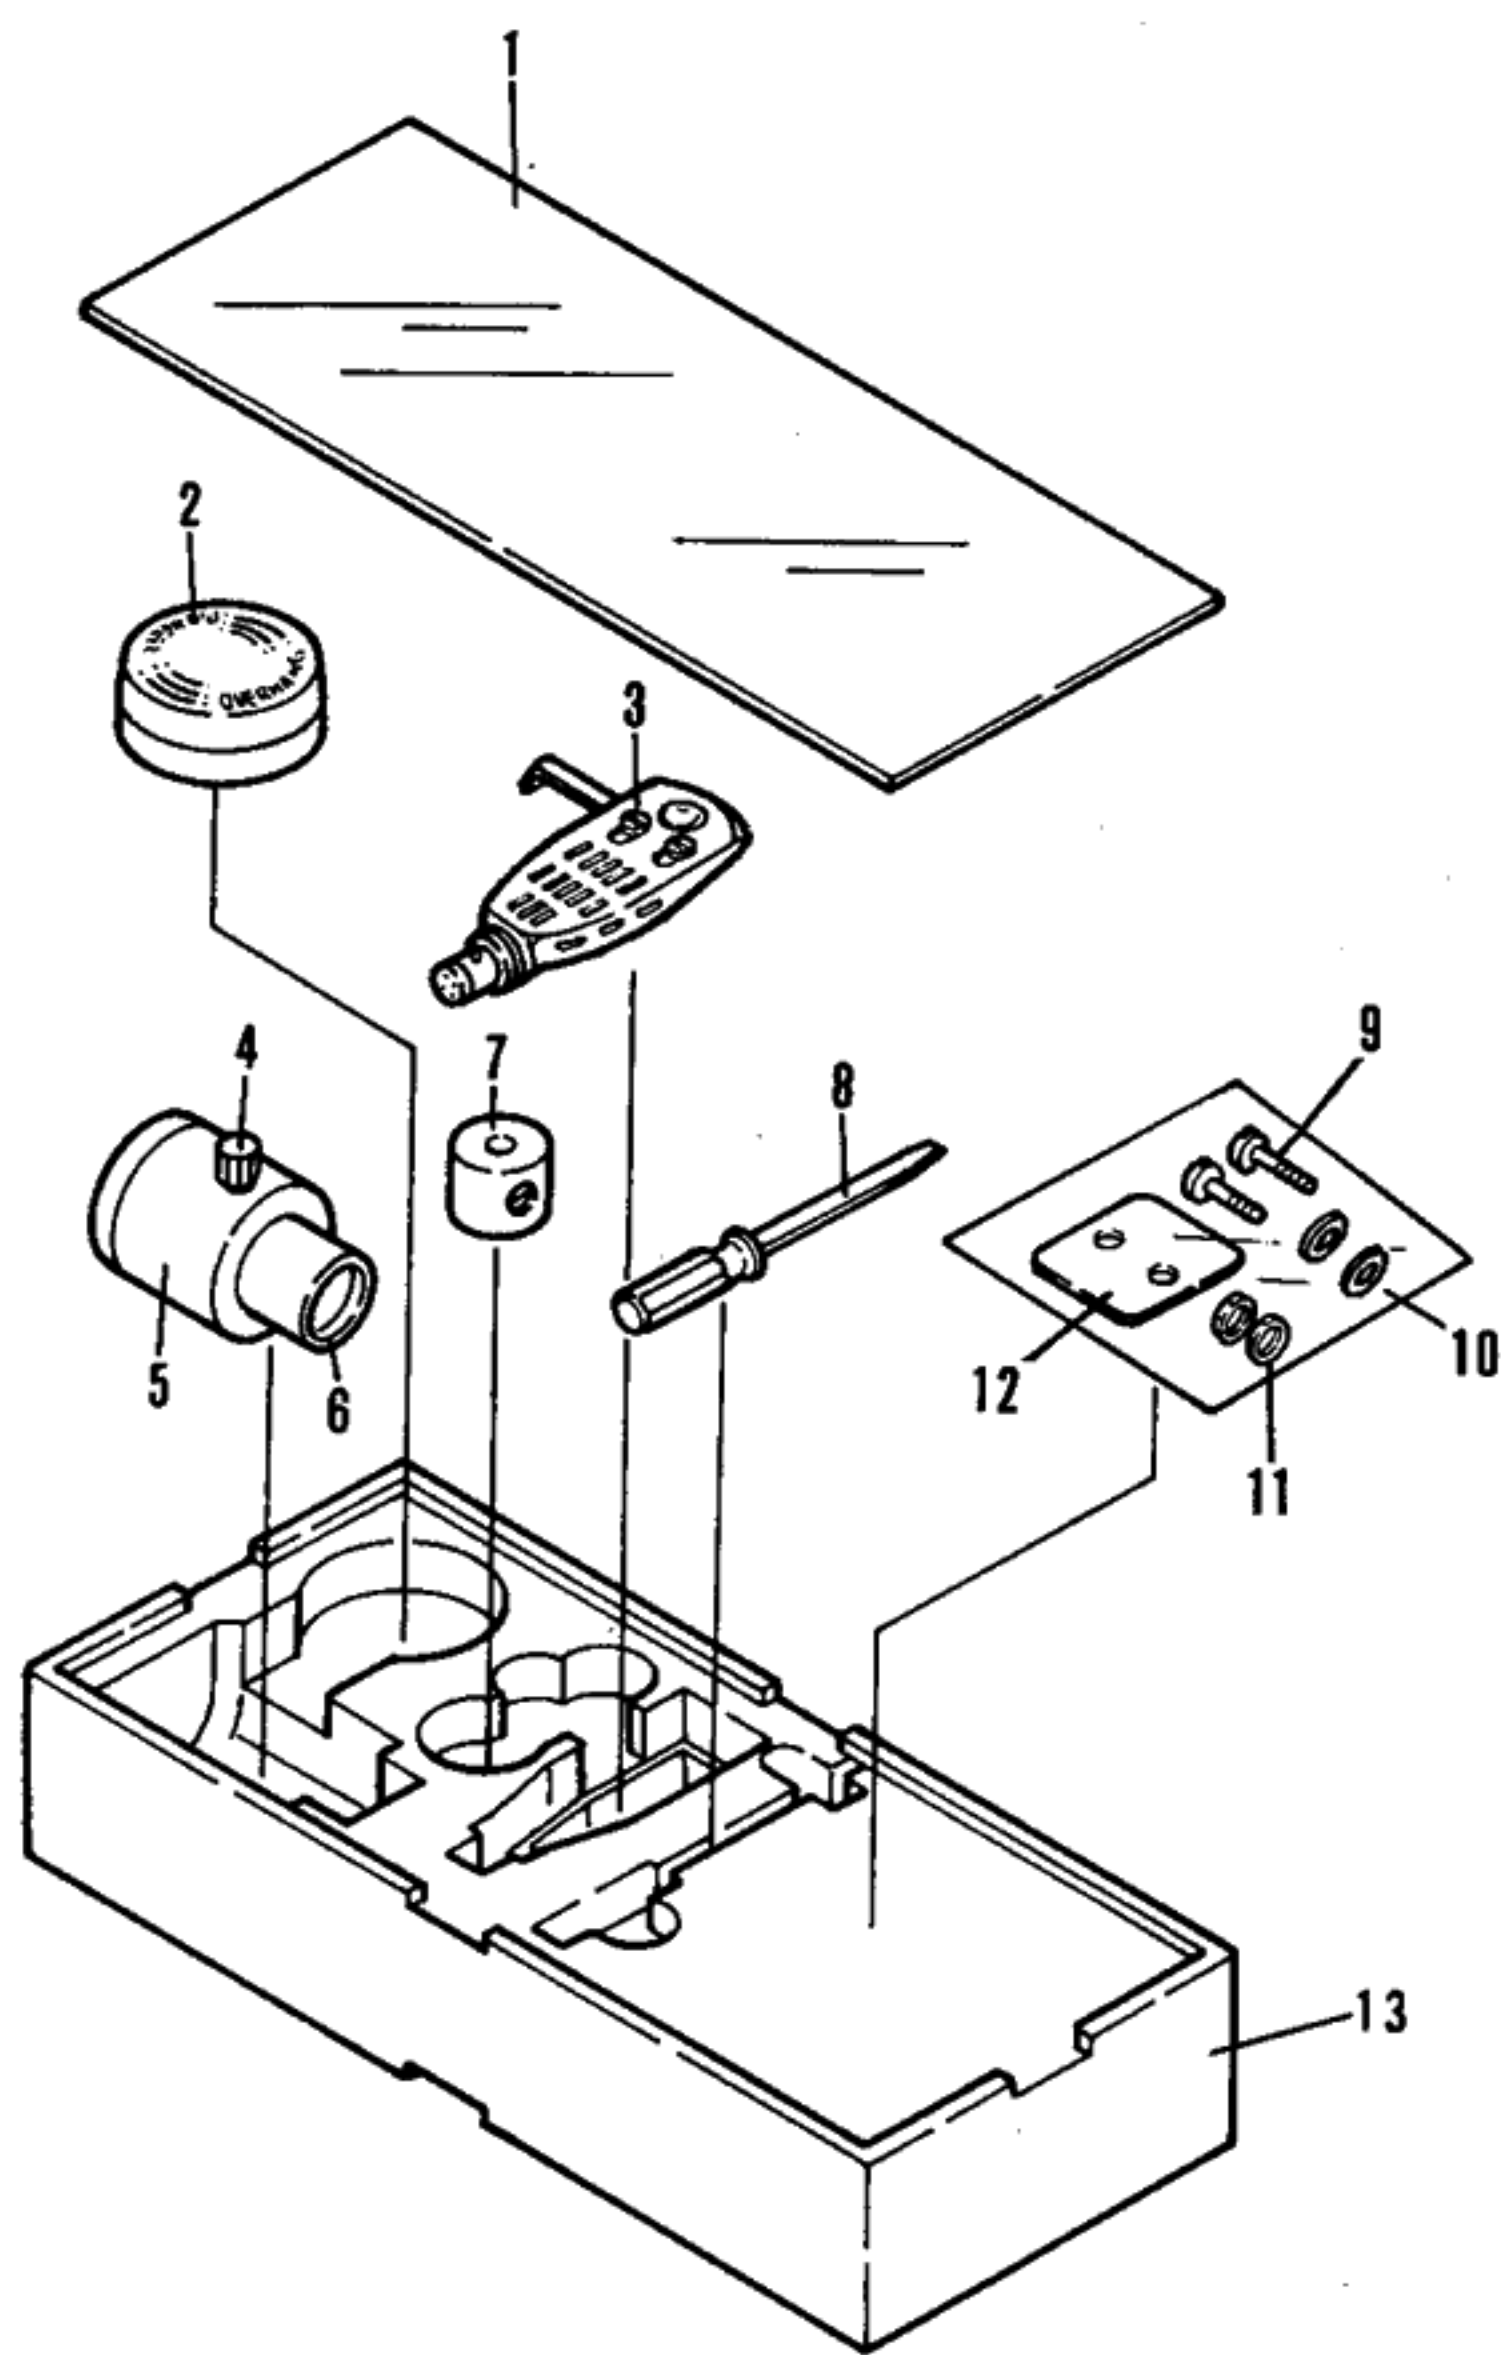


NOTICE: Any parts asterisked(*) are subject to being not supplied.


Key No.	Description	Part No.	
1	Parts box cover	KHX-002-0	
2	EP adaptor	KNK-376-A	
3*	Head shell		
4	Weight-fasten screw	KXA-689-A	
5	Main weight	KLA-632-B	
6	Weight sleeve	KXA-688-D	
7	Lateral balance weight	KLA-633-B	
8	Screw driver	KEX-002-A	
9	Cartridge mounting screw 8mm	KBA-043-0	
9	Cartridge mounting screw 5mm	KBA-044-0	
9	Cartridge mounting screw 15mm	KBA-045-0	
9	Cartridge mounting screw 11.5mm	B11-657-C	
9	Cartridge mounting screw 13mm	B11-044-C	
10	Washer	B23-642-0	
11	Nut	B71-653-0	
12	Weight plate	N64-698-A	
13	Part box	KHX-030-0	

6. SCHEMATIC DIAGRAMS P.C. BOARD PATTERN AND PARTS LIST


6.1 SCHEMATIC DIAGRAMS

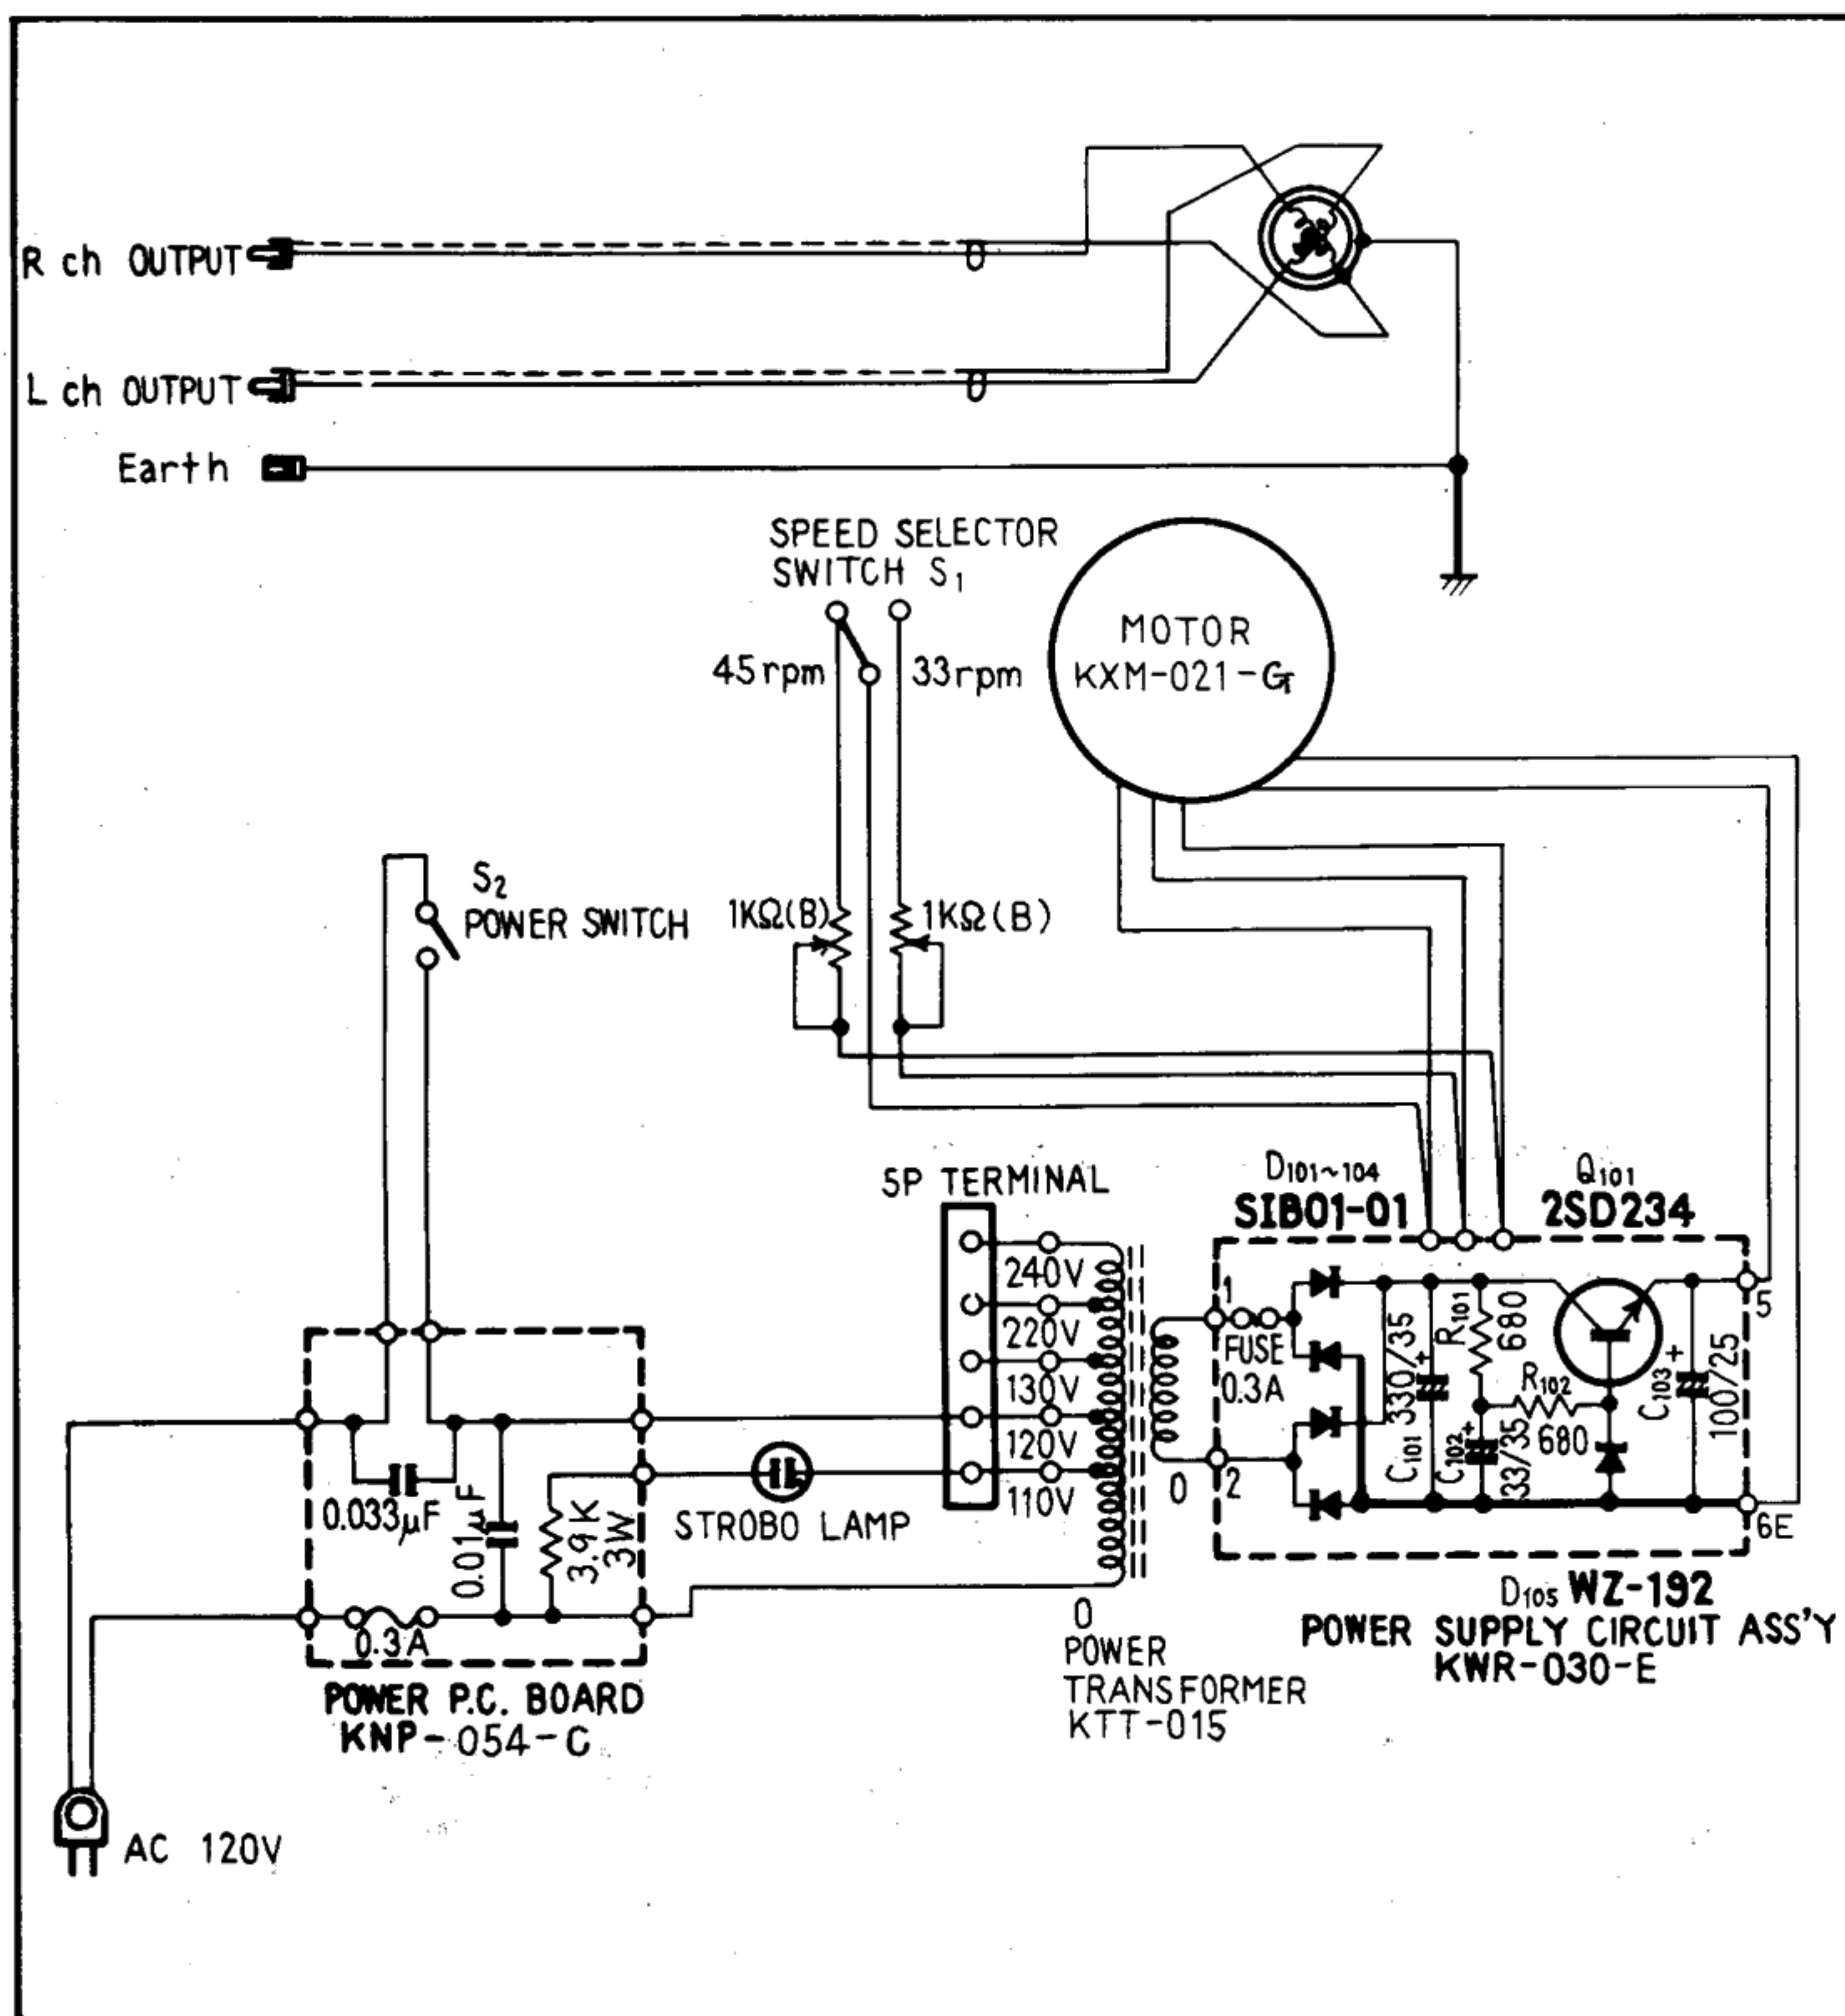


2SD234

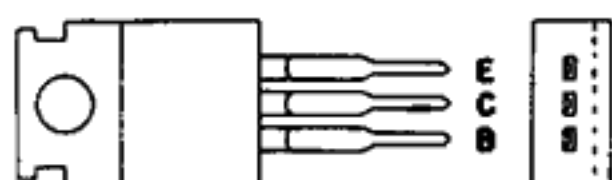

6.2 POWER SUPPLY CIRCUIT ASSEMBLY

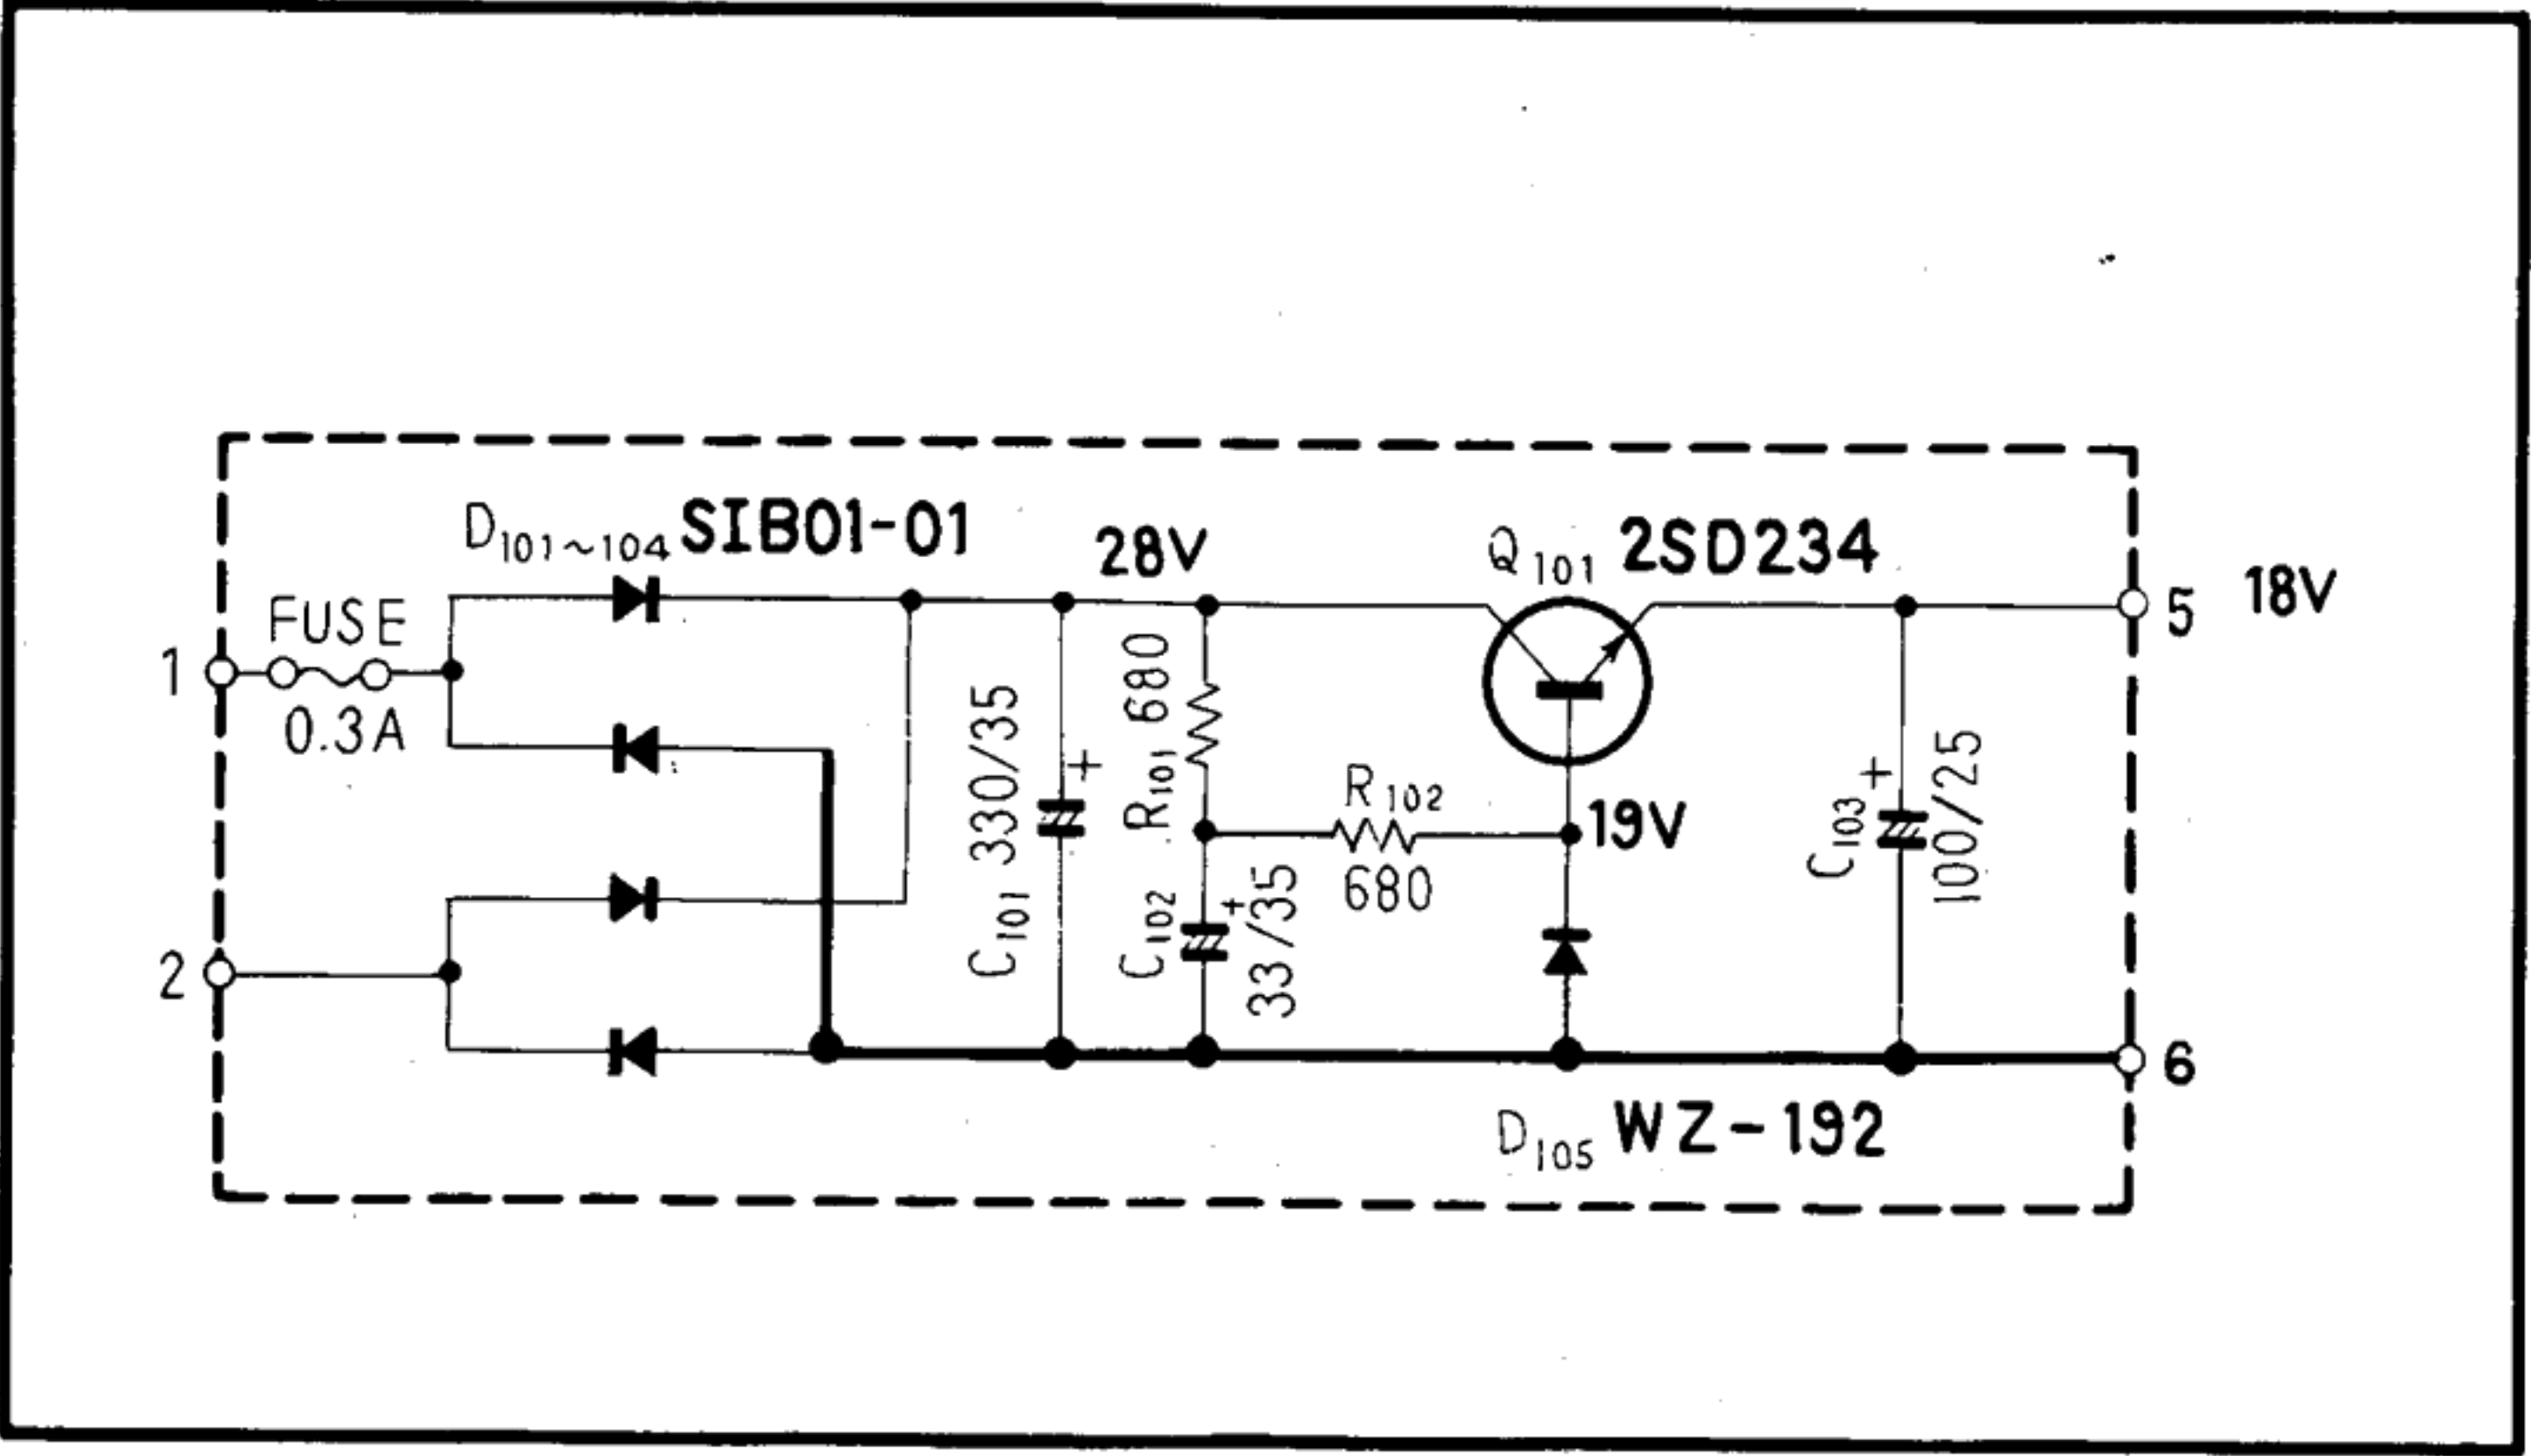

Foil Side

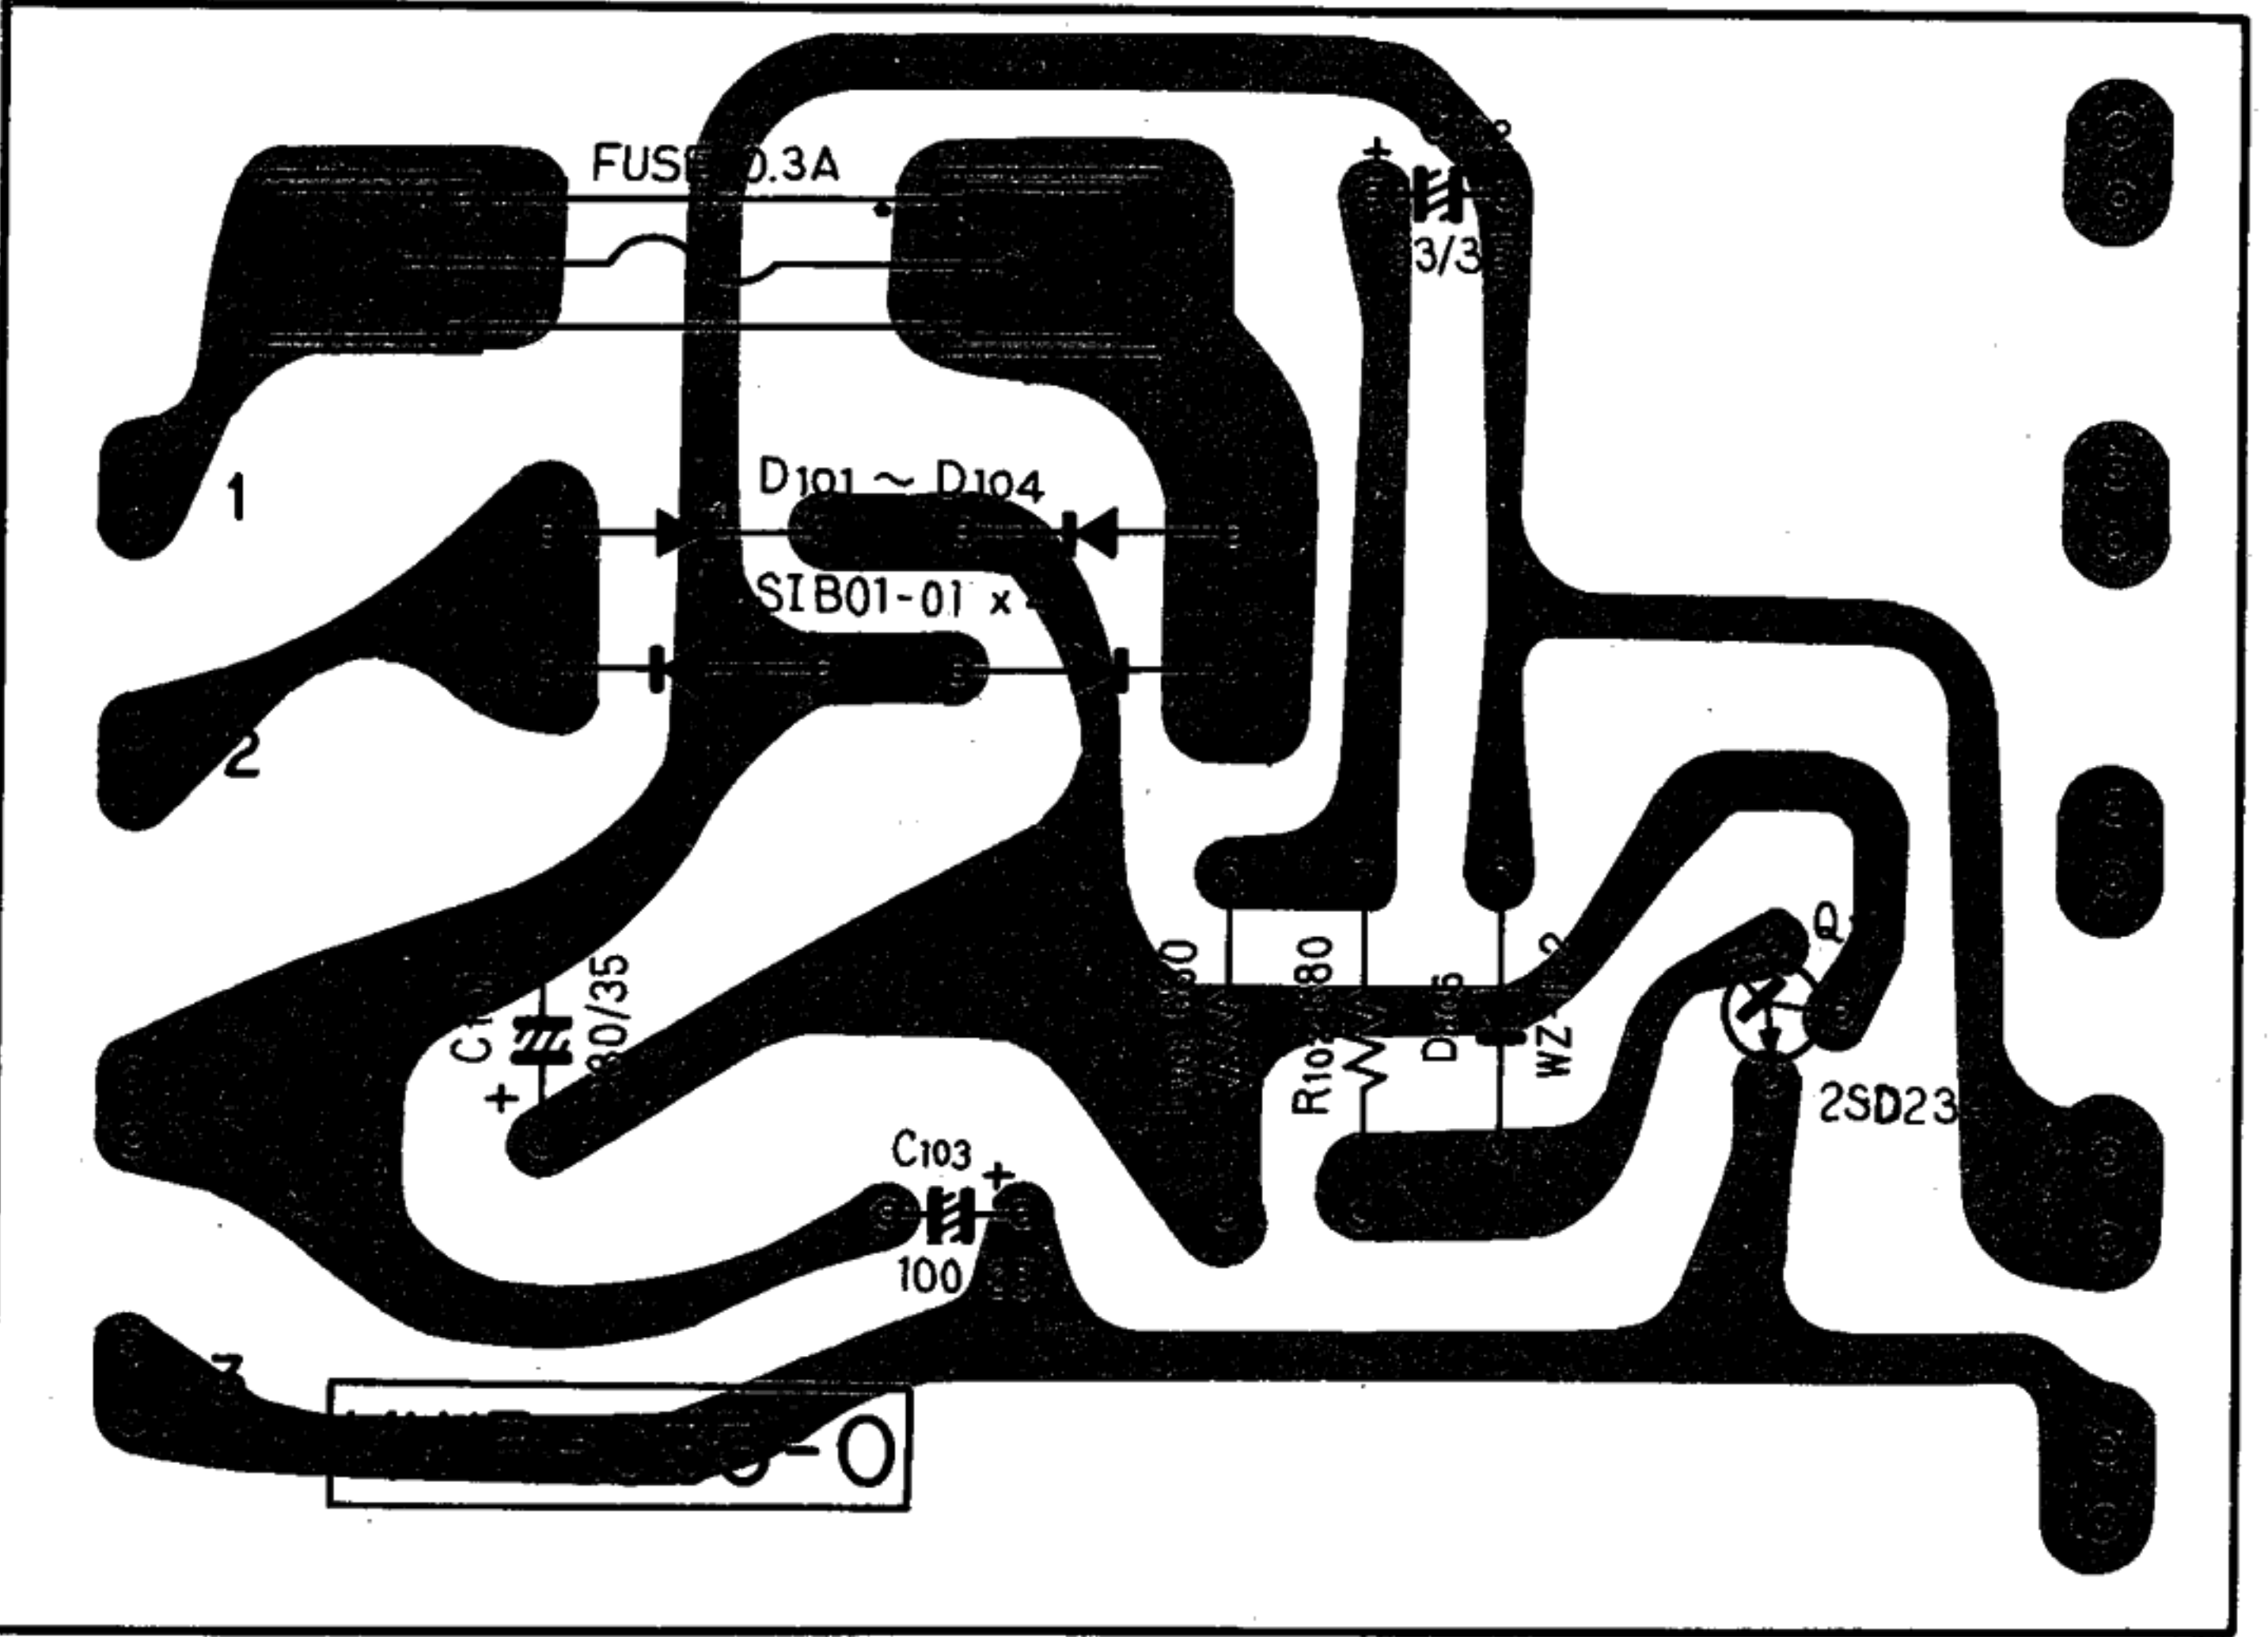

- CAPACITORS: IN μ F UNLESS OTHERWISE NOTED p: pF
- RESISTORS: IN Ω , $\frac{1}{4}$ W UNLESS OTHERWISE NOTED k: k Ω , M: M Ω

Parts List of Power Supply Circuit Assembly

CAPACITORS

Symbol	Description			Part No.	
C101	Electrolytic	330	35V	CEA 331P 35	
C102	Electrolytic	33	35V	CEA 330P 35	
C103	Electrolytic	100	25V	CEA 101P 25	

RESISTORS

Symbol	Description			Part No.	
R101	Carbon film	680		RD $\frac{1}{4}$ PS 681J	
R102	Carbon film	680		RD $\frac{1}{4}$ PS 681J	

SEMICONDUCTORS

Symbol	Description			Part No.	
Q101	Transistor	2SD234			
D101	Diode	SIB01-01			
D102	Diode	SIB01-01			
D103	Diode	SIB01-01			
D104	Diode	SIB01-01			
D105	Zener diode	WZ-192			

OTHERS

Symbol	Description			Part No.	
	Fuse 0.3A			E21-030-0	
	Fuse holder			K91-006-0	

PIONEER ELECTRONIC CORPORATION

4-1, 1-Chome, Meguro, Meguro-ku, Tokyo 153, Japan

U.S. PIONEER ELECTRONICS CORPORATION

75 Oxford Drive, Moonachie, New Jersey 07074, U.S.A.

PIONEER ELECTRONIC (EUROPE) N.V.

Meir-Center Meir 21, 2000 Antwerp, Belgium

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

256-8 City Road, South Melbourne, Victoria 3205, Australia

MARCH 1975

Printed in Japan