






Thule XT Kit 3141

> Instructions

NISSAN Murano, 5-dr SUV, 15-

This kit is only for vehicles with fixpoint mounting.

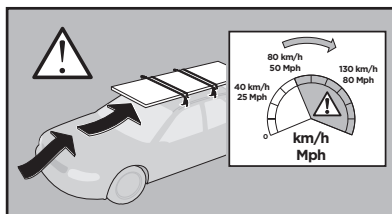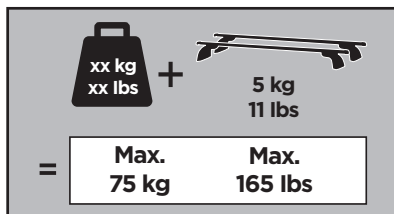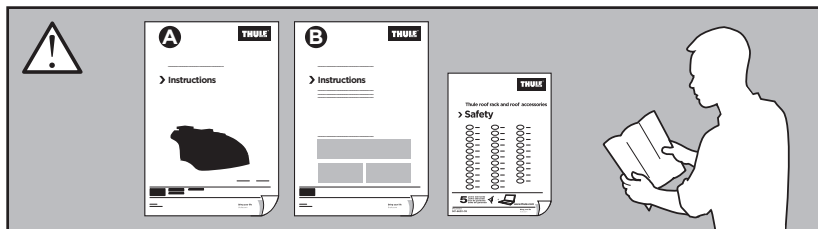


ISO 11154-E


183141

C.20161005
509-3141-01

Bring your life
thule.com



◀ 10 x4




◀ 54 x4





50435 x8



52376 x1




x1

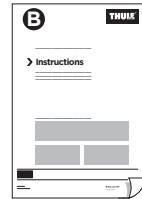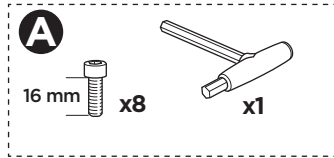


x1

1

10



54




FL ↓




↓ FR




54




10



10



54




↓ RL



RR ↓



54



10

