

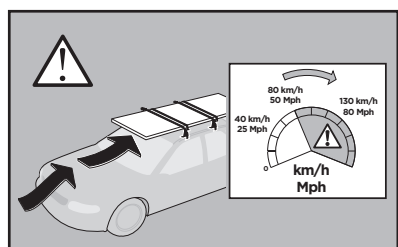
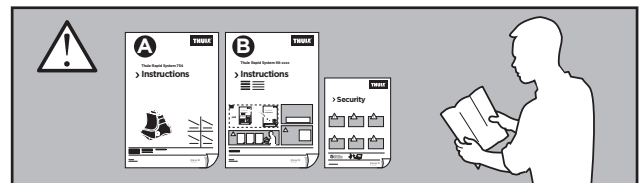


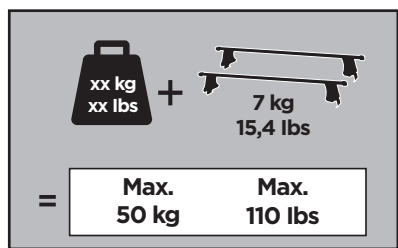

Thule Rapid System Kit 1359

> Instructions

CHEVROLET Niva, 5-dr SUV, 03-
LADA 119, 5-dr Hatchback, 05- (FIN)
LADA Kalina 1119, 5-dr Hatchback, 05-

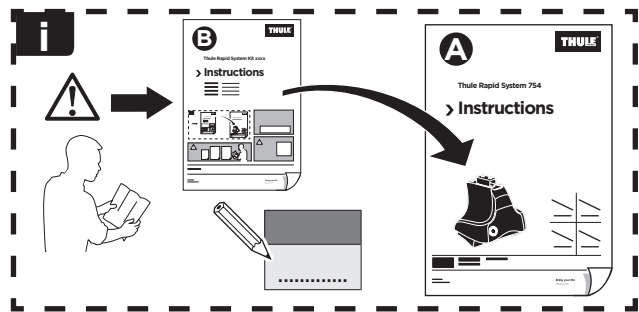


ISO 11154-E

141359
C.20130625
519-1359-01

Bring your life
thule.com




04 x4



x4



x1



634 x4






x1



x1

1



	X (scale)	X (mm)	X (inch)
CHEVROLET Niva , 5-dr SUV, 03-	38	1031	40 ⁵ / ₈
LADA 119 , 5-dr Hatchback, 05- (FIN)	24	891	35 ¹ / ₈
LADA Kalina 1119 , 5-dr Hatchback, 05-	24	891	35 ¹ / ₈

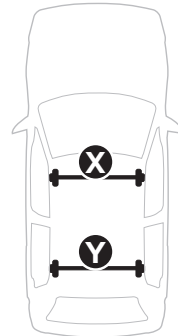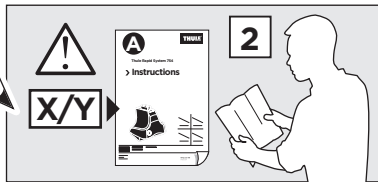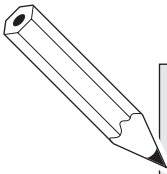

	Y (scale)	Y (mm)	Y (inch)
CHEVROLET Niva , 5-dr SUV, 03-	35,5	1006	39 ⁵ / ₈
LADA 119 , 5-dr Hatchback, 05- (FIN)	22,5	876	34 ¹ / ₂
LADA Kalina 1119 , 5-dr Hatchback, 05-	22,5	876	34 ¹ / ₂

2

CHEVROLET Niva, 5-dr SUV, 03-
LADA 119, 5-dr Hatchback, 05- (FIN)
LADA Kalina 1119, 5-dr Hatchback, 05-

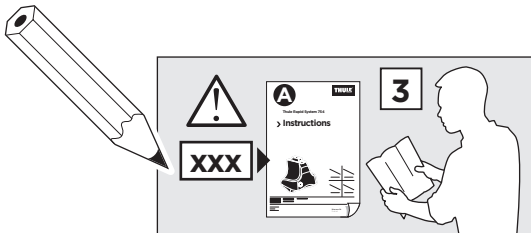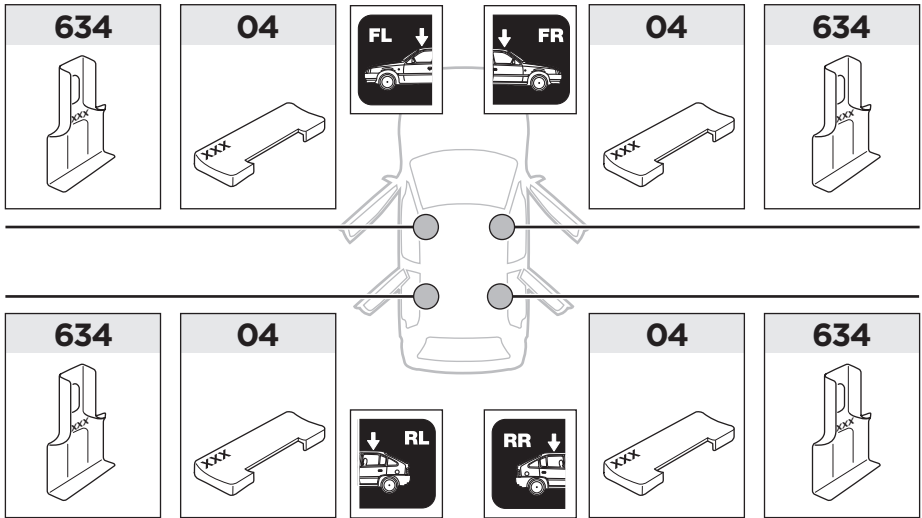

3

