

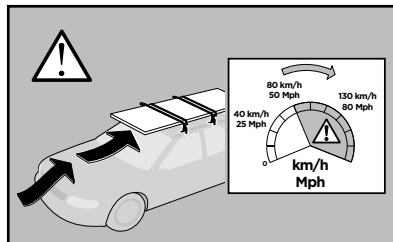
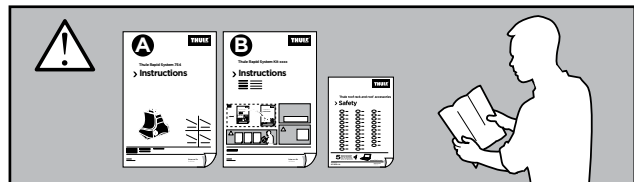


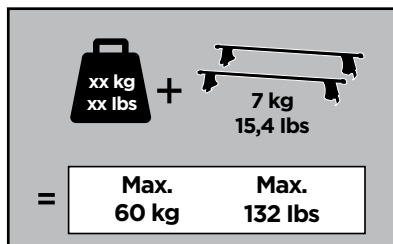

## Thule Rapid System Kit 1769

# > Instructions

RENAULT Espace, 5-dr MPV, 15-

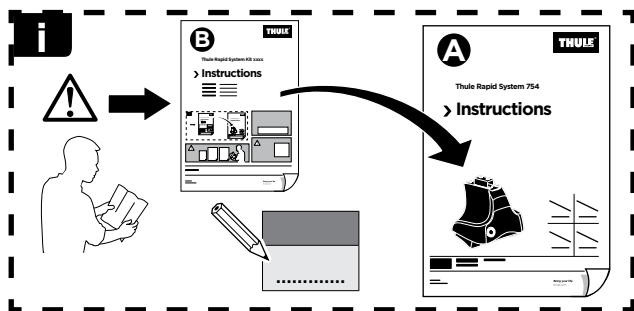


ISO 11154-E

141769  
C.20151015  
519-1769-01


Bring your life  
thule.com




03 x2



165 x1



166 x1



1345 x2



1346 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
RENAULT Espace, 5-dr MPV, 15-	52	1171	46 1/8

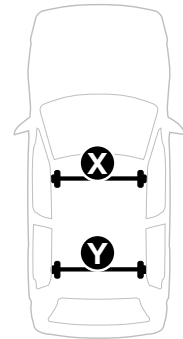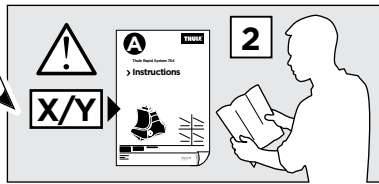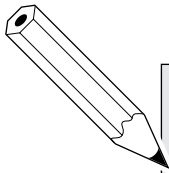


	Y (scale)	Y (mm)	Y (inch)
RENAULT Espace, 5-dr MPV, 15-	49	1141	44 7/8

2

RENAULT Espace, 5-dr MPV, 15-

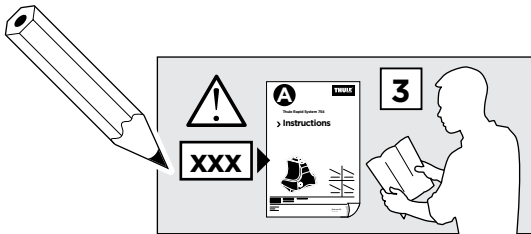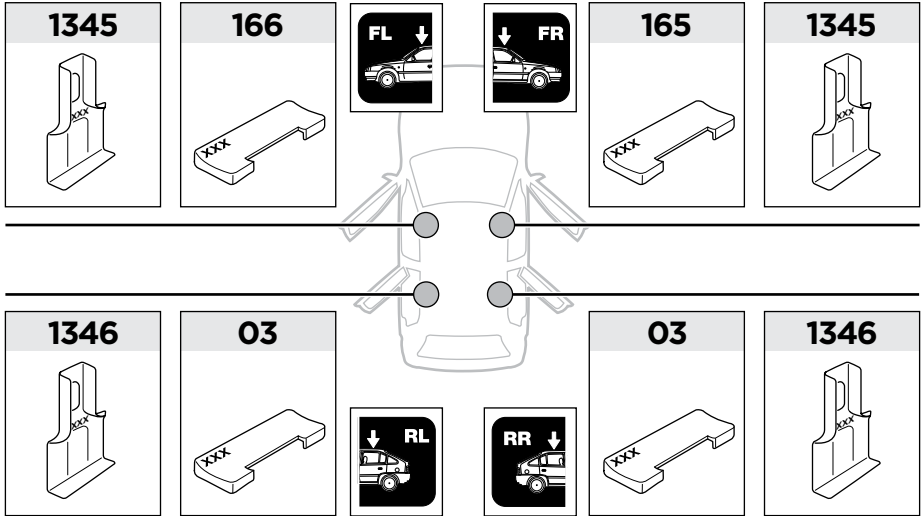

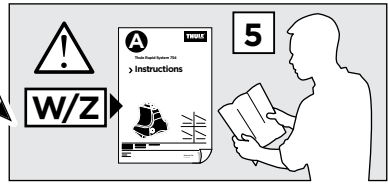**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>RENAULT Espace, 5-dr MPV, 15-</b>	<b>440</b>	<b>690</b>	<b>17 <sup>3</sup>/<sub>8</sub></b>	<b>27 <sup>1</sup>/<sub>8</sub></b>

