
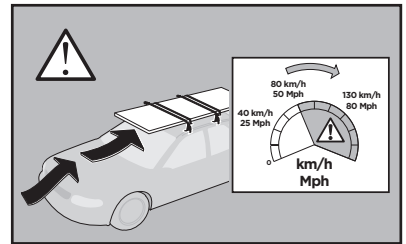
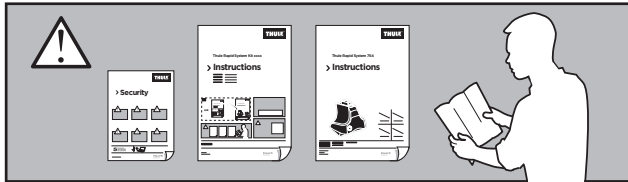
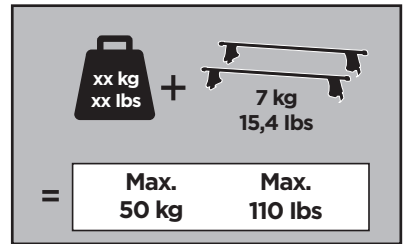


# Thule Rapid System Kit 1691

# > Instructions

**HONDA CR-V**, 5-dr SUV, 12-16\* / 12-18 (Without railing)

\*North America

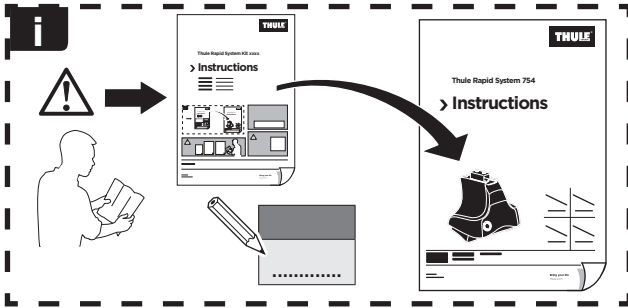

ISO 11154-E

141691


C.20180515  
519-1691-03

Bring your life

thule.com



265 x4




319 x2



x1





1170 x2



x1

# 1


	X (scale)	X (mm)	X (inch)
<b>HONDA CR-V, 5-dr SUV, 12-16* / 12-18 (Without railing)</b>	<b>44</b>	<b>1091</b>	<b>43</b>

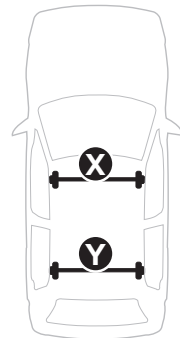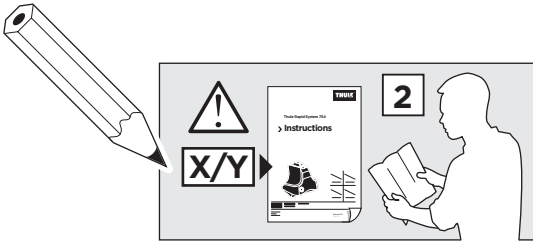


	Y (scale)	Y (mm)	Y (inch)
<b>HONDA CR-V, 5-dr SUV, 12-16* / 12-18 (Without railing)</b>	<b>40</b>	<b>1051</b>	<b>41 <sup>3</sup>/<sub>8</sub></b>

**2**

**HONDA CR-V, 5-dr SUV, 12-16\* / 12-18 (Without railing)**

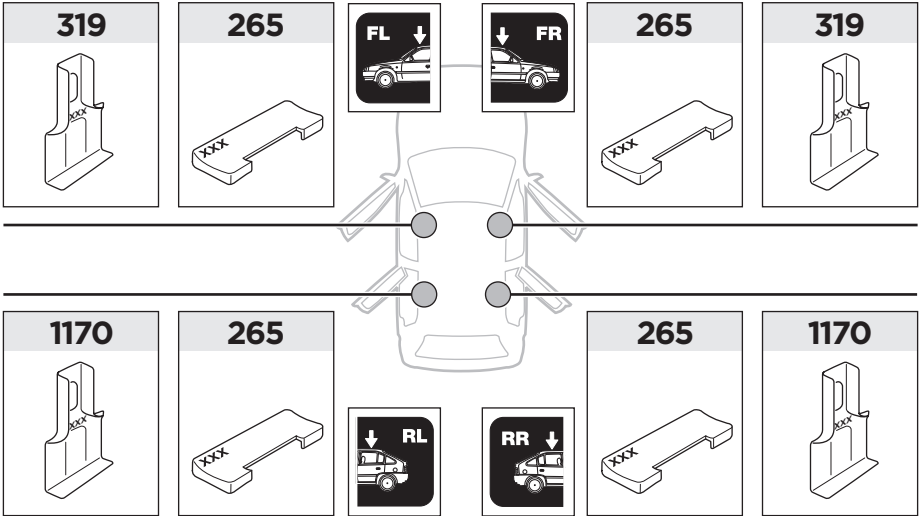

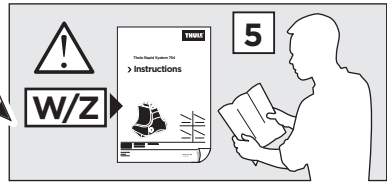**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>HONDA CR-V, 5-dr SUV, 12-16* / 12-18 (Without railing)</b>	<b>400</b>	<b>700</b>	<b>15 <sup>3</sup>/<sub>4</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>

