



Инструкция по установке

Toyota Land Cruiser Prado 150


(2003-2009 / 2009-) кроме комплектации **Black Onyx**




Арт.: F.5704.001
F.5704.002

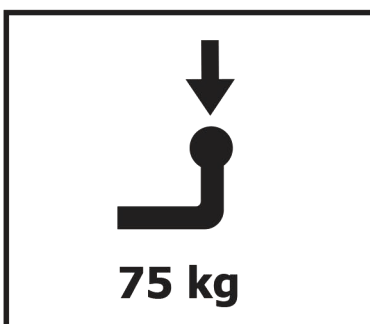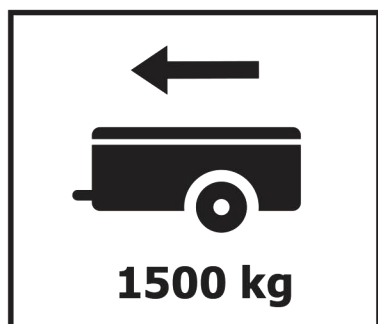


$D = 9,69 \text{ kN}$

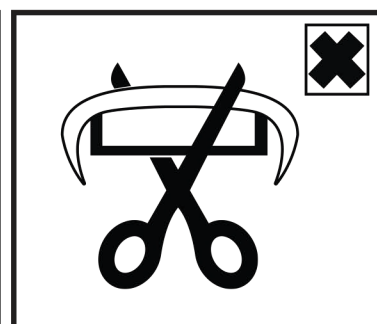

$$D \text{ (kN)} = \frac{\begin{array}{c} \text{SUV} \\ \text{MAX kg} \end{array} \times \begin{array}{c} \text{Trailer} \\ \text{MAX kg} \end{array}}{\begin{array}{c} \text{SUV} \\ \text{MAX kg} \end{array} + \begin{array}{c} \text{Trailer} \\ \text{MAX kg} \end{array}} \times 0,00981$$

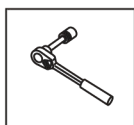

Вкрутить/выкрутить используя инструмент

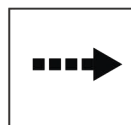


Движение



Поворот





Вкрутить/выкрутить не затягивая

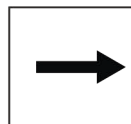














Расположение




Используемый инструмент:

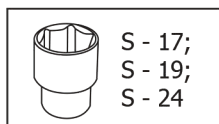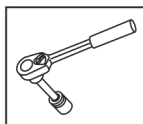

S - 17;
S - 19;
S - 24


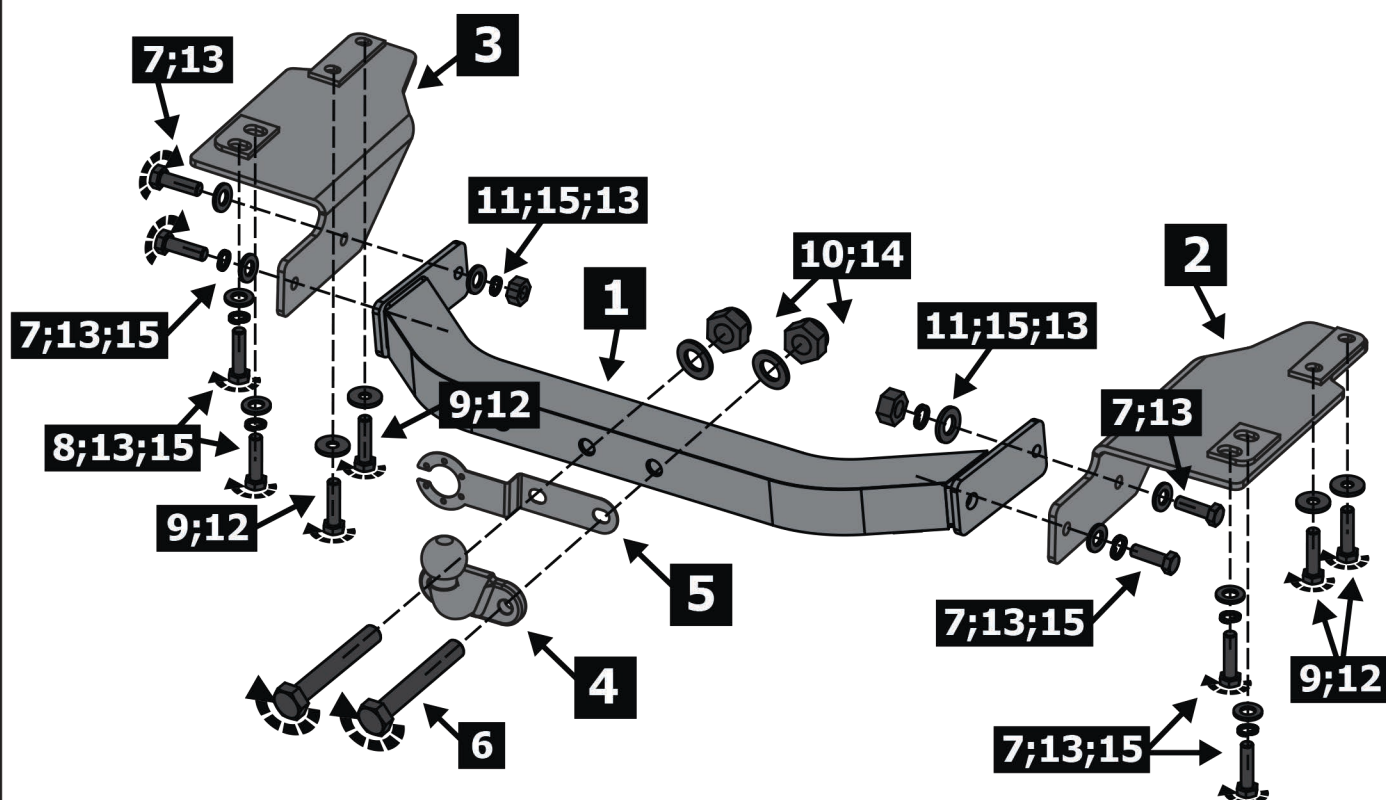


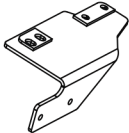1	x1	Балка	
2	x1	Кронштейн левый	
3	x1	Кронштейн правый	
4	x1	Крюк	
5	x1	Подрозетник	
6	x2	M16x110	
7	x6	M12x1,25x40	
8	x2	M12x1,25x50	
9	x4	M8x30	
10	x2	M16	
11	x2	M12x1,25	
12	x4	Ø 8	
13	x10	Ø 12	
14	x2	Ø 16	
15	x8	Ø 12	

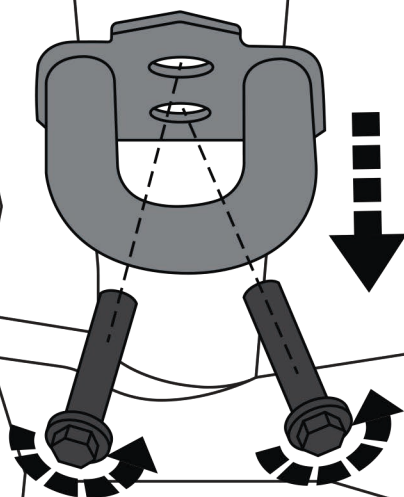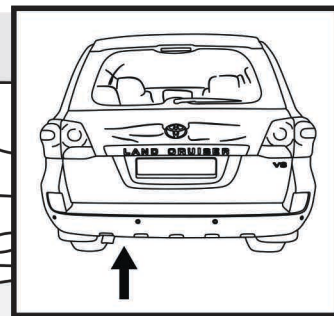
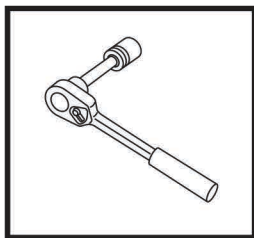




1









2

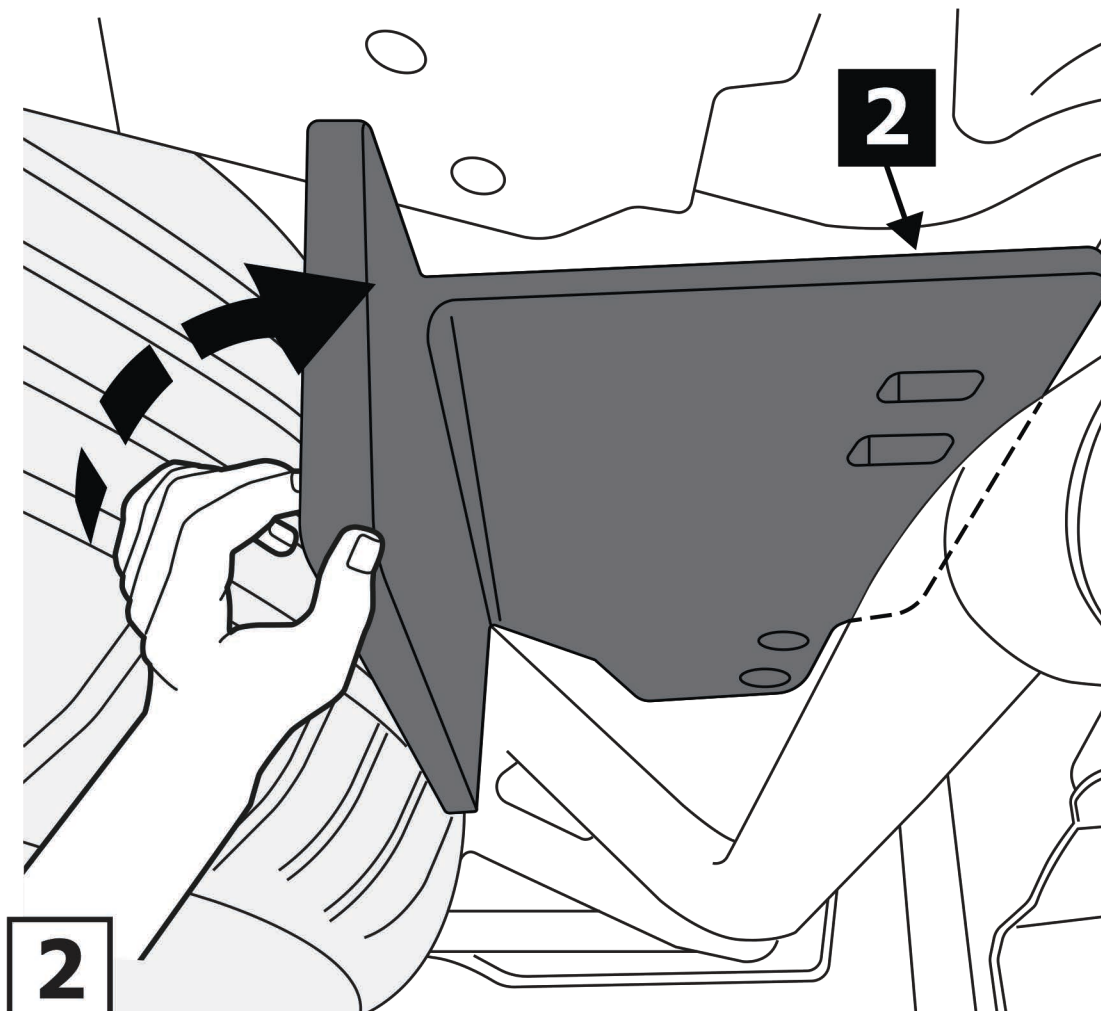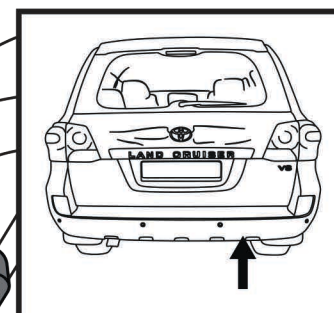


2

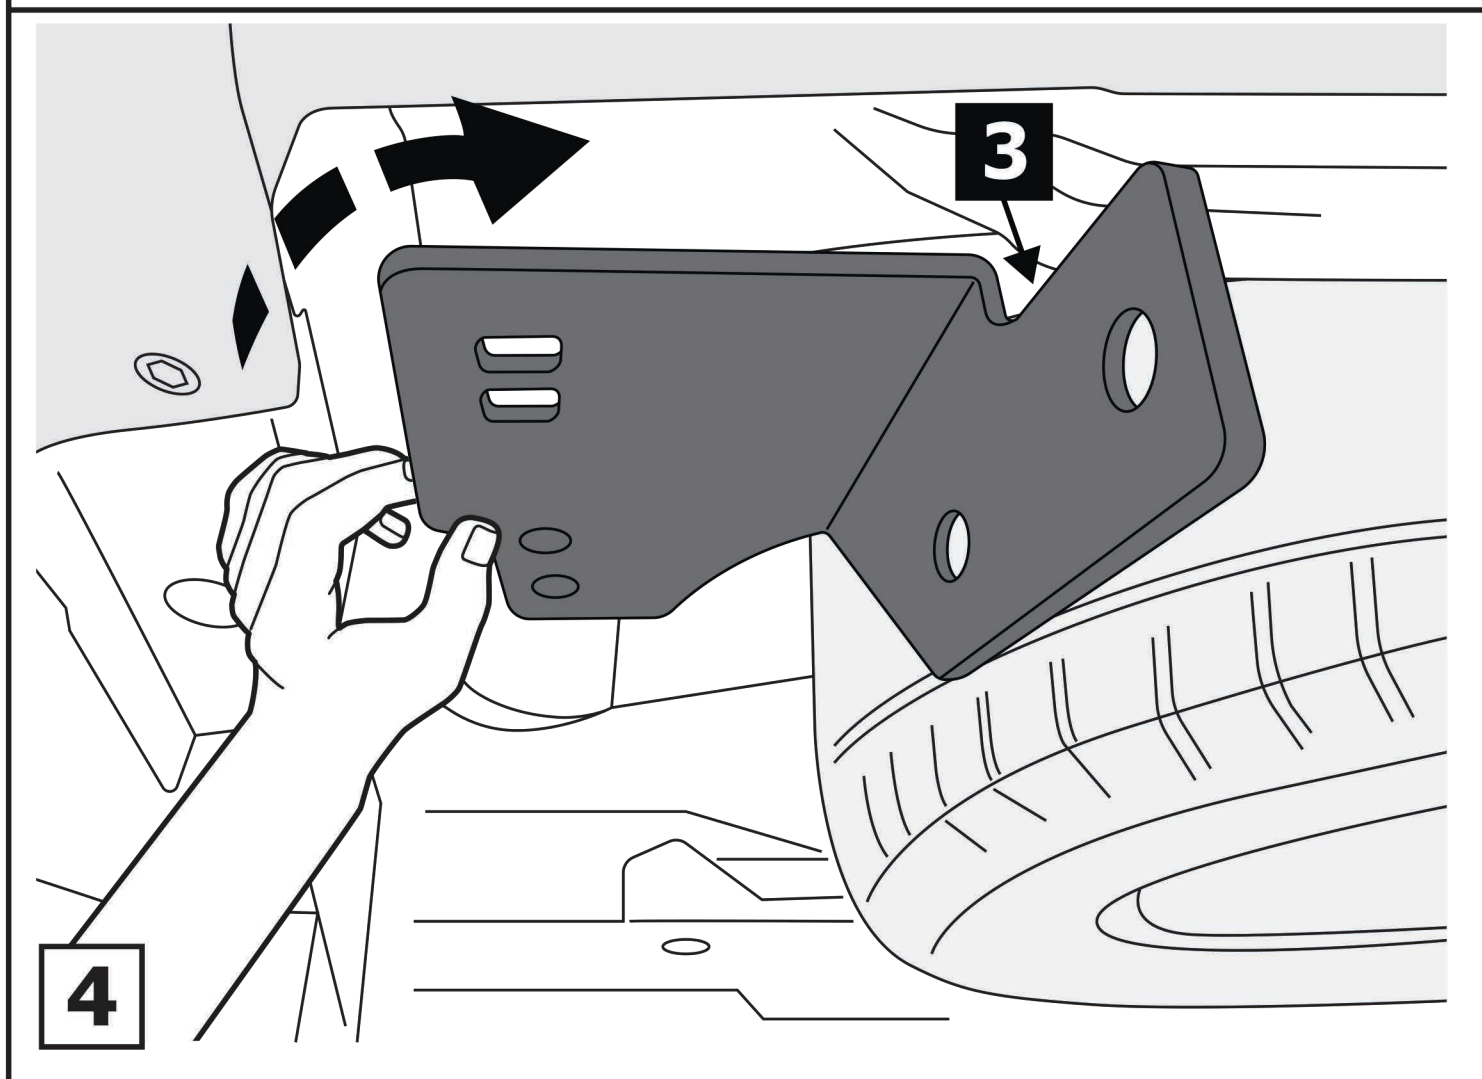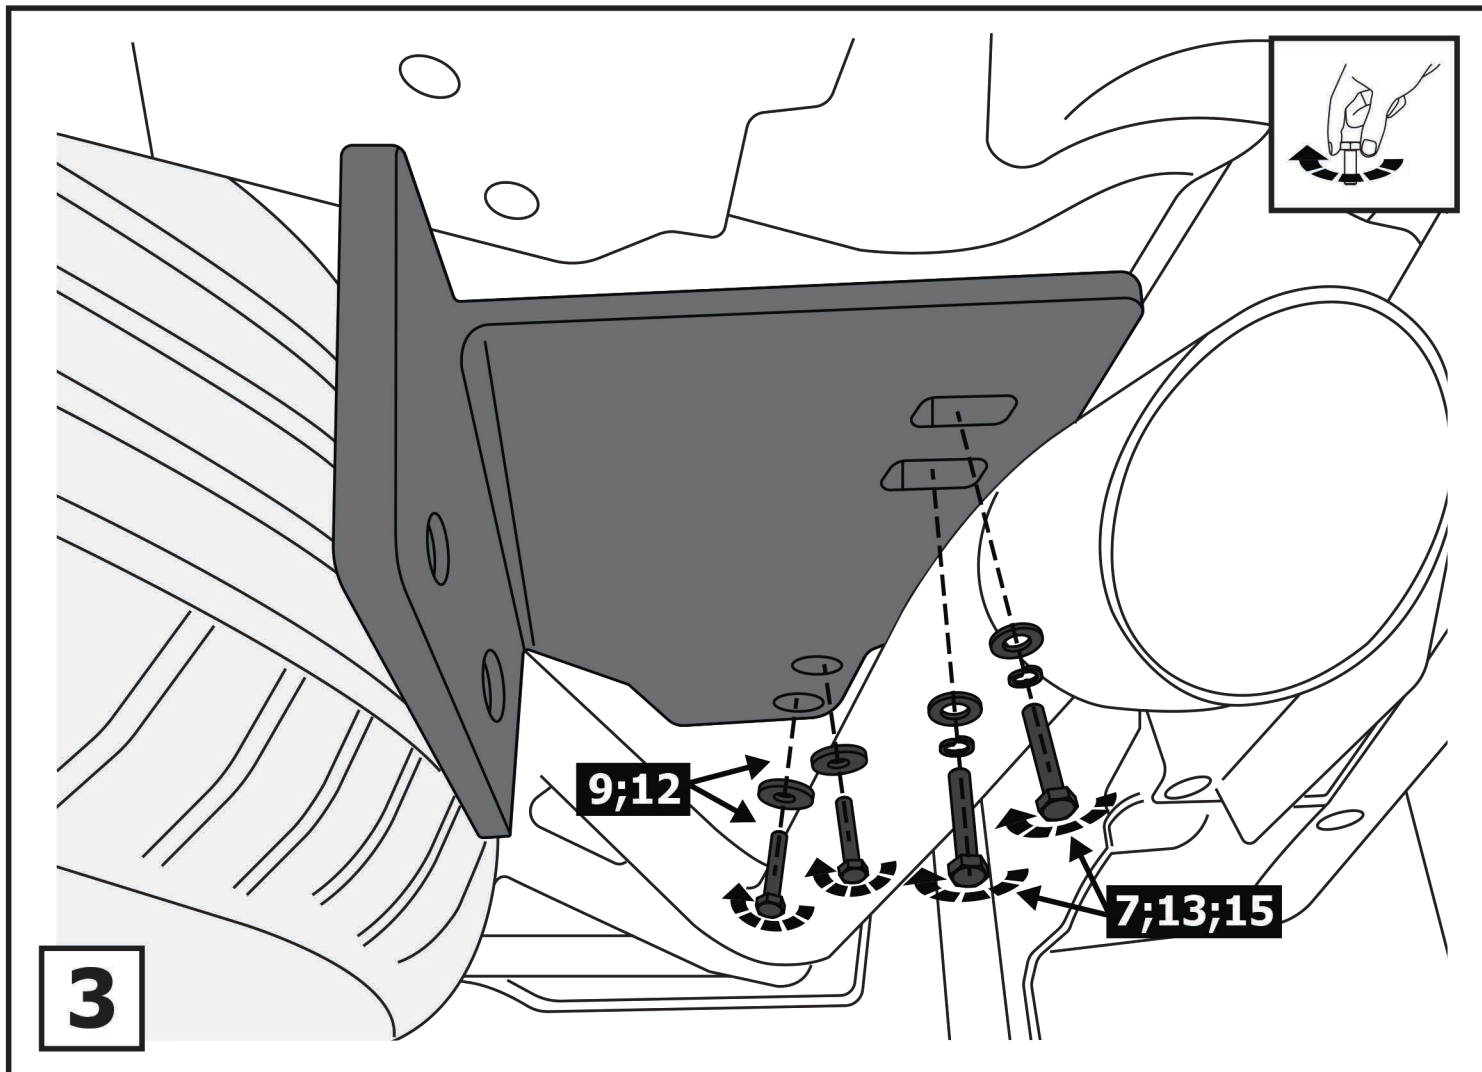


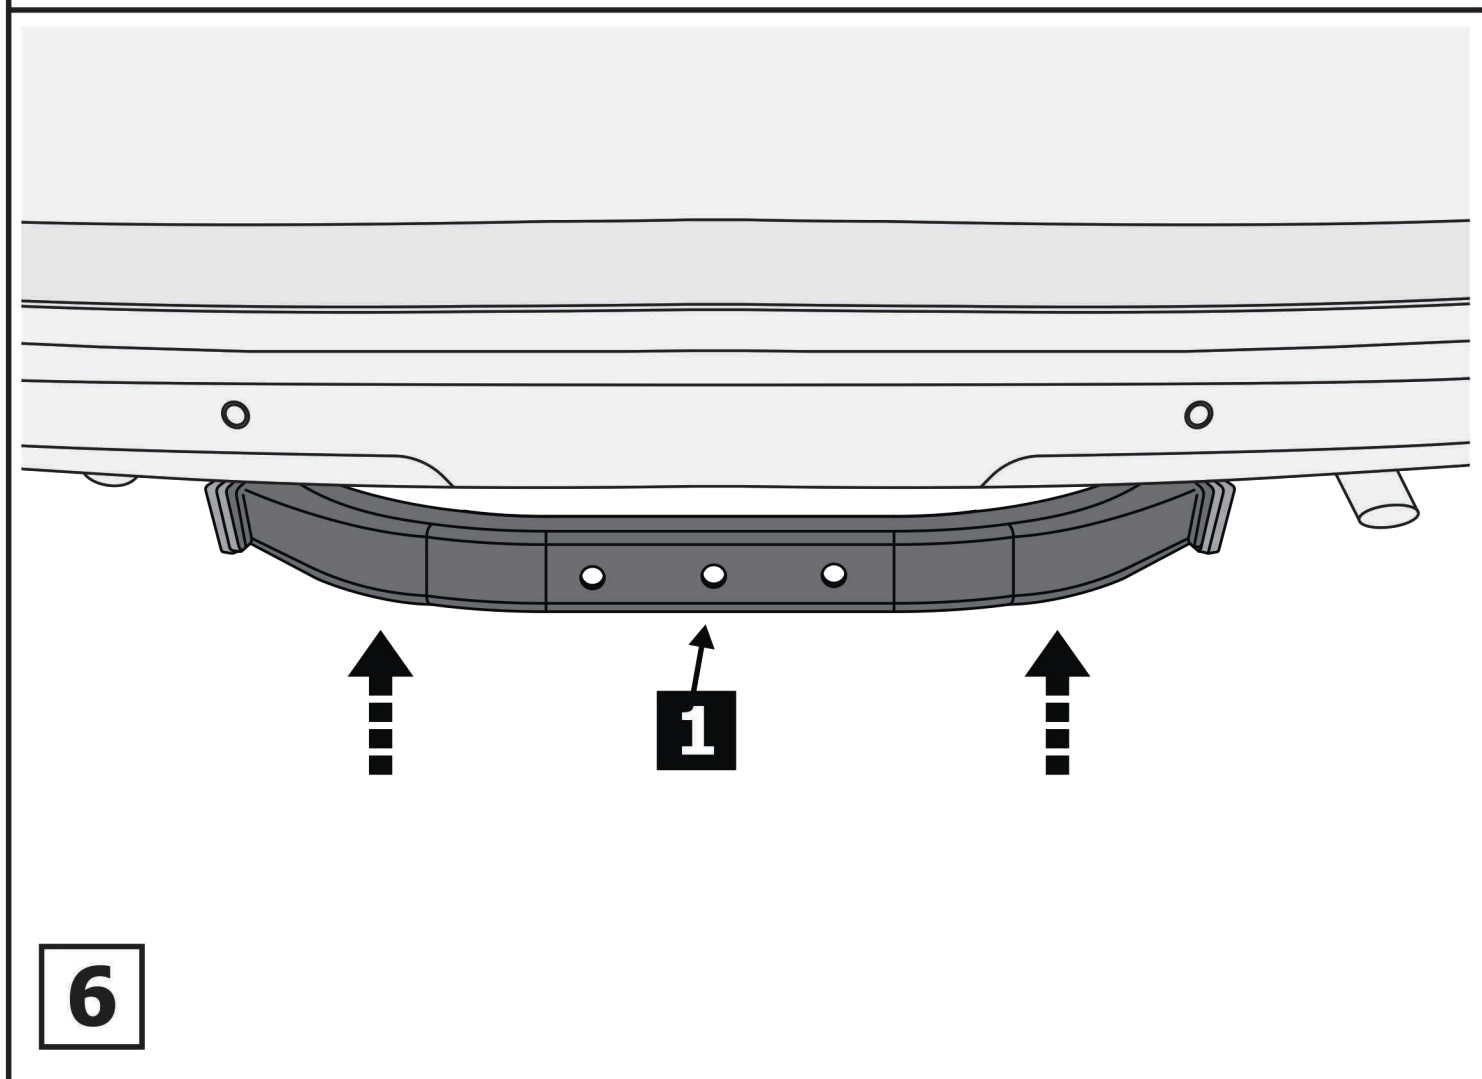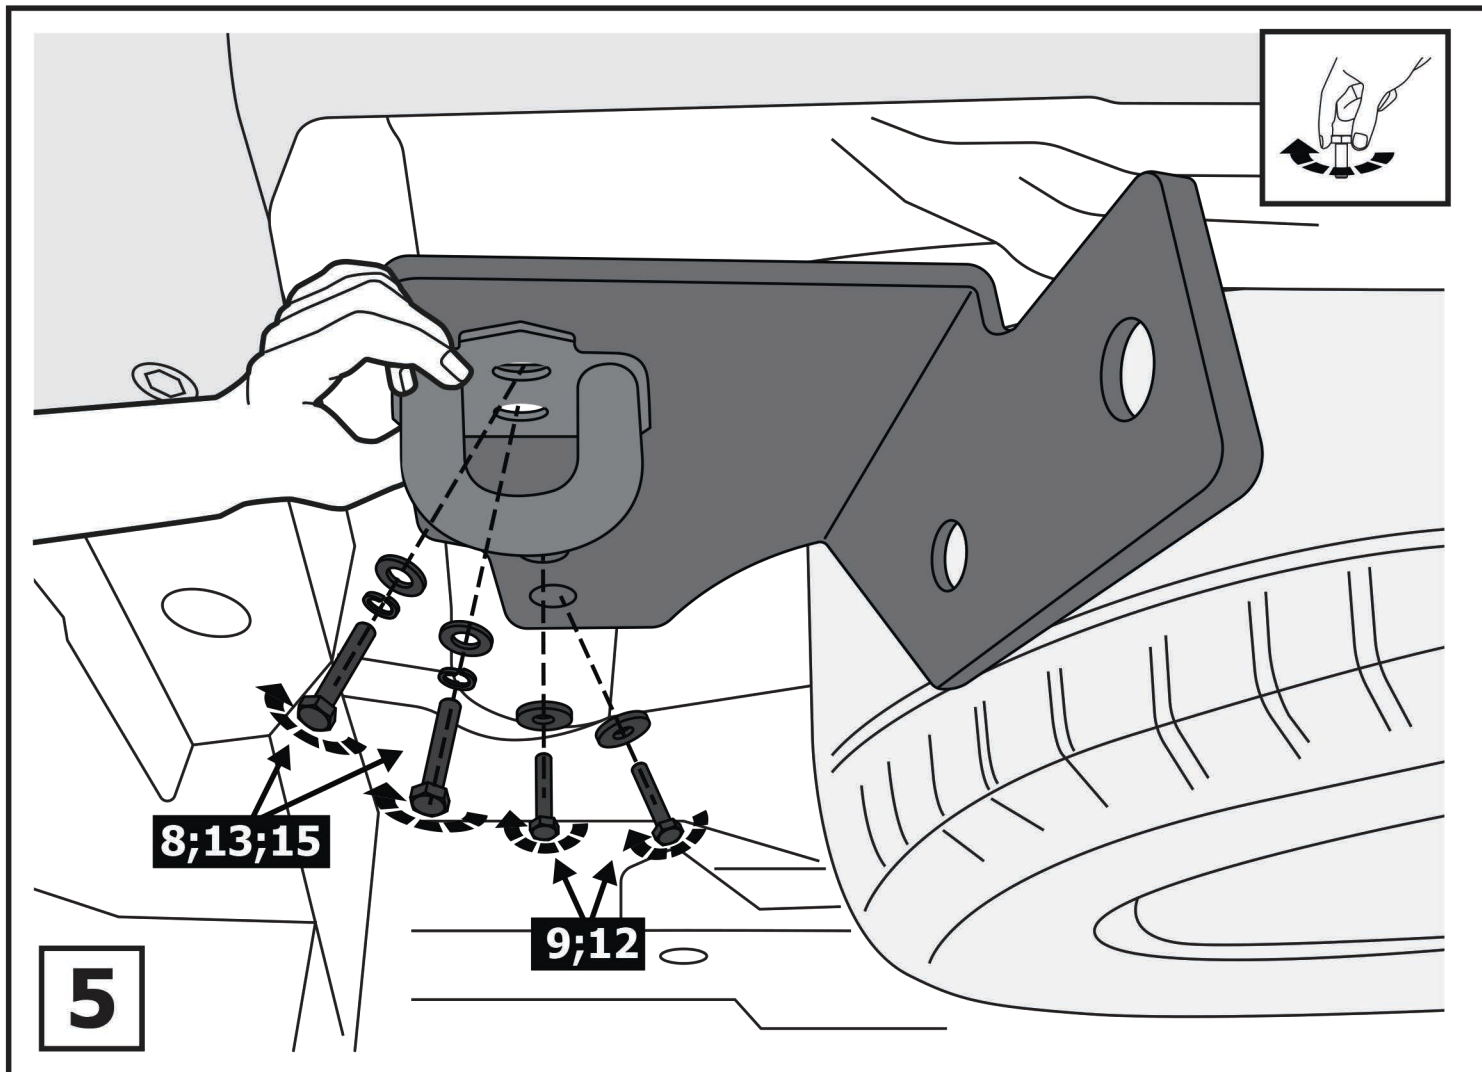

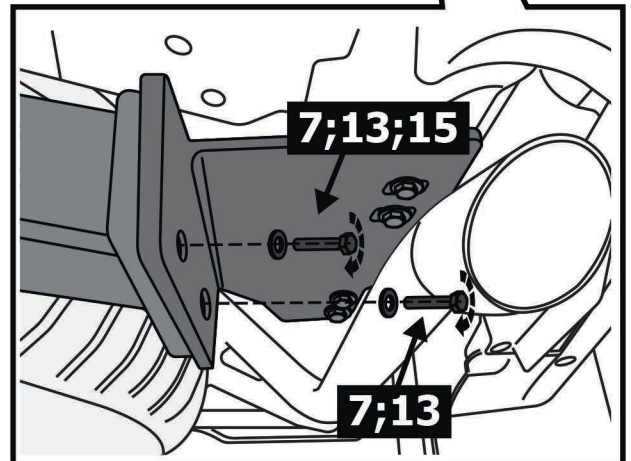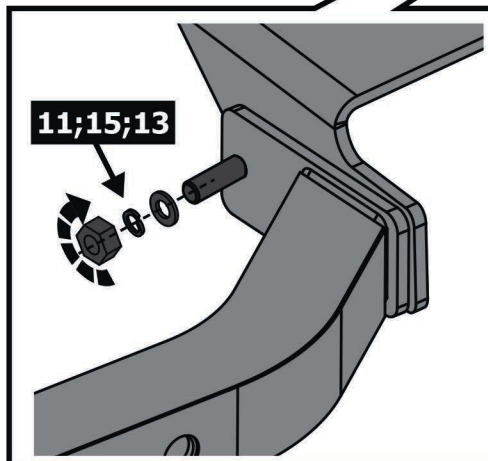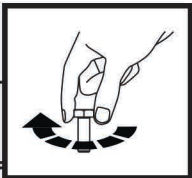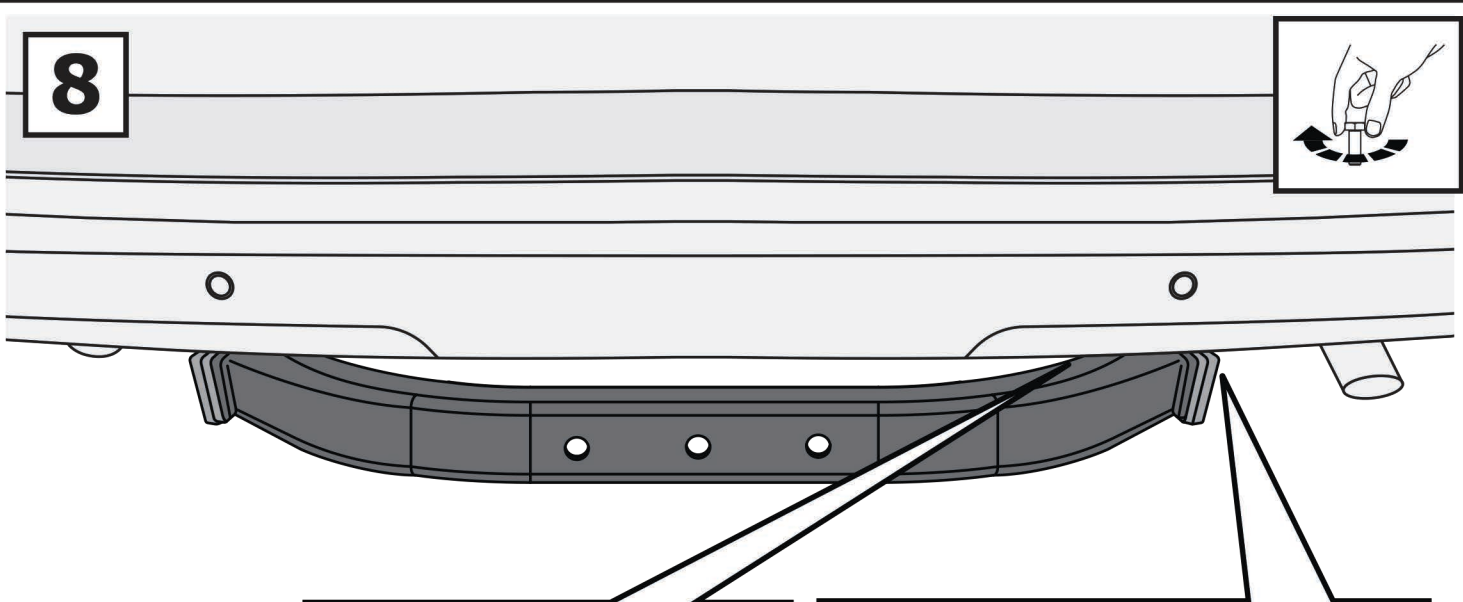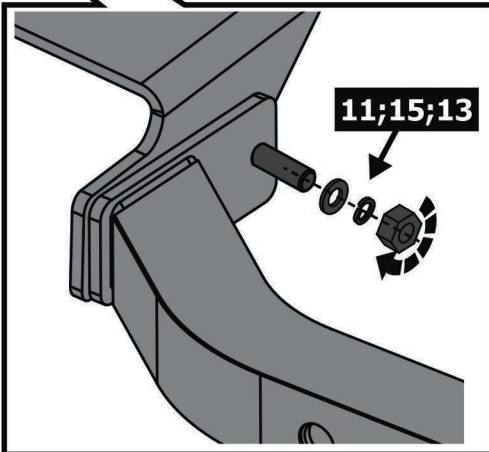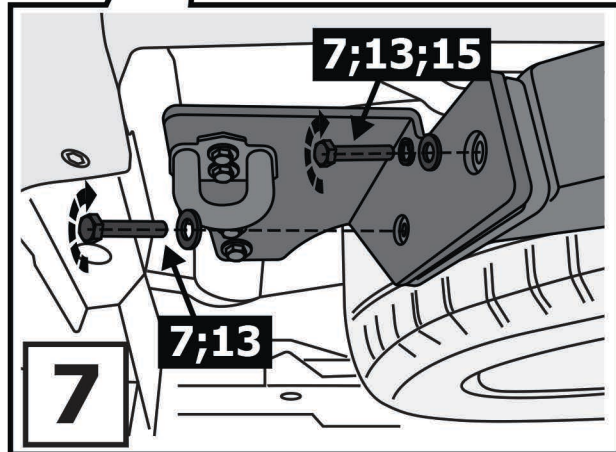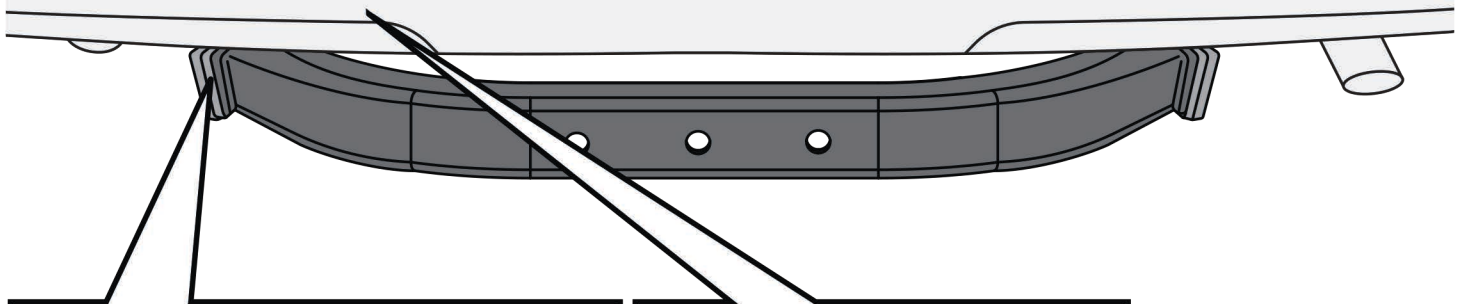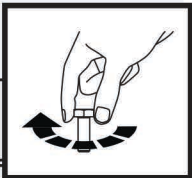


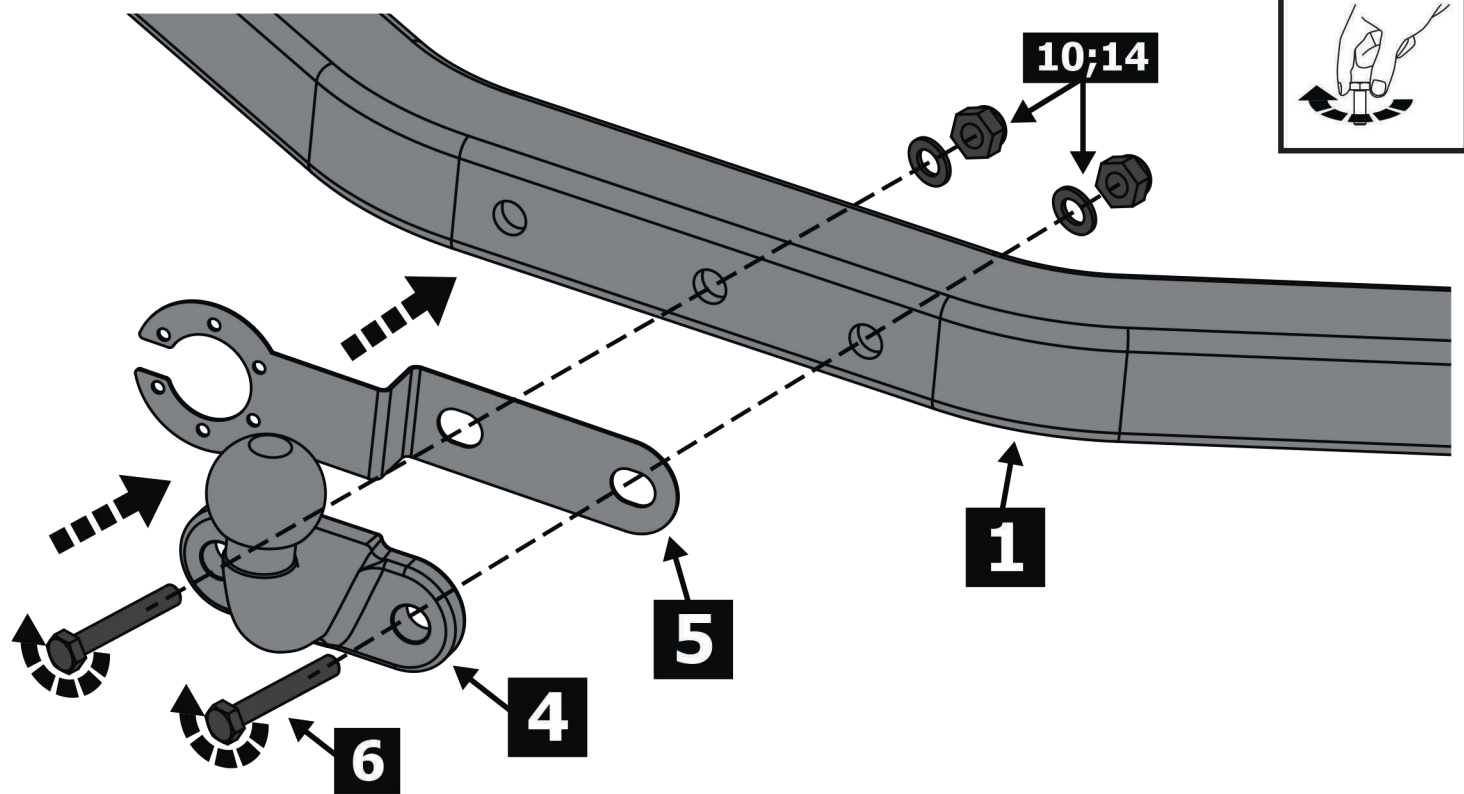

9

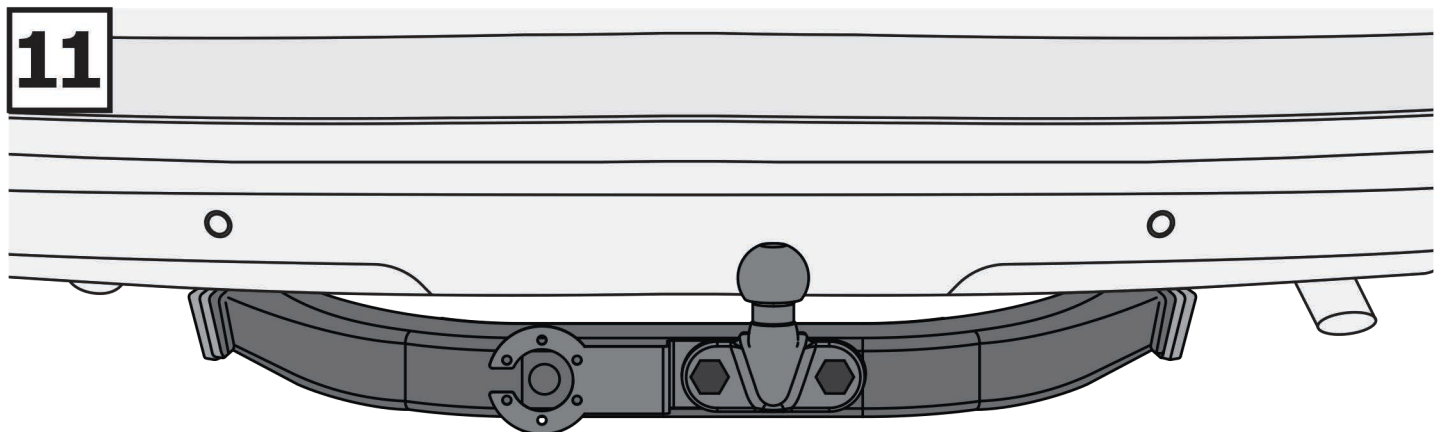

11

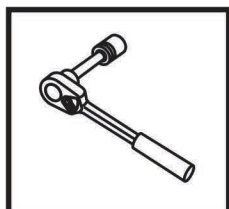

Затянуть все резьбовые соединения

M8 = 24 Nm M12 = 81 Nm M16 = 157 Nm