


INSTALLATION MANUAL FOR HARDTOP

PART

1 HARDTOP SERIE 2 D/C 1 UNIT

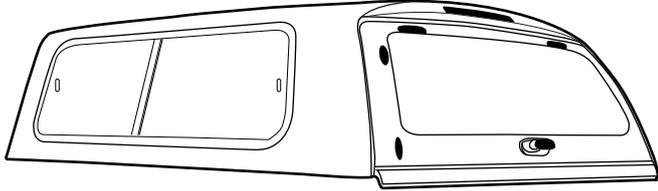


2 INSTALLATION KIT 1 SET




INSTALLATION MANUAL FOR HARDTOP


1 Clean around the truck edge.

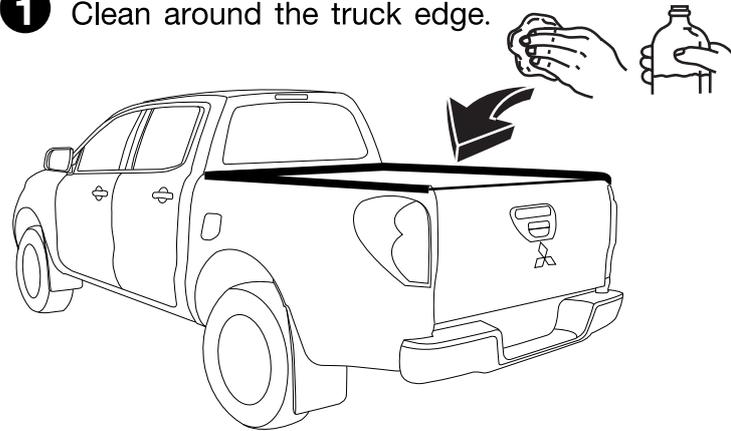


2 Install the weatherstrip on the truck edge.

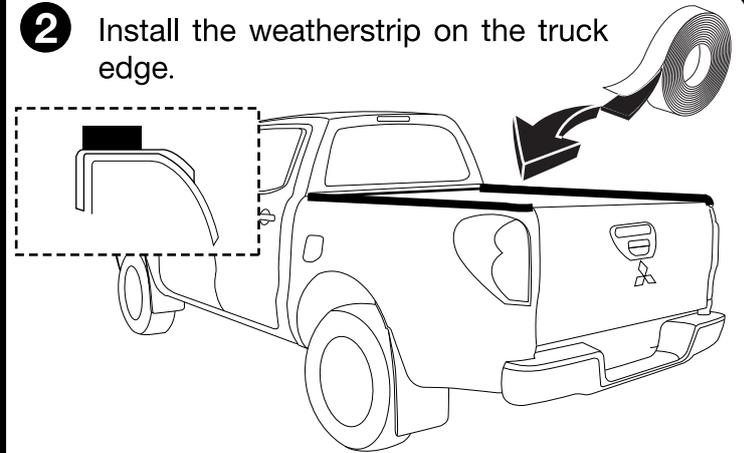



3 Place the hardtop on the truck edge.

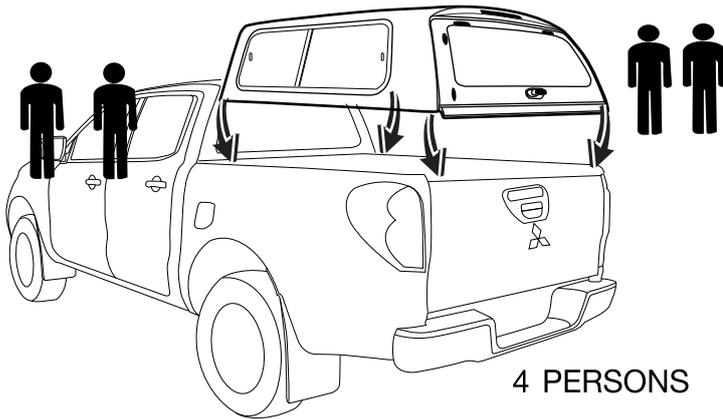

4 Adjust alignment between front and rear and arrange left and right.

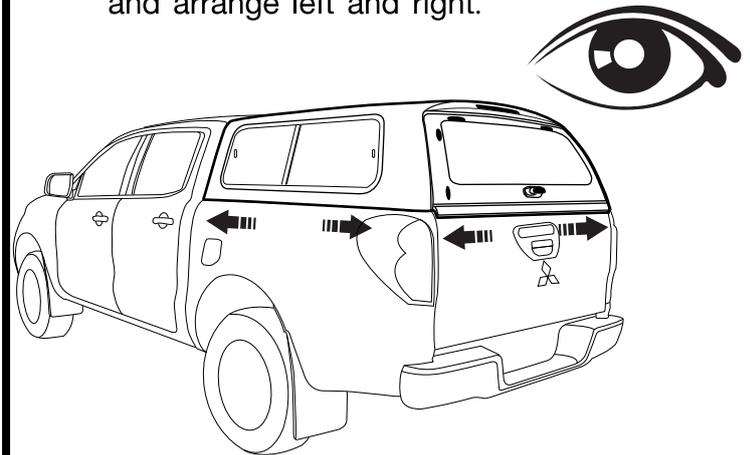


5 Install Kwick Klamp at 6 positions.

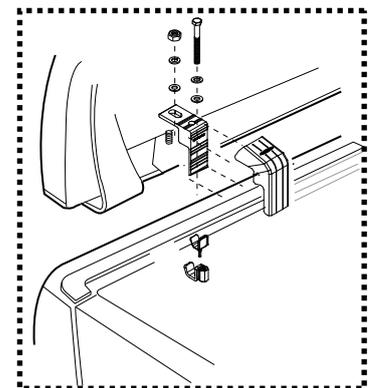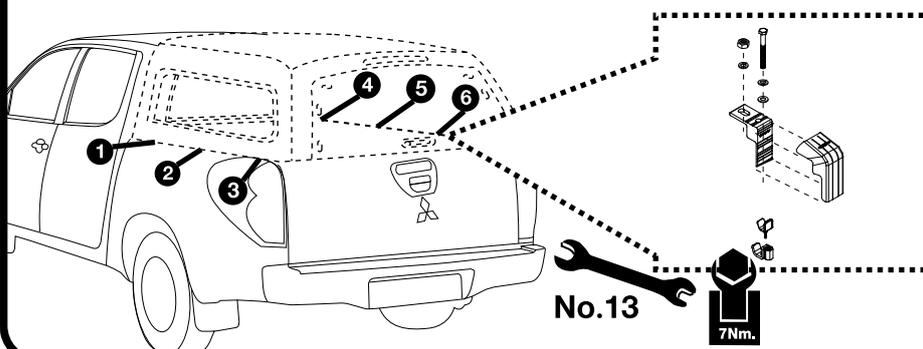


INSTALLATION MANUAL FOR HARDTOP


6 Adjust R/L latch to left and right latches to align with the rotary lock on the rear window door.

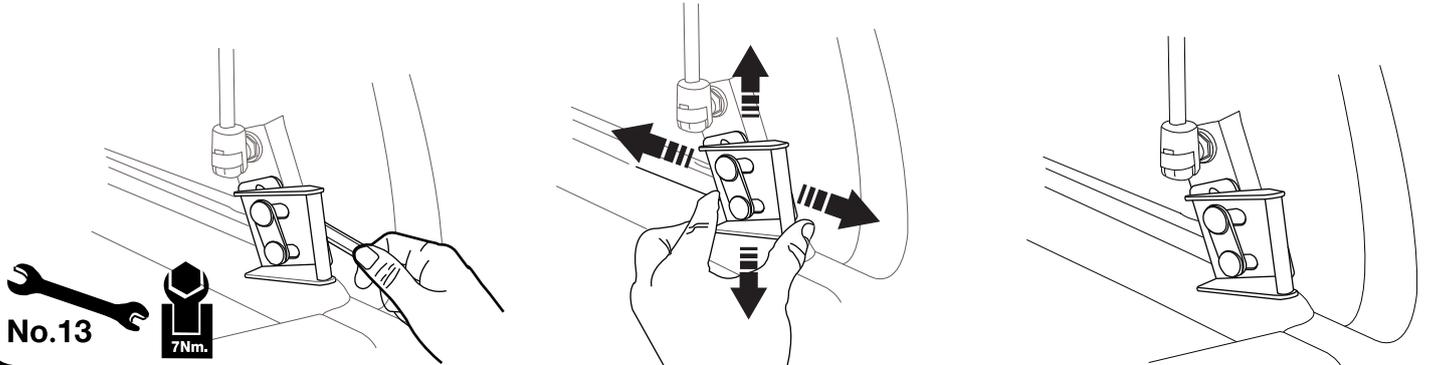

7 Paste the stickers at the bottom rear R/L

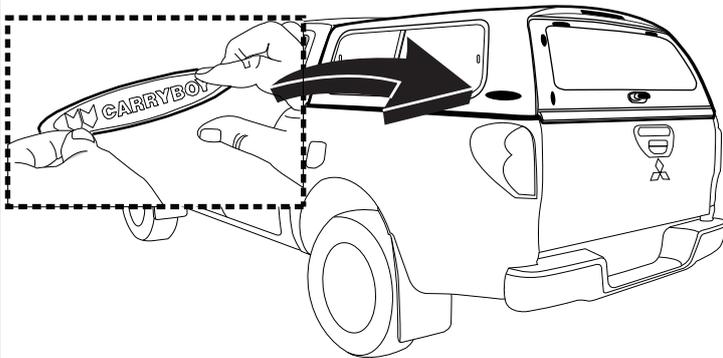

8 Final check the appearance.

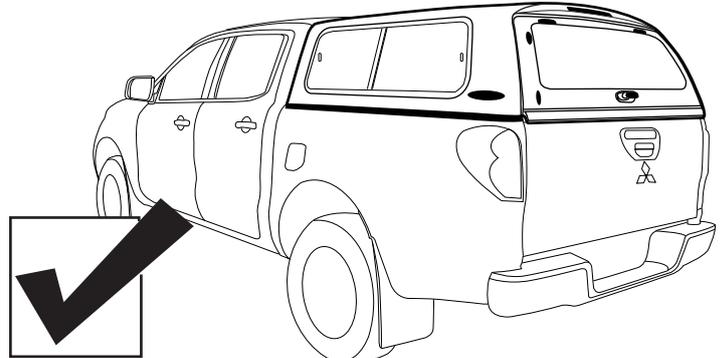


General Notes

- Carefully read through the fitting instruction before commencing installation.
- Always install the accessory following the fitting instructions. Failure to do so may cause a damage to the vehicle or the accessory.
- Ensure all recyclable discarded vehicle accessory components and packaging are recycled following local recycling regulations.
- It is always recommended that the hardtop is fitted by a qualified technician
- Safely store and protect any removed vehicle components.
- Ensure all bare metal surfaces are protected using Automotive Bare Metal Primer and touch-up paint.
- Remove all metal swarf and dust from all vehicle surfaces if surface is used for accessory installation.

Safely Notes

- Check that all work practices comply with safety standards.
- Please wear appropriate clothing and use safety equipment.

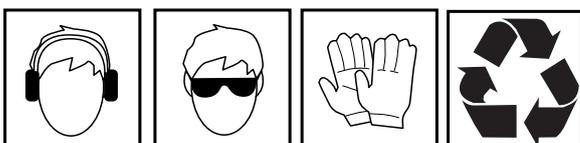


Installation time 1.00 hours.

INSTALLATION ELECTRIC CONNECTING KIT

- Step 1 -

NOTE: The Universal Harness runs down the LHS of the vehicle depending on the engine bay battery location. The following shows steps relating to the LHS of the vehicle.





- Remove the tail light assembly (1) on the same side of the battery by removing the fasteners (2) holding it in place.
- Disconnect the tail light assembly connectors (3).

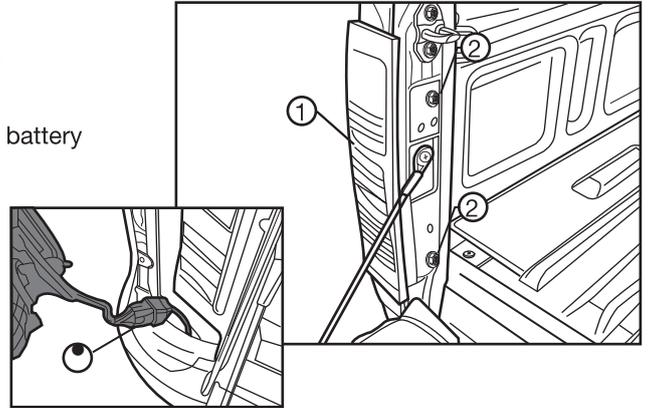

- Step 2 -

- Connect Following pic 1-4

Wiring from hardtop

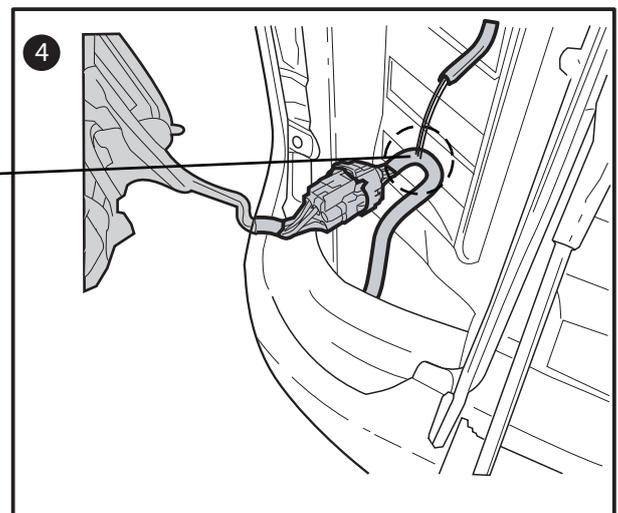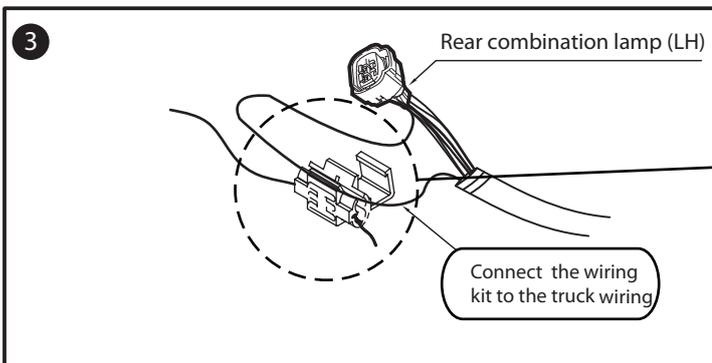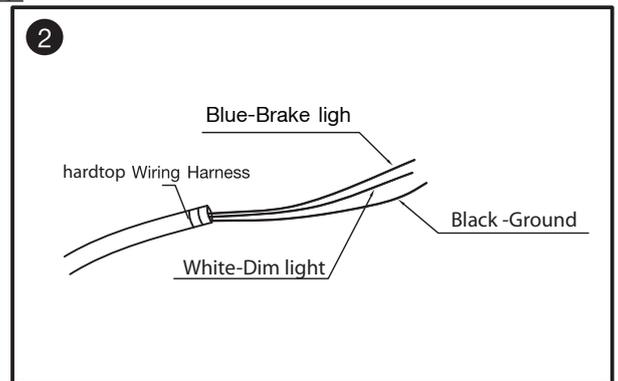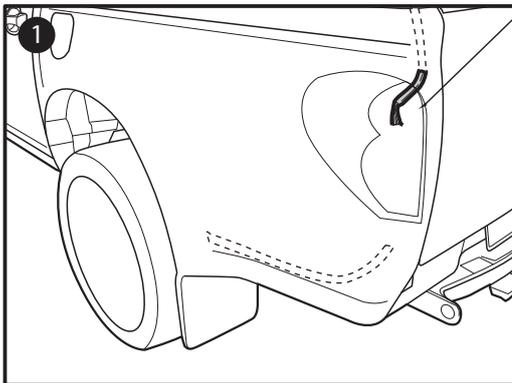

WIRING HARNESS COLOR

VEHICLE	BRAKE LIGHT	DIM LIGHT	GROUND
FORD RANGER T6	VIOLET/ORANGE	VIOLET/GREEN	BLACK/WHITE