



# WIRING INSTRUCTIONS


**SMM Steel Canopy V2, V4**

**ISUZU D-MAX RT50**

**2012+**




FUNCTION	CANOPY WIRING	VEHICLE WIRING
Constant Power(Dome Light)	Red	White
Rear Demister	Yellow/Red	Black/ Brown
Central Locking(Lock)	Blue	Blue (Plug A)
Central Locking(Unlock)	Green	Blue (Plug A)
Earth	Black	Body of the car
Brake Light	Red	Red (Plug B)
Earth	Black	Black (Plug B)

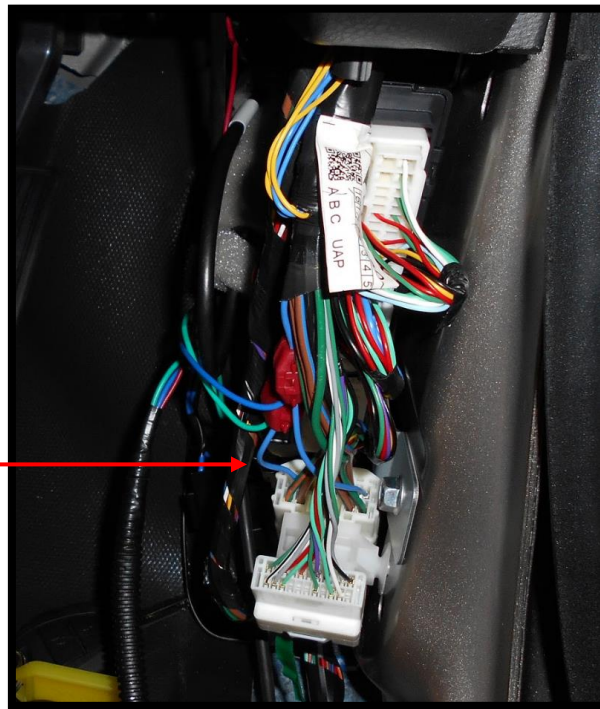

- Plug A is located at the front of the vehicle on the driver side behind the kick panel.
- Plug B is behind the rear tail light.
- The rest of the connections are above the accelerator pedal and under the rear window.

## Plug A.

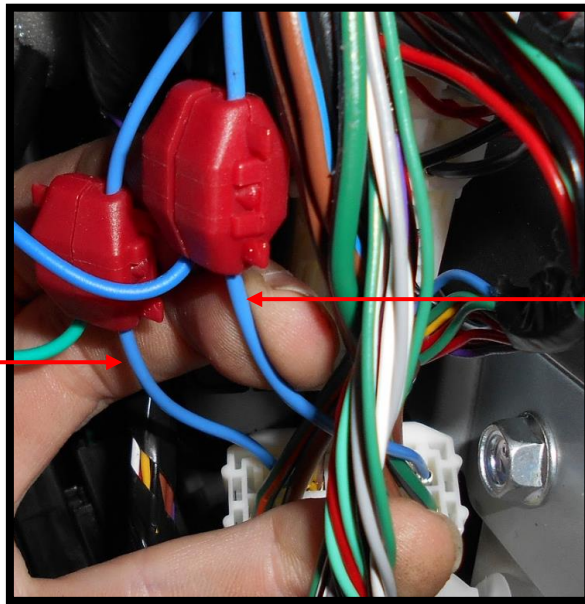


Blue to Blue (Central Locking- Lock)

Green to Blue (Central Locking- Unlock)




Red to White (Constant Power-Dome light)

Black to Body of the car (Earth)

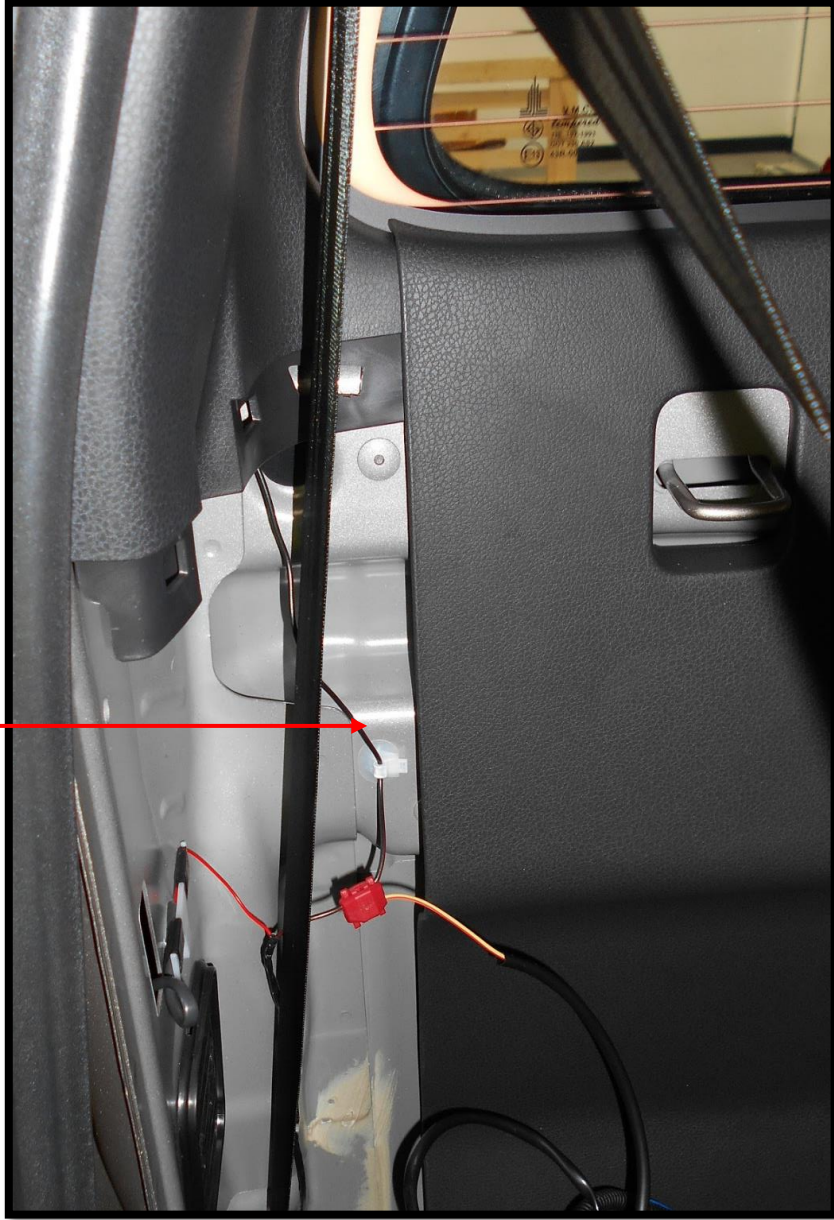

→ Yellow/Red to Black/Brown (Rear Demister)

## Plug B

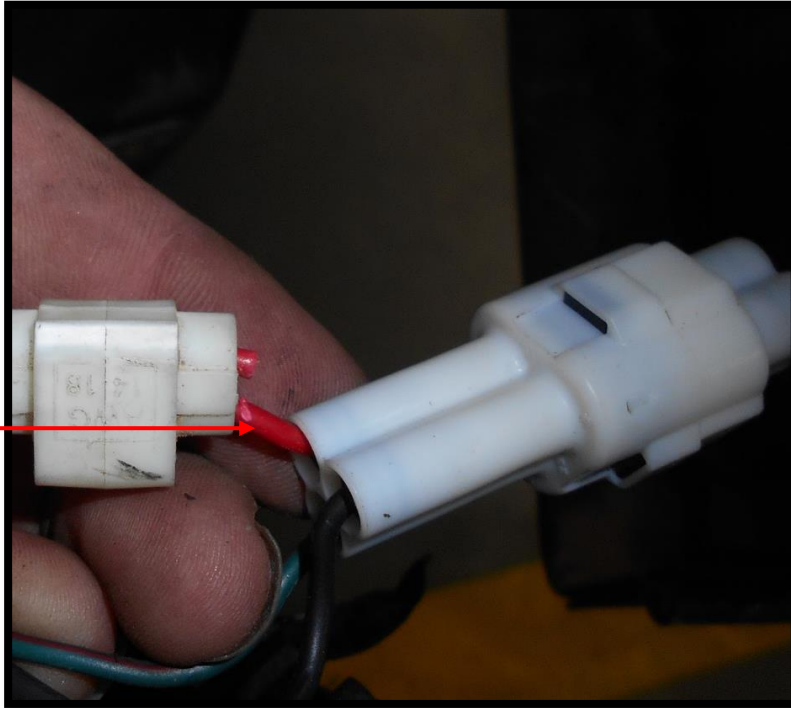

Red to Red (Brake Light)

Black to Black from canopy loom (Earth)

## Running the loom

You will find an opening with a grommet sealing it under the passenger rear seat to run the loom out under the vehicle. Then run the loom to the rear of the vehicle behind the tail light.





## **PLEASE NOTE**

- Avoid drilling holes in the vehicle. There are always openings into the cabin underneath the vehicle or at the rear.
- Using a L.E.D test light, test all electrical components of the vehicle before and after wiring the canopy to ensure that everything works correctly.
- Ensure you replace all vehicle trim and return the vehicle interior back to how it was found.