

NEW UNIVERSAL  
**REMOTE CONTROL**

**why**  
**EVO**



Multifrequency  
**All-in-one**

Up to **4** different remotes in **1**



**tecnology** - **fixedcode** - **rollingcode**

The complete **solution** [www.radiocomandowhy.com](http://www.radiocomandowhy.com)



4790830 **White**



4790831 **Dark**




4790832 **Red**



4790833 **Green**

### Best position for duplication

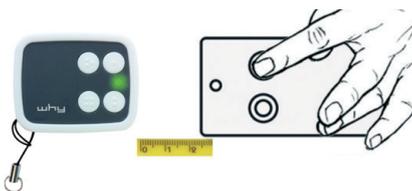

## FIXED CODE DUPLICATING PROCEDURES

1. While pressing the button 1 of the “WHY EVO”, press 4 times the button 2.
2. Release both buttons. Now the led of the WHY emits a quick flash every 2 sec.
3. Place the original remote control in front of the “WHY EVO”, at about 4-5 cm of distance (as shown in the picture below).
4. Press and retain pressed the button of the original remote control that you want to copy until the WHY's led will change frequency of flashing (faster than before), as confirm of the correct copy of the code.
5. While the LED is flashing, press the button of the “WHY EVO” where you want to store the. code just copied, until the led will turn off.
5. The copy has been happened with success, verify on the automation the orderly functioning of the new WHY EVO remote control.

### Note:

- If the LED will flash only 3 times and than will turn off, it means that the code hasn't been copied well. In this case repeat the operation from the point 1.
- The memory of the “WHY EVO” is completely re-writable.
- To duplicate a second button, repeat the operation from the point 1.

## ROLLING SIMPLE DUPLICATING PROCEDURES

1. While pressing the button 1 of the “WHY EVO”, press 4 times the button 2.
2. Release both buttons. Now the led of the WHY emits a quick flash every 2 sec.
3. Place the original remote control in front of the “WHY EVO”, at about 4-5 cm of distance (as shown in the picture below).
4. Press and retain pressed the button of the original remote control that you want to copy until the WHY’s led will change frequency of flashing (faster than before), as confirm of the correct copy of the code.
5. While the LED is flashing, press the button of the “WHY EVO” where you want to store the. code just copied, until the led will turn off.
6. The copy has been happened with success.
7. Proceed with the remote control recognition on the receiver by the  procedure (verify the models list - see 5-6-7 pages) or follow the producer’s methods.

### Note:

- If the LED will flash only 3 times and than will turn off, it means that the code hasn’t been copied well. In this case repeat the operation from the point 1.
- The memory of the “WHY EVO” is completely re-writable.
- To duplicate a second button, repeat the operation from the point 1.

**To activate the remote control on the receiver for models marked with , proceed as below:**

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button for about 10 sec, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.

**To activate on the receiver all the others models:**

Refer to the instructions of the original model.

**NOTE The seed code of the WHY EVO can be emitted as below:**

1. Press the buttons 1 and 2 simultaneously for 8 sec. and release them when the LED start to flash
2. While the LED is flashing press the button with the seed code needed.

**ATTENTION!! Every kind of receiver can have the “radio-mode” disarmed. In this cases will be necessary insert the new remotes controls with the “manual procedures”.**

## ROLLING COMPLEX DUPLICATING PROCEDURES



1. While pressing the button 1 of the “WHY EVO”, press 4 times the button 2.
2. Release both buttons.  
Now the LED of the WHY emits a quick flash every 2 sec.
3. Place the original remote control in front of the “WHY EVO”, at about 4-5 cm of distance.
4. Press and retain pressed the button of the original remote control that you want to copy until the WHY’s led will turn on with a fix light and then emits a double flash every 2 sec.
5. Transmit now the seed code of the original remote control (by pressing the rear hide button or the buttons 1 and 2 simultaneously in the new models)
6. Now the LED will flash quickly, press the button of the “WHY EVO” where you want to store the code just copied, until the LED will turn off.
7. Now activate the  procedure to insert the new remote control on the receiver.



**ATTENTION, PLEASE: Verify that the remote control is a MASTER.**

**Pressing any buttons, the LED should issue a double flash rather than switch on as a fixed light.**

1. While pressing the button 1 of the “WHY EVO”, press 4 times the button 2.
2. Release both buttons.  
Now the LED of the WHY emits a quick flash every 2 sec.
3. Predispose the FAAC remote control for the emission of the seed code (by pressing simultaneously the buttons 2 and 3)
4. While the FAAC LED is flashing, place it in front of the “WHY EVO”, at about 4-5 cm of distance and press the button that you want to copy until the WHY’s led will change frequency of flashing (faster than before), as confirm of the correct copy of the code.
5. While the LED is flashing, press the button of the “WHY EVO” where you want to store the code just copied, until the led will turn off.

**To activate the remote control on the receiver for models marked with , proceed as below:**

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button for about 10 sec, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.

**To activate on the receiver all the others models:**

Refer to the instructions of the original model.

**NOTE The seed code of the WHY EVO can be emitted as below:**

1. Press the buttons 1 and 2 simultaneously for 8 sec. and release them when the LED start to flash
2. While the LED is flashing press the button with the seed code needed.

**ATTENTION!! Every kind of receiver can have the “radio-mode” disarmed. In this cases will be necessary insert the new remotes controls with the “manual procedures”.**

## COMPATIBILITIES LIST VERSION



ADYX	 BRAVO, TE4433	KEY	900TXB - 42R
ALLMATIC	 B.RO OVER, B.RO 2WN, TECH3	KING GATES	STYLO
APERTO	TX02-434-2, TX03-434-4	LABEL	SPYCO
APRIMATIC	 TR, TM	MHOUSE	 TX4
BALLAN	FM404B, 4013	MOOVO	 MT4
BENINCÀ	 TO.GO, T2WV, IO, CUPIDO, LOT2WCV	NICE	 SMILO, FLOR-S
BFT	 MITTO, MITTO B, GHIBLI, KLEIO, TRC	NOVOFERM	NOVOTRON 502-504
CARDIN	 S449, S486	O&O	T.COM, TWIN, TX
DEA	TR MIO	PRASTEL	 TC2E(4E), MT2E(4E), SLIM, BFOR, MPSTP2E
DITEC	 GOL	RIB	LITHIO
FAAC	 XT4 433 RC	SEAV	BE HAPPY
FAAC	XT 433SLH, XT 868SLH, T 433 SLH, T 868 SLH, TML 433SLH, TML 868 SLH, DL 868 SLH	SICE	 4790207
FADINI	 JUBI SMALL	SOMMER	4014 (434), 4013 (434), 4026 (868), 4020 (868), 4022 TXO2 (434)
GENIUS	 BRAVO 433	TELCOMA	FM 402, FM 402 E
GIBIDI	 AU01590, AU1600, DOMINO	VDS	 TRQ

**To activate the remote control on the receiver for models marked with  , proceed as below:**

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button for about 10 sec, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.

**To activate on the receiver all the others models:**

Refer to the instructions of the original model.

**NOTE The seed code of the WHY EVO can be emitted as below:**

1. Press the buttons 1 and 2 simultaneously for 8 sec. and release them when the LED start to flash
2. While the LED is flashing press the button with the seed code needed.

**ATTENTION!! Every kind of receiver can have the "radio-mode" disarmed. In this cases will be necessary insert the new remotes controls with the "manual procedures".**

## COMPATIBILITIES LIST VERSION



ADYX	 BRAVO, TE4433	KEY	900TXB - 42R
ALLMATIC	 B.RO OVER, B.RO 2WN, TECH3	KING GATES	STYLO
APERTO	TX02-434-2, TX03-434-4	LABEL	SPYCO
APRIMATIC	 TR, TM	MHOUSE	 TX4
BALLAN	FM404B, 4013	MOOVO	 MT4
BENINCÀ	 TO.GO, T2WV, IO, CUPIDO, LOT2WCV	NICE	 SMILO, FLOR-S
BFT	 MITTO, MITTO B, GHIBLI, KLEIO, TRC	NOVOFERM	NOVOTRON 502-504
CARDIN	 S449, S486	O&O	T.COM, TWIN, TX
DEA	TR MIO	PRASTEL	 TC2E(4E), MT2E(4E), SLIM, BFOR, MPSTP2E
DITEC	 GOL	RIB	LITHIO
FAAC	 XT4 433 RC	SEAV	BE HAPPY
FAAC	XT 433SLH, XT 868SLH, T 433 SLH, T 868 SLH, TML 433SLH, TML 868 SLH, DL 868 SLH	SICE	 4790207
FADINI	 JUBI SMALL	SOMFY	 TELIS
GENIUS	 BRAVO 433	SOMMER	4014 (434), 4013 (434), 4026 (868), 4020 (868), 4022 TXO2 (434)
GENIUS	AMIGO, AMIGOLD, KILO	TAU	 250 SLIM RP, 250 T4 RP
GIBIDI	 AUO1590, AU1600, DOMINO	TELCOMA	FM 402, FM 402 E
		VDS	 TRQ

**To activate the remote control on the receiver for models marked with , proceed as below:**

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button for about 10 sec, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.

**To activate on the receiver all the others models:**

Refer to the instructions of the original model.

**NOTE The seed code of the WHY EVO can be emitted as below:**

1. Press the buttons 1 and 2 simultaneously for 8 sec. and release them when the LED start to flash
2. While the LED is flashing press the button with the seed code needed.

**ATTENTION!! Every kind of receiver can have the "radio-mode" disarmed. In this cases will be necessary insert the new remotes controls with the "manual procedures".**

## COMPATIBILITIES LIST VERSION



ADYX	 BRAVO, TE4433	KING GATES	STYLO
ALLMATIC	 B.RO OVER, B.RO 2WN, TECH3	LABEL	SPYCO
APERTO	TX02-434-2, TX03-434-4	MHOUSE	 TX4
APRIMATIC	 TR, TM	MOOVO	 MT4
BALLAN	FM404B, 4013	NICE	 SMILO, FLOR-S
BENINCÀ	 TO.GO, T2WV, IO, CUPIDO, LOT2WCV	NOVOFERM	NOVOTRON 502-504
BFT	 MITTO, MITTO B, GHIBLI, KLEIO, TRC	O&O	T.COM, TWIN, TX
CARDIN	 S449, S486	PRASTEL	 TC2E(4E), MT2E(4E), SLIM, BFOR, MPSTP2E
DEA	TR MIO	PUJOL	 VARIO, MARTE
DITEC	 GOL	RIB	LITHIO
FAAC	 XT4 433 RC	SEAV	BE HAPPY
FAAC	XT 433SLH, XT 868SLH, T 433 SLH, T 868 SLH, TML 433SLH, TML 868 SLH, DL 868 SLH	SICE	 4790207
FADINI	 JUBI SMALL	SOMFY	 TELIS
GENIUS	 BRAVO 433	SOMMER	4014 (434), 4013 (434), 4026 (868), 4020 (868), 4022 TXO2 (434)
GENIUS	AMIGO, AMIGOLD, KILO	TAU	 250 SLIM RP, 250 T4 RP
GIBIDI	 AUO1590, AU1600, DOMINO	TELCOMA	FM 402, FM 402 E
KEY	900TXB - 42R	VDS	 TRQ

**To activate the remote control on the receiver for models marked with  , proceed as below:**

1. First of all you must be closed to the automation.
2. Press and retain pressed the programmed button for about 10 sec, when the LED start to flash, release the button.
3. Wait until the LED will turn off. The operation has been done, now you can use your new remote control.

**To activate on the receiver all the others models:**

Refer to the instructions of the original model.

**NOTE The seed code of the WHY EVO can be emitted as below:**

1. Press the buttons 1 and 2 simultaneously for 8 sec. and release them when the LED start to flash
2. While the LED is flashing press the button with the seed code needed.

**ATTENTION!! Every kind of receiver can have the "radio-mode" disarmed. In this cases will be necessary insert the new remotes controls with the "manual procedures".**