



	Мотор Hidea HD 3.5F 2 такт. заказ с www.riverplanet.ru
1	Стартер
2	Силовой блок
3	Крепление
4	Дейдвуд
5	Редуктор

Стартер

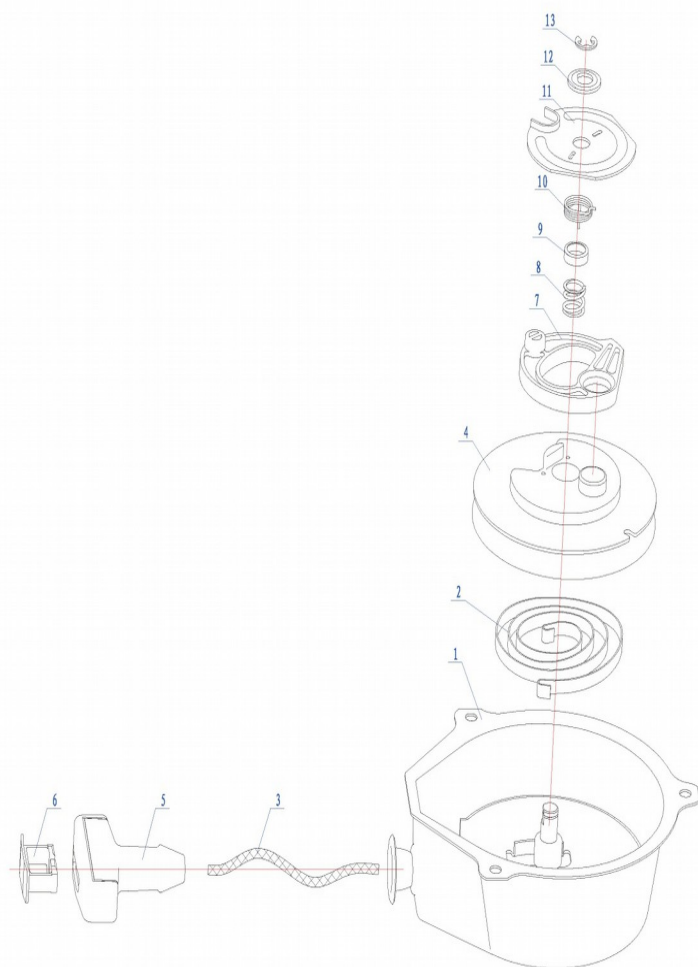

REF NO	PART CODE	DESCRIPTION (EN)	Q'TY
1	3.5F-01.02.01.00	Starter cover	1
2	3.5F-01.02.12	Spiral spring	1
3	F4-01.01.15	Starter rope	2
4	3.5F-01.02.03	Sheave drum	1
5	15F-01.01.08	Starter handle	1
6	15F-01.01.10	Handle cover	1
7	3.5F-01.02.11	Starter Pulley	1
8	3.5F-01.0 2 .10	Plate spring	1
9	3.5F-01.0 2 .09	Spring bushing	1
10	3.5F-01.0 2 .08	Spring	1
11	3.5F-01.0 2 .07	Plate	1
12	3.5F-01.02.06	Washer	1
13	GB896 M6	Circlip	1


Силовой блок

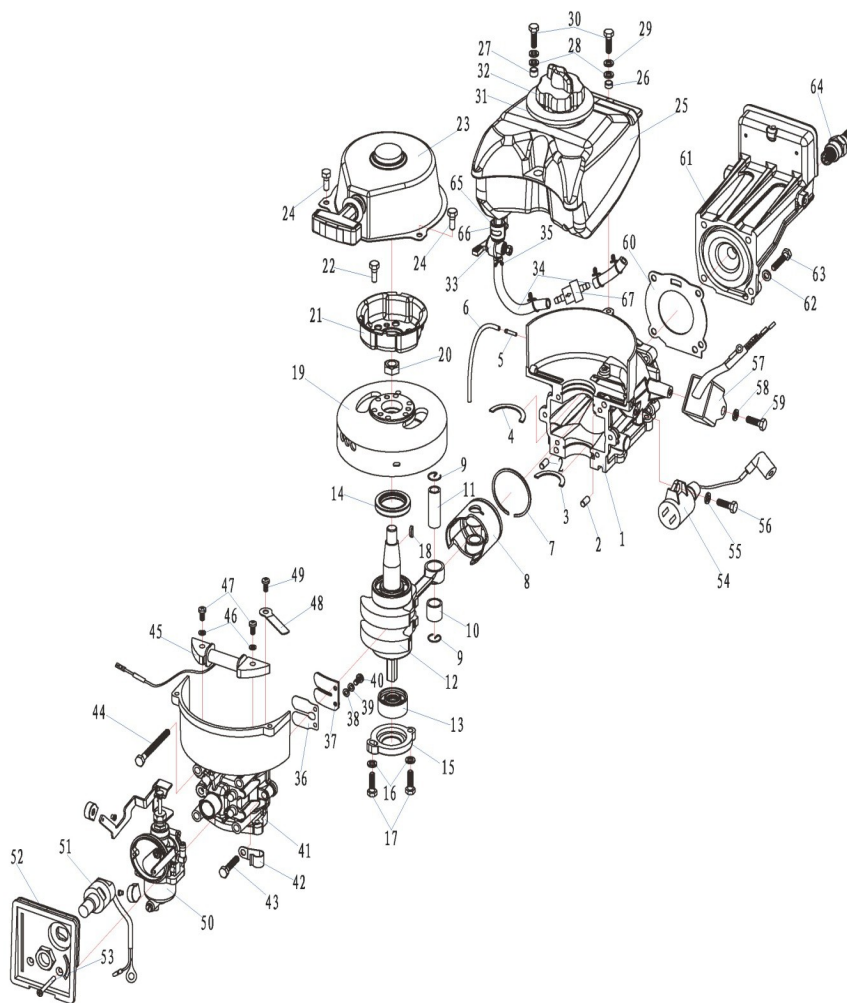

REF NO	PART CODE	DESCRIPTION (EN)	Q'TY
1	3.5F-01.01.01.01	Crankcase assy.	1
2	15F-01.06.20	Dowel pin	2
3	3.5F-01.01.10	U shape block ring	1
4	3.5F-01.01.09	U shape block ring	1
5	15F-01.06. 2 1	Round joint B	1
6	3.5F-01.01.01.0 4	Tube	1
7	3.5F-01.01.11.05	Piston ring	1
8	3.5F-01.01.11.01	Piston	1
9	3.5F-01.01.11.0 4	Snap ring	2
10	3.5F-01.01.11.0 3	Needle bearing	1
11	3.5F-01.01.11.02	Piston pin	1
12	3.5F-01.01.11.0 0	Crankshaft & linkage Assy.	1
13	3.5F-01.01.0 8	Crankshaft lower oil seal	1
14	3.5F-01.01.07	Crankshaft upper oil seal	1
15	3.5F-01.01.18	Oil seal housing	1
16	GB848 M8	Plane washer	2
17	GB933 M6*18	Bolt	2

18	3.5F-01.03.01.07	Woodruff key	1
19	3.5F-01.03.01.00	Flywheel assy	1
20	F4-01.06.37	Flywheel nut	1
21	3.5F-01.02.13	Starter pulley	1
22	GB933 M6*12	Bolt	3
23	3.5F-01.02.01.00	Recoil starter	1
24	GB933 M6*12	Bolt	2
25	3.5F-01.07.01.00	Fuel Tank	1
26	3.5F-01.07.04	Cushing tube A	1
27	3.5F-01.07.05	Cushing tube B	1
28	GB848 M8	Plane washer	2
29	GB933 M6	Spring washer	2
30	GB933 M6*20	Bolt	1
31	3.5F-01.07.03	Fuel filler damper	1
32	3.5F-01.07.02.00	Fuel tank cap assy.	1
33	3.5F-01.04.03.00	Fuel cock	1
34	3.5F-01.04.06	Fuel line	2
35	N/A	Hose clip	4
36	3.5F-01.01.03	Intake valve	1
37	3.5F-01.01.04	Intake valve seat	1
38	GB848 M4	Plane washer	2
39	GB933 M4	Spring washer	2
40	GB818 M4*12	Screw	2
41	3.5F-01.01.02	Crankcase cover	1
42	F15-01.03.00.42	Air breather hose clip	1
43	GB933 M6*30	Bolt	2
44	GB933 M6*30	Bolt	4
45	3.5F-01.03.05	Charging Coil	1
46	GB933 M5	Spring washer	2
47	GB818 M5*20	Screw	2
48	3.5F-01.03.06	Line clip	
49	GB818 M5*10	Screw	1
50	3.5F-01.04.01.00	Carburetor assembly	1
51	15F-04.07.03	Engine shut-off switch	1
52	3.5F-01.03.09.00	Air intake hood	1
53	GB823 M4*35	Screw	2
54	3.5F-01.03.03	Ignition coil	1
55	GB97 M6	Plane washer	1
56	GB933 M6*20	Bolt	2
57	3.5F-01.03.02	CDI	1
58	GB97 M6	Plane washer	1
59	GB933 M6*12	Bolt	1
60	3.5F-01.01.06	Cylinder head gasket	1
61	3.5F-01.01.05	Cylinder cover	1
62	GB848 M8	Plane washer	4
63	GB933 M6*30	Bolt	4
64	3.5F-01.03.04	Spark plug	1
65	3.5F-01.04.04	Fuel line connector	1
66	3.5F-01.04.05.00	Clamp assy.	1
67	F4-01.07.08.00	Fuel filter	1


Крепление (Bracket)

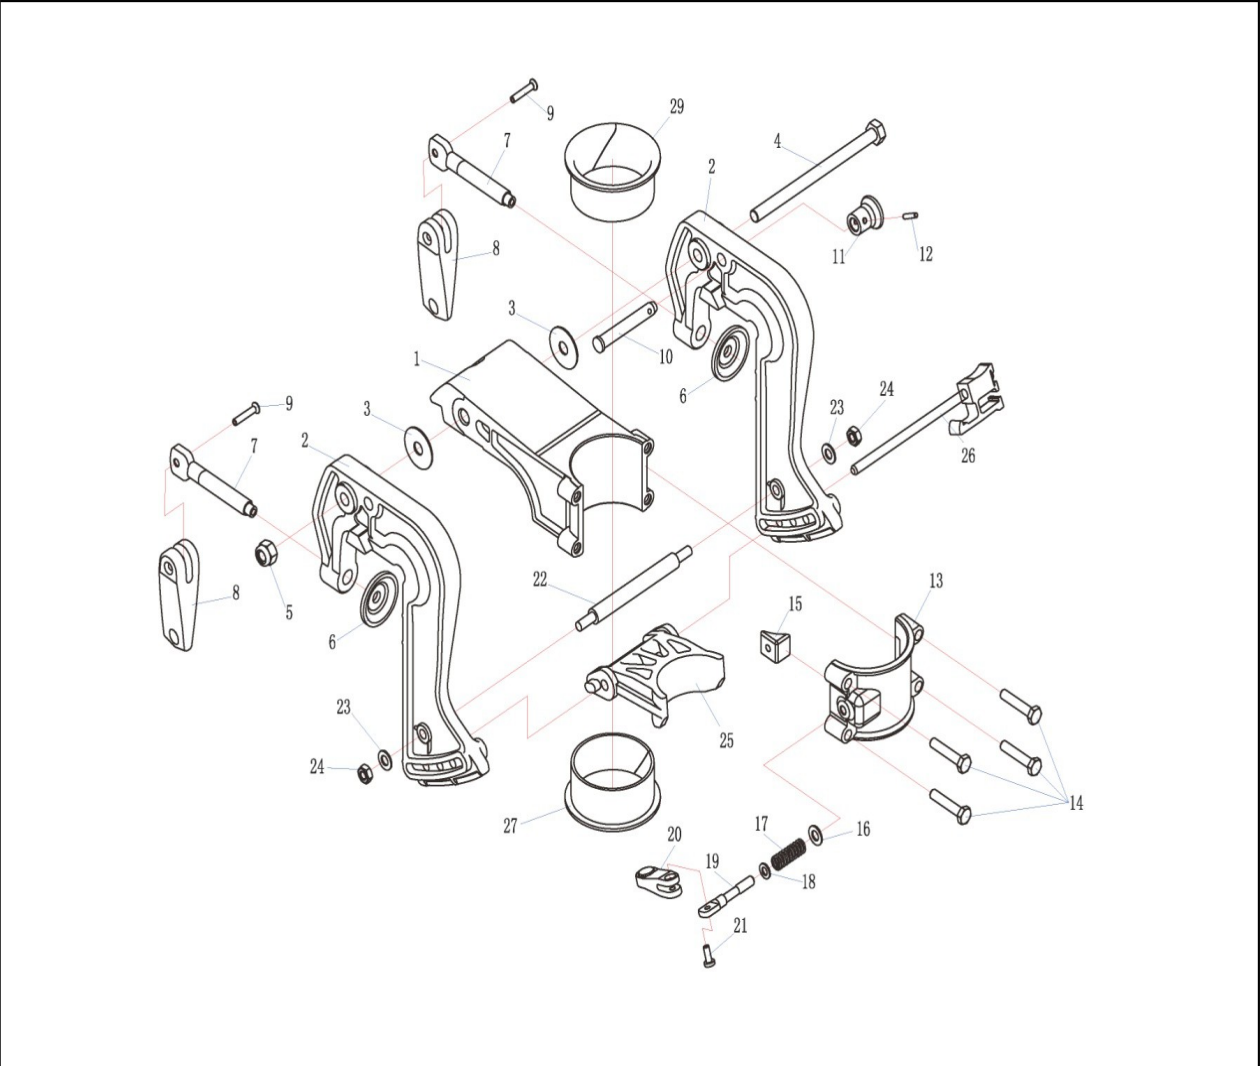

REF NO	PART CODE	DESCRIPTION (EN)	Q'TY
1	3.5F-03.03.01	Swivel bracket	1
2	3.5F-03.01.01	Bracket	2
3	9.8F-0.3.05.10	Plane washer	2
4	M8*125	Bolt	1
5	GB985 M8	Nut	1
6	3.5F-0.3.01.03	Clamp plate	2
7	F4-03.01.03	Transom clamp bolt	2
8	15F-03.05.02.04	Lock handle	2
9	GB/T1015-1986	Rivet	2
10	3.5F-03.02.01.01	Spacing shaft	10
11	3.5F-03.02.01.02	Spacing shaft handle	
12	GB/T879.2-2000	Spring cylindrical pin	
13	3.5F-03.03.02	Swivel bracket cover	

14	GB933 M6*30	Bolt	
15	3.5F-03.03.04	Lock plate	
16	GB848 M6	Plane washer	
17	F2.5-03.01.00.02	Spring	
18	GB848 M5	Plane washer	
19	F2.5-03.01.00.01	Locker bolt	
20	F4-03.05.06.01	Locker handle	
21	GB/T875-1986	River	
22	3.5F-03.05	Bolt	
23	GB848 M6	Plane washer	
24	GB934 M6	Nut	
25	3.5F-03.04	Bracket cover	
26	3.5F-03.06.00	Trim rod	
27	3.5F-03.03.05	Antifriction circle	


Дейдвуд (Waterborne Parts)

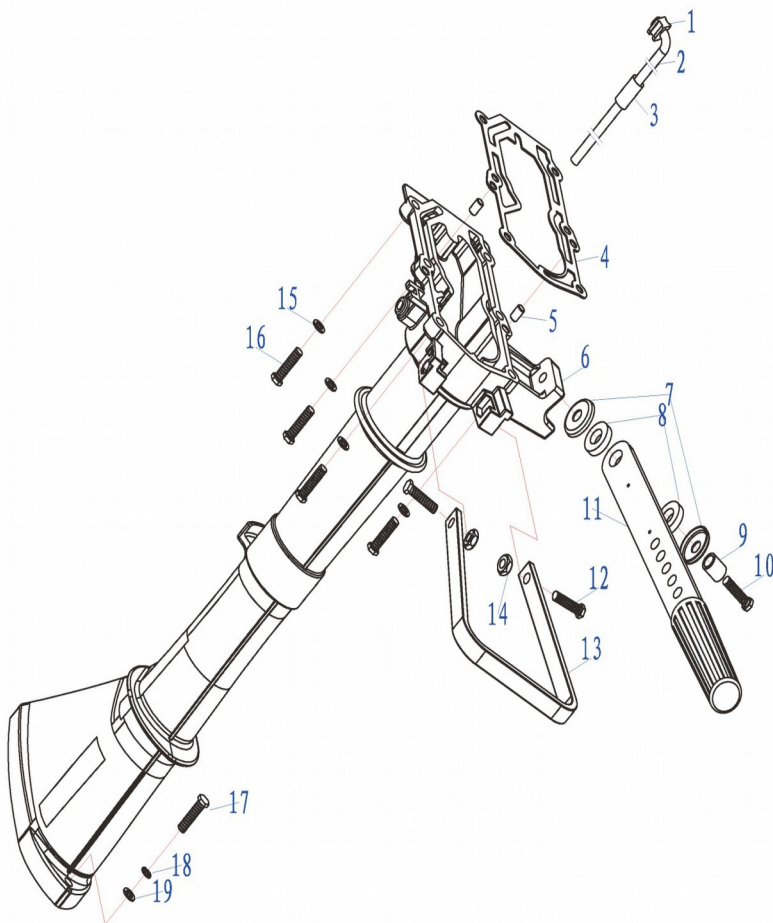

REF NO	PART CODE	DESCRIPTION (EN)	Q'TY
1	3.5F-05.02.02	Rubber ring	1
2	3.5F-05.02.01	Water pipe	1
3	3.5F-05.02.03	Rubber pipe	1
4	3.5F-05.04	Engine gasket	1
5	15F-01.06.20	Dowel pin	1
6	3.5F-05.01	Waterborne casing	1
7	3.5F-04.03	Plate	2
8	3.5F-04.02	Damper	2
9	3.5F-04.04	Collar	1
10	M8*30	Bolt	1
11	3.5F-04.01.00	Steering handle assy.	1
12	GB933 M6*25	Bolt	1
13	3.5F-05.06	Carrying handle	1
14	GB934 M6	Nut	1
15	GB848 M6	Plane washer	1
16	GB933 M6*25	Bolt	1
17	GB933 M6*30	Bolt	1

18	GB933 M6	Spring washer	1
19	GB848 M6	Plane washer	1

Редуктор (Lower Unit)

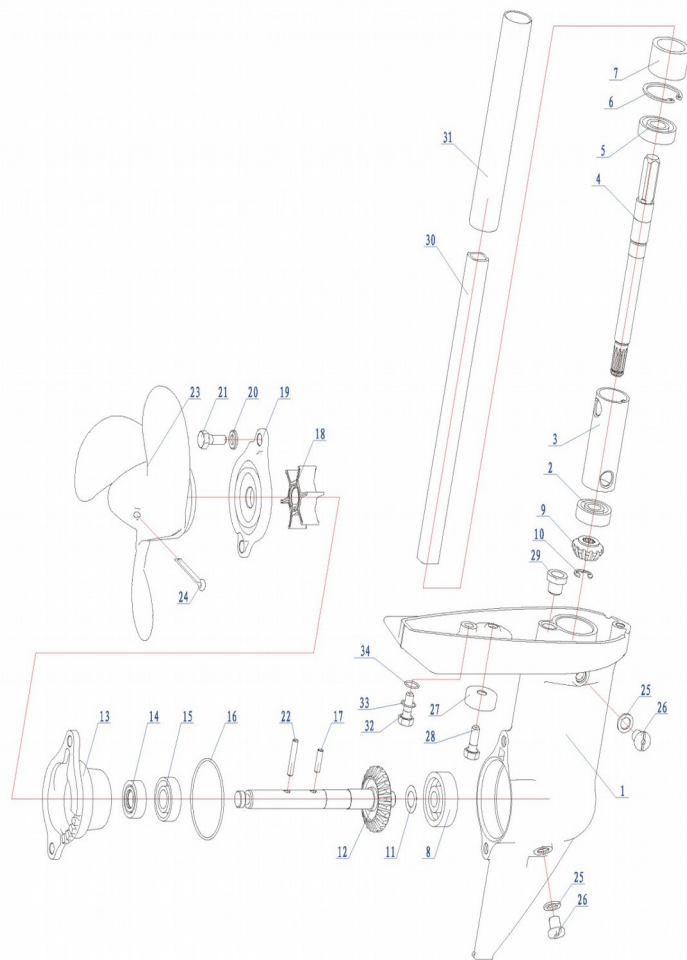

REF NO	PART CODE	DESCRIPTION (EN)	Q'TY
1	3.5F-06.01.01	Lower casing	1
2	3.5F-06.01.06	Bearing	1
3	3.5F-06.01.18	Sleeve	1
4	3.5F-06.01.12	Drive shaft	1
5	3.5F-06.01.05	Bearing	1
6	3.5F-06.01.08	Hole collar	1
7	3.5F-06.01.07	Oil seal	1
8	3.5F-06.01.04	Bearings	1
9	3.5F-06.01.11	Pignion gear	1
10	3.5F-06.01.10	Circlip	1
11	3.5F-06.01.17	Forward gear shim	1
12	3.5F-06.06.00	Propeller shaft assy	1
13	3.5F-06.04.01	Water pump housing	1

14	9.8F-06.21	Oil seal	1
15	3.5F-06.01.05	Bearing	1
16	3.5F-06.04.04	O - Ring	1
17	3.5F-06.05.01	Impeller pin	1
18	3.5F-06.05.02.00	Water pump impeller assy.	1
19	3.5F-06.03.01	Water pump housing cover	1
20	GB848 M6	Plane washer	2
21	GB933 M6*20	Bolt	2
22	3.5F-06.02.02	Spacing pin	1
23	3.5F-06.02.01	Propeller shaft assy	1
24	3.5F-06.02.03	Cotter pin	1
25	15F-06.01.04	Washer	2
26	15F-06.01.03	Oil filling plug	2
27	3.5F-06.01.09	Anode	1
28	GB933 M6*16	Bolt	1
29	3.5F-06.01.15	Water pipe lower seal ring	1
30	3.5F-06.01.13	Rectangular drive shaft	1
31	3.5F-06.01.14	Sleeve	1
32	GB933 M6*30	Bolt	1
33	GB933 M6	Spring washer	1
34	GB848 M6	Plane washer	1