



UHF RFID For PM85 RF851 User Manual

Instruction

RF851 is a UHF RFID reader for PM85. This manual provides information about basic features and using the RF851. Please read this manual carefully before using your UHF RFID reader to ensure safe and proper use.

Revision History

Revision	Date	Description
V01	18 Nov 2020	Initial release
V02	24 Nov 2020	Change menu string of RFID Control Configuration Tool
V03	21 Jan 2021	Removed minor description issue

Related Document

- RFID Control User Guide for RF851 – describes how to use the RFID Control and RFID Demo applications for PM85 and RF851. Download this guide on [Service Portal](#) > Download > RF851 Materials.
- RFID Control Configuration Tool User Guide – describes how to use the RFID Control Configuration Tool. Download this guide on [Service Portal](#) > Download > RF851 Materials.

RF851 SKUs

The contents of this manual can cover the following SKUs.

SKU	Part Number	RFID Module	Antenna	Location
SKU1	RF851-00RX-1	KCTM-2000F	H300U-K	US
SKU2	RF851-00RX-5			KR
SKU3	RF851-00RX-2	KCTM-2000E	H300U-E	EU, India
SKU4	RF851-00RX-7	KCTM-2000J	H300U-K	JP

Table of Contents


INSTRUCTION	1
Revision History	1
Related Document	1
RF851 SKUs	1
TABLE OF CONTENTS.....	2
GETTING STARTED	4
Device Parts	4
Product Standard Accessories.....	5
Charge the Device	6
Charge with AC/DC adaptor	6
Charging with Cradle	7
Turn on/off the Device.....	7
Replace the Battery	8
LED Indicator	9
Install PM85	10
BLUETOOTH CONNECTION.....	12
Install the RFID Control App	12
Bluetooth Pairing with PM85.....	13
Tap-to-Pair.....	14
Search RFID Reader	17
Disconnect	19
Reconnect.....	19
CONFIGURATION SETTINGS	20
Apply Configuration.....	20
Apply via RFID Control	20
Apply via JSON file	21

WEDGE SETTINGS	24
Apply Wedge	24
Apply via RFID Control	24
Apply via JSON file	24
FIRMWARE UPDATE	25
Auto Update	25
Manual Update	27
READ RFID TAG	28
RFID Demo.....	28
Read the RFID Tag.....	29
SCAN A BARCODE	31
SAFETY INFORMATION	32
Battery Safety Information	32

Getting Started

Device Parts

Figure 1 RF851 Views





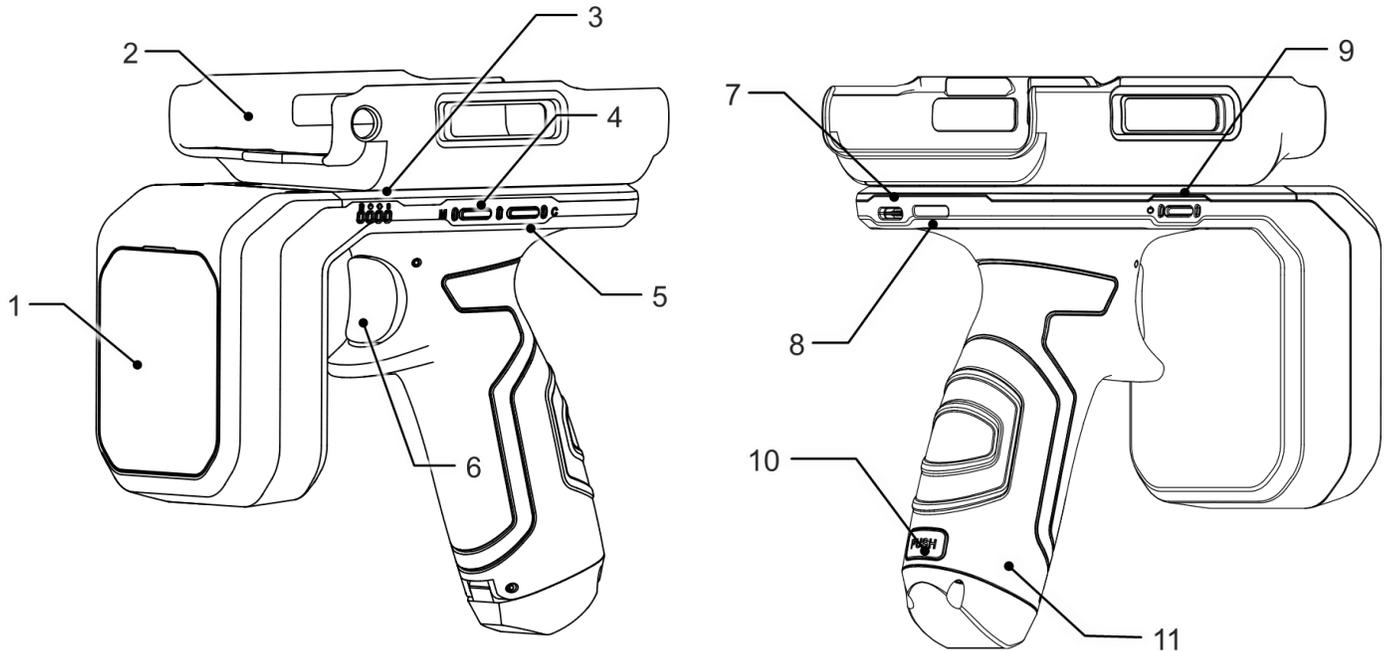


No	Name	Description
1	UHF RFID antenna	Read RFID tags
2	PM85 retention fixture	Install PM85 onto this part
3	LED Indicators	Indicate the status of power, battery charging, pairing, trigger mode. Find more details in LED Indicator
4	Trigger-mode change button	Press and hold to change trigger mode, barcode scanning or RFID tag reading
5	Connect-mode change button	Press and hold to change the connect mode
6	Trigger button	Read RFID tags or barcode by pressing
7	USB Connector	USB 2.0 Type C. Plug USB cable to charge the RF851
8	Hand strap install hole	Install the hand strap through the hole
9	Power button	Press and hold to turn on/off the RF851
10	Battery release button	Press to open battery cover and remove the battery
11	Battery slot	Open the slot cap by pressing battery release button

Getting Started

Product Standard Accessories

The following items are in the product box.

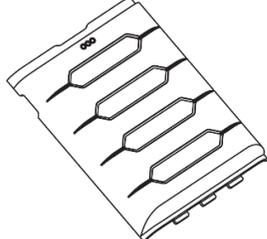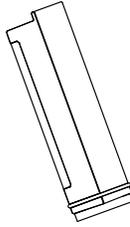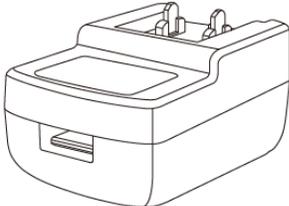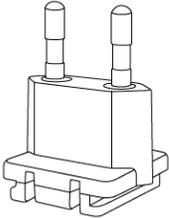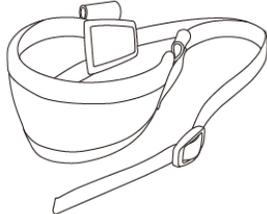Accessory	Name
	PM85 Battery cover
	Battery pack (Battery may be assembled in the RF851)
	5V / 2A power supply
	Country plug (US / EU / KR plug)
	USB type C cable
	Hand Strap


Getting Started

Charge the Device

Charge with AC/DC adaptor

1. Assemble the proper country plug and the AC/DC power supply. And plug USB type C cable to the AC/DC power supply
2. Connect the cable to RF851 and provide power by plugging the power supply to the wall socket

Figure 2 Charge RF851

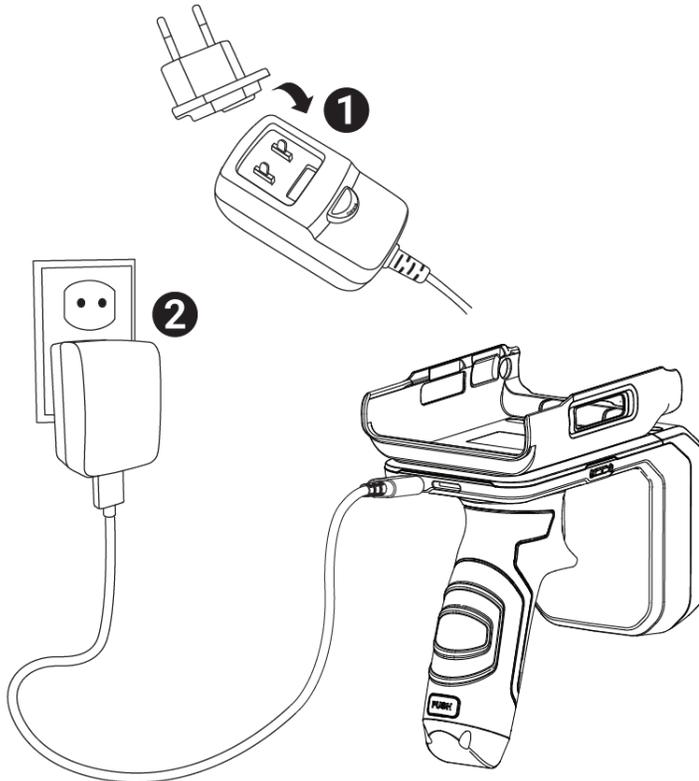


Caution: Always use an original power supply from Point Mobile. Other chargers and cables may damage RF851. Also, make sure the connector, charger, cable is not wet.

Getting Started

Charging with Cradle

Figure 3 Charging with RF851 and PM85

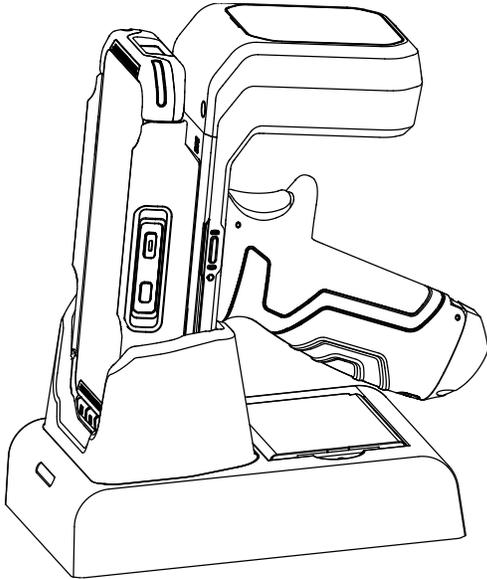

Charge the RF851 with PM85 mounted through the cradle (Optional accessory: RF85-SSC0, RF85-SEC0). Place the device into the cradle, as shown in Figure 3.




Note: If you use the cradle to charge, PM85 and RF851 will charge at the same time. Otherwise, PM85 and RF851 are charged individually.

Turn on/off the Device

To turn on/off the RF851, press and hold the power button until the turning on/off notification sound rings and RF851's LED indicator lights on/off.

Figure 4 RF851 Power button

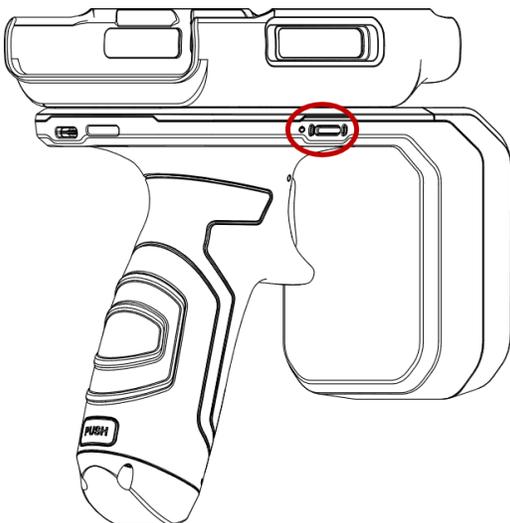


Getting Started

Replace the Battery

When the battery level is low, simply replace the battery with a charged one.


1. Press Battery release button on the back of the handle to open the battery cover

Figure 5 Battery release button

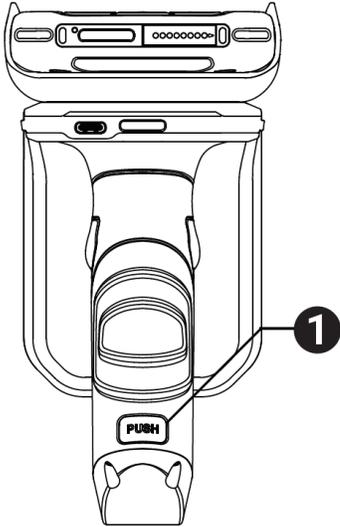

2. Remove the battery and replace it

Figure 6 Replace battery

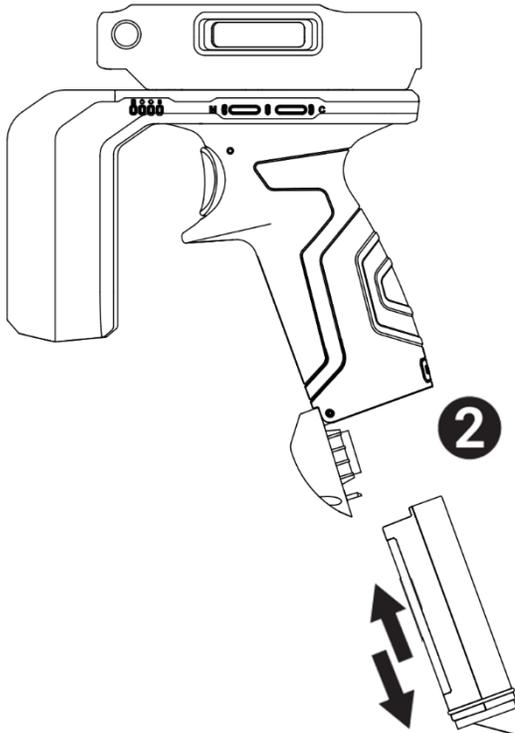


3. Close the battery cover firmly until it clicks

Getting Started

LED Indicator

Figure 7 RF851 LED Indicator

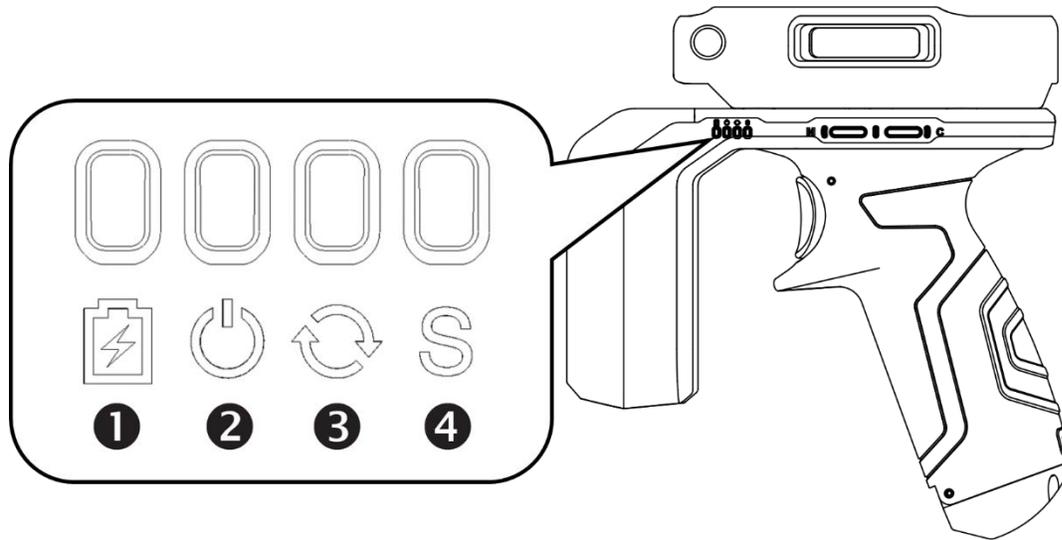

No	Indicator	Status	Indication
1	Charging LED	Solid red	Battery is charging
		Solid green	Battery is fully charged
		Alternately blinking green & red	Battery fault
2	State LED	Solid red	Power on
		Blinking red	Low battery
		Solid green	Bluetooth is connected
		Alternately blinking green & amber	Bluetooth is connected and battery is low
3	Connect-Mode LED	Turned off	SPP communication
		Solid Red	UART communication
4	Trigger-Mode LED	Turned off	UHF RFID ready
		Solid Red	Barcode scan ready




Note: When RF851 enters sleep mode (10 minutes after last operation), all LED indicators will turn off.

Getting Started

Install PM85


1. Remove and replace the PM85 battery cover with the RF851 exclusive battery cover

Figure 8 Installing RF851 battery cover

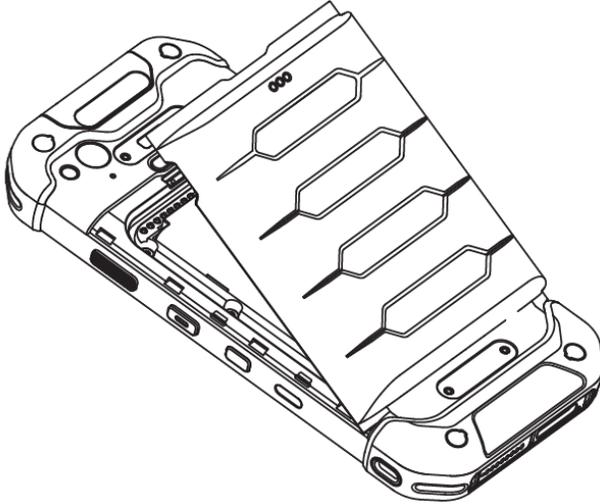

Caution: If you are using PM85 with extended battery, remove the rubber pad before installing the RF851 exclusive battery cover. The rubber pad is for supporting the space between the battery cover and standard battery.

Figure 9 Battery cover and rubber pad

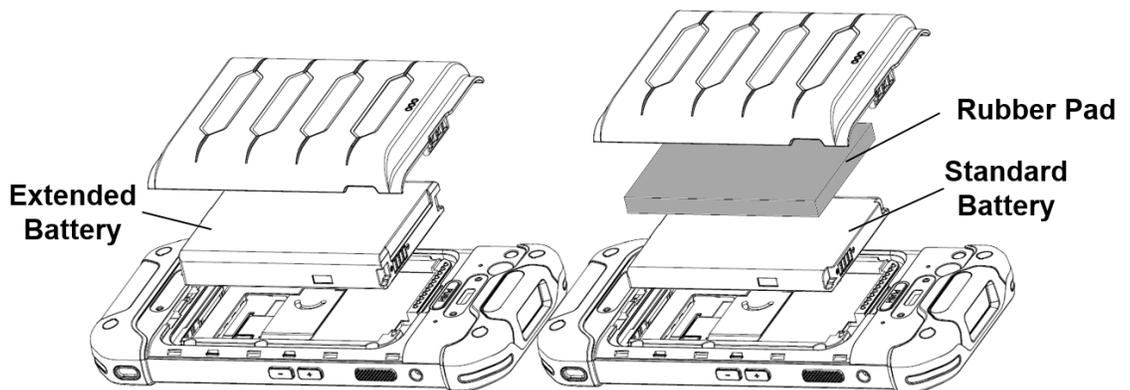

Getting Started


2. Place the left or right side of the PM85 on the retention fixture first

Figure 10 Installing PM85_1



3. Push down the other side firmly

Figure 11 Installing PM85_2

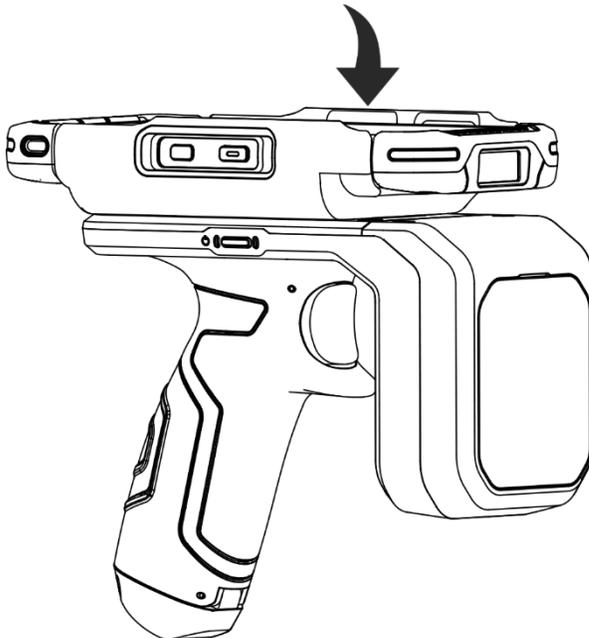

Bluetooth Connection

Install the RFID Control App

Connect your PM85 and RF851, and set up the configuration of the RF851 with **RFID Control** application. **RFID Control** can be downloaded from Point Mobile Service Portal website.

This guide only describes a few basic features of **RFID Control**, so please find more detail information in [RFID Control User Guide](#).

To install RFID Control,


1. Access to [Service Portal](#) and log in



Note: *If you don't have the login account, please contact your local reseller. If you are a business partner of Point Mobile but didn't get the account, please contact Point Mobile.*

2. Go to the **Download** board and find a post titled as **RF851 Materials**
3. Download the **RFID Control** application
4. Copy the apk file to PM85
5. Go to **FileExplorer**  from PM85 App drawer, and install the app

Figure 12 FileExplorer

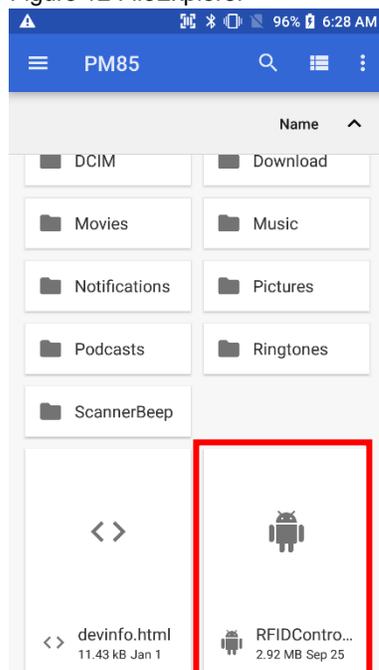


6. To run the app, tap **RFID Control**  from App drawer or **EmKit** 

Bluetooth Connection

Bluetooth Pairing with PM85

RF851 and PM85 can be connected through Bluetooth. Bluetooth connection will establish by **RFID Control**. If the Bluetooth is turned off when the **RFID Control** is launched, the app tries to turn on the Bluetooth automatically.

Figure 13 Bluetooth turn on dialog

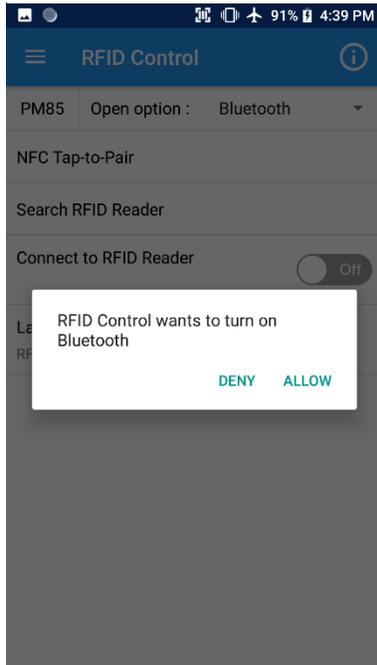

Tap **ALLOW** to turn on the Bluetooth. Or tap **DENY** to disagree with turning on Bluetooth. But if you deny to turn on Bluetooth, **RFID Control** will be closed. If the Bluetooth is already turned on, the dialog will not be shown.

There are two ways for connecting RF851 with PM85, Tap-to-Pair and Searching RFID reader. Choose more comfortable method.



Note: NFC Tap-to-Pair or Search RFID reader

- **NFC Tap-to-Pair:** Easy automatic pairing and connection process with a single tap
- **Search RFID reader:** Normal pairing and connection process with manual steps


Bluetooth Connection

Tap-to-Pair

RF851 has NFC tag for supporting Tap-to-Pair. To connect the RF851 with PM85,

1. Press and hold the Power button to turn on RF851


Figure 14 RF851 Power button

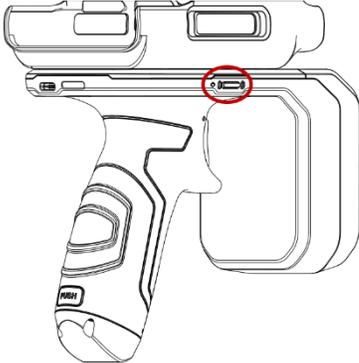

2. Tap NFC Tap-to-Pair on the main screen of **RFID Control**

i **Note:** NFC is enabled by default. But if NFC is turned off, app will ask to turn on NFC. Tap **OK** and tap NFC toggle switch to enable NFC.

Figure 15 NFC turn on dialog

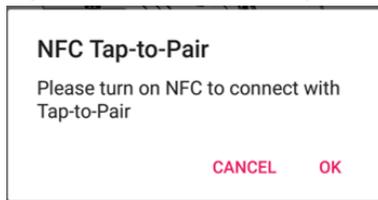

Or before access to Tap-to-Pair screen, enable NFC with one of below ways.

- **Settings > Connected devices > NFC toggle switch**
- **Open Quick setting panel > Enable NFC**

Figure 16 NFC_Settings


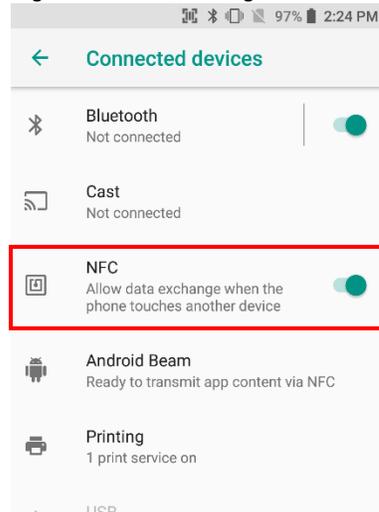



Figure 17 NFC_Quick setting panel

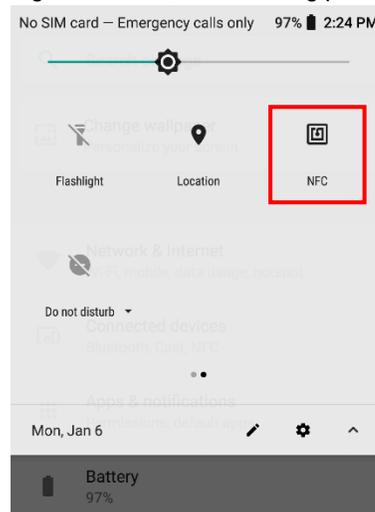

Bluetooth Connection



3. Align NFC logo of RF851 with NFC antenna of PM85, and bring RF851 close to PM85 as the picture on the screen

Figure 18 Tap-to-Pair

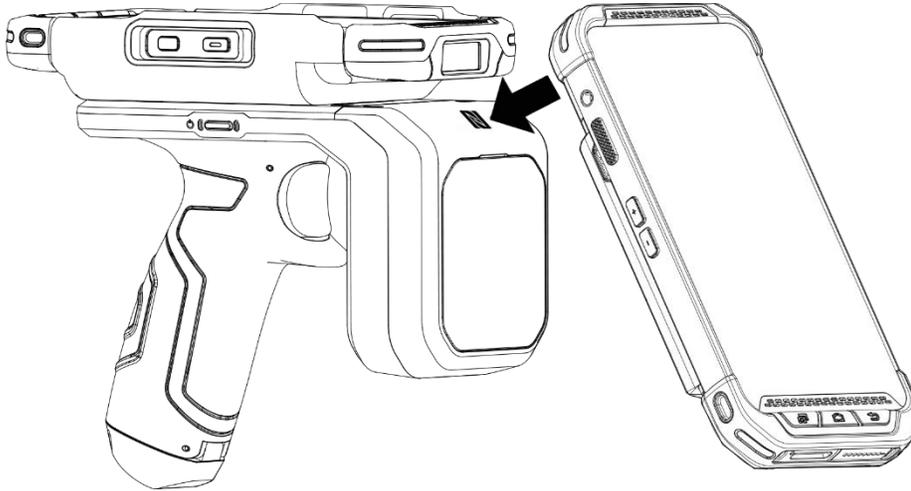

4. Tap **YES** and then tap **PAIR** on the dialogs for Bluetooth pairing

Figure 19 Bluetooth pairing dialog

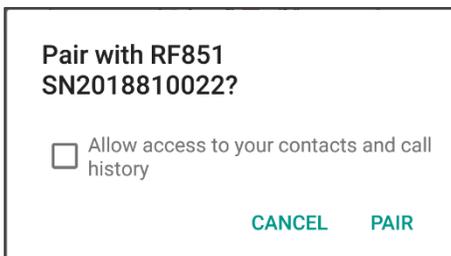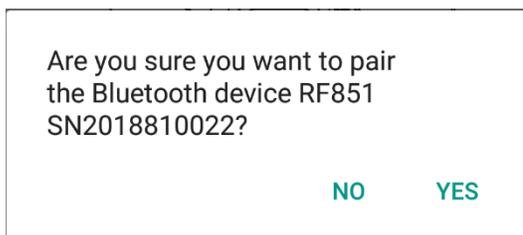

Bluetooth Connection

5. Check the device and reader are connected properly

- Enabled **Connect to RFID Reader** toggle switch and connected RF851's name is displayed
- An icon indicating the RF851's battery level is shown on the status bar
- RF851's status LED flashes green

Figure 20 Bluetooth connected screen


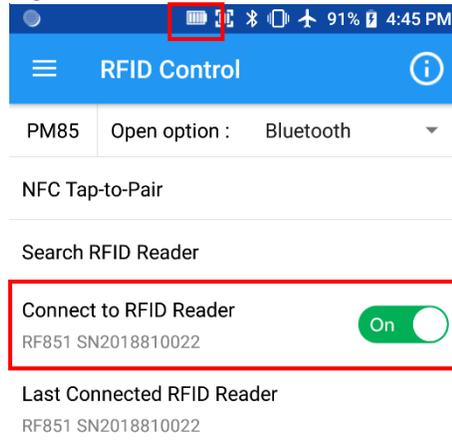


Figure 21 RF851 status LED_Bluetooth connected

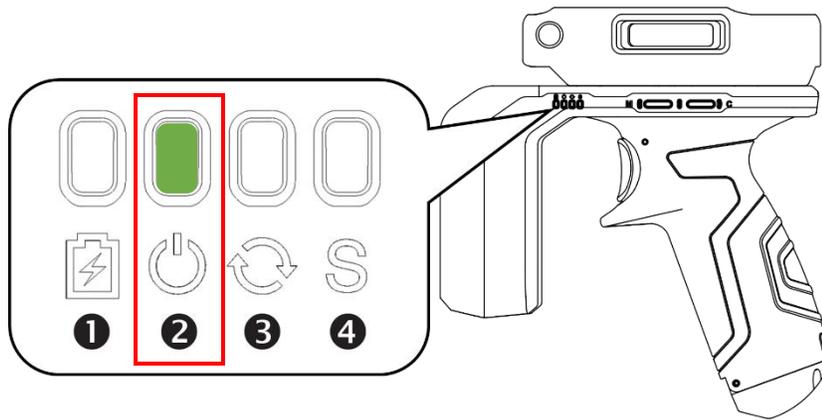


Bluetooth Connection

Search RFID Reader

Second method for connecting RF851 with PM85 is searching nearby RFID readers.


1. Press and hold the Power button to turn on RF851

Figure 22 RF851 Power button

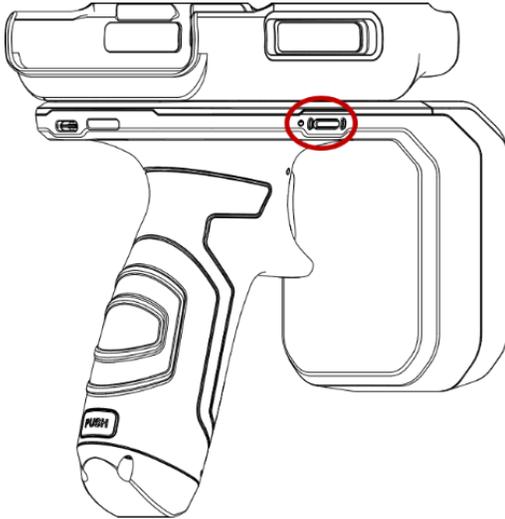

2. Run **RFID Control** and tap **Search Reader** to search nearby RFID readers


Figure 23 Search RFID Reader

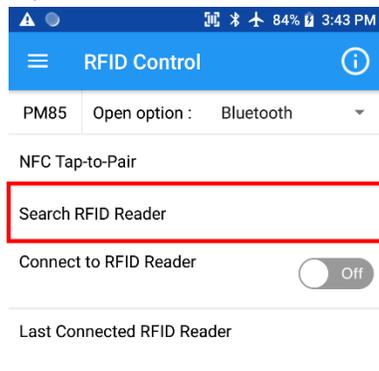

Bluetooth Connection


3. When desired RF851 name appears, stop searching by tapping **STOP** and select the name

Figure 24 Searching RFID reader

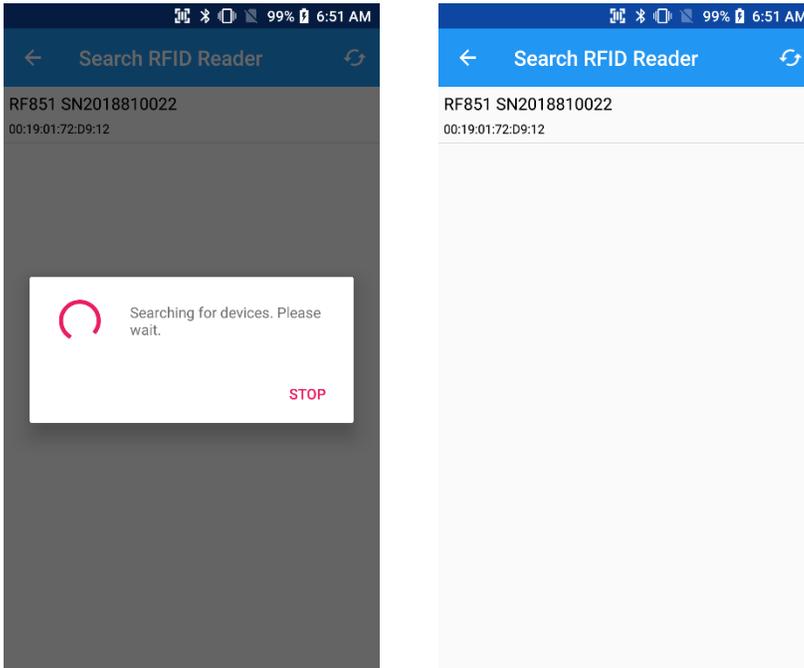

4. Tap **CONNECT**, and then tap **PAIR** on the dialogs

Figure 25 Connect dialogs

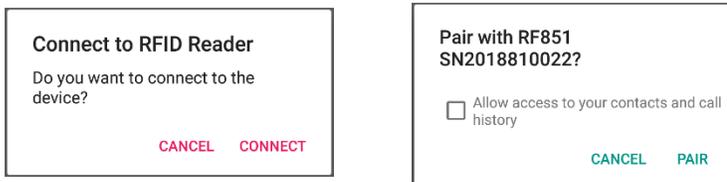

5. Check below items to confirm that RF851 is connected properly (Refer to **Figure 20, 21**)

- Enabled **Connect to RFID Reader** toggle switch and connected RF851's name is displayed
- An icon indicating the RF851's battery level is shown on the status bar
- RF851's status LED lights on green

Bluetooth Connection

Disconnect


To close the Bluetooth connection,

- Turn off the RF851
- Tap **Connect to RFID Reader** toggle switch until it turns to **Off**

Reconnect

To reconnect to the last connected RFID reader, tap **Connect to RFID Reader** toggle switch and wait until the connection is established.

Figure 26 Connect to RFID Reader

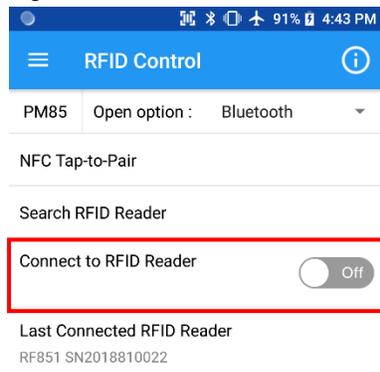

Configuration Settings

RF851 configuration contains below settings.

- Beep Volume
- Radio Power
- Tx Data Format
- Filter
- Tag Focus
- Continuous Read
- Auto read interval
- Reset RFID Setting
- Vibrator
- Tx Cycle
- Filter duplicate tags
- Inventory Config
- Fast ID
- Auto Read
- Save Log

Apply Configuration

To adjust configuration, use RFID Control app or importing JSON file.

Apply via RFID Control

After completed pairing, you can access to Configuration. Tap  to open the side menu bar and select **Configuration**. And then, adjust desired configuration.

Figure 27 Side menu bar - Configuration


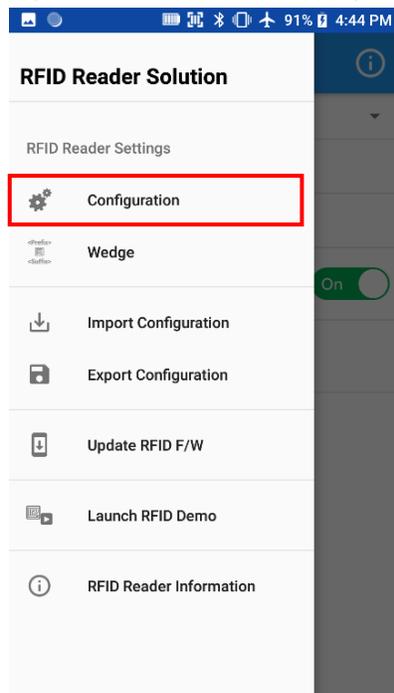


Figure 28 Configuration

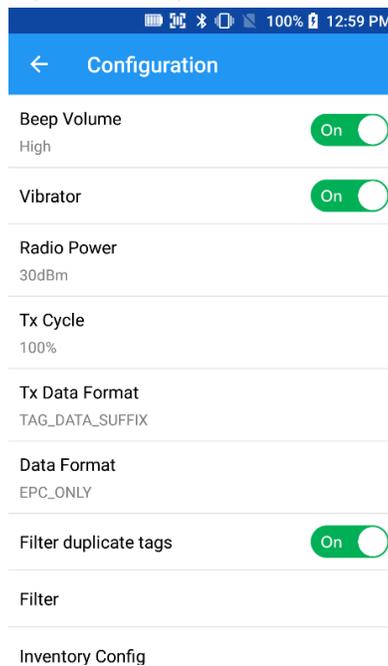

Configuration Settings

Apply via JSON file

You can also apply the configuration by importing the JSON file through RFID Control. Select update process as automatic or manual. Refer to below table to identify the differences.

Methods	Description
Auto Update	<ul style="list-style-type: none"> Specify the JSON file to be used for update in JSON Importing configuration every time the RF851 is connected while RFID Control is running
Manual Update	<ul style="list-style-type: none"> Select the JSON file to be used for update manually in RFID control Perform update immediately

Auto Update

RFID Control app reads the **Configuration.json** file when the app is launched without any connection with RF851 and detect whether Auto Update is determined in the file. If Auto Update is set, importing configuration is performed automatically every time RF851 is connected while RFID Control is running.

To set Auto Update by JSON file,

1. Launch RFID Control Configuration Tool
2. Set **Configuration AutoUpdate** as **Enabled** and input the path of the JSON file to be used for update in **JSON file path**

Figure 29 RFID Control Configuration Tool - Auto Update JSON

Configuration AutoUpdate

Auto update (JSON) Disabled Enabled

JSON file path

3. Save the JSON file and copy the file to internal storage of host device



Note: The JSON file must be named **Configuration.json**, and the file location must be **RFIDControl/RFIDJsons** folder.


4. Launch RFID Control without any connection with RF851

Configuration Settings

When you set up Auto Update,

- Auto Update will be performed every time the RF851 is connected while RFIDControl is running

Figure 30 RFIDControl - Auto Update Configuration dialog

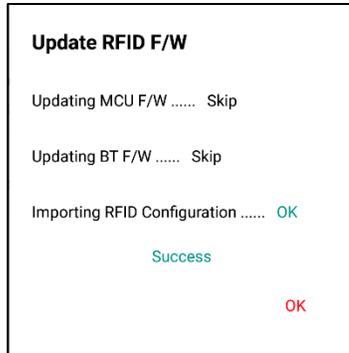


- Auto Update setting value will be maintained until next reading Configuration.json file (The file is read when RFIDControl is launched without any connection with RF851)

i **Note: Turn off Auto Update temporarily**

Go to **Import Configuration** on RFID Control, and then turn off **Auto update** switch. If so, Auto Update will be turned off until the next reading JSON file.

It works the same way when you turn on Auto Update with the switch (The path of Configuration JSON file is required in **Configuration.json**).

Figure 31 RFID Control - Auto Update JSON

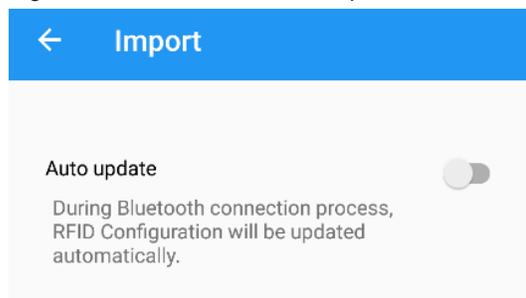


Configuration Settings

Manual Apply

To apply the configuration immediately using the JSON file you want, perform update manually.

1. Make JSON file using RFID Control Configuration Tool
2. Copy the JSON file to internal storage of host device
3. Tap  to open the side menu bar and select **Import Configuration**.
4. Select a JSON file to be imported by tap 
5. Check the setting values which are displayed, and tap **IMPORT** and wait until the process is done

Figure 32 RFID Control - Import Configuration

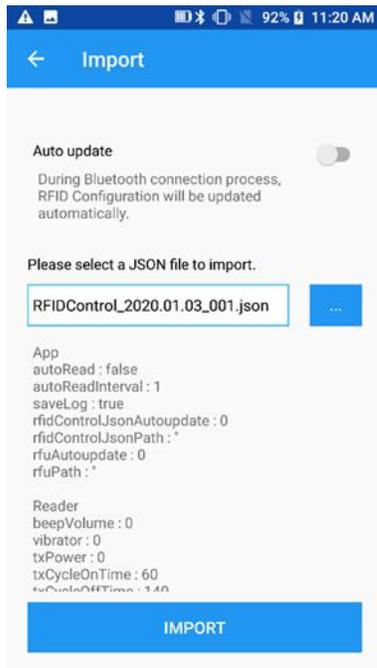

Wedge Settings

Wedge contains the below values.

- Result Type
- Terminator
- Prefix
- Suffix

Apply Wedge

To adjust wedge setting, use RFID Control app or importing JSON file.

Apply via RFID Control

After completed pairing, you can access **Wedge**. Tap  to open the side menu bar and select **Wedge**. And then, adjust desired configuration.

Figure 33 Side menu bar - Wedge


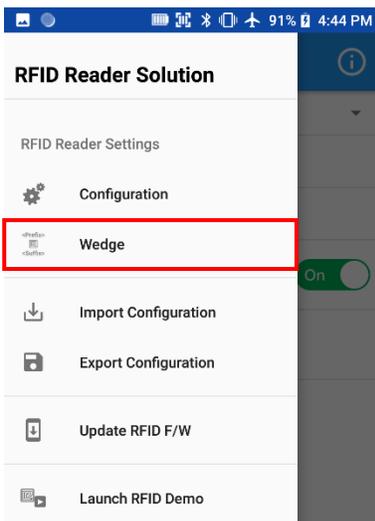


Figure 34 RFID Control - Wedge

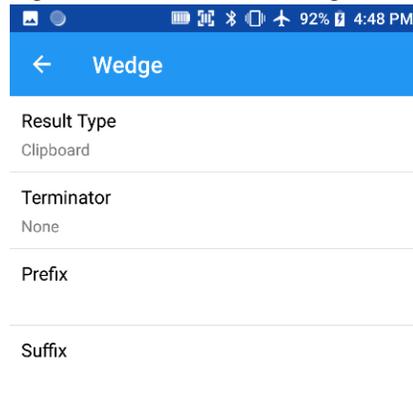

Apply via JSON file

See [Apply via JSON file in Configuration Settings](#). If the JSON file contains wedge setting values, Wedge settings are applied at the same time when you apply the configuration settings via the JSON file.

Firmware Update

To improve the performance of RF851, Point Mobile provides up-to-date firmware. The firmware files are provided by RFU file format, and it contains Bluetooth firmware and MCU firmware.



Note: Before start,

- Download RFU file from [Point Mobile Service Portal](#)
- Copy the RFU file to internal storage of host device
- Firmware update is only available when the current firmware is 93.03 (Oct 30 2020) and higher.

You can perform update automatically or manually. Refer to below table to identify the difference between the two update processes.

Methods	Description
Auto Update	<ul style="list-style-type: none"> • Specify the firmware file in JSON file • Update Firmware every time the RF851 is connected while RFID Control is running
Manual Update	<ul style="list-style-type: none"> • Select firmware file manually in RFID control • Perform update immediately

Auto Update

RFID Control app reads the **Configuration.json** file when the app is launched without any connection with RF851 and detect whether Auto Update is determined in the file. If Auto Update is set, update firmware automatically every time RF851 is connected while RFID Control is running.

To set Auto Update in JSON file,

1. Launch RFID Control Configuration Tool
2. Set **RFID F/W AutoUpdate** as **Enabled** and input the path of the firmware file in **RFU file Path**

Figure 35 RFID Control Configuration Tool - Auto Update Firmware

RFID F/W AutoUpdate

Auto update (RFU) Disabled Enabled

RFU file Path

3. Save the JSON file and copy the file to internal storage of host device



Note: The JSON file must be named **Configuration.json**, and the file location must be **RFIDControl/RFIDJsons** folder.


4. Launch RFIDControl without any connection with RF851

Firmware Update

When you set up Auto Update,

- Auto Update will be performed every time the RF851 is connected while RFID Control is running
- Auto Update setting value will be maintained until next reading JSON file
(JSON file is read when RFID Control is launched without any connection with RF851)

Figure 36 RFID Control - Auto Update via JSON

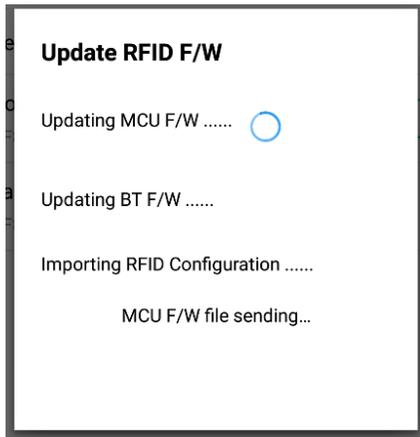


Note: Turn off Auto Update temporarily

Go to **Update RFID F/W** on RFID Control, and then turn off Auto update switch. If so, Auto Update will be turned off until the next reading JSON file.

It works the same way when you turn on Auto Update with the switch (The path of firmware file is required in **Configuration.json**).

Figure 37 RFID Control - Auto Update Firmware

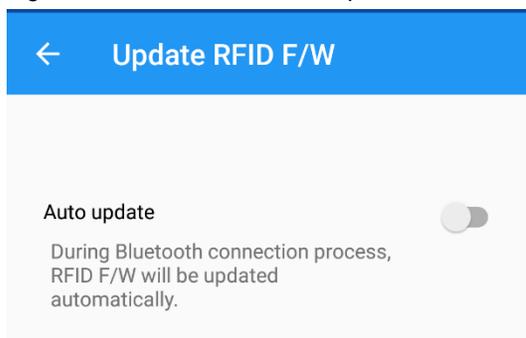


Firmware Update

Manual Update

To update the firmware of RF851 manually,

1. Execute RFID Control and connect RF851 to host device with Bluetooth
2. Tap  and select **Update RFID F/W**
3. Tap  to browse the RFU file you prepared

Figure 38 RFID Control - Update RFID F/W

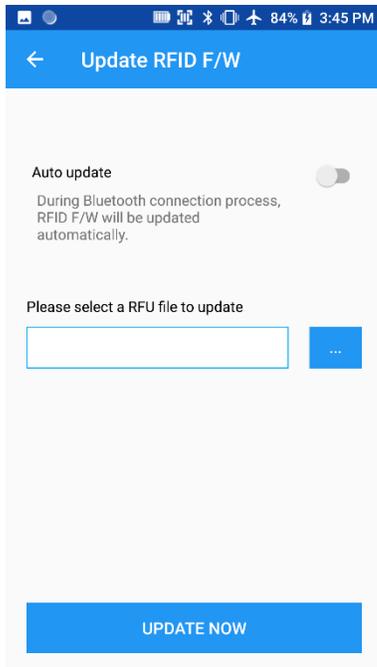

4. Select the RFU file and Tap **UPDATE NOW**
5. Wait until the update process is done

Read RFID Tag


RFID Demo

You can demonstrate the function of reading an RFID tag with **RFID Demo**. **RFID Demo** will be installed together with **RFID Control**.

 **Note:** *RFID Demo is compatible with PM85 running 85.05 and above. Please update your PM85 if the OS version is lower.*

There are two ways to launch **RFID Demo**,

- Tap **RFID Demo**  from App drawer or **EmKit**
- Open the side menu bar on the **RFID Control** and tap **Launch RFID Demo**

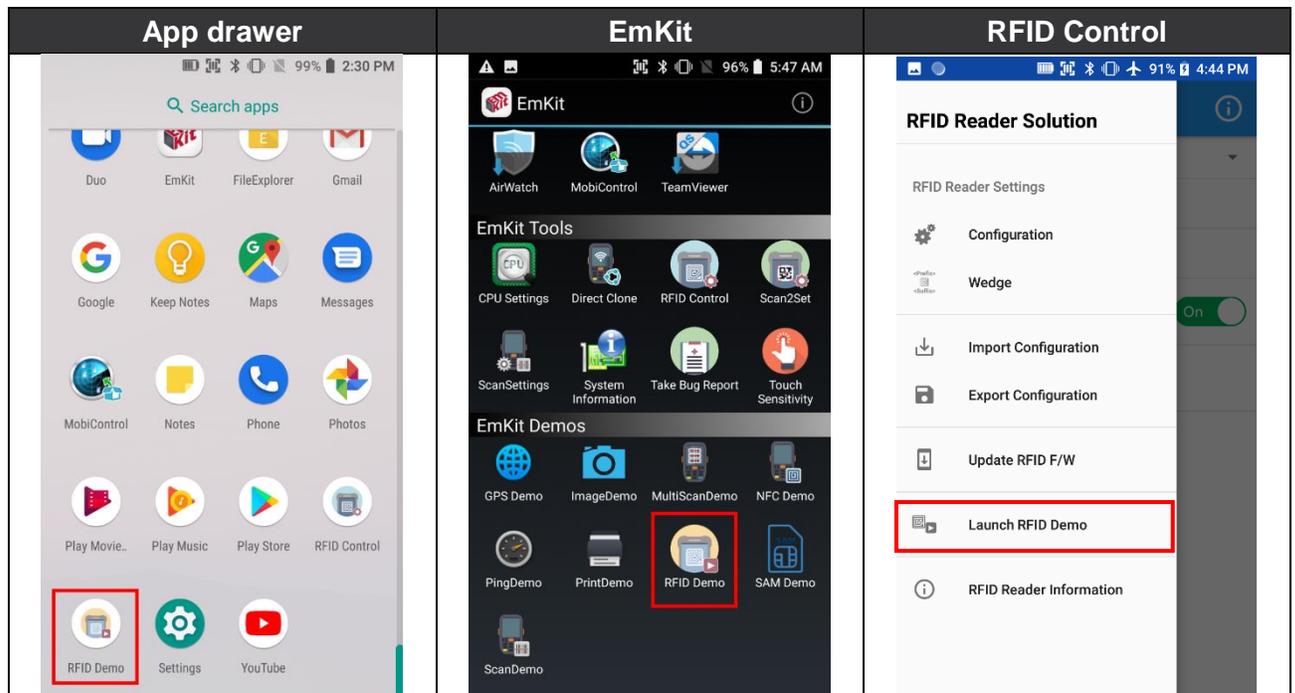


Read RFID Tag

Read the RFID Tag

Before read RFID tag, make sure that the Trigger-Mode LED lights off. Turned off Trigger-Mode LED means that RF851 is in UHF RFID mode. If the LED lights on red, press and hold the Trigger-mode change button until the LED turns off because red Trigger-Mode LED means RF851 is in barcode scan mode.

Figure 39 RF851 Trigger-Mode LED

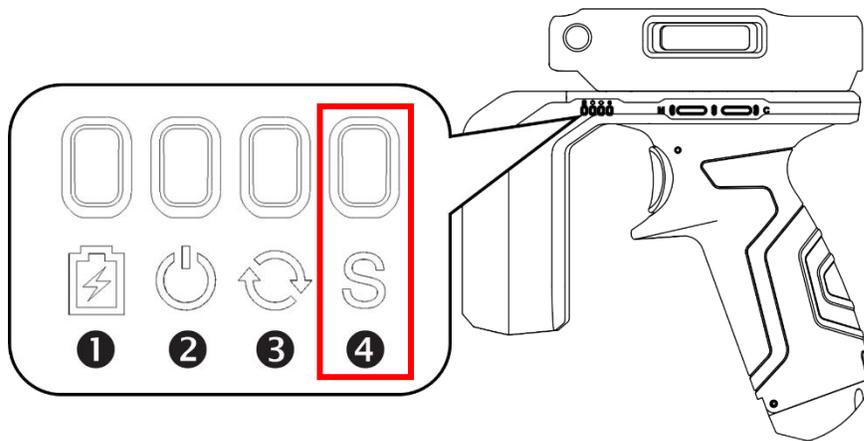

Read RFID tags after pairing the RF851 to your PM85. To read RFID tags, aim the tag and then press the trigger button of RF851 or tap the **Read RFID Tag** button on the screen.

Figure 40 Reading RFID tag


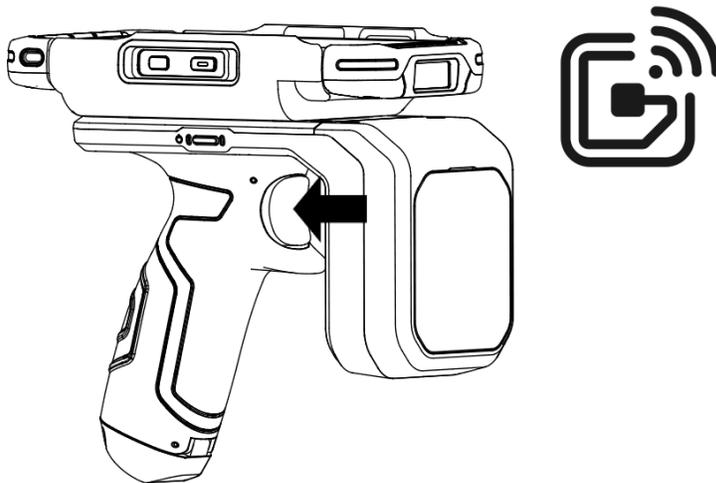



Figure 41 RFID Demo - Read tag

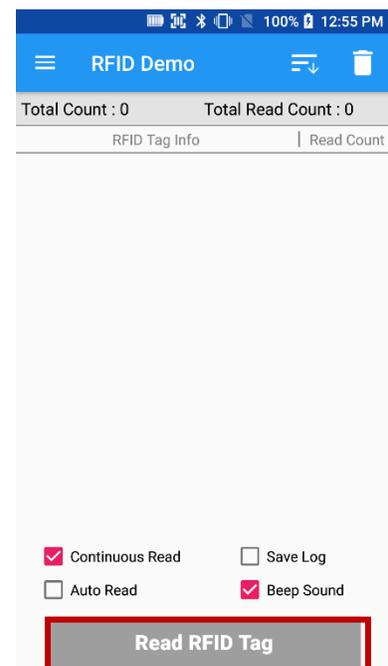

Read RFID Tag

Note: If you perform trigger action (press trigger button on RF851 or Read RFID Tag) while the RFID Demo is running and RF851 is in barcode scan mode, a toast message pop up on the screen.


Figure 42 RFID Demo - Barcode scan mode message

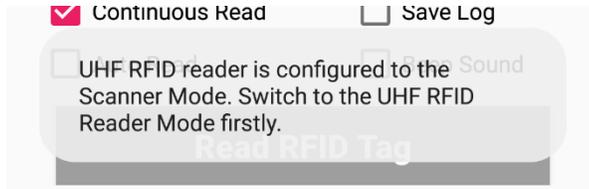

RFID Demo cannot get barcode data. For demonstrating barcode scan function, use Scan Demo application.

Tap to sort the delivered tag data in order and tap to clear the tag data.

Figure 43 RFID Demo - Read tags

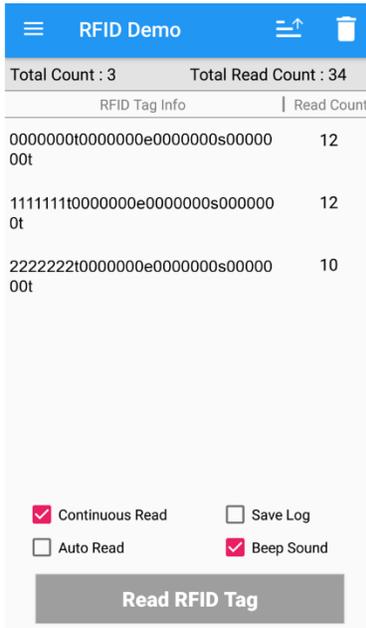

Scan a Barcode

If you want to scan a barcode instead of RFID tag, change the trigger mode of RF851. Trigger button will activate the barcode scan action.

1. Press and hold the Trigger-mode change button until the Trigger-Mode LED turn on red

Figure 44 RF851 Trigger-mode change button


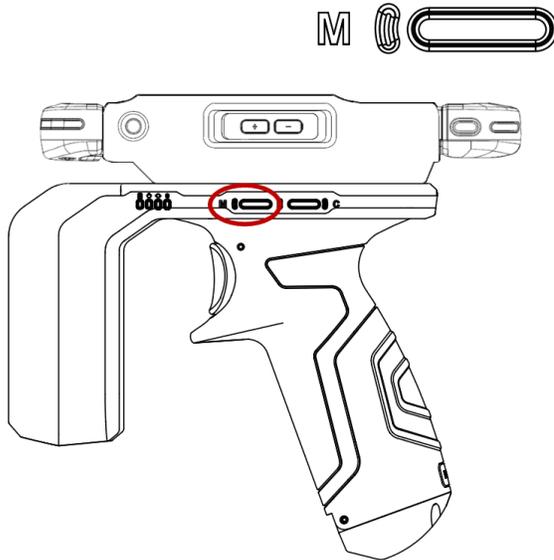


Figure 45 RF851 Trigger-Mode LED

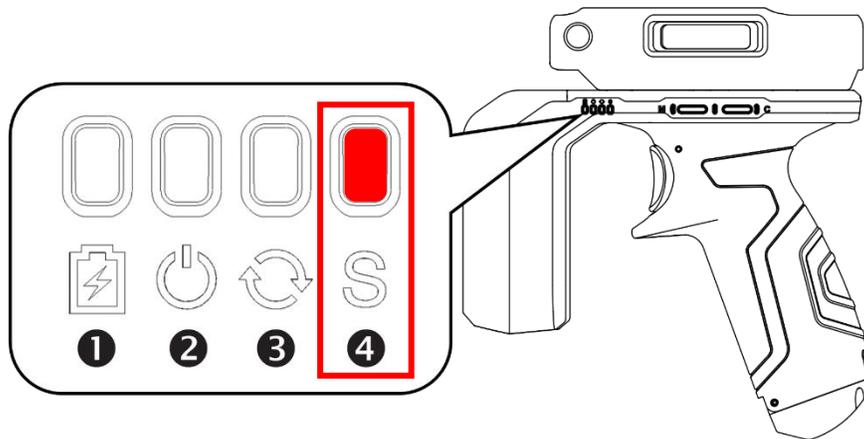

2. Execute **Scan Demo**  or scanner application, and then scan a barcode by pressing the trigger button of RF851
3. Check the barcode information displayed on the app

Safety Information

Battery Safety Information

Follow battery safety guidelines in this manual for safe usage and disposal of Li-ion batteries. Improper battery usage may result in an explosion, fire, or other critical hazards.

Battery Usage & Disposal Guidelines

1. Use only Point Mobile approved batteries and charging accessories. Other batteries and charger may damage the device.
2. Do not disassemble or modify the battery. Do not bend, shred, deform the battery.
3. Do not expose the battery to excessive heat or cold. Do not place the battery into a microwave oven or dryer.
4. Do not short-circuit the battery or allow a foreign object to battery contacts.
5. Do not burn, expose to water, or other liquids the battery.
6. If battery leakage is observed, avoid any contact with the skin or eyes. If contact has been made, wash the affected area with water for 15 minutes, and seek medical attention.
7. Follow the local regulations for the disposal of used batteries.
8. Do not store or charge the battery in direct sunlight or in areas prone to get hot such as in a parked vehicle, near a heat duct, or close to other heat sources.

Battery Charging Guidelines

1. Do not charge the battery in or near areas with materials that could obstruct charging or cause a short-circuit.
2. Do not charge the battery in the excessive hot or cold area.
3. Separate the charger from the battery as soon as possible when the battery is fully charged.
4. Charge it at least once every six months to prevent full discharge and keep the performance, when you are not using the battery for a long period.



Notice: *The battery is consumable goods. Point Mobile provides warranty for battery in 6 months after purchase. If you suspect the battery swelling, change the battery and contact Point Mobile to use safely.*



Point Mobile. Co., Ltd.

Offline

Tel: +82-2-3397-7870~1

ARS: +82-1800-3010

Fax: +82-2-3397-7872

Address: 9F Kabul Great Valley, 32, Digital-ro 9-gil,
Geumcheon-gu, Seoul, Korea 08512

Online

Website: <https://www.pointmobile.com>

E-mail: pm_support@pointmobile.co.kr