Multi-connector with One-touch Fittings

DMK Series

No. of Connecting Tubes: 6, 12



Multi-connector with One-touch fittings provide quick and easy installation and removal of multiple tubing (nylon, soft nylon, and polyurethane) when connecting to a panel of a device.

A unique positioning
mechanism allows accurate
installation and removal of
tubing with ease even in a
hard-to-see locations, while
preventing piping errors when
reconnecting.

Built-in One-touch fittings

Applicable to nylon, soft nylon, and polyure-thane tubes.

Saves installation time

Unlike the use of multiple bulkhead unions for panel, DMK series with built-in One-touch fittings significantly reduces the piping time.

Secure tube connection

Tubes are easily and securely connected to the multi-connector with built-in One-touch fittings.


No. of connecting tubes:

2 types of multi-connectors are available: 6 tubes and 12 tubes.







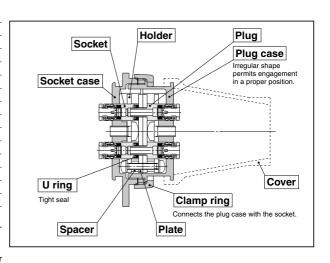

Model

| | No. of connecting tubes | Model | | | Replacement parts no. | |
|--|-------------------------------|-----------------|----------------|------------------|-----------------------|------------|
| | | Multi-connector | Plug side only | Socket side only | Cover | Clamp ring |
| | 6 | DMK6-23 | DMK6P-23 | DMK6S-23 | DMK-C-6 | DMK6-P01 |
| | | DMK6-04 | DMK6P-04 | DMK6S-04 | | |
| | 12 | DMK12-23 | DMK12P-23 | DMK12S-23 | DMK-C-12 | DMK12-P01 |
| | | DMK12-04 | DMK12P-04 | DMK12S-04 | | |


Specifications

| Applicable tubing materials | Nylon, Soft nylon, Polyurethane | | |
|-------------------------------|---------------------------------|--|--|
| Applicable tubing O.D. (mm) | ø3.2, ø4 Air 0 to 1 MPa | | |
| Fluid | | | |
| Operating pressure range | | | |
| Ambient and fluid temperature | -5 to 60°C (No freezing) | | |

Principal Parts Material

| | DMK6 | DMK12 | |
|--|---|----------------------|--|
| Socket case, Plug case Clamp ring | ADC12, White semi-gloss baking finish after chromated | | |
| Plate | SPCC, Chromated | | |
| Holder | SPCC, Zinc chromated | A5052, Hard anodized | |
| Socket, Plug | C3604 Electroless nickel plated, POM, Stainless steel 304 | | |
| U ring | NBR | | |
| Cover | Silicon rubber | | |
| Round head phillips screw | SWRM, Nickel plated | | |
| Round head phillips screw with flat washer | SWRM, Zinc chromated | | |
| Spacer | SPC, Zinc chromated | | |

How to Order

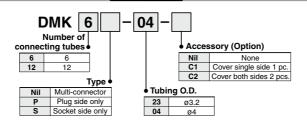

⚠ Precautions

Be sure to read this before handling the products.


Refer to back page 50 for Safety Instructions and pages 13 to 17 for Fittings and Tubing Precautions.

How to Use

⚠ Caution


Disassembly

 Loosen clamp ring A and disassemble the connector into the plug case and socket case.

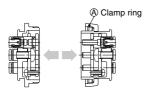


Connection

- (1) Turn the cases while pressing them against each other until the plug case slides into the socket case at a proper position.
- (2) Align at mark B of the plug and socket cases and turn them against each other to connect the two cases.
- (3) Screw in the clamp ring to complete the connection.

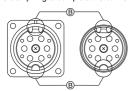

Installation of cover

- The cover can be installed on both the plug case or socket case.
- (2) Stretch the cover to install on the cover installation latch.

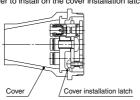

⚠ Caution

Please do not attach metal rods or metal pipes. Metal rods or pipes cannot be secured and the fittings will shoot out. Also, if tubes are attached after metal rods or pipes have been attached, the tubes will not hold and may come loose.

Installation and Removal of One-touch Mini Fittings

⚠ Caution

Installation of tubing

- Cut the tube perpendicularly, using caution not to damage its surface. (Use tube cutter TK-1, 2 or 3. Do not cut the tube with cutting pliers, nippers, scissors, etc.)
- 2. Grasp the tube, then slowly push it until it comes to a stop.
- 3. Then, pull it back gently to make sure that it does not come out.

Removal of tubing

- While pushing down on the rim of the release button, pull out the tube in the direction of the arrow (see illustration.) The release button can also be pushed down with a flat-head screwdriver. However, be careful not to break or damage the release button.
- 2. To reuse the released tube, cut off the damaged portion of the tube.



KQ2

KQB2

KM

KF

M H/DL

L/LL KC

KK

KK130

DM KDM

KB KR

KA

KQG2

KG KFG2

MS

KKA KP

LQ

MQR

IDK

DMK Series


Dimensions

DMK6






40.5 59.5

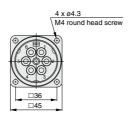


DMK12





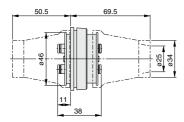

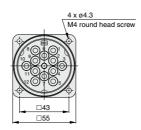

Click here for applicable color caps.