

# **GPRS Card**

## User's Manual

## Table of Content

1 Overview .....	1
1.1 Introduction .....	1
1.2 Features .....	1
1.3 Product overview .....	2
2 Preparation .....	2
2.1 Prerequisite .....	2
2.2 Installation .....	3
3 Monitor .....	5
3.1 Registration .....	5
3.2 Login .....	6
3.3 Region Manager .....	7
3.4 Device Manager .....	8
3.5 Monitor .....	8
3.6 User Manager .....	11
4 System Configuration .....	13
4.1 SMS Setting .....	13
5 SMS Notification .....	19
5.1 Notification of firmware .....	19
5.2 Prompt Alarm Notification .....	19

# 1 Overview

## 1.1 Introduction

GPRS Card can collect the data from various device, and transmit data via GPRS to data center. It's suitable for places where there is no access to Internet. The HTTP service of data center can manage and monitor several devices, and can record all data/events with in data center.

Via the SMS of telecommunication companies, GPRS card supports reminder and alarm service. The users can assign one or multiple numbers to receive the notification. Parameter configuration and firmware upgrade can be completed via SMS.

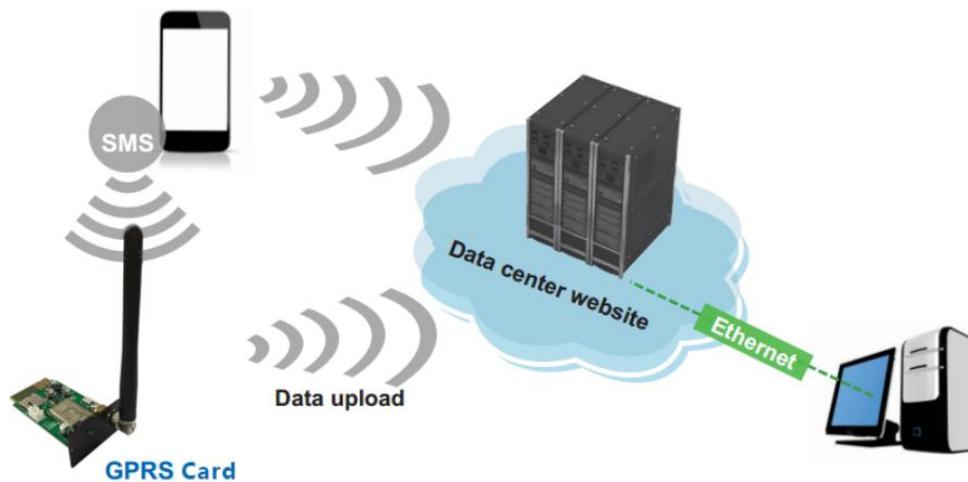


Diagram 1-1

## 1.2 Features

- Upload information to data center via GPRS.
- Manage and monitor data in the data center through browser at any time
- Notification via SMS
- Parameter configuration and firmware upgrade through SMS

## 1.3 Product overview

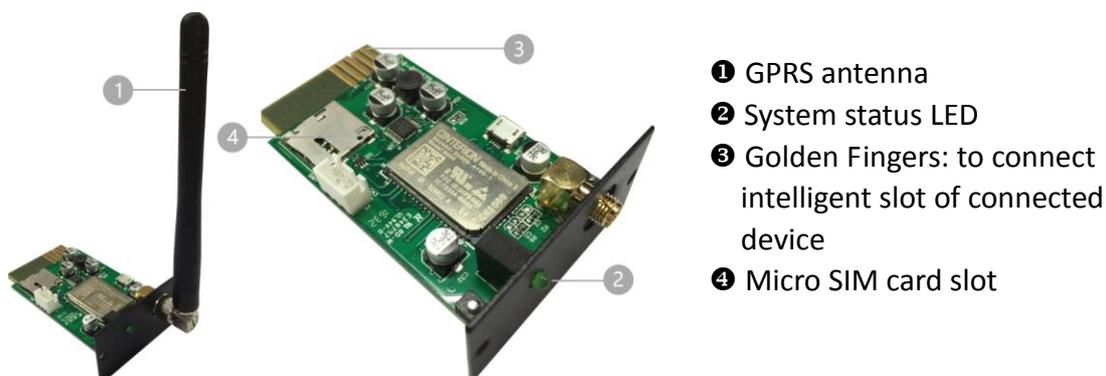


Diagram 1-2

System Status LED:

LED Status	Description
10ms on , 990ms off	1. GSM CS data in process or established. 2. GSM CS audio call in process or established.
10ms on , 1990ms off	GSM PS Data transmitting
10ms on , 3990ms off	Online registration succeeded. No call, and no data transmission.
500ms on , 500ms off	Limited Internet service (for example, no SIM card, no PIN authentication, or searching for Internet)

## 2 Preparation

### 2.1 Prerequisite

The following devices are required if you're using GPRS Card or GPRS Box:

For GPRS Card:

1. GPRS Card (Diagram 1-1)
2. Micro SIM Card (12 x 15 mm) as in Diagram 2-1
3. SMS Device such as cell phone
4. Monitored device



GPRS card

Micro SIM card

Diagram 2-1

**For GPRS Box:**

1. GPRS Card (Diagram 2-1)
2. Micro SIM Card (12 x 15 mm) as in Diagram 2-1
3. GPRS Card Box (Diagram 2-2)
4. DB9 to RJ-45 Data Cable (Diagram 2-2)
5. SMS Device such as cell phone
6. Monitored device.



GPRS box

DB9 to RJ-45 data cable

Diagram 2-2

## 2.2 Installation

**For GPRS Card:**

1. Screw the Antenna to GPRS card. (Diagram 2-3)

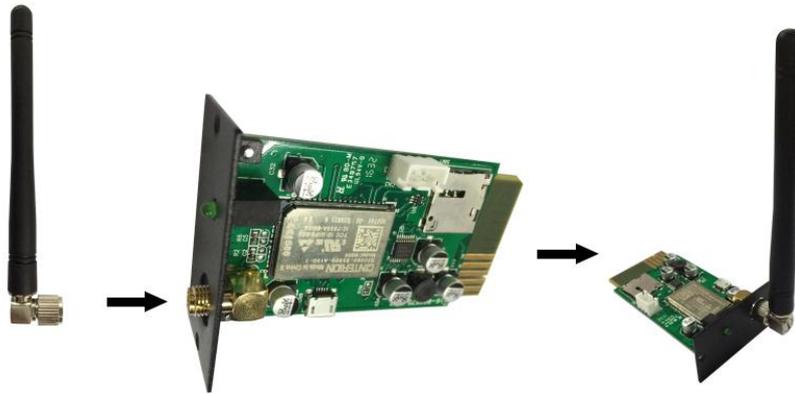


Diagram 2-3

2. Insert SIM card into the slot. Pay attention to the direction of SIM card. (Diagram 2-4)



Diagram 2-4

3. Remove the cover of Intelligent Slot located on Inverter or UPS. Retain the screws for further use. (Diagram 2-5)

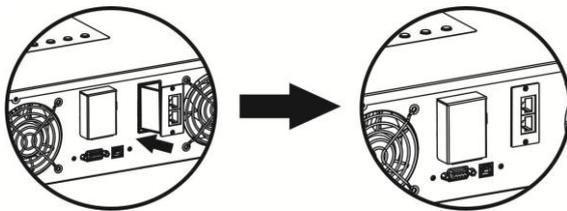


Diagram 2-5



Diagram 2-6

4. Insert SIM Card and fix it with screws.

**For GPRS Box:**

1. Same Step 1 and 2 as GPRS card.
2. Insert GPRS card into GPRS Box, and fix it with screws. (Diagram 2-6)
3. Connect DB9 terminal of data cable to GPRS Box. (Diagram 2-7)

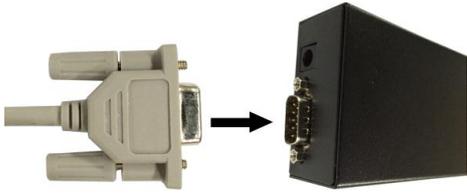


Diagram 2-7



Diagram 2-8

4. Connect data cable RJ-45 to Inverter or UPS. Please refer to the terminal of DB9 in Diagram 2-7 and RJ-45 in Diagram 2-8.

### 3 Monitor

If GPRS operates normally, it will transmit data via SIM card to data center <http://power-datacenter.com>. Users have to register to monitor the operating status and bind the ID of the SIM card with the registered account.

## Data Center

System login

**User name**

**Password**

**Language**


**Login**

[There is no account? register now](#)

In order to optimize the user's experience, you are suggested to view the information via suggested browser including: Chrome 6+, IE10+, Firefox 4.0+, Safari. Besides, smart phones and tablets can also access to the data.

#### 3.1 Registration

1. Click "register now" located below the Login button to go to registration page.

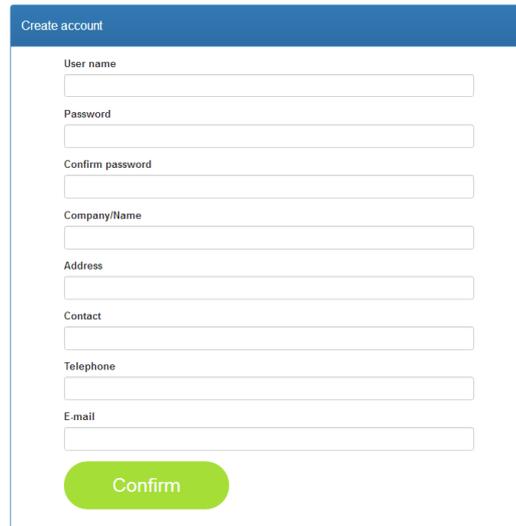


The 'Create account' form is a vertical rectangle with a blue header. It contains several input fields: 'User name', 'Password', 'Confirm password', 'Company/Name', 'Address', 'Contact', 'Telephone', and 'E-mail'. Each field is a simple white box with a thin border. At the bottom of the form is a green rounded button labeled 'Confirm'.

- User name : Please enter user name and remember it for further use.
- Password : It contains 6 ASCII characters, including number, capital letter and lower case letters.
- Confirm password : Re-enter the password which should be consistent with the one in Password.

2. Click  button to complete the registration


### 3.2 Login

After registration, you can log in the data center. The login page is shown as follow:

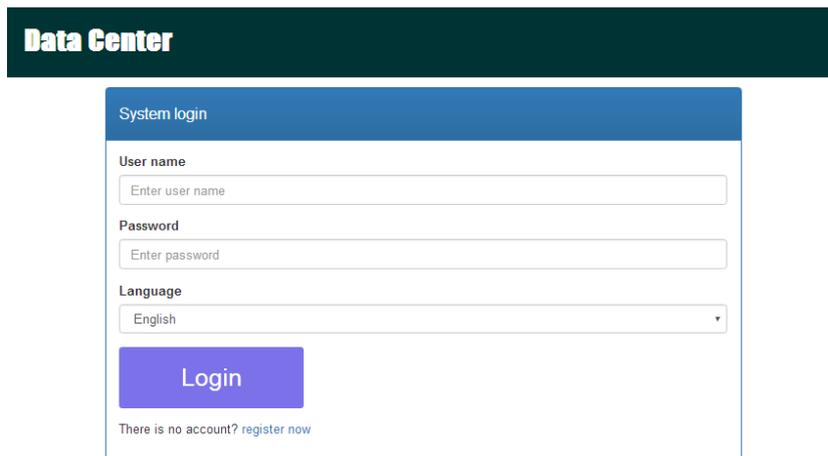


The 'Data Center' login page features a dark green header with the text 'Data Center' in white. Below the header is a white box with a blue header labeled 'System login'. The form contains three input fields: 'User name' with the placeholder 'Enter user name', 'Password' with the placeholder 'Enter password', and a 'Language' dropdown menu currently set to 'English'. A blue button labeled 'Login' is positioned below the fields. At the bottom of the form, there is a link that says 'There is no account? register now'.

After logging in, the main page of data center will be shown as below:

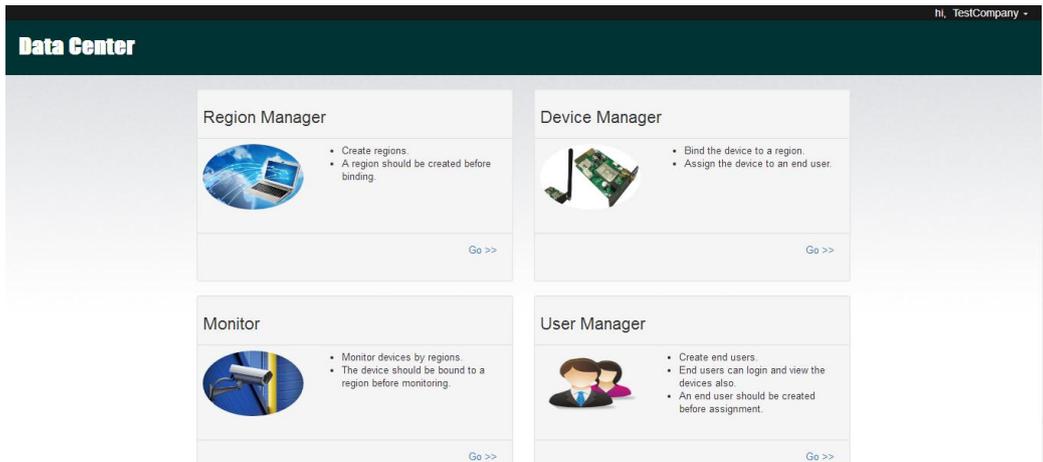


- Region Manager: The users can monitor all device in the same region (or same location).
- Device Manager: The users can bind the device to designated region and assign the device to users.
- Monitor: It is grouped by region, and all device in every region will be listed.
- User Manager: The user can create end users.

### 3.3 Region Manager

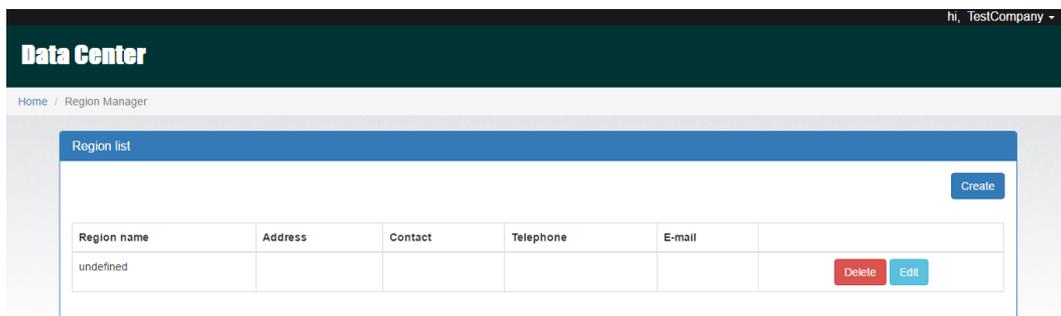


1. Users can create new region, delete region, and edit region
2. After registration, the system will assigned the user an “undefined” region, which can be deleted, and edited.
3. Click  and the system will show new created message.

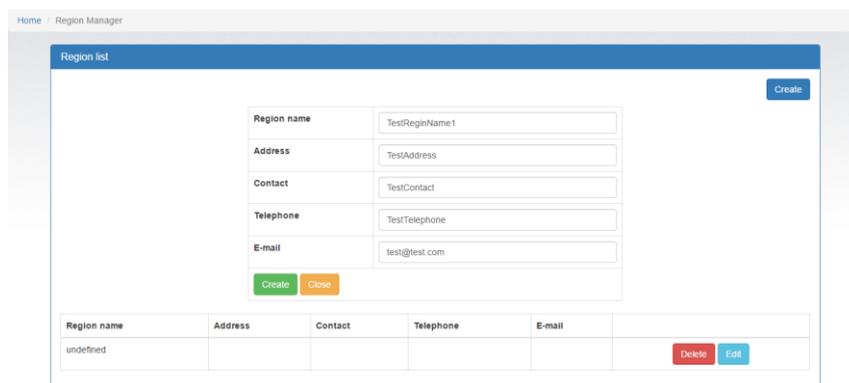

4. Click  to complete the creation.

5. Click  to end up the new created message.

### 3.4 Device Manager

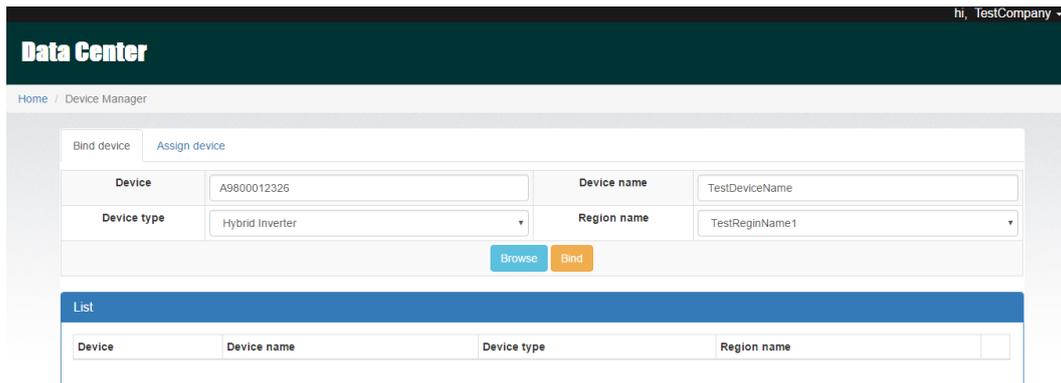

Device	Device name	Device type	Region name
A9800012326	TestDeviceName	Hybrid Inverter	TestReginName1

#### 1. Bind the device with system

- Device: Fill in the GPRS Card ID. You can refer to 4.1.6 to know how to access to card ID.
- Device name: Fill in the name of GPRS card and device name so that users can directly identify which card or device it is.
- Device type: Select the type of the monitored device.
- Region name: Select the bound region of GPRS Card.


Click  to complete the selection

Click  to list the information of bound device

#### 2. Assigned device


Please refer to 3.6 User management to execute operation

### 3.5 Monitor

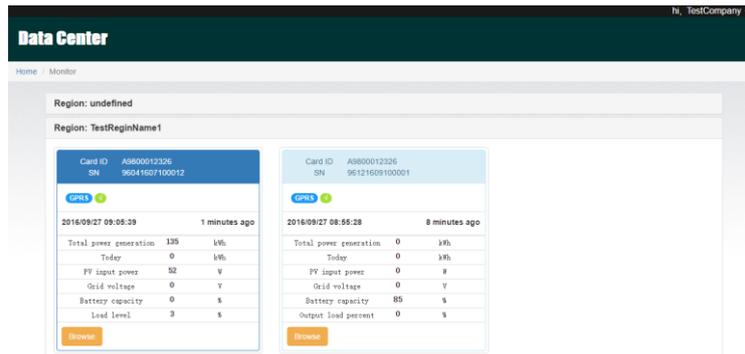

1. It's grouped by region, and all device in that region will be listed.
2. The message will be updated once every 5 minutes.

3. Click  to show th detailed information in the new page.

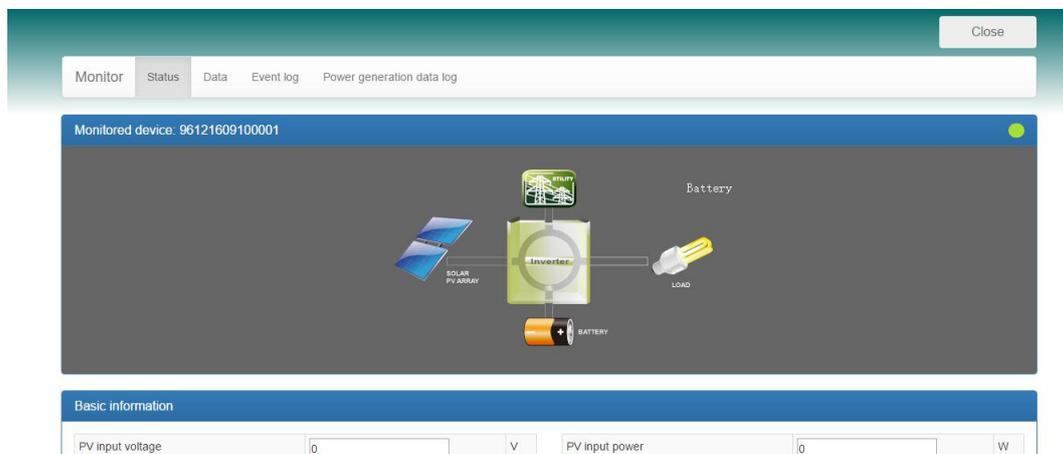

- Click  to end up the page of detailed infmrnation.
- Status: Current operation status of monitored device.
- Status Diagram:  
It shows the status diagram of monitored device. The serial number is shown on the upper left corner of the window and operation status indicator is shown as a dot on the upper right corner of the window.



- a) Basic information:  
It shows basic information including the voltage, current, loading, temperature and etc.

Basic information			
PV input voltage	<input type="text" value="0"/>	V	
Grid voltage	<input type="text" value="0"/>	V	
Battery voltage	<input type="text" value="50.7"/>	V	
Battery charging current	<input type="text" value="0"/>	A	
Grid output voltage	<input type="text" value="230.2"/>	V	
AC output apparent power	<input type="text" value="0"/>	VA	
Output load percent	<input type="text" value="0"/>	%	
PV input power	<input type="text" value="0"/>	W	
Grid frequency	<input type="text" value="0"/>	Hz	
Battery capacity	<input type="text" value="85"/>	%	
Battery discharge current	<input type="text" value="0"/>	A	
AC output frequency	<input type="text" value="50"/>	Hz	
AC output active power	<input type="text" value="0"/>	W	
Time	<input type="text" value="2016/09/27 08:55:28"/>		

b) Power Information:

It shows the information of generated power in bar chart. You can select displayed chart in “per hour,” “Daily,” “Monthly,” “Annual” basis to check the power information.



c) Rated information:

It shows the nominal rated information including input voltage, output voltage, frequency, and battery voltage.

Rated information			
Nominal output power	<input type="text" value="3000"/>	W	
Max. AC input voltage	<input type="text" value="280"/>	V	
Max. AC input frequency	<input type="text" value="55"/>	Hz	
Nominal grid voltage	<input type="text" value="230"/>	V	
Nominal grid-connected current	<input type="text" value="13"/>	A	
Min. AC input voltage	<input type="text" value="170"/>	V	
Min. AC input frequency	<input type="text" value="40"/>	Hz	
Rated battery voltage	<input type="text" value="48"/>	V	
Nominal grid frequency	<input type="text" value="50"/>	Hz	
Max. PV input current	<input type="text" value="13"/>	A	

d) Product Information

It shows the product information including model type, Main CPU processor version, and voltage.

Product information			
Model type	<input type="text" value="Hybrid"/>		
Main CPU processor version	<input type="text" value="0003.10"/>		
Output phase	<input type="text" value="1/1"/>		
Nominal output voltage	<input type="text" value="230"/>	V	
Nominal battery voltage	<input type="text" value="12"/>	V	
Topology	<input type="text" value="Transformerless"/>		
Secondary CPU processor version	<input type="text" value="0000.31"/>		
Nominal input voltage	<input type="text" value="360"/>	V	
Number of batteries	<input type="text" value="4"/>		

➤ Data: Historical data of currently monitored device

Monitor Status Data Event log Power generation data log													
Begin time		<input type="text" value="2016/09/27"/>						<input type="text" value="00:00"/>					
End time		<input type="text" value="2016/09/27"/>						<input type="text" value="23:59"/>					
<a href="#">Browse</a>													
Device mode	Time	Grid voltage	PV input power	Grid frequency	PV input voltage	Load power	Load level	Battery voltage	Battery capacity	Charging current	Temperature		
1	Inverter	2016/09/27 09:15:53	0.0	61.0	0.0	403.6	229.5	2	5.6	0	0.0	41.0	<a href="#">Delete</a>
2	Inverter	2016/09/27 09:10:46	0.0	61.0	0.0	404.1	230.7	3	5.6	0	0.0	42.0	<a href="#">Delete</a>
3	Inverter	2016/09/27 09:05:39	0.0	52.0	0.0	403.9	231.7	3	5.6	0	0.0	44.0	<a href="#">Delete</a>

➤ Event log: Historical event record of currently monitored device

Monitor Status Data **Event log** Power generation data log

Begin time: 2016/09/26 00:00

End time: 2016/09/27 23:59

[Browse](#)

	ID	Level	Time	Event	
1	2006	⚠	2016/09/26 15:11:27	Battery low	<a href="#">Delete</a>
2	2005	⚠	2016/09/26 15:11:27	Battery voltage high	<a href="#">Delete</a>

➤ **Power generation data log:** Power generation data log of currently monitored device.

Monitor Status Data **Event log** Power generation data log

Period NO.: Hour

2016/09/27

[Browse](#) [Delete](#)

Time	Output power
01	0.0
02	0.0

### 3.6 User Manager

Users can establish another end-user and assign specific GPRS card to this end-user. The end-user can monitor the device by logging in the website via assigned GPRS cards.

#### 1. Create User

hi, TestCompany

**Data Center**

Home / User Manager

User list [Create](#)


User name	Company/Name	Address	Contact	Telephone	E-mail	Role	Create time

➤ Click [Create](#) to show the end-user's information

➤ After filling in the related information, click  to complete the creation

User name	Company/Name	Address	Contact	Telephone	E-mail	Role	Create time	
end-user	end-user-company	end-user-address	end-user-contact	end-user-tel	end-user-email	View	2016/09/27 06:36:23	

➤ Click  to end up the creation page, and it will go back to user list.

➤ Click  to remove the established user.

## 2. Assigned device

The GPRS card will be assigned to specific end-user.

Device type/Region name: The pull-down value might vary depending on different device.

Device: Select Device (GPRS card)

End user: Select one of the end-users.

Click  to complete the assignment:

Bind device
Assign device

Device type

Device

Region name

End user

List

Device	Device name	Type	Region name	End user	
A9800012326	TestDeviceName	Hybrid Inverter	TestReginName1	end-user	<input type="button" value="unassign"/>

Click  to release the assignment.

## 4 System Configuration

### 4.1 SMS Setting

#### 4.1.1 SMS Format

The SMS starts with “GPRS+password” and ends with “APPLY.” The default password is “12345678,” and it is adjustable through “C^CPWD”. One SMS can include several commands, and every command should be independently listed in single row. The response message will start with “GPRS” and its content might vary depending on different commands.

#### 4.1.2 Command Format

Every command starts with “C^” or “C+.” The setting starting with “C^” will be saved and permanently valid. The setting starting with “C+” is normal command, and will be invalid after GPRS Card resumes.

Every command has three possible applied methods. “CMD” stands for concrete commands, and “C\_VALUE” stands for current value. “VALUE” represents setting value.

1. “CMD” or “CMD?” means you can search for the current value and trigger command set as default. For example: “C^CPWD” or “C^CPWD?” means you can search for current passwords for SMS setting. “C^RESTART” or “C^RESTART?” is an executive command which will restart GPRS Card.
2. Set “CMD=VALUE” as the top of the page.  
For example, “C^CPWD=12345678” means the password is “12345678.”
3. “CMD=?” is used to search for the acceptable parameter range.  
For example, after placing the command “C^CPWD=?” the system replies “CPWD:(4-10)” which means the acceptable parameter range is at least 4, and at most 10 ASCII characters. The details of range format and its definition will be introduced

below.

The special character "\*" is to represent all items.

1. "C^\*" or "C^\*?" can be used to inquire the current value of all commands starting with "C^."
2. "C^" can be used to inquire the setting range of all commands starting with "C^"
3. "C^" or "C+\*?" can search for which normal command is available to use.

#### 4.1.3 Range format

The value range included in "( )." If there is any corresponding description, it will be put outside "( )." There are four formats in setting value.

1. (A,B,C)  
This format indicates the setting value is one of them in the setting range.
2. (A-B)  
A and B are numbers, which indicates the length of ASCII character strings ranges from  $\geq A$  to  $\leq B$ .  
For example, the return value of "C^CID=?" is "C^CID=?" which indicates the acceptable range is 1 to 100 ASCII characters.
3. (A,B...C)  
A and B are numbers, which indicates the setting range is larger than A, but smaller than B. The interval is a value of arithmetic sequence between B-A.  
For example, The return value of "C^UPS=?" is "UPS:(5,10..86400)" which indicates the initial value is 5, and its maximum is 86400, and the tolerance is 5, so 5, 10, or 15 is acceptable value, but 16 is unacceptable.
4. (!)  
It indicate the value can't be set by the user manually, but set by system automatically.  
For example, the return value is from "C^FWV=?" to "FWV:(!)" which indicates the value is set by system automatically.

#### 4.1.4 Response Format

1. "CMD" or "CMD ?"  
If it's an inquiry command, the return value is "CMD:C\_VALUE." If it's an order command, it replies "OK" for successful execution, or "ERROR" for unsuccessful execution.
2. "CMD=VALUE"  
If it's set successfully, it replies "OK." If not, it replies "ERROR."
3. "CMD=?"  
According to different command, it indicate the ranges of setting value (Refer to 4.1.3).

### 4.1.5 Command List

Command	Description	CMD/CMD? ( Default )	CMD=?	CMD=VALUE
<b>C^CID</b>	ID of GPRS Card	CID:- ①	CID:(1-100)	OK/ERROR
<b>C^SURL</b>	IP Address of server	SUR: <a href="http://www.power-datacenter.com/cmmq/dataCenter">http://www.power-datacenter.com/cmmq/dataCenter</a>	SRUL:(8-100)	OK/ERROR
<b>C^UPS</b>	Duration of data update (second)	SUPS:300	UPS:(5,10...86400)	OK/ERROR
<b>C^BURL</b>	IP address of transmitting update data	<a href="http://www.power-datacenter.com:58081">BURL:www.power-datacenter.com:58081</a>	BRUL:(3-100)	OK/ERROR
<b>C^BPS</b>	Duration of transmitting data update (Second)	BPS:30	BPS:(5,10...600)	OK/ERROR
<b>C^SNTP</b>	SNTP Server	SNTP:time-a.nist.gov	SNTP:(1-100)	OK/ERROR
<b>C^DBGL</b>	Adjusted Level. It is not suggested to adjust.	DBGL:0	DBGL:(0,1...10)	OK/ERROR
<b>C^FWV</b>	Firmware version	FWV:- ①	FWV:(!)	ERROR
<b>C^SMMG</b>	Message Management. Multiple telephone numbers can be set to send the alarm and version update notification. Different numbers are separated by “,” .	SMMG:	SMMG:(0-100)	OK/ERROR
<b>C^SMAD</b>	Messages contains added information. When GPRS Card automatically sends messages to Message Management, it will add extra information.	SMAD:	SMAD:(0-100)	OK/ERROR
<b>C^SMAR</b>	Switch of alarm notification	SMAR:OFF	SMAR:(ON,OFF)	OK/ERROR
<b>C^CPWD</b>	Password for message. When the password is correct, the message will be read by GPRS card.	CPWD:12345678	CPWD:(4-10)	OK/ERROR
<b>C^UURL</b>	Update address of firmware. After sending C+UPDATE, the system will get the device's firmware and update it.	<a href="http://www.power-datacenter.com/fw/gprs/GPRSFw.jad">UURL:http://www.power-datacenter.com/fw/gprs/GPRSFw.jad</a>	UURL:(10-100)	OK/ERROR
<b>C^*</b>	C^ Type operation command	Return to all information above.	ERROR	ERROR
<b>C+QED</b>	Inquiry of daily generated power	QED:- ①②	QED:(!)	ERROR

<b>C+PAT</b>	It shows the process of sending AT command and it's only for adjustment.	PAT:OFF	PAT:(ON,OFF)	OK/ERROR
<b>C+UPDATE</b>	Firmware update. The system will get the device's firmware and update it from the assigned address of "C^UURL."	UPDATE: OK/ERROR	UPDATE:(!)	ERROR
<b>C+RESTART</b>	GPRS Card restart	RESTART: OK/ERROR	RESTART:(!)	ERROR

Note:

- ① : It indicates the default value is incorrect.
  - ② : The format of return value for QED is "ED,SN,Year,Month,Data00,Data01...,Data31."
- ED: It shows the daily generated power.  
 SN: Serial Number of monitored device  
 Year : Current year  
 Month : Current month  
 Data00,Data01...,Data31 : Generated Power by day. The date you don't inquire shows "-."

#### 4.1.6 Examples of SMS

1. Inquire Card ID:

GPRS+12345678  
C^CID?  
APPLY

GPRS  
CID:A9800012323

2. Set Card ID:

GPRS+12345678  
C^CID=AC12546  
APPLY

GPRS  
OK

3. Firmware update:

GPRS+12345678  
C+UPDATE  
APPLY

GPRS  
OK

4. Set the interval time of uploading the data.

GPRS+12345678  
C^UPS=60  
APPLY

GPRS  
OK

5. Set the password of SMS

GPRS+12345678  
C^CPWD=87654  
APPLY

GPRS  
OK

6. Inquiry of daily generated power.

GPRS+12345678  
C+QED?  
APPLY

GPRS  
ED,  
12312312312312,2016,8,  
0000000,00000000,0  
0000000,00000000,00  
000000,00000000,000  
00000,00000000,0000  
0000,00000000,00000  
000,00000000,000000  
000,00000000,0


0000000,00000000,00  
000000,00000000,000  
00000,00000000,0000  
0000,00000000,00000  
000,00000000,000000  
00,00000510,00002584  
,00002549,-,-,-,-

7. Multiple commands


GPRS+12345678  
C^UPS=300  
C^DBGL=0  
APPLY

GPRS  
OK  
OK

8. Set the queries upon range.

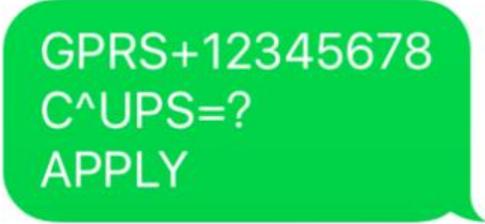

GPRS+12345678  
C^UPS=?  
APPLY

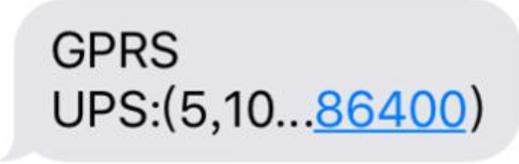

GPRS  
UPS:(5,10...[86400](#))

## 5 SMS Notification

### 5.1 Notification of firmware

Users need to use “C^SMMG” commands to set the SMS management numbers. If there are more than one number, they should be separated by “,”. If the firmware changes, all the numbers in the management group will be notified by SMS notification. Please refer to Diagram 5-1 for the example of SMS notification.

The format of SMS notification for updating firmware.

ID: XXXXXXXXXXXXXXX

TOPIC: FW UPDATE

X.X.X->X.X.X

1. ID: GPRS Card ID ◦
2. TOPIC: Remind the firmware update via SMS notification.
3. The version of firmware is X.X.X ◦ “->” It indicates the alternation of version.



ID:A9800012323  
TOPIC:FW UPDATE  
1.0.0->1.0.1

Diagram 5-1

### 5.2 Prompt Alarm Notification

1. Users have to set the numbers for Management Group through C^SMMG command. If there are more than one numbers, they should be separated by “,”.
2. Users should turn on prompt alarm notification through C^SMAR=ON command. The prompt alarm notification is OFF in default. Refer to Diagram 5-2 for the SMS example.


Format for alarm notification is:

ID: XXXXXXXXXXXXXXXX

TOPIC: ALARM

SN, CODE,DETAIL

- (1.) ID: GPRS Card ID
- (2.) TOPIC: Notify the message is an alarm notification
- (3.) SN: Serial Number of monitored device
- (4.) CODE: There are four formats. WO means there are warnings. FO means there are faults. WR means the warnings cancel. The code number will follows "WO," "FO," "WR," and "FR."
- (5.) DETAIL: English description of warning or fault.

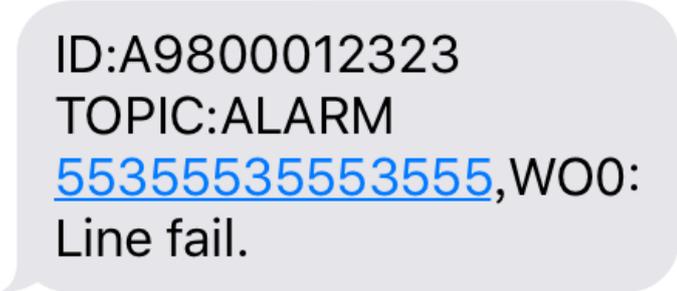

ID:A9800012323  
TOPIC:ALARM  
55355535553555,WO0:  
Line fail.

Diagram 5-2